



VR-Engage

Users Guide



VT MAK
A company of VT Systems



VR-Engage

Users Guide

Version 1.4

Copyright © 2019 VT MAK
All rights Reserved. Printed in the United States.

Under copyright laws, no part of this document may be copied or reproduced in any form without prior written consent of VT MAK.

VR-Exchange™, VR-TheWorld™, VR-Vantage™, DI-Guy™, and DI-Guy Scenario™ are trademarks of VT MAK. MAK Technologies®, VR-Forces®, RTIspy®, B-HAVE®, and VR-Link® are registered trademarks of VT MAK.

GL Studio® is a registered trademark of The DiSTI® Corporation.

Portions of this software utilize SpeedTree® technology (©2008 Interactive Data Visualization, Inc.). SpeedTree is a registered trademark of Interactive Data Visualization, Inc. All rights reserved.

SilverLining™ is a trademark of Sundog Software.

Terrain Profiles are based in part on the work of the Qwt project (<http://qwt.sourceforge.net>).

3ds Max® is a registered trademark of Autodesk, Inc.

All other trademarks are owned by their respective companies.

For third-party license information, please see “[Third Party Licenses](#),” on page xvii.

VT MAK
150 Cambridge Park Drive, 3rd Floor
Cambridge, MA 02140 USA

Voice: 617-876-8085
Fax: 617-876-9208

info@mak.com
www.mak.com

Revision VRN-1.4-1-190725



Contents

Preface

How the Manual Is Organized	x
Documentation Set.....	xi
MAK Products	xii
How to Contact Us	xv
Document Conventions	xvi
Mouse Button Naming Conventions	xvii
Third Party Licenses	xvii
Boost License.....	xix
libXML and libICONV	xix

Chapter 1. Introduction to VR-Engage

1.1. VR-Engage Features	1-2
1.1.1. VR-Engage Versions	1-2
1.1.2. Simulation (Role-Playing) Capabilities	1-2
1.1.3. User Interface	1-7
1.1.4. Image Generator	1-8
1.1.5. Terrain	1-8
1.2. Integration with VR-Forces	1-9
1.3. Integration with Other MAK Products	1-9
1.3.1. After Action Review – Using MAK Data Logger	1-9
1.3.2. Network Interoperability with Other Federates	1-9
1.4. Extensibility	1-10
1.5. Licensing	1-10
1.5.1. Vortex License (for Ground Vehicle Dynamics)	1-10
1.5.2. RTDynamics License (For Aircraft)	1-10
1.5.3. License Requirements for Hosting a VR-Forces Session	1-11

Chapter 2. Installing VR-Engage

2.1. Installing VR-Engage	2-2
2.1.1. Installing VR-Engage on Windows	2-2
2.1.2. Uninstalling VR-Engage on Windows	2-3
2.2. The VR-Engage Directory Structure	2-3
2.3. Installing and Setting Up the MAK License Manager	2-4
2.3.1. Specifying the License Server	2-5
2.4. Installing an RTI	2-7
2.4.1. Installing the MAK RTI	2-7
2.5. Localizing the Graphical User Interface	2-8

Chapter 3. Starting VR-Engage

3.1. Starting VR-Engage	3-2
3.1.1. Hosting a VR-Forces Session	3-2
3.1.2. Starting an Unhosted Session	3-4
3.2. Choosing a Role	3-5
3.2.1. Choosing an Existing Role	3-6
3.2.2. Creating a New Entity	3-6
3.2.3. Using an HMD with an Entity	3-8
3.2.4. Assigning Roles from VR-Forces	3-9
3.3. Connecting to VR-Forces	3-11
3.4. Changing Your Role	3-11
3.4.1. Changing Your Role in the Choose Role Panel	3-11
3.4.2. Changing Your Role by Embarking on a Vehicle	3-12
3.5. Entity Engagement and Scenario State	3-13
3.6. Starting a New Session	3-13
3.7. Setting Up the Simulation Connection	3-14
3.8. Creating a Startup Configuration	3-16
3.9. Playing in Windowed Mode	3-16
3.10. Introduction to Virtual Reality Head-Mounted Displays	3-17
3.10.1. Prerequisites for using an HMD	3-17
3.10.2. Resetting the Tracking Sensor	3-17
3.10.3. Enabling and Disabling Virtual Reality Rendering	3-18
3.10.4. Configuration Options for Virtual Reality	3-19
3.10.5. Setting Up Mixed Reality	3-20
3.10.6. Optimizing Performance with HMDs	3-22
3.11. Starting Multiple Simulation Engines	3-22
3.12. Command-Line Options	3-24

Chapter 4. Common Player and Entity Features

4.1. The Action Menu	4-2
4.1.1. Selecting Options on the Action Menu	4-2
4.2. Using the Radio	4-3
4.2.1. Using the Radio Plug-in in VR-Forces	4-4
4.2.2. Using the Standalone Radio Application	4-5
4.2.3. Jamming Radios	4-7
4.2.4. Editing the Radio Configuration	4-7
4.3. Changing the View Mode	4-7
4.4. Resetting Entities	4-8

4.5. Starting VR-Forces Events	4-8
4.6. Introduction to Sound Effects	4-9
4.6.1. Enabling Sound Effects	4-9
4.6.2. Configuring Sound Effects	4-10
4.6.3. Associating Sound Files with Entities and Events	4-11

Chapter 5. Controlling People

5.1. Introduction	5-3
5.1.1. Enabling and Disabling Mouse Control	5-3
5.2. Moving Your Character Around the Terrain	5-3
5.3. Weapons	5-3
5.3.1. Choosing a Weapon	5-4
5.3.2. Aiming a Weapon	5-5
5.3.3. Firing a Weapon	5-6
5.3.4. Firing Weapons with an HMD Controller	5-6
5.3.5. Throwing a Hand Grenade	5-7
5.3.6. Deploying and Stowing Weapons	5-8
5.4. Using the Javelin Missile Launcher	5-9
5.4.1. Using the Shoulder-Mounted Missile Launcher	5-9
5.4.2. Using the Tripod-Mounted Missile Launcher	5-10
5.5. Embarking on a Vehicle	5-12
5.5.1. Disembarking from a Vehicle	5-12
5.6. Parachuting	5-13
5.7. Tasking Other Entities	5-14
5.7.1. Disembark Entity	5-14
5.7.2. Follow Me	5-15
5.7.3. Move to Location	5-15
5.7.4. Move to My Location	5-16
5.7.5. Suppress Location	5-16
5.8. Turning on Your Flashlight	5-17
5.9. Using the Binoculars	5-17
5.10. Changing Visual Sensors	5-18
5.11. Lasing Targets	5-19
5.11.1. Enabling Laser Designators	5-19
5.12. Opening and Closing Doors and Windows	5-20

Chapter 6. Controlling Ground Vehicles

6.1. Introduction	6-2
6.1.1. Ground Vehicle Display Options	6-2
6.2. Driving Ground Vehicles	6-3
6.2.1. Starting the Engine	6-3
6.2.2. Putting the Vehicle into Gear	6-3
6.2.3. Controlling the Throttle	6-3
6.2.4. Steering a Vehicle	6-4
6.2.5. Releasing and Engaging the Parking Brake	6-4
6.2.6. Locking and Unlocking the Differential (LAV Only)	6-4
6.2.7. Turning the Headlights On and Off	6-4

Contents

6.3. The Gunner Role	6-5
6.3.1. Firing a Vehicle's Gun	6-5
6.3.2. Moving the Turret	6-5
6.4. Commanding the LAV	6-5
6.5. Using the Intercom	6-5
6.6. Changing the Sensor for an LAV or M1A2 Crew Member	6-6
6.7. Pivoting a Tank	6-6
6.8. Emergency Lights and Sirens	6-6
6.9. Configuring Ground Vehicles on Geocentric Terrains	6-7

Chapter 7. Controlling Aircraft

7.1. Introduction	7-2
7.1.1. The Head-Up Display	7-3
7.1.2. The Instrument Panel	7-3
7.1.3. Aircraft Display Options	7-6
7.2. Taking Control of an Aircraft	7-7
7.3. Using Autopilot	7-8
7.3.1. Setting the Autopilot Mode	7-8
7.4. Bombing Targets	7-9
7.4.1. Targeting a Bomb Using a Laser Code	7-10
7.5. Air-to-Air Combat	7-11
7.6. Enabling and Disabling the Radar Warning Receiver	7-13
7.7. Controlling Landing Gear	7-13
7.8. Controlling Flaps	7-14
7.9. Launching Countermeasures (Chaff and Flare)	7-14
7.10. Disabling Instrument Panel Instruments	7-14
7.11. Requesting SAR Images from RadarFX Server	7-15
7.11.1. Requesting a SAR Image	7-15
7.11.2. Configuring a SAR Request	7-16

Chapter 8. Controlling Drones

8.1. Introduction	8-2
8.1.1. Drone Camera Display	8-3
8.1.2. Video and Images	8-4
8.1.3. Drone Battery Life	8-4
8.2. Operating the Drone	8-4
8.2.1. Deploying the Drone	8-4
8.2.2. Stopping and Resuming Use of the Drone	8-4
8.2.3. Switching Control Between Character and Drone	8-5
8.2.4. Landing the Drone	8-5
8.2.5. Returning the Drone to its Starting Position	8-5
8.2.6. Recovering the Drone	8-5

Chapter 9. Sensor Operator Role

9.1. The Sensor Operator Role	9-2
9.1.1. Focusing the Sensor	9-3
9.1.2. Changing the Sensor Mode	9-4
9.1.3. Resetting the Sensor	9-5
9.1.4. Video and Pictures	9-5

9.2. Placing Sensors on Remote Entities	9-5
9.2.1. Configuring the Location of the Remote Camera	9-5
9.3. Configuring the Sensor Operator Overlay	9-7

Chapter 10. Video Stream and Image Capture

10.1. Introduction	10-2
10.2. Video Streams	10-2
10.2.1. Streaming Video as a Sensor Operator	10-2
10.2.2. Streaming Video from a Drone	10-2
10.2.3. Editing the Video Stream File Settings	10-3
10.2.4. Receiving a Video Stream	10-3
10.3. Capturing Images	10-4

Chapter 11. Mouse, Keypad, and Controller Mappings

11.1. Mouse and Keyboard Mappings	11-2
11.2. Gamepad Mappings for Human Control	11-5
11.3. Gamepad Mappings for Using the Action Menu	11-6
11.4. Gamepad Mappings for the LAV and M1A2	11-7
11.5. Racing Wheel Controllers	11-9
11.6. Gamepad Mappings for Cars and Trucks	11-11
11.7. Gamepad Mappings for Drones	11-12
11.8. Flight Controllers	11-13
11.8.1. HOTAS Warthog Mappings for Fixed-Wing Entities	11-13
11.8.2. HOTAS Warthog Mappings for Rotary-Wing Entities	11-17
11.8.3. T.Flight Hotas X Mappings for Fixed-Wing Entities	11-19
11.8.4. T.Flight Hotas X Mappings for Rotary-Wing Entities	11-22
11.8.5. Gamepad Flight Control Mappings for Fixed-Wing Entities	11-25
11.8.6. Gamepad Flight Control Mappings for Rotary-Wing Entities	11-27
11.8.7. Gamepad Flight Control Mappings for the Sensor Operator	11-28
11.9. Head-Mounted Display Controllers	11-28
11.10. Generic Gamepad Button Numbering	11-31
11.11. Configuring Joysticks and Keyboard Control	11-32
11.11.1. Creating a Joystick Configuration	11-32
11.11.2. Mapping the Joystick Stick	11-35
11.11.3. Mapping Joystick Buttons and Keyboard Keys	11-36
11.11.4. Configuring “Switch Between” Options	11-39

Chapter 12. Adding and Editing VR-Engage Entity Models

12.1. The VR-Engage Simulation Model Set	12-2
12.2. Extending VR-Engage.sms	12-3
12.2.1. Creating a New Simulation Model Set	12-3
12.2.2. Creating a New VR-Engage-Controllable Entity	12-4
12.2.3. Editing a VR-Engage-Controllable Entity	12-5
12.2.4. Deploying the SMS to VR-Engage	12-5

Chapter 13. Customizing Overlays

13.1. Overview of Custom Overlays	13-2
13.1.1. Types of Overlays	13-2
13.1.2. Examples of Each Type of Overlay	13-2
13.2. Adding a Simple Scripted Overlay	13-3
13.3. Adding a Custom Sensor Overlay	13-5
13.4. Adding a GL Studio Overlay	13-6
13.4.1. Creating a GL Studio RSO	13-6
13.4.2. Creating VR-Vantage GL Studio Updaters	13-6
13.4.3. Configuring the VR-Vantage GL Studio Model Definition	13-7
13.4.4. Modifying Role Configuration Scripts	13-7

Chapter 14. Activating Scripts in VR-Forces

14.1. Activating Lua Scripts in VR-Forces	14-2
14.2. Adding a Script to the Action Menu	14-2
14.3. Activating a Script	14-3

Index



Preface

This manual is for persons who will install or use VR-Engage. The manual assumes that you are familiar with basic administrative tasks and the graphical window environment for your operating system.

For the latest product information, please see release-specific documentation for your version of VR-Engage.

How the Manual Is Organized

This manual is organized as follows:

- ♦ Chapter 1, *Introduction to VR-Engage*, describes the basic features of VR-Engage.
- ♦ Chapter 2, *Installing VR-Engage*, explains how to install VR-Engage software, the license manager, and an RTI.
- ♦ Chapter 3, *Starting VR-Engage*, explains how to start and stop VR-Engage, load a terrain, and connect to a simulation.
- ♦ Chapter 4, *Common Player and Entity Features*, describes features that apply to all platform types.
- ♦ Chapter 5, *Controlling People*, explains how to play a human character, including moving, changing weapons, firing weapons, and embarking and disembarking.
- ♦ Chapter 6, *Controlling Ground Vehicles*, explains how to drive ground vehicles, including the LAV, M1A2, and civilian vehicles.
- ♦ Chapter 7, *Controlling Aircraft*, explains how to control aircraft and how to request SAR images.
- ♦ Chapter 8, *Controlling Drones*, explains how to deploy and control the quadcopter drone.
- ♦ Chapter 9, *Sensor Operator Role*, explains the sensor operator role and how to control the sensor interface.
- ♦ Chapter 10, *Video Stream and Image Capture*, describes how to stream video or save images to a file from a quadcopter drone or sensor operator.
- ♦ Chapter 11, *Mouse, Keypad, and Controller Mappings*, illustrates the mouse, keyboard, and game controller mappings configured in VR-Engage.
- ♦ Chapter 12, *Adding and Editing VR-Engage Entity Models*, explains how to extend the VR-Engage simulation model set.
- ♦ Chapter 13, *Customizing Overlays*, describes how to edit entity configurations to customize what players can see and do.
- ♦ Chapter 14, *Activating Scripts in VR-Forces* explains how to add scripts that you can send to VR-Forces.

Documentation Set

Electronic versions of VR-Engage documentation are in *vrenagex.x/doc*. The documentation is accessible from the VR-Engage folder on the Start menu. The VR-Engage documentation set is as follows:

- ♦ *VR-Engage Users Guide* describes how to use the VR-Engage applications.
- ♦ *VR-Engage Release Notes* lists system requirements, release-specific requirements, new features and updates, bug fixes, and known problems.
- ♦ Online help. The online help, accessible from the Help menu, replicates most of the information in *VR-Engage Users Guide*.
- ♦ *VR-Engage First Experience Guide*. The First Experience Guide provides a brief guided tour of the most important VR-Engage features. It is primarily for new users and persons evaluating VR-Engage.
- ♦ *VR-Vantage Users Guide*. The VR-Engage startup view gives you access to many settings that affect the visual quality of your role-playing experience. These and other aspects of the graphical user interface are shared with VR-Vantage and VR-Forces. *VR-Vantage Users Guide* is included to provide documentation for display settings, navigation of the GUI, terrain considerations, and other information that may be of use to VR-Engage users, but which is not central to using VR-Engage.

MAK Products

VR-Engage is a member of the VT MAK line of software products designed to streamline the process of developing and using networked simulated environments. The VT MAK product line includes the following:

- ♦ **VR-Link® Network Toolkit.** VR-Link is an object-oriented library of C++ functions and definitions that implement the High Level Architecture (HLA) and the Distributed Interactive Simulation (DIS) protocol. VR-Link has built-in support for the RPR FOM and allows you to map to other FOMs. This library minimizes the time and effort required to build and maintain new HLA or DIS-compliant applications, and to integrate such compliance into existing applications.

VR-Link includes a set of sample debugging applications and their source code. The source code serves as an example of how to use the VR-Link Toolkit to write applications. The executables provide valuable debugging services such as generating a predictable stream of HLA or DIS messages, and displaying the contents of messages transmitted on the network.

- ♦ **MAK RTI.** An RTI (Run-Time Infrastructure) is required to run applications using the High Level Architecture (HLA). The MAK RTI is optimized for high performance. It has an API, RTIspy®, that allows you to extend the RTI using plug-in modules. It also has a graphical user interface (the RTI Assistant) that helps users with configuration tasks and managing federates and federations.
- ♦ **VR-Forces®.** VR-Forces is a computer generated forces application and toolkit. It provides an application with a GUI, that gives you 2D and 3D views of a simulated environment.

You can create and view entities, aggregate them into hierarchical units, assign tasks, set state parameters, and create plans that have tasks, set statements, and conditional statements. You can simulate using entity-level modeling, which focuses on the actions of individual people and vehicles, and aggregate-level modeling, which focuses on the interaction of large hierarchical units.

VR-Forces also functions as a plan view display for viewing remote simulation objects taking part in an exercise. Using the toolkit, you can extend the VR-Forces application or create your own application for use with another user interface.

- ♦ **VR-Vantage™.** VR-Vantage is a line of products designed to meet your simulation visualization needs. It includes three end-user applications (VR-Vantage Stealth, VR-Vantage PVD, and VR-Vantage IG) and the VR-Vantage Toolkit.
 - VR-Vantage Stealth displays a realistic, 3D view of your virtual world, a 2D plan view, and an exaggerated reality (XR) view. Together these views provide both situational awareness and the big picture of the simulated world. You can move your viewpoint to any location in the 3D world and can attach it to simulation objects so that it moves as they do.

- VR-Vantage IG is a configurable desktop image generator (IG) for out the window (OTW) scenes and remote camera views. It has most of the features of the Stealth, but is optimized for its IG function.
- VR-Vantage PVD provides a 2D plan view display. It gives you the big picture of the simulated world.
- SensorFX. SensorFX is an enhanced version of VR-Vantage that uses physics based sensors to view terrain and simulation object models that have been materially classified. It is built in partnership with JRM Technologies.
- The VR-Vantage Toolkit is a 3D visual application development toolkit. Use it to customize or extend MAK's VR-Vantage applications, or to integrate VR-Vantage capabilities into your custom applications. VR-Vantage is built on top of OpenSceneGraph (OSG). The toolkit includes the OSG version used to build VR-Vantage.
- ♦ MAK Data Logger. The Data Logger, also called the Logger, can record HLA and DIS exercises and play them back for after-action review. You can play a recorded file at speeds above or below normal and can quickly jump to areas of interest. The Logger has a GUI and a text interface. The Logger API allows you to extend the Logger using plug-in modules or embed the Logger into your own application. The Logger editing features let you merge, trim, and offset Logger recordings.
- ♦ VR-Exchange™. VR-Exchange allows simulations that use incompatible communications protocols to interoperate. For example, within the HLA world, using VR-Exchange, federations using the HLA RPR FOM 1.0 can interoperate with simulations using RPR FOM 2.0, or federations using different RTIs can interoperate. VR-Exchange supports HLA, TENA, and DIS translation.
- ♦ VR-TheWorld™ Server. VR-TheWorld Server is a simple, yet powerful, web-based streaming terrain server, developed in conjunction with Pelican Mapping. Delivered with a global base map, you can also easily populate it with your own custom source data through a web-based interface. The server can be deployed on private, classified networks to provide streaming terrain data to a variety of simulation and visualization applications behind your firewall.
- ♦ DI-Guy™. DI-Guy is an SDK that allows you to embed the DI-Guy library in your real-time application and populate your world with lifelike human characters. DI-Guy provides high-fidelity human characters that move realistically, respond to simple high-level commands, and travel throughout the environment as directed by the hosting visual application. It comes with thousands of ready-to-use characters, appearances, and motions. DI-Guy character simulation is an integral part of all MAK's visual applications, including VR-Engage, VR-Forces, and VR-Vantage.
- ♦ RadarFX. RadarFX is a client-server application that simulates synthetic-aperture radar (SAR). The server application, which is based on VR-Vantage and SensorFX, loads a terrain database and, optionally, connects to simulations. A client application requests SAR images from the server. RadarFX includes a sample client application.

- ♦ **VR-Engage.** VR-Engage is a multi-role virtual simulator that lets users play the role of a first person human character, a ground vehicle driver, gunner or commander, a sensor operator, or the pilot of a fixed wing aircraft or helicopter. It incorporates the VR-Force simulation engine and the VR-Vantage graphics rendering capabilities.
- ♦ **WebLVC Server.** WebLVC Server implements the server side of the WebLVC protocol so that web-based simulation federates can participate in a distributed simulation. It is part of the WebLVC Suite, which includes the server and several sample applications that work with VR-Forces and VR-Vantage.

How to Contact Us

For VR-Engage technical support, information about upgrades, and information about other MAK products, you can contact us in the following ways:

Telephone

Call or fax us at:	Voice:	617-876-8085 (extension 3 for support)
	Fax:	617-876-9208

E-mail

Sales and upgrade information:	info@mak.com
Technical support:	support@mak.com

Internet

MAK web site home page:	www.mak.com
License key requests:	www.mak.com/support/get-licenses
Product version and platform information:	www.mak.com/support/product-versions
For the free, unlicensed MAK RTI:	www.mak.com/support/bonus-material

Post

Send postal correspondence to:	VT MAK 150 Cambridge Park Drive, 3rd Floor Cambridge, MA, USA 02140
--------------------------------	---

When requesting support, please tell us the product you are using, the version, and the platform on which you are running.

Document Conventions

This manual uses the following typographic conventions:

Monospaced	Indicates commands or values you enter.
Monospaced Bold	Indicates a key on the keyboard.
<i>Monospaced Italic</i>	Indicates command variables that you replace with appropriate values.
Blue text	A hypertext link to another location in this manual or another manual in the documentation set.
{ }	Indicates required arguments.
[]	Indicates optional arguments.
	Separates options in a command where only one option may be chosen at a time.
()	In command syntax, indicates equivalent alternatives for a command-line option, for example, (-h --help) .
/	Indicates a directory. Since MAK products run on both Linux and Windows PC platforms, we use the / (slash) for generic discussions of pathnames. If you are running on a PC, substitute a \ (backslash) when you type pathnames.
<i>Italic</i>	Indicates a file name, pathname, or a class name.
sans Serif	Indicates a parameter or argument.
➤	Indicates a one-step procedure.
Menu → Option	Indicates a menu choice. For example, an instruction to select the Save option from the File menu appears as: Choose File → Save .
	Click the icon to run a tutorial video in the default browser.
	Indicates supplemental or clarifying information.
	Indicates additional information that you must observe to ensure the success of a procedure or other task.

Directory names are preceded with dot and slash characters that show their position with respect to the VR-Engage home directory. For example, the directory *vrengagex.x1.4/doc* appears in the text as *./doc*.

Mouse Button Naming Conventions

An instruction to click the mouse button, refers to clicking the primary mouse button, usually the left button for right-handed mice and the right button for left-handed mice. The context-sensitive menu, also called a popup menu or right-click menu, refers to the menu displayed when you click the secondary mouse button, usually the right button on right-handed mice and the left button on left-handed mice.

Third Party Licenses

MAK software products may use code from third parties. This section contains summary license information and where required, specific license documentation required by these third parties.

The following libraries are covered by the GNU Lesser General Public License (LGPL) license:

- ♦ CIGI
- ♦ DevIL
- ♦ GEOS
- ♦ GStreamer
- ♦ LibIconV
- ♦ OPCODE
- ♦ OpenAL
- ♦ OSG
- ♦ OsgEarth
- ♦ Pthread
- ♦ Qt
- ♦ Qwt
- ♦ LibWebSockets.

The following libraries are covered by the ZLib license:

- ♦ Bullet Physics
- ♦ Zlib
- ♦ LibPNG
- ♦ LibSDL
- ♦ Minizip.

The following libraries are covered by the MIT license:

- ♦ Expat
- ♦ FreeGLUT
- ♦ GDAL
- ♦ GeoTiff
- ♦ HarfBuzz
- ♦ LibCURL
- ♦ LibSquish
- ♦ LibXML
- ♦ LUA
- ♦ LuaBind
- ♦ Proj.

The following libraries are covered by the BSD license:

- ♦ FreeType
- ♦ GLEW
- ♦ JPEG
- ♦ LibTiff
- ♦ Protobuf
- ♦ PCRE.

The following libraries are covered by the commercial licenses:

- ♦ SpeedTree
- ♦ Sundog Triton
- ♦ Sundog SilverLining
- ♦ FlexLM
- ♦ Gameware
- ♦ JRM Technologies SenSimRT and SigSimRT
- ♦ GLStudio
- ♦ OpenFlight
- ♦ CDB API.

The following libraries are covered by custom licenses:

- ♦ NVidia CG Toolkit
- ♦ FreeImage (FreeImage Public License)
- ♦ Boost (Boost Software License)
- ♦ Poco (Boost Software License).

COLLADA DOM is covered by the SCEA Shared Source license.

Thread Building Blocks is covered by the GPL license:

SQLite is in the public domain.

Boost License

VR-Link, and all MAK software that uses VR-Link uses some code that is distributed under the Boost License. All header files that contain Boost code are properly attributed. The Boost web site is: www.boost.org.

Boost Software License - Version 1.0 - August 17th, 2003

Permission is hereby granted, free of charge, to any person or organization obtaining a copy of the software and accompanying documentation covered by this license (the “Software”) to use, reproduce, display, distribute, execute, and transmit the Software, and to prepare derivative works of the Software, and to permit third-parties to whom the Software is furnished to do so, all subject to the following:

The copyright notices in the Software and this entire statement, including the above license grant, this restriction and the following disclaimer, must be included in all copies of the Software, in whole or in part, and all derivative works of the Software, unless such copies or derivative works are solely in the form of machine-executable object code generated by a source language processor.

THE SOFTWARE IS PROVIDED “AS IS”, WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE AND NON-INFRINGEMENT. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR ANYONE DISTRIBUTING THE SOFTWARE BE LIABLE FOR ANY DAMAGES OR OTHER LIABILITY, WHETHER IN CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

libXML and libICONV

VR-Link and all MAK software that uses VR-Link, links in libXML and libICONV. On some platforms the compiled libraries and header files are distributed with MAK Products. MAK has made no modifications to these libraries. For more information about these libraries please see the following web sites:

- ♦ The LGPL license is available at: <http://www.gnu.org/licenses/lgpl.html>.
- ♦ Information about IconV is at: <http://www.gnu.org/software/libiconv/>.
- ♦ Information about LibXML is at: <http://xmlsoft.org/>.



1. Introduction to VR-Engage

This chapter is a brief introduction to VR-Engage.

VR-Engage Features	1-2
VR-Engage Versions	1-2
Simulation (Role-Playing) Capabilities	1-2
User Interface	1-7
Image Generator	1-8
Terrain	1-8
Integration with VR-Forces	1-9
Integration with Other MAK Products	1-9
After Action Review – Using MAK Data Logger	1-9
Network Interoperability with Other Federates	1-9
Extensibility	1-10
Licensing	1-10
Vortex License (for Ground Vehicle Dynamics)	1-10
RTDynamics License (For Aircraft)	1-10
License Requirements for Hosting a VR-Forces Session	1-11

1.1. VR-Engage Features

VR-Engage was developed for use in training simulations or laboratory experimentation. It lets users play the role of a first person human character, a vehicle driver, gunner or commander, a sensor operator, or the pilot of an airplane or helicopter.

VR-Engage is built on mature proven technologies. It gets its simulation engine from VR-Forces, its game-quality 3D graphics from VR-Vantage, and its network interoperability from VR-Link.

VR-Engage includes:

- A high-fidelity vehicle physics engine needed for accurate vehicle motion.
- Ground, rotary and fixed-wing vehicles, and the full library of friendly, hostile, and neutral DI-Guy characters.
- Radio and voice communications over DIS and HLA.
- Sensors, weapons, countermeasures, and behavior models for air-to-air, air-to-ground, on-the-ground, and person-to-person engagements.
- Vehicle- and person-specific interactions with the environment (open and close doors, move, destroy, and so on.)
- Terrain agility. As with VR-Vantage and VR-Forces, you can use the terrain you have or take advantage of innovative streaming and procedural terrain techniques.

1.1.1. VR-Engage Versions

VR-Engage has the following run-time versions:

- VR-Engage Ground. Allows you to control humans and ground vehicles.
- VR-Engage Air. Allows you to control fixed-wing and rotary-wing aircraft.
- VR-Engage Sensor Operator. Allows you to control a gimbaled sensor or a camera.
- VR-Engage. Allows you to control air, ground, and human entities.

All four configurations are installed as part of the standard VR-Engage installation process. Your access to them depends on your VR-Engage license. For simplicity, the procedures in this manual assume you are using VR-Engage.

1.1.2. Simulation (Role-Playing) Capabilities

VR-Engage lets you choose which entity you want to simulate. Said another way, you choose the role you want to play. You can play:

- Dismounted soldiers and other human characters.
- A member of the crew of a ground vehicle.
- A helicopter or fixed-wing aircraft pilot.
- The operator of a gimbaled sensor on a UAV or a mounted camera.

Dismounted Soldiers and Other Human Characters

If you take the role of a dismounted soldier or other human character, you have access to the full DI-Guy library of friendly, hostile, and neutral characters. Your character has the following capabilities:

- ♦ Individual movement (look, run, walk, crawl, crouch, prone).
- ♦ Interact with environment (open and close doors).
- ♦ Interact with other characters (shoot at and be shot at).
- ♦ Sensors (binoculars and night vision goggles (NVG)).
- ♦ Weapons (rifles, grenades).
- ♦ Use carried gear, such as a flashlight, range finder, or compass.
- ♦ Lase targets for other players or simulated entities.
- ♦ CGF Assist (passenger, fast-roping). When you are running a VR-Forces scenario, you can give up control of your character and let the simulation engine manage complex behaviors.
- ♦ Embark and disembark. Enter and leave vehicles and take on roles of vehicle crew members.



Figure 1-1. Dismounted infantry

Ground Vehicle Crew

VR-Engage lets you take on the roles of the driver, gunner, or commander of a ground vehicle that has the following capabilities:

- ♦ Physics-based ground vehicle dynamics model.
- ♦ Interact with environment (destroy).
- ♦ Ground-to-ground engagements:
 - Sensors (EO, IR, NVG).
 - Weapons (main gun, machine gun).
 - Signals/Countermeasures (smoke grenades).
- ♦ Vehicle controls (headlights, tail lights).
- ♦ CGF Assist (drive, gun). In a VR-Forces scenario, as you switch roles, the simulation engine can take over the tasks and plans that manage the other roles for the vehicle. For example, if you are the gunner, VR-Forces can manage driving the vehicle.



Figure 1-2. LAV gunner

You can easily switch roles and can disembark from the vehicle to assume the role of a dismounted soldier.

Pilot

As a pilot, you can fly an aircraft with the following capabilities:

- ♦ Physics-based fixed & rotary wing dynamics models.
- ♦ Multi-function cockpit display. Flight instruments, map/chart, imagery.
- ♦ Air-to-Air Engagements:
 - Sensors (radar scope, radar warning receiver).
 - Weapons (missiles).
 - Countermeasures (chaff, flares).
- ♦ Air-to-Ground Engagements:
 - Sensors (IR targeting, SAR (requires RadarFX Server)).
 - Weapons (missiles, guns, bombs).
 - Countermeasures (chaff, flares).

Pilots use their out-the-window views and head-up display (HUD) (Figure 1-3) to understand their environment and control their aircraft.

- ♦ Single screen. Out-the-window view, on-screen controls, and HUD.
- ♦ Dual screen. Out-the-window view, on-screen controls, and HUD.
- ♦ On-screen multi-function display (IR, SAR (requires SensorFx)) (Figure 1-4).
- ♦ Slaved IG (requires VR-Vantage Remote Display Engine).
- ♦ Head-mounted display (HMD). Oculus Rift or HTC Vive.



Figure 1-3. Head-up display with instruments

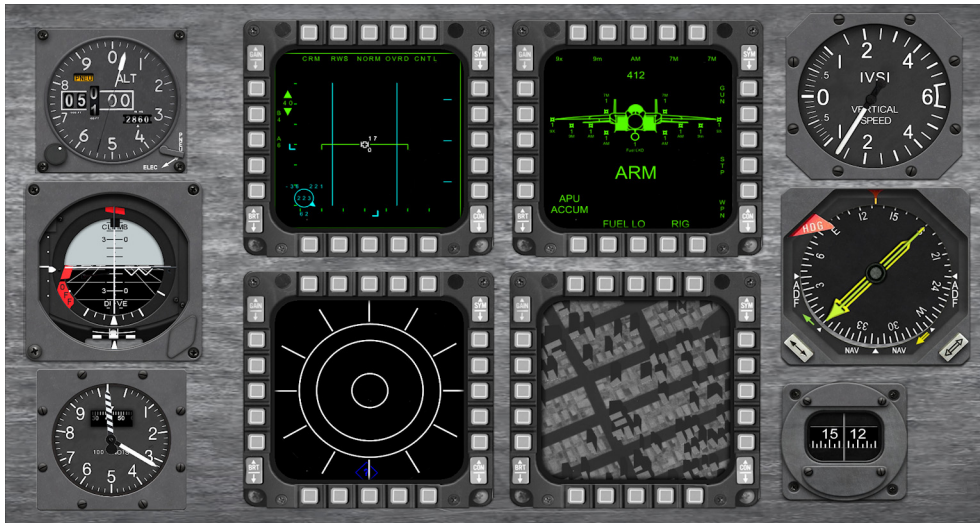


Figure 1-4. Instrument panel

Sensor Operator

In the sensor operator role, you can perform common surveillance and reconnaissance tasks, such as tracking fixed and moving targets, using a simulated E/O camera or IR sensor. You can control gimbaled sensors using joysticks or Gamepads or configure VR-Engage to work with sensor-specific hand controller devices. VR-Engage lets you attach cameras to entities and structures and set their initial heading and pitch. VR-Engage can also automatically attach cameras to remotely simulated (that is, non-VR-Forces) entities.



Figure 1-5. Sensor view

Drone Operator

As a drone operator, you can deploy a small drone equipped with a camera and then fly it around. This role is designed to train people how to safely fly a drone without risking an actual device. You can use these in many different types of scenarios, such as simple infrastructure inspection or surveillance and reconnaissance.



Figure 1-6. Drone operator

1.1.3. User Interface

You can control your character using the keyboard, mouse, and game controllers. The graphical user interface provides command menus and cockpit and crew cabin displays. Other interfaces include:

- ♦ Radio (push-to-talk, radio channels, MAK Data Logger support).
- ♦ Control with role specific devices (driver-steering wheel, pilot-HOTAS).
- ♦ Display system support (monitors, projectors, Oculus Rift).
- ♦ Audio (engine sounds, environmental noise, event effects, warning tones).

1.1.4. Image Generator

VR-Engage includes a built-in image generator, based on VR-Vantage IG, that can support multiple display channels, to the limits of your installed graphics card. It can also be extended to fill larger multi-channel display systems by adding VR-Vantage IG Remote Display Engines. This is an example of the flexibility of MAK's product architecture that lets you configure a system of any size.

Regardless of which role your VR-Engage simulator is playing, VR-Engage delivers realistic scene rendering (terrain, entities, interaction effects, weather, clouds, time-of-day, lighting, shadows, high dynamic range (HDR) lighting.)

The image generator supports the following configurations:

- ♦ Single screen.
- ♦ Dual screen.
- ♦ Multi-channel distributed rendering (requires VR-Vantage Remote Display Engine). Spread the view across multiple monitors run by multiple computers.
- ♦ IR and NVG Sensors using the included CameraFX or optional SensorFX.
- ♦ On screen Multi-function Display (IR, SAR (requires SensorFX)).
- ♦ Head-mounted displays.

1.1.5. Terrain

VR-Engage, like VR-Vantage and VR-Forces, lets you use the terrain you have or take advantage of innovative streaming and procedural terrain techniques to simulate on large, complex terrains.

- ♦ Terrain agile (all types supported by VR-Vantage and VR-Forces).
- ♦ Dynamic terrain. Destroyable buildings, bridges, and props.
- ♦ Dynamic ocean. Waves, spray, wakes, wind.

VR-Engage includes a set of useful geo-specific terrains and options for building more. Please see *VR-Vantage Users Guide* for information about terrain support. (*VR-Vantage Users Guide* is included with VR-Engage.)

1.2. Integration with VR-Forces

When VR-Engage is used with a compatible version of VR-Forces and other MAK products, you can reap the additional benefits of a common system architecture:

- ♦ Common representation of the environment across player and CGF stations, including synchronized weather, time-of-day, and dynamic terrain.
- ♦ Build terrains, models, and configurations once, and deploy them across VR-Engage player stations, VR-Forces simulation engines and front-ends, and any other applications that use VR-Vantage IG.
- ♦ Role-play multiple entities at a time by switching between manual and CGF control on-the-fly. Take control of VR-Forces-driven entities.
- ♦ Configure players with the VR-Forces Simulation Object Editor.
- ♦ Create scenarios in VR-Forces and load them in VR-Engage for stand-alone use.
- ♦ Automatic WebLVC integration (tablet-based IOS, and so on.)

1.3. Integration with Other MAK Products

Previous sections have discussed VR-Engage's integration with VR-Forces and VR-Vantage. Additionally, like all MAK products, VR-Engage uses VR-Link for network interoperability and supports DIS and HLA. It integrates seamlessly with our other Link products, such as MAK Data Logger for recording and AAR, the MAK RTI for HLA support, and VR-Exchange for data interchange in heterogeneous simulation environments.

1.3.1. After Action Review – Using MAK Data Logger

Whether in standalone mode or when playing with other simulation applications, VR-Engage publishes to the DIS or HLA network. Therefore, you can use the MAK Data Logger to record your simulation and play the recording back for after-action-review (AAR).

1.3.2. Network Interoperability with Other Federates

VR-Engage is natively compliant with DIS and HLA, so it can participate in any topology of networked simulators and simulation support systems, including multi-player classroom environments. It can interoperate with existing simulation applications and 3rd party simulators, SAFs, and CGFs.

1.4. Extensibility

VR-Engage is ready to use out-of-the-box. It can be deployed as a trainee simulator, as a role player station, an instructor aid, a desktop simulation game, or even as a VR headset experience.

Because MAK focuses on the needs of system integrators, we designed flexibility into VR-Engage. It can be customized and extended to meet program-specific requirements, and can be integrated into a diverse range of system configurations. MAK has a pricing and support model that has proven to be effective with system integrators both before and after they choose MAK.

1.5. Licensing

The VR-Engage application requires a VR-Engage run-time license in order to run. Internally, VR-Engage relies on VR-Vantage capabilities for its 3D visualization, VR-Forces capabilities for its ownship simulation, VR-Link for its networking, and so on. These capabilities are part of VR-Engage and do not require separate run-time licenses of these MAK products.

1.5.1. Vortex License (for Ground Vehicle Dynamics)

VR-Engage uses Vortex from CM Labs for its ground vehicle dynamics. This capability is included with VR-Engage. You do not need a separate license.

1.5.2. RTDynamics License (For Aircraft)

VR-Engage uses RTDynamics for its aircraft vehicle dynamics. This capability is included with VR-Engage. You do not need a separate license.

1.5.3. License Requirements for Hosting a VR-Forces Session

With only a VR-Engage license, you can run VR-Engage, choose a terrain database to simulate on, create and place an entity, and control that entity. VR-Engage can only simulate and control a single entity at a time. When you change roles and create a different entity to simulate, the entity you were previously simulating is deleted and replaced by the new one.

If you are running a copy of VR-Forces on your network (which requires a VR-Forces license, of course), then VR-Engage can interact with VR-Forces in the following ways:

- VR-Engage allows you to join a VR-Forces session and take manual control of one of the entities in the VR-Forces scenario. If you are controlling a VR-Forces entity, and then change roles and ask to control a different entity, the original entity will still exist, as it is owned by VR-Forces.
- VR-Engage can initiate and receive changes to the terrain, for example, opening doors or destroying buildings. (VR-Forces acts as the dynamic terrain server.)
- VR-Engage can reflect changes to time-of-day and weather that are published by VR-Forces.
- VR-Engage allows you to assign certain tasks to entities that are simulated by VR-Forces (for example, tell a subordinate to follow you, or move to a location you designate).

In order to simplify the startup workflow for certain use cases, VR-Engage gives you the ability to launch a VR-Forces back-end directly from the VR-Engage user interface, and to instruct VR-Forces to load and host a scenario of your choosing. This allows you to avoid separately launching VR-Forces from the start menu or command line, and automatically ensures that VR-Forces uses the same interoperability parameters as VR-Engage. A VR-Forces back-end license is always required to run VR-Forces, whether you launch it from the VR-Engage user interface, or launch it separately from the Start Menu or command line. If you do not have a VR-Forces back-end license available, VR-Engage will not allow you to launch VR-Forces and host a VR-Forces scenario.

When VR-Engage starts up, it looks for a running VR-Forces and if it finds one, it connects to it. If it does not find one, it offers you the option to host and load a VR-Forces scenario, or start an unhosted session. If you host a VR-Forces scenario, you will consume a VR-Forces license, which will prevent you from starting VR-Forces independently if you only have one license. If you start an unhosted session, you can start or join a session only as an individual player - you cannot load and run a scenario.



2. Installing VR-Engage

This chapter explains how to install the VR-Engage applications and data. You must also install the MAK license manager. To use VR-Engage with HLA, you must install an RTI.

Installing VR-Engage.....	2-2
Installing VR-Engage on Windows	2-2
Uninstalling VR-Engage on Windows	2-3
The VR-Engage Directory Structure	2-3
Installing and Setting Up the MAK License Manager.....	2-4
Specifying the License Server	2-5
Installing an RTI.....	2-7
Installing the MAK RTI.....	2-7
Localizing the Graphical User Interface	2-8

2.1. Installing VR-Engage

A full VR-Engage installation includes the application, data, the License Manager software, and for HLA operation, an RTI (or Runtime Infrastructure.)

VR-Engage has an application installer and a data package (*.MAK-targz*) that has multiple files. You must run the application installer and then install the data package. The application installer can automatically install the data package if you configure it to do so. MAK also provides optional data packages that have additional terrains.

Before you install VR-Engage, please read the Release Notes to see if there are any special instructions for installation.

2.1.1. Installing VR-Engage on Windows

When you install large applications on Windows, there may be a delay of up to several minutes from the time you try to run the setup program to the time that an installation dialog box is displayed. This is due to how Windows scans setup programs before it executes them. If you experience this problem, turning off User Access Control can reduce or eliminate this delay.

Windows versions of VR-Engage are provided as executable installer files on DVD, or as downloaded files. The installers are named to indicate the compiler used to build that version of VR-Engage

- To install VR-Engage, run the installer. Follow the instructions in the installation wizard.

Installing the VR-Forces Plug-in

When the VR-Engage installer completes the data installation, it prompts you to install a plug-in for VR-Forces. The VR-Forces plug-in lets you take control of VR-Forces entities from VR-Engage. If you have VR-Forces installed and want to install the plug-in, continue the installation process.

You do not have to install the plug-in when you install VR-Engage. You can install it later by running the installer. It is in the VR-Engage top level directory.

The VR-Forces plug-in makes the following changes to VR-Forces:

- ♦ Installs custom models.
- ♦ Copies *./data/simulationModelSets/EntityLevel.sms* to *EntityLevel_VRF.sms*. If you uninstall the VR-Engage plug-in, it uses this file to restore *EntityLevel.sms*.
- ♦ Add RTDynamics and VREngage simulation model sets.

The plug-in preserves any changes that you have made to *EntityLevel.sms*. If you uninstall the VR-Engage plug-in, your changes to *EntityLevel.sms* are not lost.

2.1.2. Uninstalling VR-Engage on Windows

When you uninstall VR-Engage, the uninstaller does not uninstall the data package. You must delete the files manually.

2.2. The VR-Engage Directory Structure

The installation process creates the VR-Engage directory structure shown in [Figure 2-1](#). [Table 2-1](#) describe the contents of the directories.

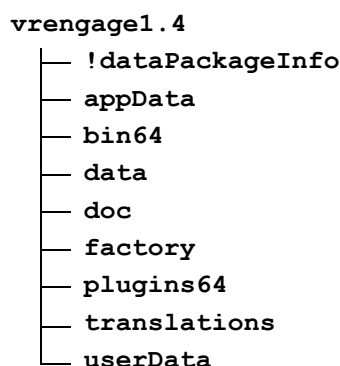


Figure 2-1. VR-Engage directory structure

[Table 2-1](#) describes the contents of the directories.

Table 2-1: Contents of VR-Engage directories

Directory	Directory contents
<i>!dataPackageInfo</i>	Contains version information for post.DataInstall.MAK-targz, a data overlay package installed automatically as the final step of the installer.
<i>./appData</i>	Subdirectories contain data required by the VR-Engage applications, such as model definitions and saved settings.
<i>./bin64</i>	Executables and dynamic link libraries.
<i>./data</i>	Sample databases, images, and vehicle models.
<i>./doc</i>	VR-Engage documentation and class reference files.
<i>./factory</i>	Backups of the application data and settings provided by MAK.
<i>./plugins64</i>	Plug-in shared libraries.
<i>./translations</i>	Translation files for localizing VR-Engage menus.
<i>./userData</i>	Terrain and scenario files.

2.3. Installing and Setting Up the MAK License Manager

Before you can use a MAK product, you must obtain a valid license file, install the MAK License Manager, and configure the license server and client machines. The License Manager uses a client-server architecture, so you do not need to install the License Manager on every computer on which you install MAK products. You only need to install it on the computer that you will use as the license server.



If you have already installed the License Manager for another MAK product, you do not have to install it again. You just need to make sure you have licenses for your newly installed products.

The License Manager installer is included on MAK installation media. It is separate from the product installers. You can download the installers from our web site at <https://www.mak.com/support/license-support>.

Complete installation and configuration instructions are included with the License Manager installer. Instructions are also available at the license support page.

Some customers use dongle licenses instead of running a license server. Instructions for using dongles are in the License Manager documentation.

2.3.1. Specifying the License Server

The first time you run a MAK application on a particular computer, the License Setup dialog box opens (Figure 2-2). It prompts you to enter the hostname of the license server and optionally, a port number.

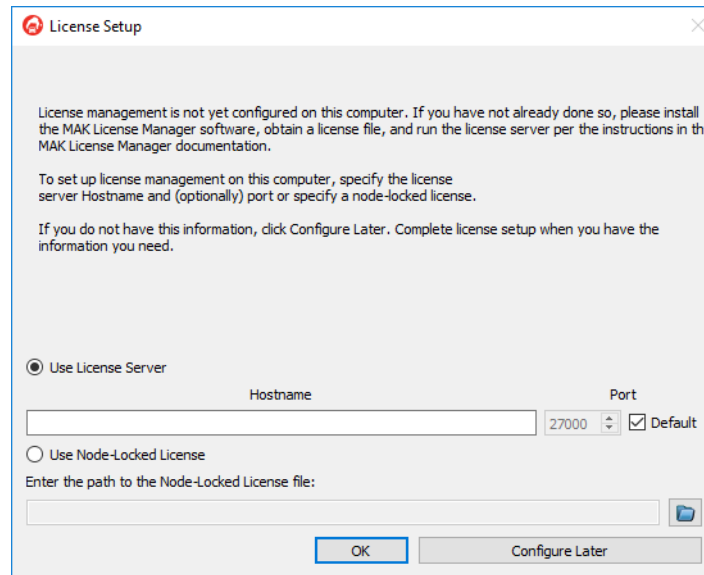


Figure 2-2. License Setup dialog box

If you do not know the hostname of the license server, click **Configure Later**. When you have the hostname, you can start the application again and complete the dialog box. You will not be able to run any MAK applications until you set up license management.

If you know the hostname, type it in the **Hostname** box and then click **OK**. The application will start.

Under limited circumstances, MAK issues node-locked licenses. If you have a node-locked license, select the **Use Node Locked License** option and enter the path to the license file.



- ♦ If you are running MAK products on the license server machine, it is also a client, so you must specify the license server on that machine, too.
- ♦ If you change the license server, the saved configuration will no longer be valid and the License Setup dialog box will open the next time you start a MAK application.
- ♦ You can clear the saved license configuration by deleting the cache file. On Windows, it is
`C:\Users\user_name\AppData\Roaming\MAK\licenses<n>.txt`.
(The *AppData* directory is hidden by default.) On Linux, it is
`.mak/license<n>.txt`. (There may be more than one cache file, for example, *licenses1.txt* and *licenses2.txt*.)

The MAKLMGRD_LICENSE_FILE Environment Variable

As an alternative to using the License Setup procedure described in the previous section, you can configure the license server in an environment variable. The MAKLMGRD_LICENSE_FILE environment variable identifies the server machine. If you set this environment variable, it overrides the settings stored by the License Setup procedure.

The syntax for the environment variable is: `@Server_name`. For example, if the server machine is oak, set the environment variable to `@oak`.

The following sections explain how to set environment variables on the different platforms that MAK products run on.

Windows

To add the MAKLMGRD_LICENSE_FILE in Windows:

1. On the Start menu, click the Settings button. The Settings window opens.
2. In the search box, type environment. A list of choices is displayed.
3. Select Edit the System Environment Variables. The System Properties dialog box opens.
4. Click Environment Variables. The Environment Variables dialog box opens.
5. In the System Variables group box, click New. The New System Variable dialog box opens.
6. In the Variable Name field, enter MAKLMGRD_LICENSE_FILE.
7. In the Variable Value field, enter `@server_name`, where *server_name* is the name of the license server.
8. Click OK to back out of each dialog box and set the variable.

2.4. Installing an RTI

An RTI is a software library (and perhaps supporting executables) that implements an HLA Interface Specification. In HLA, applications exchange FOM data through RTI calls, which means that all HLA applications need to use an RTI.



Because of differences in the low-level network mechanisms used by different RTI implementations (which include, but are not limited to packet layout), applications that want to interoperate in the same federation execution must use the same RTI implementation.

Because RTIs are usually provided as dynamic libraries that implement a fixed API, a federation can often switch from one RTI implementation to another between runs (without even recompiling the applications), but during each run, all participants must agree on which RTI to use, much as they must also agree on which FOM to use.

For the most recent information about the RTI versions supported by MAK products, please see the release notes for your MAK application.

2.4.1. Installing the MAK RTI

To install the MAK RTI, follow the instructions in Chapter 2 of *MAK RTI Users Guide*.

Configuring Your System to Use the MAK RTI

The RTI dynamic libraries must be located somewhere on your dynamic library search path.

The MAK RTI needs to know where to find the following configuration files:

- ♦ The federation configuration file (*.fed*, *.fdd*, or *.xml*) for your federation execution (required).
- ♦ The RID file (*rid.mtl*) (optional).

Put the configuration files in the directory from which you are running, or set the environment variable `RTI_CONFIG` to the directory that contains them.

Running Applications with the MAK RTI

To run a MAK application with the MAK RTI:

1. Be sure the license server is running.
2. Start the application. The RTI Assistant will prompt you to choose an RTI configuration.
3. Choose a configuration. If necessary, start the `rtiexec`.
4. Click Connect. The application should run.

In many cases, you do not need to run the `rtiexec` to use the MAK RTI, however you can run the `rtiexec` if you want to. (It is required to use certain features of the MAK RTI.) For more information, please see your RTI documentation.

2.5. Localizing the Graphical User Interface

You can localize your VT MAK product's graphical user interface so that it uses languages other than English. For details, please see Chapter 2, [*Localizing the Graphical User Interface*](#), in *VR-Vantage User Guide*.



3. Starting VR-Engage

This chapter describes how to start up VR-Engage, connect to a session, and choose a role.

Starting VR-Engage	3-2
Hosting a VR-Forces Session.....	3-2
Starting an Unhosted Session.....	3-4
Choosing a Role	3-5
Choosing an Existing Role.....	3-6
Creating a New Entity.....	3-6
Using an HMD with an Entity	3-8
Assigning Roles from VR-Forces	3-9
Connecting to VR-Forces.....	3-11
Changing Your Role	3-11
Changing Your Role in the Choose Role Panel	3-11
Changing Your Role by Embarking on a Vehicle.....	3-12
Entity Engagement and Scenario State.....	3-13
Starting a New Session	3-13
Setting Up the Simulation Connection	3-14
Creating a Startup Configuration	3-16
Playing in Windowed Mode	3-16
Introduction to Virtual Reality Head-Mounted Displays.....	3-17
Prerequisites for using an HMD	3-17
Resetting the Tracking Sensor	3-17
Enabling and Disabling Virtual Reality Rendering.....	3-18
Configuration Options for Virtual Reality.....	3-19
Setting Up Mixed Reality	3-20
Optimizing Performance with HMDs	3-22
Starting Multiple Simulation Engines.....	3-22
Command-Line Options	3-24

3.1. Starting VR-Engage

When you start VR-Engage, it looks for an instance of VR-Engage that is already running or an instance of VR-Forces that is running. If it finds one, it immediately connects to that session, loads the terrain it is using, and then asks you what character you want to control. If it does not find a session, it stops and ask you what to do. You can host a VR-Forces session or start an unhosted session.

You can set some of the startup behaviors with a startup configuration script. For details, please see [“Creating a Startup Configuration,”](#) on page 3-16.

3.1.1. Hosting a VR-Forces Session

VR-Engage includes scenarios that were created using VR-Forces. When you host a VR-Forces session, you can load one of these scenarios or create a new scenario. If you run an existing scenario, you can control any of the entities in them. If you create a new scenario, you can only create and control one entity.



You cannot save scenarios that you create in VR-Engage. The principal benefit of hosting a VR-Forces session and creating a new scenario is that a VR-Forces session supports global weather and dynamic terrain.

If other instances of VR-Engage are running, they can connect to the session.



When you host a VR-Forces session, you use a VR-Forces license. If you only have one VR-Forces license and you host a VR-Forces session from VR-Engage, you will not be able to start the VR-Forces application.

To start VR-Engage and host a VR-Forces session:

1. On the Start menu, choose **MAK Technologies** → **VR-Engage**.

The VR-Engage window opens. If VR-Engage finds a VR-Forces session, it connects to it. If it does not find a session, the Searching for Session dialog box opens ([Figure 3-1](#)).

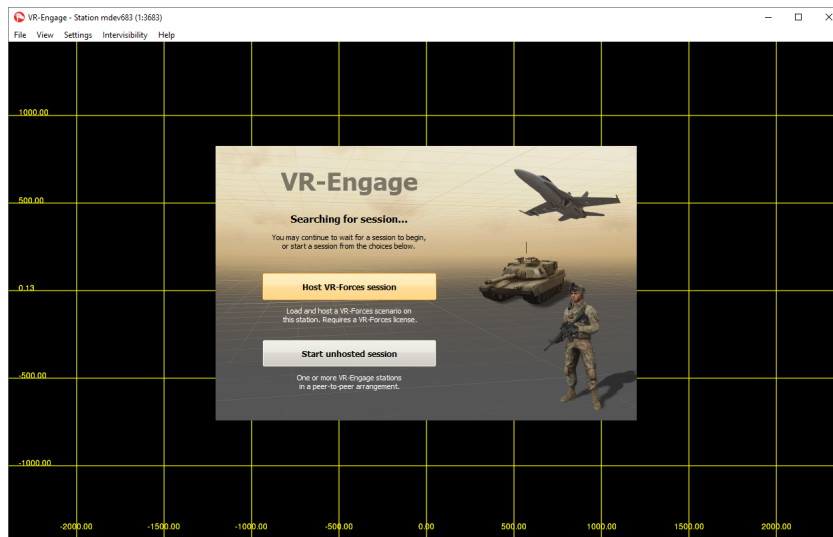


Figure 3-1. Searching for Session dialog box

i

During the initial stages of joining a session, the VR-Engage window has a title bar and menu bar typical of most windowed applications. We call this windowed mode. Once you select a character and start controlling it, you enter full-screen mode. Full-screen mode does not have menus or other window controls. Although full-screen mode is the default for controlling characters, you can also control them in windowed mode. For details, please see [“Playing in Windowed Mode,”](#) on page 3-16.

2. Click Host VR-Forces Session. The Choose a Scenario for this Session dialog box opens, where you are prompted to load a scenario or create a new scenario.
3. If you want to load a scenario:
 - a. Select the scenario you want to load.
 - b. Click OK. VR-Engage loads the scenario. It displays the scenario in Plan View mode and opens the Choose Role Panel ([Figure 3-2](#)).

If you want to create a new scenario:

- a. Click Create Empty Scenario Using Terrain File. The Choose a Terrain for this Session dialog box opens.
 - b. Select the terrain you want to load. (If you want to use different terrains for the GUI and the simulation engine, select the Use Alternate Simulation Terrain check box and select a terrain from the list.)
 - c. Click OK. VR-Engage loads the terrain. It displays the scenario in Plan View mode and opens the Choose Role Panel.
4. Choose a role, as described in [“Choosing a Role,”](#) on page 3-5.

3.1.2. Starting an Unhosted Session

In an unhosted session, you can create and control one character. If there are other VR-Engage unhosted sessions running or other simulations on the network, you can interact with them. However, you will not be able to take control of entities in the other simulations.



Unhosted sessions do not support dynamic terrain. Characters cannot open and close doors.

To start VR-Engage and host a VR-Forces session:

1. On the Start menu, choose **MAK Technologies → VR-Engage**.
The VR-Engage window opens. If VR-Engage finds a VR-Forces session, it connects to it. If it does not find a session, the Searching for Session dialog box opens ([Figure 3-1](#)).
2. Click Start Unhosted Session. The Choose a Terrain for this Session dialog box opens.
3. Select a terrain. (If you want to use different terrains for the GUI and the simulation engine, select the Use Alternate Simulation Terrain and select a terrain from the list.)
4. Click OK. VR-Engage displays the terrain in Plan View mode and the Choose Role Panel opens ([Figure 3-2](#)).
5. Choose or create a role, as described in “[Choosing a Role](#),” on page 3-5.

3.2. Choosing a Role

When you connect to or start a session, you must choose a role to play. The VR-Engage window lists the available roles in the Choose Role Panel (Figure 3-2). If you load a scenario or connect to a simulation, you can choose one of the entities in the simulation or create a new entity. If you start a new scenario or an unhosted session, you must create a new entity and choose that entity.

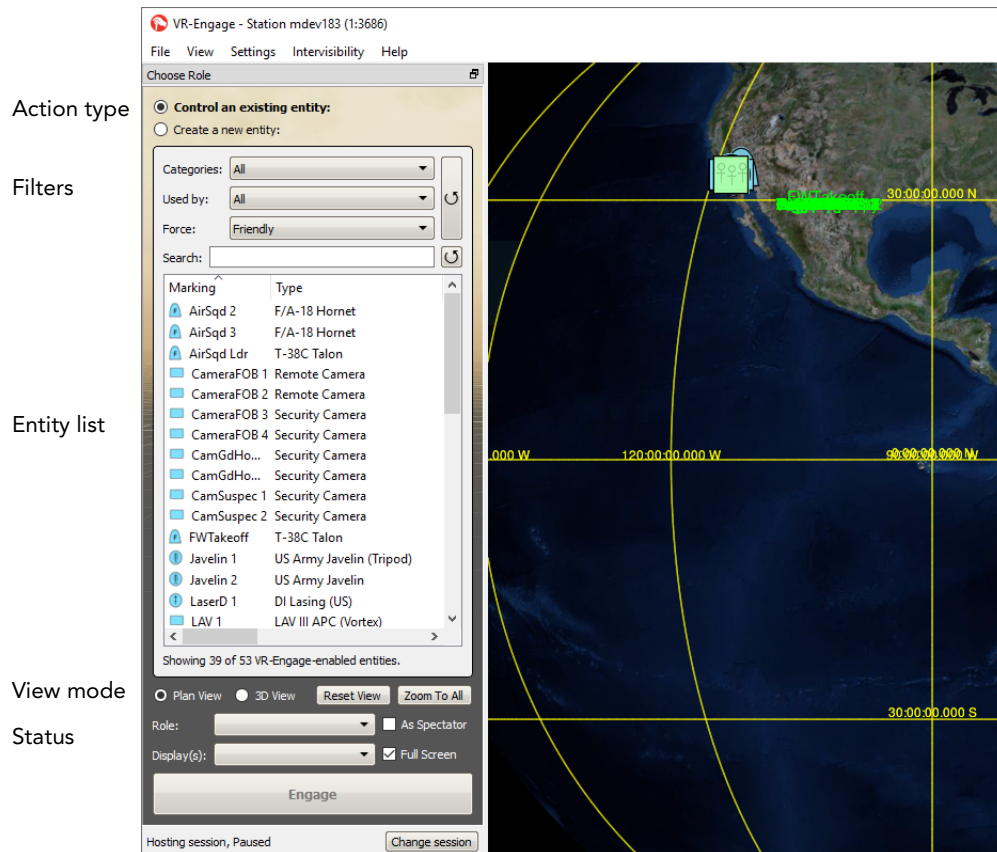


Figure 3-2. Choose Role Panel



VR-Engage users usually control a character in the simulation. However, you can also participate as a spectator. A spectator attaches to an entity just like a player would, but cannot control the entity. The entity would be controlled by another player or by another application, such as VR-Forces.

3.2.1. Choosing an Existing Role

If you load a scenario or connect to a simulation that is publishing entities, you can select one of them as your role.

To choose a role:

1. In the Choose Role Panel, select Control an Existing Entity. The panel lists the entities in the loaded scenario.
2. Optionally, filter the list by category, country (used by), force, or search string.
3. Optionally, switch from Plan View display mode (2D) to the 3D view by selecting an option at the bottom of the panel. You can also zoom to the extents of the entities in the entity list by clicking Zoom to All. (Filtering the list affects the results of Zoom to All.)
4. Select an entity by choosing it from the list or clicking it on the terrain.
5. If the selected entity has multiple roles, such as those on a vehicle, select an option from the Role list.
6. If the selected entity is an aircraft, select a display option from the Display(s) list. (For information about aircraft display options, please see [“Aircraft Display Options,”](#) on page 7-6.)
7. If you just want to observe the simulation from the perspective of the selected character, but not actually control it, select the As Spectator check box.
8. Click Engage. VR-Engage changes to full-screen mode. You can now control your character and participate in the scenario.

3.2.2. Creating a New Entity

If you are running an unhosted session, or if you host a session but do not load a scenario, you can create a single entity and control it. You can also create an entity if you are connected to a session. That entity can participate in the simulation, but if you change roles, it will be removed from the simulation.

If you add a cultural feature, such as a remote camera, you can attach it to (embark on) an entity.

To create an entity:

1. In the Choose Role Panel, select the Create a New Entity option. The window lists the entity types that you can create.
2. Optionally, filter the list by category, country (used by), force, or search string.
3. Optionally, switch from Plan View display mode (2D) to the 3D view by selecting an option at the bottom of the panel. If you have loaded a scenario, you can also zoom to the extents of the entities in the entity list by clicking Zoom to All. (Filtering the list affects the results of Zoom to All.)
4. Select an entity in the list ([Figure 3-3](#)).

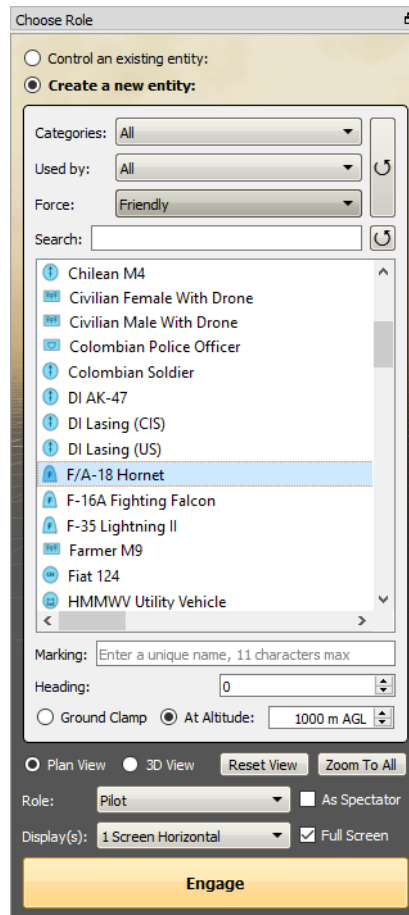


Figure 3-3. List of entities to create

5. Optionally, in the Marking box, you can type a name for the character. The maximum length is 11 characters.
6. Optionally, specify a heading. For remote cameras, the heading is relative to the object it is attached to.
7. Optionally, if you are adding a cultural feature, such as a remote camera, you can specify the initial pitch.
8. Optionally, specify an altitude. By default, humans and ground vehicles are placed on the ground. Aircraft are placed at the altitude specified in the Altitude box. If you want an aircraft to be placed on the ground, you can change the specified altitude or select the Ground Clamp option. Similarly, if you want to create a paratrooper in the air, select the At Altitude option and specify an altitude.
9. Click on the terrain where you want to place the entity. (You can navigate the Plan View or 3D view using your mouse and keyboard. For details about navigating the terrain, please see Chapter 15, *Moving the Observer*, in *VR-Vantage Users Guide*. If you are adding a remote camera, clicking on an entity attaches the camera to the entity.

10. If the selected entity has multiple roles, such as those on a vehicle, select an option from the Role list.
11. If the selected entity is an aircraft, select a display option from the Display(s) list. (For information about aircraft display options, please see [“Aircraft Display Options,”](#) on page 7-6.)
12. If you just want to observe the simulation from the perspective of the selected character, but not actually control it, select the As Spectator check box.
13. If you want to VR-Engage in full-screen mode, select the Full Screen check box.

If you want to use VR-Engage in windowed mode, clear the Full Screen check box.
14. Click Engage. You can now control your character and participate in the scenario (or watch, if you chose to be a spectator).

3.2.3. Using an HMD with an Entity

VR-Engage supports use of head-mounted displays to provide a virtual reality or mixed reality experience when you are controlling an entity. For details about configuring HMDs, please see [“Introduction to Virtual Reality Head-Mounted Displays,”](#) on page 3-17.

To use a head-mounted display to control an entity:

1. Start VR-Engage.
2. Join a session or load a scenario.
3. Create a new entity or select an existing entity.
4. On the Displays list, select VR Headset (virtual reality) or MR Headset (mixed reality), as appropriate.

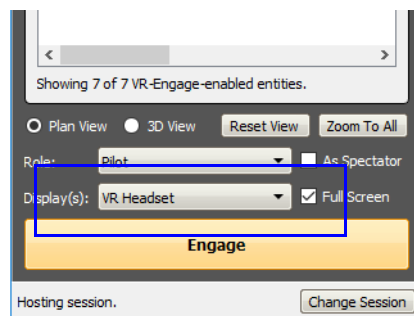


Figure 3-4. Displays list

5. Engage the entity.

3.2.4. Assigning Roles from VR-Forces

If you install the VR-Engage Add-ons for VR-Forces in a compatible version of VR-Forces, you can assign roles from VR-Forces. This includes:

- ♦ Assigning an initial role for the player and starting the scenario.
- ♦ Specifying that the player be a spectator.
- ♦ Changing the role to None, which causes the VR-Engage session to revert to the Plan View role selection GUI.
- ♦ Changing the role to a different entity as the scenario progresses.

Managing entity assignments from VR-Forces does not prevent the VR-Engage player from using the VR-Engage GUI to select roles. If the VR-Engage player selects a role, that decision is reflected in the VR-Engage Manager Panel in VR-Forces.

To manage role assignments from VR-Forces:

1. Start a version of VR-Forces that is compatible with your version of VR-Engage and has the VR-Engage Add-ons for VR-Forces installed.
2. Load the scenario you want to run.
3. Choose **View** → **VR-Engage Manager Panel**. The VR-Engage Manager Panel opens ([Figure 3-5](#)).

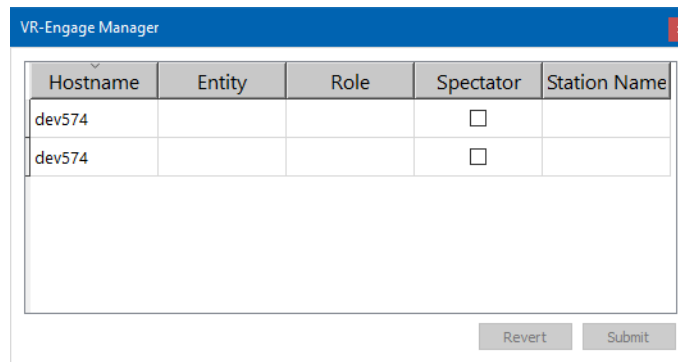


Figure 3-5. VR-Engage Manager Panel

4. Start VR-Engage. It automatically connects to the VR-Forces session. The VR-Engage Manager Panel displays the hostname of the machine running VR-Engage. (If you have multiple instances of VR-Engage running, they are listed on additional rows in the panel.)
5. Click the Entity cell for the VR-Engage host to which you want to assign a role. The Select Entity to Control dialog box opens ([Figure 3-6](#)).

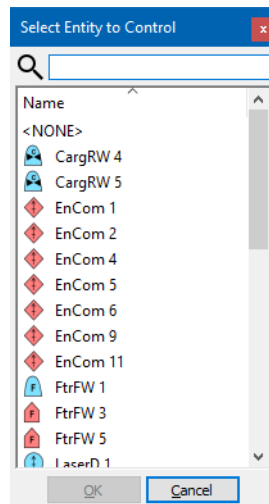


Figure 3-6. Select Entity to Control dialog box

6. In the list select the entity that you want the VR-Engage player to control. If the player has a role and you want to set it to no role, select <NONE>.
7. Click OK. The entity is listed in the table cell and the role is listed in the Role cell.

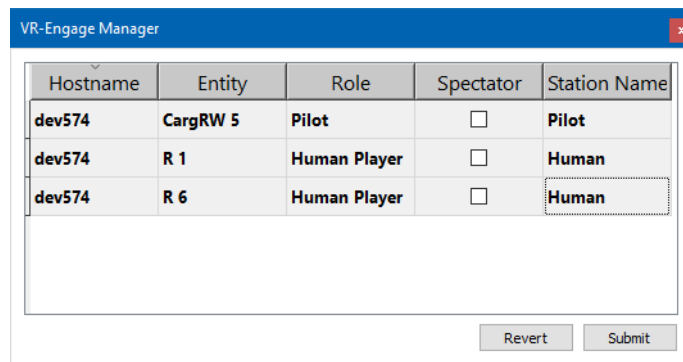


Figure 3-7. VR-Engage Manager Panel with entity selected

8. If the entity supports multiple roles, such as the LAV, you can select which role you want it to use. To select a role, click the Role cell. It becomes a list.
9. Select the role you want in the list. The panel automatically fills in the Station Name column.
10. If you want the player to participate as a spectator, select the Spectator check box.
11. Click Submit. The assignment gets sent to the host. The player is automatically engaged in the assigned role on the host machine.

3.3. Connecting to VR-Forces

VR-Engage can interact with any DIS or HLA simulation. However, it has a particular ability to participate in simulations that use VR-Forces, MAK's computer generated forces application. By default, when you start VR-Engage, it looks for a VR-Forces session to join. If it connects to a complementary VR-Forces build that has the VR-Engage plug-ins installed, you can take control of entities being simulated by VR-Forces. You can assume control of VR-Forces entities and give up control as desired.

When you take control of a VR-Forces entity, the entity pauses the plan or task it is executing. When you give up control of the entity, control returns to VR-Forces and the entity resumes whatever task or plan it was executing before you took control of it.



You can only control entities that are in the VR-Engage SMS. The VR-Engage SMS includes most human characters, ground vehicles configured to use the Vortex libraries, and aircraft configured to use RotorLib or FixedWingLib.

3.4. Changing Your Role

If a scenario has multiple entities, you can change the role you are playing to be any entity in a scenario. You can change your role by exiting the simulation and choosing a new role. You can also change a role by embarking on a vehicle and choosing an available role.

3.4.1. Changing Your Role in the Choose Role Panel

You can change your role by returning to the Choose Role Panel. When you engage characters or exit a character to the Choose Role Panel, the state of the scenario may change. For details, please see [“Entity Engagement and Scenario State,”](#) on page 3-13.

To change your role:

1. Press **Esc**. VR-Engage returns to the Choose Role Panel ([Figure 3-2](#)).
2. Select the role you want, as described in [“Choosing a Role,”](#) on page 3-5.
3. Click Engage.

3.4.2. Changing Your Role by Embarking on a Vehicle

You can change your role dynamically while you are participating in a simulation. The LAV has four roles associated with it: Gunner, Driver, Commander, and Passenger. If you embark on an LAV, you can assume any of these roles. Other vehicles have different sets of roles available.

To change your role by embarking on a vehicle:

1. Walk towards a vehicle that supports embarkation. When you get close to the vehicle, the Embark menu opens ([Figure 5-10](#)).



Figure 3-8. Embark LAV menu



If the Embark menu closes before you make a selection, back up your character a few steps and approach the vehicle again.

2. Select a role using one of the following methods:
 - Use the up and down arrow keys or the up and down buttons on your D-pad to select a role. Then press the **Right Arrow** key or right button on the D-pad to embark using the selected role.
 - Press the number key associated with the embarkation option you want.
 - Click the embarkation option you want.

3.5. Entity Engagement and Scenario State

The state of a scenario – running or paused – varies depending on whether or not you are actively engaged in controlling a character and which application started the scenario. The possible cases are as follows:

- ♦ If VR-Engage is hosting a session:
 - When a player clicks Engage to control an entity, it puts the scenario in running state.
 - When a player presses **Esc** to return to the Choose Role Panel, it puts the scenario into the paused state.
- ♦ If VR-Engage is joining a session hosted by VR-Forces or another instance of VR-Engage:
 - When a player clicks Engage to control an entity, it does not change the scenario's state.
 - When a player presses **Esc** to return to the Choose Role Panel, it does not change the scenario's state.
- ♦ If VR-Engage is starting an unhosted session:
 - When a player clicks Engage to control an entity, it puts the scenario in the running state.
 - When a player presses **Esc** to return to the Choose Role Panel, it does not change the scenario's state.

3.6. Starting a New Session

You can exit the session you are participating in and join or start a new session.

To change the scenario:

1. Press **Esc**. The view changes to windowed mode.
2. On the Choose Role Panel, click New Session. The Searching for A Session dialog box is displayed.
3. Follow the procedure for starting a session, as described in [“Starting VR-Engage,”](#) on page 3-2.

3.7. Setting Up the Simulation Connection

To participate in a simulation, you must connect VR-Engage to a simulation network. VR-Engage includes connectors for DIS, HLA 1.3, HLA 1516, and HLA Evolved (IEEE 1516-2010, also referred to as HLA 1516e). You can change the configuration values of the default connectors and you can add connectors.

VR-Engage needs to connect to a network at startup. By default, it automatically connects to the DIS network using port 3000. If you want to use a different network protocol or a different port, you must change the auto-connect setting.



You cannot change the connection while VR-Engage is running. If you need to change the connection, you must change the auto-connect setting as described in this section and then restart VR-Engage.

For complete details about connection settings and parameters, please see *VR-Vantage Users Guide*.

To set up the simulation connection:

1. Start VR-Engage.
2. Choose **Settings** → **Connection**. The Simulation Connections dialog box opens (Figure 3-9).

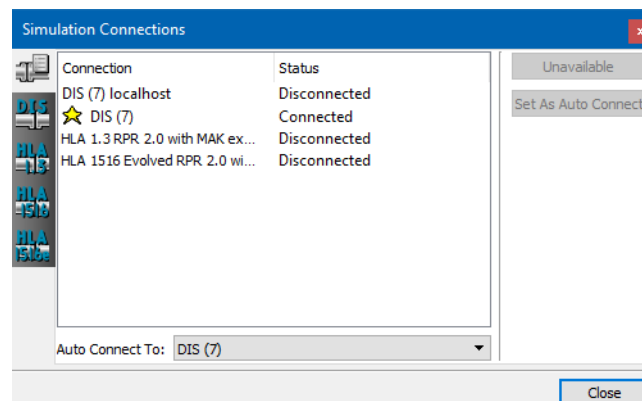


Figure 3-9. Simulation Connections page

3. Select the page for the connection type that you want to use.
4. Select a connection in the Connections list (Figure 3-10).

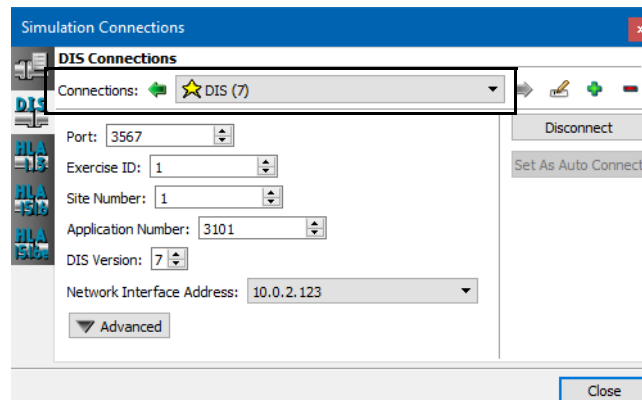


Figure 3-10. DIS Connections page

5. Change connection parameters if necessary.
6. Click Set As Auto Connect.
7. Click Close.
8. Shut down VR-Engage.
9. Start VR-Engage. It will connect to the network you specified.

3.8. Creating a Startup Configuration

You can create a startup configuration to automate some aspects of VR-Engage startup. VR-Engage includes a fully commented example startup configuration script called *exampleStartupConfig.lua* in *./appData/scripts*.

You can specify the following startup parameters in a script:

- **mode**. Tells VR-Engage to only **join** a running session, immediately **host** a session, or immediately **start** an unhosted session.
- **scenario**. Optional. If the **mode** is **host**, specifies the scenario to host. If you do not specify a scenario, VR-Engage uses the value for **terrain** or prompts you to specify a terrain.
- **terrain**. Specifies the terrain to load in **start** mode, or in **host** mode if you do not specify a scenario.
- **guiTerrain**. Optional. Specifies the terrain to use for visualization if you want to visualize on a terrain that is different from the simulation terrain.
- **attach**. Specifies an entity to control or attach to as a spectator.
- **entity**. Optional. If **attach** is not specified, this parameter specifies an entity to create.
- **minion**. Causes this instance of VR-Engage to connect to the entity being controlled by another instance of VR-Engage.

To use a startup configuration script, create a shortcut or batch file with the following command:

```
vrEngageversion.exe --initSettingsFile startupConfigFile
```

where:

- *vrEngageversion.exe* is one of the VR-Engage executables (*VR-EngageAir.exe*, *VR-EngageGround.exe*, *VR-EngageCombined.exe*.)
- *startupConfigFile* is the name of your startup configuration file, including the *.lua* extension. If you use a simple file name, VR-Engage looks for the file in *./appData/scripts*. You can also specify a relative path from the *./bin64* directory or a fully qualified path.

3.9. Playing in Windowed Mode

By default, when you click Engage to control a character, you go into full-screen mode. There are no menus or other window controls available. If you want access to menus without escaping to the Choose Role Panel, you can exit full-screen mode, but still control your character. This is called windowed mode.

Whenever you go from full-screen to windowed mode, VR-Engage releases mouse control so that you can use the mouse to access menus. You can toggle mouse control on and off. (For more information about mouse control, please see [“Enabling and Disabling Mouse Control,”](#) on page 5-3.)

- To change from full-screen mode to windowed mode, press **Ctrl+Enter**. To return to full-screen mode, press **Ctrl+Enter** again.

3.10. Introduction to Virtual Reality Head-Mounted Displays

VR-Engage is integrated with several virtual reality head-mounted displays (HMDs). VR-Engage can render stereo views, which are presented inside the HMD. The head position and orientation tracking of the HMD are reflected in the observer as the wearer of the HMD moves their head.

VR-Engage uses the OpenVR library to integrate with virtual reality systems. Any system that is capable of using OpenVR should work with VR-Engage. VR-Engage is tested with the following systems:

- ♦ Oculus Rift.
- ♦ HTC Vive.
- ♦ Windows Mixed Reality headsets.

3.10.1. Prerequisites for using an HMD

To use an HMD, you need the following software and VR-Engage setup:

- ♦ SteamVR. Required for the Vive headset. It is installed through the Steam digital distribution platform (<http://store.steampowered.com/>).
- ♦ If you are using an Oculus Rift, the Oculus Runtime must be installed.
- ♦ If you are using Microsoft Mixed Reality Devices, the “Windows Mixed Reality for SteamVR” add-on must be installed through Steam.

3.10.2. Resetting the Tracking Sensor

For user comfort, you can reset the origin of the positional tracking performed by the HMD. This allows you to restart the head tracking once you have put on the HMD and assumed a comfortable position. You can reset the sensor at any time by pressing the **F8** key. You can change the keyboard assignment by changing the “Reset Virtual Reality HMD” action in the VR-Engage Key Mapping Editor.



You can also reset the tracking position as follows:

- ♦ Choose **Reset VR Head Tracking** on the Action menu.
 - ♦ Press the right thumbstick on a Gamepad.
 - ♦ Press button 5 on the HOTAS Warthog joystick.
-

3.10.3. Enabling and Disabling Virtual Reality Rendering

By default, when you start VR-Engage with Virtual Reality, rendering to the HMD is enabled at startup. You can enable and disable rendering to the HMD at runtime.



If you are using a Vive HMD, you must turn it on before you start VR-Engage.

To enable or disable virtual reality rendering:

1. Choose **Settings** → **Application**. The Application Settings dialog box opens.
2. Select the Virtual Reality Settings page ([Figure 3-11](#)).



The Virtual Reality Settings page is available only if the virtual reality plug-in is loaded and an HMD is detected.

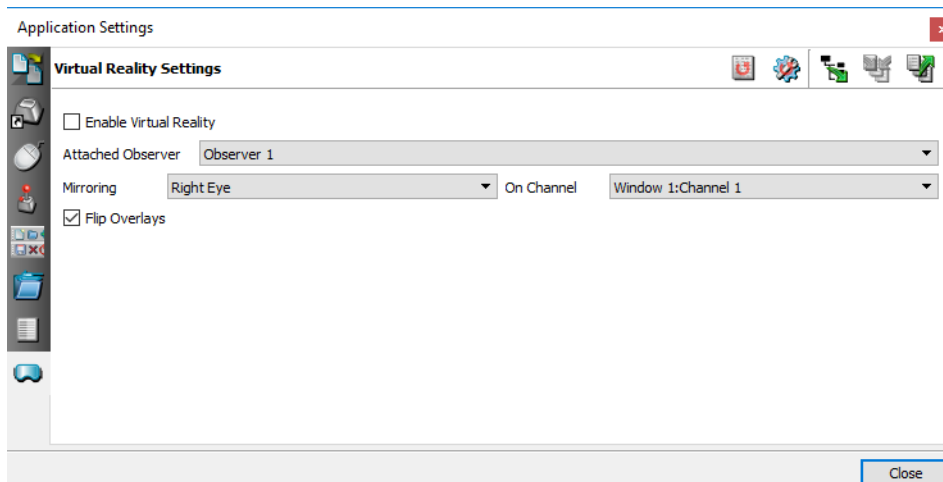


Figure 3-11. Virtual Reality Settings page

3. Select or clear the Enable Virtual Reality check box.

3.10.4. Configuration Options for Virtual Reality

You can set the following configuration options for virtual reality:

- ♦ Attached Observer. This option is not supported.
- ♦ Mirroring. This copies the image rendered for a given eye to the selected channel in the main display. The default is to render the right eye to the main channel. Mirroring disables the normal render pass of the attached channel to help with performance. (Setting Mirroring to None hurts performance and is not recommended.)
- ♦ Flip Overlays. The Action menu is an overlay. If the Action menu is upside down when you use an HMD, select this option.

To set virtual reality configuration settings:

1. Choose **Settings** → **Application**. The Application Settings dialog box opens.
2. Select the Virtual Reality Settings page ([Figure 3-11](#)).



The Virtual Reality Settings page is available only if the virtual reality plug-in is loaded and an HMD is detected.

3. Change the settings as desired.

3.10.5. Setting Up Mixed Reality

VR-Engage supports the use of the forward-facing cameras on the Vive and Vive Pro headsets to add real elements such as a joystick, throttle, or other physical controls to the virtual world. Mixed reality modes are available for human roles and aircraft pilot roles for aircraft configured for VR. When you select a compatible entity, HMD with MR Camera is an option in the Display(s) list. Select this option to use mixed reality mode.

To use Mixed Reality mode in VR-Engage, you need a Vive or Vive Pro, SteamVR, and a green screen. You must start SteamVR and turn on the Vive HMD before you start VR-Engage. We strongly recommend that you test the Vive camera before each use. For details, please see [“Testing the Vive Camera,”](#) on page 3-20.

A green screen masks out real-world elements that should not appear in the simulation. For the VR-Engage pilot role with mixed reality, the green screen is expected to cover an area approximately 120 degrees wide at -90 degrees elevation extending up to 60 degrees wide at 0 elevation, from the player's point of view. If seated at a table or desk, the desk should be covered with a green screen approximately five feet wide and extending up to at least seated eye level. The only controls that should be visible on top of the green screen are those that you want to see in the mixed reality view. The green screen should be well-illuminated with soft, diffused light so that the green color is clear and uniform.

Testing the Vive Camera

If you are using the Vive HMD, you must turn it on before you start VR-Engage. We also recommend that you test the camera every time SteamVR or the computer is restarted, and prior to running VR-Engage. In some cases the camera does not work if it is not initialized before VR-Engage is started.

To test the Vive camera:

1. Turn on the Vive HMD.
2. Start SteamVR.
3. On the SteamVR menu, choose **Settings** ([Figure 3-12](#)). The Settings dialog box opens.

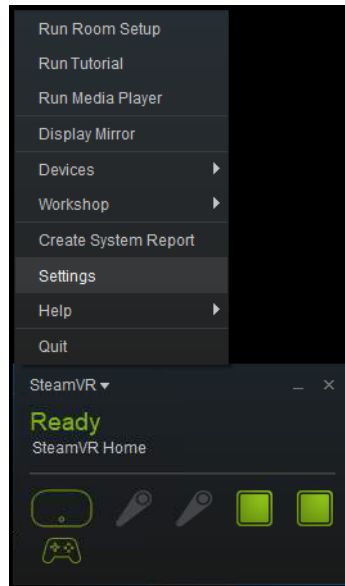


Figure 3-12. SteamVR menu

4. Select the Camera page ([Figure 3-13](#)).

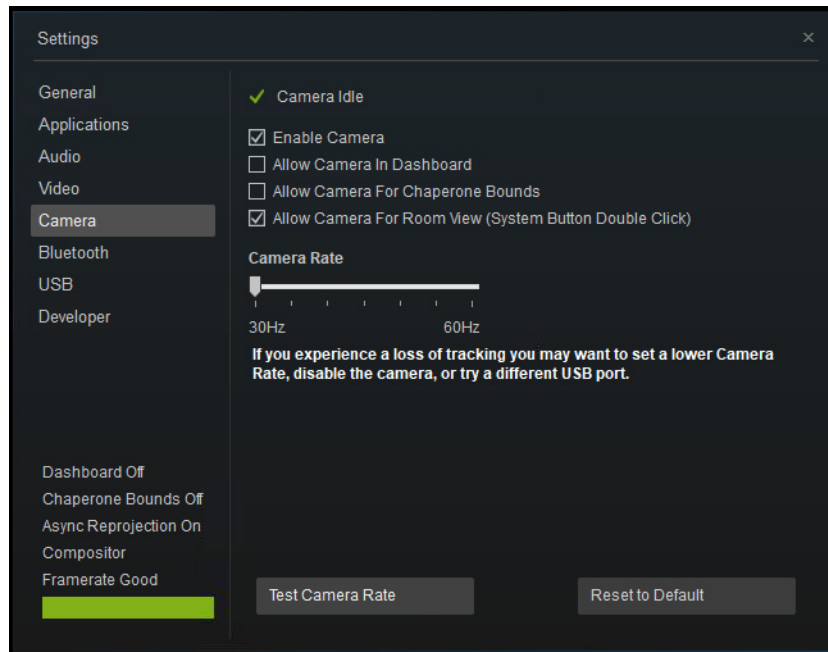


Figure 3-13. Camera page

5. Click Test Camera Rate.

6. Confirm that the camera is working. (Wait until three green check marks appear.) If a red x appears, or if the Test Camera Rate button is not available, verify that the Vive is connected to a USB-3-capable port, and reboot the Vive headset and/or the computer.
7. If the test fails, restart the Vive HMD and SteamVR.

3.10.6. Optimizing Performance with HMDs

Virtual reality headsets require a high frame rate for a comfortable viewing experience. There are many factors that determine frame rate, such as complexity of the scene being rendered, terrain, special effects such as HDR and shadows, and environmental effects such as clouds. You may need to make trade-offs when selecting a terrain database, entity models, and applying certain visual effects at runtime.

For convenience, we have included an overlay installer that makes a number of these trade-offs to optimize performance in VR in the context air entities. The VR-Engage installation includes an installer named `MR_VR_FlightSettingsOverlay.exe`, located at the top level folder. Please see the associated `README_MR_VR_FlightSettingsOverlay.txt` for details on the settings it modifies.

3.11. Starting Multiple Simulation Engines

VR-Forces scenarios can be designed to use multiple simulation engines to improve performance. Each simulation engine simulates a subset of the simulation objects in the scenario. (This is called load balancing.) If a scenario is designed to use multiple simulation engines, VR-Engage can automatically start up the required number of simulation engines and benefit from load balancing.

By default, use of multiple simulation engines is disabled and the maximum number of simulation engines to use is set to 1. To enable use of multiple simulation engines, do one of the following:

- ♦ Start VR-Engage with the `--enableMultipleBackends` command-line argument.
- ♦ In `./appsrc/scripts/playerstation.lua`, uncomment the `enableMultipleBackends` parameter and set it to true.

By default, the maximum number of simulation engines that VR-Engage can start is **number of logical processors/2**. The minimum is always 1. You can change the maximum number of simulation engines to start by uncommenting the `MaxBackends` parameter in `./appsrc/scripts/playerstation.lua` and setting it to your desired value.

If you enable multiple simulation engines but do not have enough licenses for the number of simulation engines that a scenario is configured to use, VR-Engage simulates all entities on one simulation engine.



The VR-Engage_First_Experience scenario is configured to use two simulation engines. The MAK_Suite_Demo_California scenario is configured to use three simulation engines.

If you start one of these scenarios in VR-Forces and do not have the configured number of simulation engines running, VR-Forces will prompt you to remap the entities to the existing simulation engines. For information about load balancing and remapping scenarios, please see *VR-Forces Users Guide*.

You must have a VR-Forces license for each simulation engine you start.

3.12. Command-Line Options

Table 3-1 lists VR-Engage’s command-line options.

Table 3-1: command-line options (Sheet 1 of 5)

Option	Description
<code>(-- --ignore_rest)</code>	Ignore all command-line options after this one. This option is useful for disabling part of a command line in a script for test purposes so that you do not have to retype all of the command options at a later point.
<code>--alphaBits bits</code>	Sets the number of alpha bits (0, 8).
<code>--antiAliasing level</code>	Set the anti-aliasing level (0, 2, 4, 8, or 16). Default: 4. Depending on your graphics card and driver, some combinations of anti-aliasing and bit settings (<code>--depthBits</code> , <code>--stencilBits</code> , and <code>--alphaBits</code>) may be incompatible. For example, if you set stencil bits to 8, the depth must be set to 24 and anti-aliasing may need to be set to 0 or 2.
<code>--appDataDir directory</code>	Specifies the location of application data.
<code>--autoReconnectPeriod period</code>	Specifies the amount of time, in seconds, to wait before trying to attach to disconnected remote displays.
<code>(-c --showConsole)</code>	Display a console window.
<code>(-C --autoConnect) {filename connector_name}</code>	Automatically connect to the network using the specified connector.
<code>--dataDir directory</code>	Specifies the location of the data directory (terrains and so on).
<code>--depthBits bits</code>	Sets the depth of graphics to 24 bits or 32 bits. Default: 24.
<code>--disableDynamicTerrain</code>	Disables the dynamic terrain engine. May slightly speed up terrain loading and paging.
<code>--disableOcclusionCulling</code>	Disables occlusion culling. This may improve performance.
<code>--discoveredModelPreloadFileName filename</code>	Specifies a file to which the list of models discovered during a session that were not preloaded is written.
<code>--displayEnginePort port</code>	Specifies the display engine port used by a remote display engine. Used only if <code>--slave</code> is specified.
<code>--dispSetting filename</code>	Specifies the display engine configuration to load.

Table 3-1: command-line options (Sheet 2 of 5)

Option	Description
<code>(-e --extraArgs) string "string1 ... stringn"</code>	Allows you to send arbitrary strings to the initializer, which can be queried for by plug-ins. This option works around the restriction on adding new command-line arguments. It can take one argument or multiple arguments. Multiple arguments must be wrapped in double quotes.
<code>--enableMultipleBackends</code>	Causes VR-Engage to load the number of back-ends required by a scenario up to the maximum number specified in <code>./appsrc/scripts/playerstation.lua</code> .
<code>--enableVSync</code>	Turns on VSync.
<code>--entDispSetting filename</code>	Specifies the entity display setting to load.
<code>--entityDefsDir directory</code>	Loads the <code>.hier</code> and <code>.leaf</code> files in the specified directory.
<code>--envSetting filename</code>	Specifies the environment configuration file to load.
<code>(-E --entTypeMap) filename</code>	Load the specified object type mapping file. The file extension determines the type of mapping.
<code>--factoryRootDir directory</code>	Set the root directory used to restore settings to factory defaults.
<code>--forceTextShaping</code>	Force all text to use HarfBuzz shaping. Use this option if you need support for right-to-left languages. It may affect performance.
<code>--fullScreen</code>	Start with the window in full screen mode.
<code>(-F --frameRate) rate</code>	If rate is 0, the frame rate is variable. Otherwise, specifies a fixed frame rate for rendering.
<code>(-G --locale) language</code>	Specifies the locale (for localization).
<code>(-h --help)</code>	Display command-line usage information.
<code>--highestPriority</code>	Changes the priority of the application and the main render thread to the highest available priority. This command may starve other processes.
<code>--initSettingsFile filename</code>	Name of the initialization settings file to load.
<code>(-I --unbatchedRendering)</code>	Disables instance rendering. Default: Enabled.
<code>(-K --disableKDTrees)</code>	Disable creation of KD trees for intersections.
<code>(-l --logFileName) filename</code>	Specifies the log file name.
<code>(-L --loadObservers) filename</code>	Loads the saved observers in the specified file. You can use this command multiple times, for example: --loadObservers file1 --loadObservers file2

Table 3-1: command-line options (Sheet 3 of 5)

Option	Description
<code>--mainScreenNum num</code>	Specifies the display that the main window should use. The screen number can be a number from 0 to the number of screens -1. This number matches the screen number used in the Display Engine Configuration Editor for a window.
<code>--mergeEntityTypeMap {directory filename}</code>	Merges all entity type mapping files (*.metx) in a directory or individual entity type mapping files. Can be used multiple times.
<code>--mergeHierarchyEntityDef filename</code>	Merges the specified .hier file into the default hierarchy (usually loaded from ./appData/definitions.) Merging is additive only. No nodes in a previously loaded hierarchy are replaced.
<code>--mergeHierarchyTacticalGraphicsDef filename</code>	Merges the specified .hier file into the default hierarchy (usually loaded from ./appData/definitions.) Merging is additive only. No nodes in a previously loaded hierarchy are replaced.
<code>--mergeHierarchyUnitDef filename</code>	Merges the specified .hier file into the default hierarchy (usually loaded from ./appData/definitions.) Merging is additive only. No nodes in a previously loaded hierarchy are replaced.
<code>--mergeLeafEntityDef filename</code>	Merges the specified leaf file into the default entity element definitions.
<code>--mergeLeafTacticalGraphicsDef filename</code>	Merges the specified leaf file into the default tactical graphics element definitions.
<code>--mergeLeafUnitDef filename</code>	Merges the specified leaf file into the default unit element definitions.
<code>--mergeModelDefs {directory filename}</code>	Merges all model definition files (*.ommx) in the specified directory or individual model definition files. Can be used multiple times.
<code>--mergeTacticalGraphicsTypeMap {directory filename}</code>	Merges all tactical graphics type mapping files (*.mtgx) in a directory or individual tactical graphics type mapping files. Can be used multiple times.
<code>--mergeUnitTypeMap {directory filename}</code>	Merges all unit type mapping files (*.magx) in a directory or individual unit type mapping files. Can be used multiple times.
<code>--modelPreloadFileName filename</code>	Specifies a file that has a list of models to preload.
<code>(-n --notifyLevel notify_level)</code>	Specifies the notification level for application messages, where <i>notify_level</i> is a number from 0 through 4. The least verbose message level is 0, the highest is 4. The default is 2.

Table 3-1: command-line options (Sheet 4 of 5)

Option	Description
<code>--noAppDataEntityDefs</code>	Do not load the entity element definitions in <i>./appData/definitions</i> .
<code>--noAppDataEntityTypeMap</code>	Do not load entity type mappings in <i>./appData/definitions</i> .
<code>--noAppDataModelDefs</code>	Do not load model definitions in <i>./appData/definitions</i> .
<code>--noAppDataTacticalGraphicsDefs</code>	Do not load the tactical graphics element definitions in <i>./appData/definitions</i> .
<code>--noAppDataTacticalGraphicsTypeMap</code>	Do not load tactical graphics type mappings in <i>./appData/definitions</i> .
<code>--noAppDataUnitDefs</code>	Do not load the unit element definitions in <i>./appData/definitions</i> .
<code>--noAppDataUnitTypeMap</code>	Do not load unit type mappings in <i>./appData/definitions</i> .
<code>(-O --hasNTPSync)</code>	Enables synchronized ocean between different VR-Vantage applications, such as VR-Vantage Stealth and the VR-Forces front-end. System clocks must be synchronized.
<code>--plugin filename</code>	Load the specified plug-in. Can be used multiple times.
<code>--pseudoFullScreen</code>	Use pseudo full screen for full screen mode. This may improve performance when using dynamic ocean.
<code>(-s --slave)</code>	Run as a remote display engine.
<code>(-S --suppressHatIntersectOnAttach)</code>	
<code>--stationName</code>	Station name of application as seen by the VR-Engage manager.
<code>--stencilBits bits</code>	Sets the number of stencil bits (0 or 8). Default: 0.
<code>--tcpSendTimeout</code>	Sets the timeout (in seconds) for the master display engine to wait for a remote display engine before giving up on a send. Default: 30 seconds.
<code>(terrain_MTF_file scene_MSf_file)</code>	Specifies a terrain (MTF) file to load. The path must be a relative path (from <i>./bin64</i>) to the file, for example, <i>../userData/terrains/MTF_file</i> .
<code>--unplug filename</code>	Do not load the specified plug-in. Can be used multiple times.
<code>--userDataDir directory</code>	Specifies the user data directory.
<code>(-v --version)</code>	Display version information and exit.

Table 3-1: command-line options (Sheet 5 of 5)

Option	Description
<code>-W --withDisplayEngine port@netAddress;displayC onfigFilename1 n</code>	Connect to a display engine running on another computer. For more information, please see Loading Multiple Display Engine Configurations from the Command Line under "Loading a Display Engine Configuration," on page 6-11 in <i>VR-Vantage Users Guide</i> .
<code>(-z --useReverseZBuffer)</code>	Specifies use of reverse Z buffering, which may reduce Z-fighting when viewing the terrain from a distance. (3D observer modes only.)
<code>(-Z --ignoreZoomFor SpeedtreeLod</code>	Disable zoom for SpeedTree LOD.



4. Common Player and Entity Features

This chapter describes actions that are common to all types of entities in a scenario.

The Action Menu	4-2
Selecting Options on the Action Menu	4-2
Using the Radio	4-3
Using the Radio Plug-in in VR-Forces	4-4
Using the Standalone Radio Application.....	4-5
Jamming Radios.....	4-7
Editing the Radio Configuration.....	4-7
Changing the View Mode	4-7
Resetting Entities.....	4-8
Starting VR-Forces Events	4-8
Introduction to Sound Effects	4-9
Enabling Sound Effects	4-9
Configuring Sound Effects.....	4-10
Associating Sound Files with Entities and Events	4-11

4.1. The Action Menu

The Action menu lets you turn several features on and off (toggles) and lets you assign tasks to other entities if you are hosting a VR-Forces scenario or connected to a VR-Forces session. The Action menu is context-sensitive.

Action	
1: Weapon State:	Ready
2: Weapon:	M4>
3: Binoculars:	OFF
4: Night Vision:	OFF
5: Flashlight:	OFF
6: Task entity	>
7: Radio:	OFF
8: Channel:	-----
9: Trigger Event	>
...	

Figure 4-1. Action menu

To open the Action menu, do either of the following:

- ♦ Press ~.
- ♦ Press the menu button on your game controller or head-mounted display (HMD) controller (the Back button on the Logitech Gamepad F310).

i

The Oculus Rift and the HTC Vive HMDs configure the Action menu differently. If the Action menu is displayed upside down, you must change the configuration. For details, please see “[Configuration Options for Virtual Reality](#),” on page 3-19.

4.1.1. Selecting Options on the Action Menu

You can choose options on the Action menu using the keyboard (arrow keys or number keys), the D-pad on a Gamepad or HMD controller, or your mouse.

To choose an option on the Action menu using the arrow keys or D-pad:

1. Press the **Up Arrow** and **Down Arrow** keys on your keyboard or the up and down buttons on a Gamepad’s D-pad to highlight an option.
2. Press the **Right Arrow** key or the right button on the D-pad to toggle the option on or off or to display a submenu.

When you choose an option with the mouse, if it is a toggle, the state changes immediately. If it displays a submenu, the menu changes immediately. If it is a task, the entity executes that task immediately. Therefore, if a task requires input, such as a location, do not use the mouse to choose it. Use the arrow keys.

- To choose an option on the Action menu using a mouse, click the menu option.

Each option on the Action menu has a number. When you choose an option with a number key, if it is a toggle, the state changes immediately. If it displays a submenu, the menu changes immediately. If it is a task, the entity executes that task immediately. Therefore, if a task requires input, such as a location, do not use a number key to choose it. Use the arrow keys.

i

Numbers get reassigned dynamically if you scroll the Action menu or menu commands get removed due to some change in the state of the character. Therefore, you cannot assume that a particular number always controls the same command.

- To choose an option on the Action menu using a number key, press the number associated with the menu option.

4.2. Using the Radio

VR-Engage supports voice communications over radios and intercoms. You can communicate with other players in your force. Individual human players and aircraft have 2 radios, each of which has 2 channels. (The number of radios is configurable. For details, please see [Figure 4.2.4 “Editing the Radio Configuration,”](#) on page 4-7.) Ground vehicles have an intercom, which has one channel. The intercom allows the crew to communicate among themselves.

Radio communications are perfect. Radio signals are not affected by terrain, weather, distance, or other factors. However, you can use the VR-Forces radio panel or the standalone radio application included with VR-Engage to jam radios. For more information about jamming, please see [“Jamming Radios,”](#) on page 4-7.

The radio uses the audio devices configured in the Audio Settings dialog box for capture and playback.

For information about the intercom, please see [“Using the Intercom,”](#) on page 6-5.

To use the radio:

1. Open the Action menu.
2. Choose **Radio** to toggle it to the ON setting.
3. Select Radio 1, Radio 2, or Intercom (if one is configured). When you select a radio, a channel is displayed for the Channel menu option.
4. Select the channel you want to use.
5. To talk, hold down the **t** key. To hear others, release the key.

i

You cannot hear other people talking while the talk key is depressed.

4.2.1. Using the Radio Plug-in in VR-Forces

If you install the VR-Engage overlay for VR-Forces, it installs a radio plug-in that allows VR-Forces users to use the radio to talk to VR-Engage players or anyone running the VR-Engage radio application. The radio is added as a panel and is enabled by default (Figure 4-2).

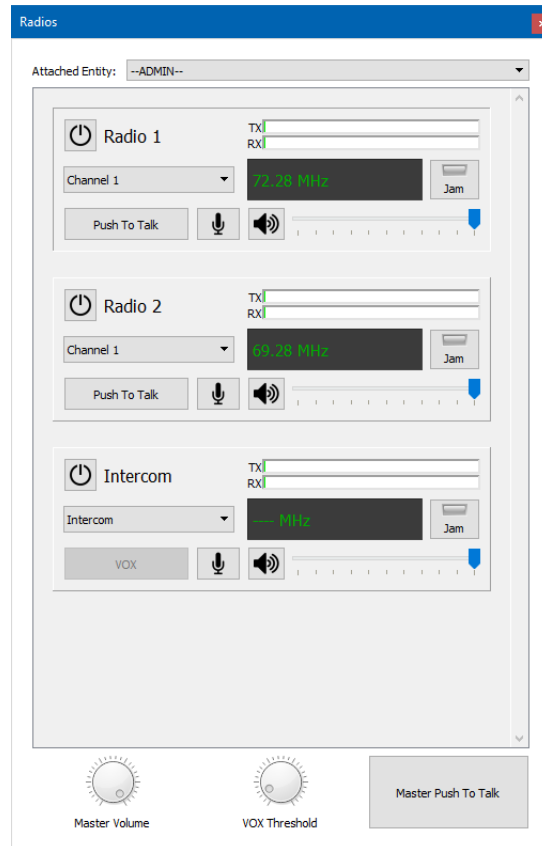


Figure 4-2. Radios panel

Each configured radio has a radio head that represents its state. It displays the radio name, its frequency, and the audio levels for transmit (TX) and receive (RX).

To use the VR-Engage radio in VR-Forces:

1. In the Attached Entity list, select the entity you want to speak for, or ADMIN, if you are an observer.
2. Optionally, turn the Master Volume knob to adjust the volume of all radios.
3. Optionally, turn the VOX Threshold knob to adjust the level of sound needed to enable voice activated transmission. (This is usually used for intercoms, not radios.)
4. Optionally, click Master Push to Talk to transmit on all radios that are not muted.

5. Click a radio head to select it for use. Operate the radio head as follows:
 - a. Optionally, select a channel from the list.
 - b. Click Push to Talk or press **t** to talk.
 - c. Click the microphone button () to mute the microphone or enable it.
 - d. Click the speaker button () to mute the speaker or enable it.
 - e. Adjust the slider to change the radio's volume.
 - f. Click the Jam button () to jam the radio frequency.

4.2.2. Using the Standalone Radio Application

VR-Engage includes a standalone radio application. It lets you communicate with VR-Engage players without running VR-Engage. The application has different versions for the protocols supported by VR-Engage.

The radio application is also installed in VR-Forces if you install the VR-Engage overlay.

To use the VR-Engage standalone radio:

1. In a console window, change to `./bin64`.
2. Run the executable for the protocol you are using, as follows:

DIS:

```
makRadioAppDIS.exe
```

HLA Evolved:

```
makRadioAppHLA1516e.exe --execName MAK-RPR-2.0 --fedFileName
RPR_FOM_v2.0_1516-2010.xml --fomModules MAK-VRFExt-1_evolved.xml
--fomModules MAK-DIGuy-2_evolved.xml --fomModules
MAK-LgrControl-1_evolved.xml --fomModules
MAK-VRFAggregate-1_evolved.xml --fomModules
MAK-DynamicTerrain-1_evolved.xml --rprFomVersion 2.0
```

HLA13:

```
makRadioAppHLA13.exe --execName MAK-RPR-2.0 --fedFileName
MAK-RPR2-1-2.fed --rprFomVersion 2.0
```

The VR-Engage Radio opens ([Figure 4-3](#)).

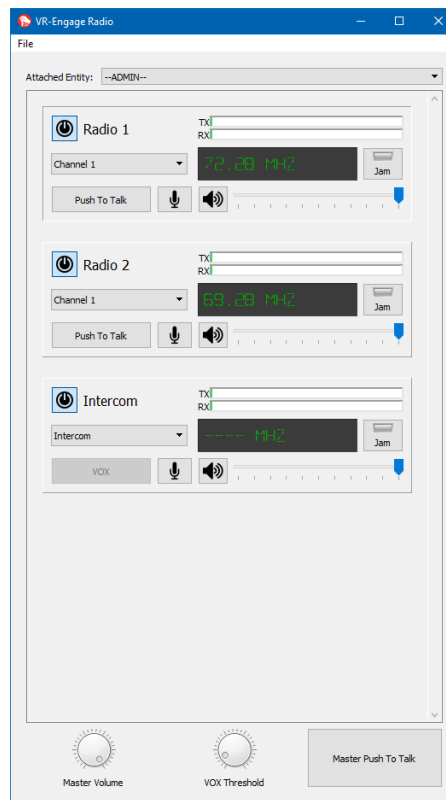


Figure 4-3. VR-Engage Radio

3. Optionally, turn the Master Volume knob to adjust the volume of all radios.
4. Optionally, turn the VOX Threshold knob to adjust the level of sound needed to enable voice activated transmission. (This is usually used for intercoms, not radios.)
5. Optionally, click Master Push to Talk to transmit on all radios that are not muted.
6. Click a radio head to select it for use. Operate the radio head as follows:
 - a. Optionally, select a channel from the list.
 - b. Click Push to Talk or press **t** to talk.
 - c. Click the microphone button (🎤) to mute the microphone or enable it.
 - d. Click the speaker button (🔊) to mute the speaker or enable it.
 - e. Adjust the slider to change the radio's volume.
 - f. Click the Jam button (🔧) to jam the radio frequency.

4.2.3. Jamming Radios

The VR-Forces Radios Panel and the VR-Engage standalone radio application let users jam radio frequencies. When you click the Jam button on a radio head, it creates another radio that jams the frequency of the currently selected channel. You can disable the jamming capability. To disable jamming, open `./appData/scripts/makRadio.lua` in a text editor and set `enableJammers` to **false**.

4.2.4. Editing the Radio Configuration

The number of radios, channels, and frequencies for the VR-Forces Radios Panel and the VR-Engage standalone radio application is configured in `./appData/scripts/makRadio.lua`. The radios for VR-Engage entities are configured in the files in `./appData/scripts/playerDefinitions/devices`. To add or remove radios or change the frequencies of the channels, open the file you want to edit in a text editor and make changes as desired.

4.3. Changing the View Mode

By default, when you assume a role, you are in first person mode. That is, the eyepoint is placed as if you were looking out of the eyes of a human character or from the appropriate position of a character in a vehicle, such as the driver or pilot. You can switch to third person mode so that you can see the character you are playing in its context in the terrain.

If you are driving a vehicle, you may have several views of the vehicle from different angles available.

To change the view mode, do one of the following:

- ♦ For human characters and aircraft, press **V** or the B button on the Gamepad.
- ♦ For the LAV or M1A2 driver, press the Y button on the Gamepad.

4.4. Resetting Entities

You can reset entities. When you reset an entity, it returns to full health and restores all resources, such as ammunition or fuel. There are two types of reset, as follows:

- ♦ **Reset.** Restores the entity and returns it to the location it had when you took control. If you are controlling a human entity that disembarked from a vehicle role, it resets to the location at which it disembarked.
- ♦ **Reset in Place.** Restore the entity at its current location.



When you reset an entity to the location it had when you took control, none of the other entities in the scenario get reset, so the location might no longer make sense in the context of the overall scenario.

- To reset a human, ground vehicle, or aircraft, on the Action menu, choose **Reset** or **Reset in Place**. For humans only, on the keyboard, press **F5** (Reset) or **Ctrl+F5** (Reset in Place).

4.5. Starting VR-Forces Events

VR-Forces scenarios can include scenario events, which can consist of text, audio, video, graphics, or some combination of these. A scenario event represents an incident or condition that exercise participants can respond to, for example a political event, a natural disaster, or some other novel event that might require a participant to respond. Events can also be used to satisfy the conditions in a trigger.

If you are controlling a character in a VR-Forces scenario and the scenario has scenario events, you can trigger them. The scenario events are displayed in the VR-Forces front-end. They are not displayed in the VR-Engage window. If VR-Engage is hosting a scenario (and there are no VR-Forces front-ends in the exercise), the events are listed on the Action menu, but triggering them may have no visible effect.

The Action menu lists all of the events that have been created for the scenario, but does not indicate their status. A VR-Engage character can only start an event. If an event is active, you cannot stop it from VR-Engage.

To start a scenario event:

1. Open the Action menu.
2. Choose **Trigger Event**.
3. Choose the event you want to trigger.

4.6. Introduction to Sound Effects

VR-Engage can associate sound effects with entities, fire events, and detonation events. You can enable and disable use of sound effects and you can specify that sounds will be heard only when the observer is within a certain distance of the entity or event that generates them.

4.6.1. Enabling Sound Effects

To enable sound effects:

1. Choose **Settings** → **Audio Settings**. The Audio Settings dialog box opens ([Figure 4-4](#)).

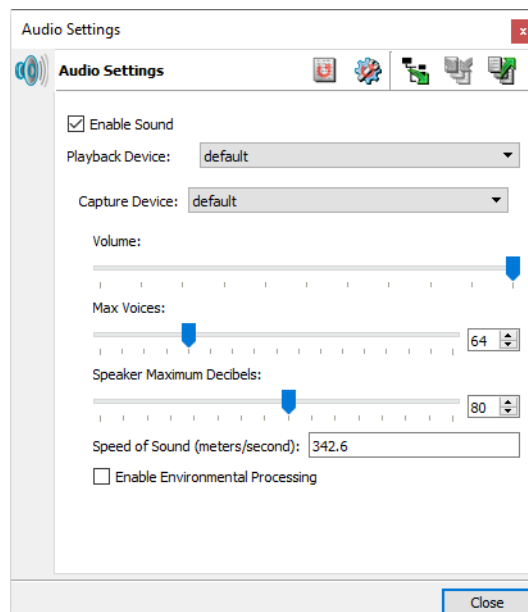


Figure 4-4. Audio Settings page

2. Select the Enable Sound check box.

4.6.2. Configuring Sound Effects

You can configure the following sound settings:

- ♦ Volume. This is the volume of the system.
- ♦ Max Voices. You can have from 1 to 256 voices, or maximum simultaneous playing sounds. Sounds that play at the same time are mixed into a single sound wave prior to being sent to the speaker, this mixing has a CPU cost. A high number of allowable voices can affect performance when there are a large number of audio sounds trying to play.
- ♦ Speaker Maximum Decibels. Calibrates the audio system for the speakers that the system is played on. This affects how sounds at a distance fall off so that the sound loudness is realistically replicated. The default setting of 80db represents headphones or a desktop PC's speakers.
- ♦ Speed of Sound. This is the speed of sound in the atmosphere in meters/second. The default value is derived by using a standard day as parameters (20 C, 50% relative humidity, 1013.25 mbar/29.92 inHg). This affects the delay in playing sounds at a distance. For example, an explosion 2km away has a several second delay from the time you can see the visual effect to when you can hear the audio effect.
- ♦ Enable Environmental Processing. Enables low pass filtering. As sound propagates through air, higher frequency sounds get absorbed more the further you move from the source of the sound. This setting lets you replicate air absorption of a sound based on the distance the sound is from the listener.

To configure sound settings:

1. Choose **Settings** → **Audio Settings**. The Audio Settings dialog box opens ([Figure 4-4](#)).
2. To set the volume, adjust the Volume slider.
3. To specify the maximum number of voices, adjust the Max Voices slider or change the value in the text box.
4. To set the speaker maximum decibels, adjust the Speaker Maximum Decibels slider or change the value in the text box.
5. To set the speed of sound, type a value in the Speed of Sound box.
6. To enable lowpass filtering, select the Enable Environmental Processing check box.

4.6.3. Associating Sound Files with Entities and Events

VR-Engage includes a set of sound files (WAV format) for generic entity platforms and for fire and detonation events. The files are in `./data/Audio/Sounds`. You add and edit mappings between entity types, fire events, or detonation events and sound files in the Visual Models Editor. Sound files are associated with model definitions. For example, the `filename` parameter for the `heli_blades` model definition specifies `$(DATA_DIR)/Audio/Sounds/heli_blades.wav`. The Rotary Wing element definition has a parameter called `Entity Sound`. The value for the model definition attribute is `heli_blades`.

You can quickly see which model definitions are available for sounds by filtering the list of the Visual Model Editors, Model Definitions Editor page for the Sound schema.



5. Controlling People

This chapter describes how to control human characters and interact with the environment and other characters.

Introduction	5-3
Enabling and Disabling Mouse Control.....	5-3
Moving Your Character Around the Terrain	5-3
Weapons.....	5-3
Choosing a Weapon.....	5-4
Aiming a Weapon.....	5-5
Firing a Weapon.....	5-6
Firing Weapons with an HMD Controller	5-6
Throwing a Hand Grenade.....	5-7
Deploying and Stowing Weapons.....	5-8
Using the Javelin Missile Launcher.....	5-9
Using the Shoulder-Mounted Missile Launcher	5-9
Using the Tripod-Mounted Missile Launcher	5-10
Embarking on a Vehicle.....	5-12
Disembarking from a Vehicle.....	5-12
Parachuting	5-13
Tasking Other Entities	5-14
Disembark Entity	5-14
Follow Me	5-15
Move to Location	5-15
Move to My Location.....	5-16
Suppress Location.....	5-16
Turning on Your Flashlight.....	5-17
Using the Binoculars.....	5-17
Changing Visual Sensors	5-18

Controlling People

Lasing Targets.....	5-19
Enabling Laser Designators.....	5-19
Opening and Closing Doors and Windows.....	5-20

5.1. Introduction

VR-Engage and VR-Engage Ground let you control individual human characters. VR-Engage includes models for several types of dismounted infantry and civilian characters, including:

- ♦ Dismounted infantry.
- ♦ Dismounted infantry with lasing capability.
- ♦ Dismounted infantry with missile launcher.
- ♦ Paratrooper.
- ♦ Police officers.

5.1.1. Enabling and Disabling Mouse Control

When mouse control is enabled, you can use the mouse to turn a character, fire, and other actions. When it is disabled, you can access menus (in windowed mode) and do other typical mouse actions.

When you take control of a character, mouse control is automatically enabled. When you switch to windowed mode, it is automatically disabled. You can toggle mouse control on and off at any time in both full-screen mode and windowed mode. (For information about windowed mode, please see [“Playing in Windowed Mode,”](#) on page 3-16.)

- To enable or disable mouse control, press **Ctrl**. You can also enable mouse control by double-clicking in the screen.

5.2. Moving Your Character Around the Terrain

You can move your character around the terrain using the keyboard, game controller, or head-mounted display (HMD) controller. You can look around using the keyboard, game controller, HMD controller, or mouse. You can increase and decrease the speed at which you move. For keyboard, mouse mapping, and controller mappings, please see Chapter 11, [Mouse, Keypad, and Controller Mappings](#).

5.3. Weapons

Infantry characters have a rifle, a handgun, and several types of grenades. Characters with an M4 in their name have an M4 rifle. A graphic in the lower right corner of the screen shows the current weapon ([Figure 5-1](#)).



Figure 5-1. Weapon overlay for humans

5.3.1. Choosing a Weapon

To choose a weapon:

1. Open the Action menu ([Figure 4-1](#)).
2. On the Action menu, choose **Weapon**.
3. Use an Action menu control method to show the submenu. The Weapons menu opens.
4. Choose a weapon.



You can also cycle through the weapon list using the Select Weapon button on your game controller.

5.3.2. Aiming a Weapon

You can aim a weapon using the reticle or the sight ([Figure 5-2](#) and [Figure 5-3](#)).



Figure 5-2. Aiming with the reticle



Figure 5-3. Aiming with sight

- To aim a weapon using the reticle, move the reticle using the arrow keys, the mouse (in mouse-look mode), or the right thumbstick on your game controller.

To aim a weapon using the sight:

1. Hold down **M** on the keyboard, the right button on your mouse (in mouse-look mode), or the Aim button on your game controller (Figure 11-1).
2. Use the arrow keys or the right thumbstick on your game controller to move the sight.

5.3.3. Firing a Weapon

To fire a weapon, do any of the following:

- ♦ Press the **Spacebar**.
- ♦ Click the left mouse button (in mouse-look mode).
- ♦ Press the fire button on your game controller.

5.3.4. Firing Weapons with an HMD Controller

If you are using a head-mounted display (HMD) with hand controllers, you can fire weapons using your controller. By default, the right hand controller is the dominant controller. You can change this by changing the `rightHanded` parameter in `./appData/scripts/playerDefinitions/human.lua` from true to false.

- ♦ If you have a pistol, hold the controller in front of you to aim. Press the trigger to fire. The pistol only tracks the position of the dominant hand.
- ♦ If you have a rifle, align the two controllers as if you were holding a rifle, with the dominant hand closer to your body (Figure 5-4). Aim the rifle and fire.



Figure 5-4. Firing a rifle using HMD hand controllers

For information about setting up an HMD, please see [“Introduction to Virtual Reality Head-Mounted Displays,”](#) on page 3-17. For a description of hand controller mappings, please see [“Head-Mounted Display Controllers,”](#) on page 11-28.

5.3.5. Throwing a Hand Grenade

Soldiers can throw fragmentation grenades, smoke grenades, and flash bang grenades. Grenades get thrown at a target point ([Figure 5-5](#)). (If the soldier is aiming towards an area with a light background, the target point may be hard to see.)



Figure 5-5. Grenade target point

To throw a grenade:

1. Use the arrow keys or right thumbstick on the game controller to aim the grenade.
2. Press the **Spacebar** or the fire button on your game controller.

5.3.6. Deploying and Stowing Weapons

When a weapon is deployed, you see it in first-person mode and you can fire it. When it is stowed or ready, you cannot see it in first-person mode and you cannot fire it.

The weapon overlay indicates the status of the weapon, as follows and as illustrated in [Figure 5-6](#):

- ♦ Aiming. Weapon icon has a thick rectangle around it.
- ♦ Ready. Weapon has a thin rectangle.
- ♦ Stowed. Weapon has a bracketed rectangle.

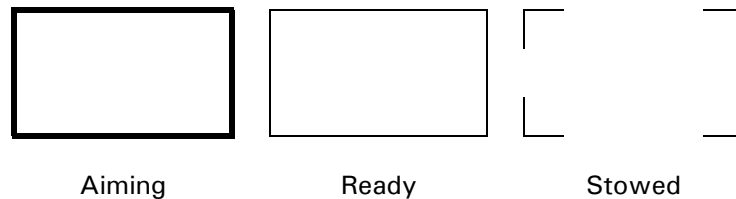


Figure 5-6. Weapon status

To deploy or stow a weapon:

1. Open the Action menu ([Figure 4-1](#)).
2. On the Action menu, choose **Weapon State**.
3. Use an Action menu control method to toggle between states.



You can also toggle the weapon state by pressing **T** or pressing and holding the weapon selection button on your Gamepad.

5.4. Using the Javelin Missile Launcher

VR-Engage has a character with a shoulder-mounted javelin missile launcher (US Army Javelin) and one that can deploy a tripod-mounted javelin (US Army Javelin (Tripod)).

5.4.1. Using the Shoulder-Mounted Missile Launcher

To use the shoulder-mounted missile launcher:

1. Add or select a US Army Javelin character.
2. Engage the character.
3. On the Action menu, set the Missile Launcher option to Aiming. The display changes to show the soldier in third person view, an aiming reticle is added, and a view finder display is added to the screen (Figure 5-7).



Figure 5-7. Shoulder-mounted javelin

4. Optionally, press **B** or the **X** button on your Gamepad to expand the viewfinder to cover the entire screen.
5. Fire the weapon using the standard weapon firing methods.

i

The character can walk around with the weapon in the Aiming state (third person view). You can also change the Missile Launcher state to Deployed and walk around in first person view. In first person view, the missile launcher is not visible.

5.4.2. Using the Tripod-Mounted Missile Launcher

The tripod-mounted missile launcher is an object that the US Army Javelin (Tripod) character can deploy. Until it is deployed it is not part of the scenario. Once it is deployed it is an independent entity in the scenario. Other characters can fire it. Only the character that originally deployed it can recover it, that is, remove it from the scenario.

A tripod-mounted missile launcher has an azimuth (horizontal range) of 45 degrees to the left and right. It has an elevation (vertical range) of 30 degrees. When a tripod-mounted missile launcher is deployed, it faces in the direction of the entity that deployed it. Once it is deployed, you cannot change its heading.

To deploy the tripod-mounted javelin:

1. Add or select the US Army Javelin (Tripod) character.
2. Engage the character. The default presentation is that of a US Army M4 character.
3. Walk to the location where you want to deploy the missile launcher.
4. Face the heading that you want the missile launcher to be deployed to.
5. Optionally, stow your rifle.
6. On the Action menu, choose **Deployable Objects** → **Deploy Javelin Launcher**. The Javelin Missile Launcher is added to the scenario. The Action menu changes to show Javelin Launcher menu options ([Figure 5-8](#)).



Figure 5-8. Tripod-mounted javelin

Firing a Tripod-Mounted Missile Launcher

Once a missile launcher is deployed, any character can fire it.

To fire the missile launcher:

1. If your character is close to the missile launcher, on the Action menu, choose **Javelin Launcher** → **Use Launcher**. If your character is not close the missile launcher, walk towards it until the Javelin Launcher menu is displayed. Then, choose **Use Launcher**. The display changes to show the view finder and reticle for the launcher. You are now in direct control of the missile launcher instead of the character you were controlling.



Figure 5-9. Javelin tripod - aiming

2. Optionally, press **B** or the **X** button on your Gamepad to expand the view-finder to cover the entire screen.
3. Aim the javelin and fire it.
4. To give up control of the javelin, on the Action menu, choose **Exit Launcher**. You are now in control of your character again. Your weapon is stowed.

Recovering a Tripod-Mounted Missile Launcher

When you recover a tripod-mounted javelin, you remove it from the scenario. It is not available for use until it is deployed again. Only the character that deployed the javelin can recover it.

- To recover the missile launcher, choose **Javelin Launcher** → **Recover Launcher**. If you are not within a few feet of the missile launcher, the Javelin Launcher menu option is not available. If you walk towards the missile launcher it opens automatically.

5.5. Embarking on a Vehicle

If a vehicle supports embarkation, characters can embark on it and move with it as it moves. If the vehicle has interior geometry, your character can look around and walk around on the floor of the vehicle. Among the vehicles provided with VR-Engage, the 5-ton truck, the police car, and the CH-47 Chinook and CH-149 Cormorant helicopters have interior geometry. The LAV and M1A2 support embarkation, but do not have interior geometry.

To embark on a vehicle:

1. Have your character walk up to the vehicle. When the character is within a meter or so of the vehicle, the Embark menu displays ([Figure 5-10](#)).

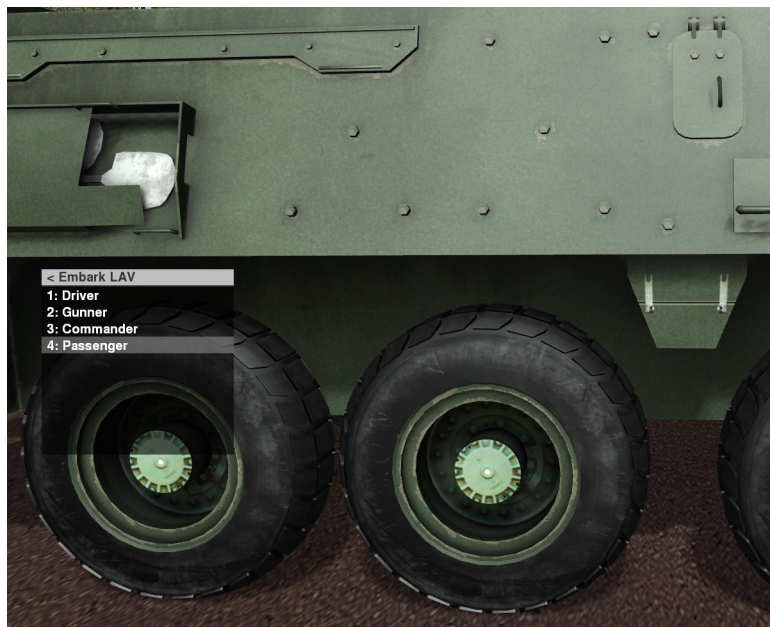


Figure 5-10. Embark menu

2. Select a role.
3. Press the **Right Arrow** key or right D-pad button to initiate the action. The character is placed on the vehicle.

5.5.1. Disembarking from a Vehicle

To disembark from a vehicle, do any of the following:

- ♦ Have the character walk off the back of the vehicle.
- ♦ On the Action menu, choose Disembark. The character is placed off the back of the vehicle.

5.6. Parachuting

The paratrooper character can parachute out of aircraft ([Figure 5-11](#)). The descent starts in free fall. The paratrooper's weapon is hidden. After the parachute is deployed, the drift of the paratrooper is affected by wind speed and direction. You can turn the parachute to the left or right and you can slow the rate of descent. When the paratrooper lands, the parachute is hidden and the paratrooper's weapon is again available. It returns to whichever view mode it was in before it jumped.



Figure 5-11. Parachute deployed



If a paratrooper disembarks from a helicopter while it is in the air, the entity is ground-clamped. It does not enter free fall.

- To jump from an aircraft, walk out of an open cargo door.
- To deploy a parachute, press the **Spacebar** or the left thumbstick on your Gamepad.
- To turn left or right while the parachute is deployed, press **A** or **D**, or buttons 5 or 6 on your Gamepad. (For a diagram of Gamepad buttons, please see [“Generic Gamepad Button Numbering,”](#) on page 11-31.)
- To slow the rate of descent while the parachute is deployed, press **A** and **D**, or buttons 5 and 6 at the same time.

5.7. Tasking Other Entities

While you are playing a character, you can assign tasks to other entities in the scenario.



When you assign a task, you are assigning what VR-Forces calls an independent task. If the entity to which you are assigning the task is currently executing a task either as an independent task or as part of a plan, when you assign the new independent task, it abandons the old task or plan.

5.7.1. Disembark Entity

The Disembark Entity task causes the selected entity to disembark from the vehicle that it is on.

To issue the Disembark Entity task:

1. Open the Action menu.
2. Choose **Task Entity**.
3. Use an Action menu control method to show the submenu. The Select Entity menu opens.
4. Select the entity that you want to give a task to.
5. Use an Action menu control method to show the submenu. The Task Entity menu opens.
6. Choose **Disembark Entity**.
7. Use an Action menu control method to initiate the action.

5.7.2. Follow Me

The Follow Me task causes the selected entity to follow your character.



If you task an entity to follow you, it will do so indefinitely. To get it to stop following, task the entity to move to a location.

To issue the Follow Me task:

1. Open the Action menu.
2. Choose **Task Entity**.
3. Use an Action menu control method to show the submenu. The Select Entity menu opens.
4. Select the entity that you want to give a task to.
5. Use an Action menu control method to show the submenu. The Task Entity menu opens.
6. Choose **Follow Me**.
7. Use an Action menu control method to initiate the action. The entity moves to a location behind your character.

5.7.3. Move to Location

The Move to Location task causes the selected entity to move to the specified location.

To issue the Move to Location task:

1. Open the Action menu.
2. Choose **Task Entity**.
3. Use an Action menu control method to show the submenu. The Select Entity menu opens.
4. Select the entity that you want to give a task to.
5. Use an Action menu control method to show the submenu. The Task Entity menu opens.
6. Choose **Move to Location**. VR-Engage places a waypoint symbol at the point your character is looking at.
7. Press and hold the right mouse button or use the right thumbstick on your Gamepad to move the waypoint to the location you want the other entity to move to.
8. Use an Action menu control method to initiate the task. The tasked entity moves to the location.

5.7.4. Move to My Location

The Move to My Location task causes the selected entity to move so that it is standing next to your character.

To issue the Move to My Location task:

1. Open the Action menu.
2. Choose **Task Entity**.
3. Use an Action menu control method to show the submenu. The Select Entity menu opens.
4. Select the entity that you want to give a task to.
5. Use an Action menu control method to show the submenu. The Task Entity menu opens.
6. Choose **Move to My Location**.
7. Use an Action menu control method to initiate the action. The selected entity moves to a position next to your character.

5.7.5. Suppress Location

The Suppress Location task causes the selected entity to fire on the specified location to suppress any entities at that location.

To issue the Suppress Location task:

1. Open the Action menu.
2. Choose **Task Entity**.
3. Use an Action menu control method to show the submenu. The Select Entity menu opens.
4. Select the entity that you want to give a task to.
5. Use an Action menu control method to show the submenu. The Task Entity menu opens.
6. Choose **Suppress Location**. VR-Engage places a waypoint symbol at the point your character is looking at.
7. Press and hold the right mouse button or use the right thumbstick on your Gamepad to move the waypoint to the location you want the other entity to suppress.
8. Use an Action menu control method to initiate the task. The tasked entity fires at the location.

5.8. Turning on Your Flashlight

The flashlight casts a circle of light on the terrain.

To turn on the flashlight:

1. Open the Action menu.
2. Choose **Flashlight**.
3. Use an Action menu control method to toggle the flashlight on or off.



You can also toggle the flashlight on and off by pressing **F**.

5.9. Using the Binoculars

You can zoom in and out in five fixed steps. At the highest zoom level (binoculars), VR-Engage displays a range finder graphic.

To zoom the view in and out, do any of the following:

- ♦ Scroll the mouse wheel forward and back.
- ♦ Press **=** to zoom in, **-** to zoom out.
- ♦ Press **B** (for binoculars view). Binoculars goes immediately to the highest zoom level.
- ♦ On the Action menu, choose **Binoculars** and change the status. Binoculars goes immediately to the highest zoom level.

You cannot fire a weapon when the binoculars are in use. If you are controlling a character that has lasing capability, pressing the Fire button lases the target. For more information about lasing targets, please see [“Lasing Targets,”](#) on page 5-19.

5.10. Changing Visual Sensors

Human characters can simulate the effect of wearing night vision goggles (NVG).



The default visual sensors use CameraFX, which just applies a filter to the scene. It does not take into account the materials of the viewed objects. For details, please see *VR-Vantage Users Guide*.

If you want a visual sensor capability that takes into account the materials of the viewed objects, you can install SensorFX. SensorFX is an extra cost option. Please contact info@mak.com for details.

To turn on the night vision goggles for human characters:

1. Open the Action menu.
2. Choose **Night Vision**.
3. Use an Action menu control method to toggle night vision on or off.



You can also toggle night vision by pressing **N** or the A button on a Gamepad. You do not need to open the Action menu.

5.11. Lasing Targets

Soldiers that have a lasing capability can lase targets. VR-Engage includes two characters with lasing capability – DI Lasing (US) and DI Lasing (CIS).

When you lase a target, the display shows that the laser is on and displays the laser code. If you enable laser designators, a green circle is displayed on the lased location ([Figure 5-12](#)). (For information about enabling laser designators, please see “[Enabling Laser Designators](#),” on page 5-19.)

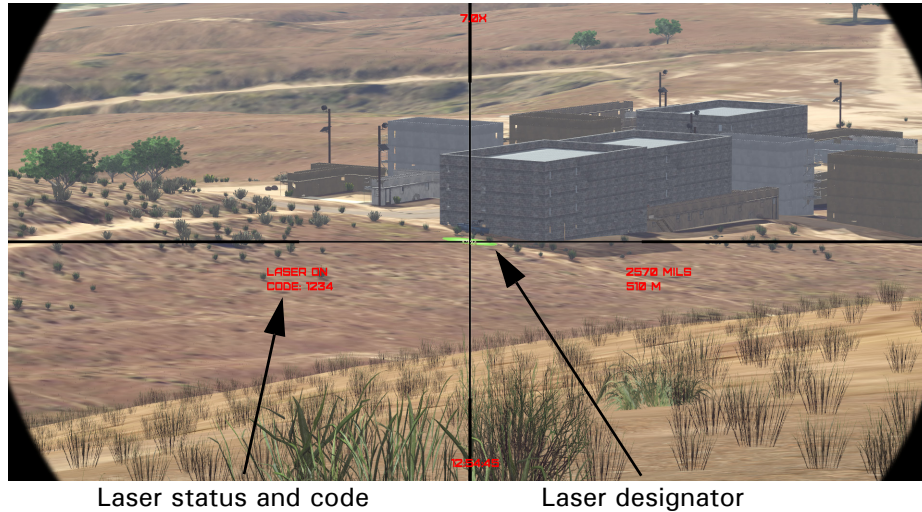


Figure 5-12. Lasing a target



You cannot lase entities. You can only lase locations on the terrain.

To lase a target:

1. On the Action menu, choose **Binoculars: On**, or press **B**.
2. Point the cross hairs of the binoculars at the point you want to lase.
3. Hold down the Fire button on a game controller or the left mouse button.

5.11.1. Enabling Laser Designators

A laser designator is a green circle that shows where a laser is being pointed ([Figure 5-12](#)). It includes the laser code. Laser designators are disabled by default.

To enable or disable laser designators:

1. If you are currently controlling a character, press **Esc** to exit to the VR-Engage window.
2. Choose **Settings** → **Laser Designators**.

5.12. Opening and Closing Doors and Windows

If a terrain has doors and windows that can open and close, when a human character approaches within about a meter of an opening, a menu is displayed that lets you choose to open or close the opening ([Figure 5-13](#)).



Figure 5-13. Door menu



The ability to open and close doors requires a dynamic terrain server. Therefore it only works if you are connected to a VR-Forces session.

- To open or close a door or window, when the appropriate menu is displayed, make a selection from the menu.



6. Controlling Ground Vehicles

This chapter explains how to drive ground vehicles.

Introduction	6-2
Ground Vehicle Display Options	6-2
Driving Ground Vehicles	6-3
Starting the Engine	6-3
Putting the Vehicle into Gear	6-3
Controlling the Throttle	6-3
Steering a Vehicle	6-4
Releasing and Engaging the Parking Brake	6-4
Locking and Unlocking the Differential (LAV Only)	6-4
Turning the Headlights On and Off	6-4
The Gunner Role	6-5
Firing a Vehicle's Gun	6-5
Moving the Turret	6-5
Commanding the LAV	6-5
Using the Intercom	6-5
Changing the Sensor for an LAV or M1A2 Crew Member	6-6
Pivoting a Tank	6-6
Emergency Lights and Sirens	6-6
Configuring Ground Vehicles on Geocentric Terrains	6-7

6.1. Introduction

VR-Engage and VR-Engage Ground let you control ground vehicles that use the Vortex physics libraries to provide high-fidelity movement behaviors. VR-Engage includes models for:

- ♦ Ambulance.
- ♦ HMMWV utility vehicle.
- ♦ Light armored vehicle (LAV).
- ♦ M1A2 Abrams Main Battle Tank (MBT).
- ♦ Police cruiser.
- ♦ Technical truck.
- ♦ Fiat 124.
- ♦ Sport hatchback coupe.
- ♦ Sport standard size sedan.
- ♦ Standard mid-size sedan.

6.1.1. Ground Vehicle Display Options

Most ground vehicles are designed for a single screen display. In VR-Engage 1.4, the M1A2 Abrams tank also has support for a virtual reality headset.

- ♦ 1 Screen Horizontal. This is the standard interface for ground vehicles.
- ♦ VR Headset. Select this option if you are using a head-mounted display and have chosen to engage the M1A2 Abrams tank. (Available only if an HMD is connected.)

To choose a display option for the M1A2 Abrams tank:

1. In the Choose Role Panel, select the vehicle you want to control.
2. In the Display(s) list, select the display option.

6.2. Driving Ground Vehicles

To operate most ground vehicles, you must use a game controller or racing wheel controller. (You can control the LAV from the keyboard in the driver role.) All ground vehicles support the Driver role. The LAV also has Gunner, Commander, and Passenger roles. The M1A2 has a Gunner role.

The driver can:

- ♦ Drive the vehicle, which involves:
 - Starting the engine.
 - Engaging gears.
 - Increasing and decreasing throttle.
 - Steering.
- ♦ Manage headlights.
- ♦ Rotate the turret. (LAV and M1A2 only. You cannot see this happen in first person mode.)
- ♦ Fire the gun. (LAV and M1A2 only. For details, please see [“Firing a Vehicle’s Gun,”](#) on page 6-5.)

6.2.1. Starting the Engine

To start the engine, do one of the following:

- ♦ On the Action menu, toggle Engine: On/Off.
- ♦ On a Gamepad F310, press the Start button.
- ♦ On a Racing Wheel Controller, press the Engine On button.
- ♦ For the LAV only, you can also press **X**.

6.2.2. Putting the Vehicle into Gear

The LAV has eight forward gears and one reverse gear. Automobiles have six forward gears and one reverse gear. The M1A2 tank has two forward and one reverse gear. Vehicles have automatic transmissions. When you set a gear, you are setting the top gear it can use.

- To put the vehicle into gear, press the Gear Up or Gear Down buttons on your gaming controller. (For the LAV only, you can also press **Q** (up) or **E** (down).)

6.2.3. Controlling the Throttle

If you are driving using a Racing Wheel Controller, use the gas and brake pedals.

- To move the vehicle, press the throttle control (left thumbstick on the Gamepad) forward. (For the LAV only, you can also press **W**.)
- To brake the vehicle, pull the throttle control backwards.

6.2.4. Steering a Vehicle

- To steer the vehicle, use the right thumbstick on a Gamepad or the steering wheel of the racing wheel controller. (For the LAV only, you can also press **A** (left) or **D** (right).)

6.2.5. Releasing and Engaging the Parking Brake

To set the parking brake on or off:

1. Open the Action menu.
2. Choose **Parking Brake**.
3. Use an Action menu control method to toggle the setting.

You can also press the left thumbstick. (For the LAV only, you can press **P**.)

6.2.6. Locking and Unlocking the Differential (LAV Only)

A differential allows the wheels on an axle to rotate at different speeds. Locking the differential may improve traction under certain terrain conditions.

To lock or unlock the differential, do one of the following:

- ♦ On the Action menu, toggle Differential Lock: On/Off.
- ♦ On a Gamepad F310, press the X button.
- ♦ On a Racing Wheel Controller, press the Differential Gear button.
- ♦ Press **C**.

6.2.7. Turning the Headlights On and Off

To turn on headlights, do one of the following:

- ♦ On the Action menu, toggle Headlights: On/Off.
- ♦ On a Gamepad F310, press the A button.
- ♦ On a Racing Wheel Controller, press the Lights button.
- ♦ For the LAV only, press **H**.

6.3. The Gunner Role

The gunner can:

- ♦ Fire the gun.
- ♦ Rotate and elevate the gun.
- ♦ Zoom in and out.
- ♦ Change the sensor. (For details, please see [“Changing the Sensor for an LAV or M1A2 Crew Member,”](#) on page 6-6.)

6.3.1. Firing a Vehicle’s Gun

- To fire a ground vehicle’s gun, press the fire button on your game controller. (For the LAV only, you can also press **F**.)

6.3.2. Moving the Turret

The turret controls are different for the driver and gunner roles.

- To move the turret in the driver role, use the D-pad or press the **I**, **J**, **K**, and **L** keys.
- To move the turret in the gunner role, use the right thumbstick on your GamePad.

6.4. Commanding the LAV

The LAV commander has fairly limited capabilities. Commanders can rotate the camera to look around, zoom in and out, and change the sensor view. Commanders can also communicate with other crew members and other players using the intercom or radio.

6.5. Using the Intercom

Players who are embarked on a ground vehicle, can communicate using the intercom. The intercom is voice activated and transmits any sound that is greater than the VOX threshold.

To use the intercom:

1. Open the Action menu.
2. Choose **Radio**.
3. Cycle through the options to choose **Intercom**.
4. Start talking.

6.6. Changing the Sensor for an LAV or M1A2 Crew Member

Changing the sensor mode is the same for all crew members. The only difference is that the commander (LAV only) and gunner have more sensors to cycle through.

- To change the sensor for an LAV crew member, press the right thumbstick until you see the sensor that you want.

6.7. Pivoting a Tank

Tanks can pivot in place.

To pivot a tank:

1. Start the engine.
2. Press the left thumbstick on the Gamepad. The text Pivot Enabled is added to the engine information overlay in the lower left corner of the screen.
3. Put the tank in gear and begin driving.
4. Use the right thumbstick to pivot left or right.

6.8. Emergency Lights and Sirens

The police cruiser and ambulance entities have emergency lights and sirens.

To turn on emergency lights and sirens:

1. Open the Action menu.
2. Choose **Emergency Lights** or a specific type of siren.
3. Toggle the option on.

6.9. Configuring Ground Vehicles on Geocentric Terrains

VR-Engage ground vehicles use the Vortex physics libraries for their movement systems. When a vehicle moves on a geocentric terrain, VR-Engage must convert the geocentric coordinates to a flat earth coordinate system. The conversion is based on a user-defined origin that, ideally, represents the location where the majority of simulation activity will take place. As vehicles move further away from the origin, projection errors can occur. When distances from the origin exceed several hundred kilometers, the projection error may be noticeable and vehicles may drift from their expected line of movement.

To resolve this problem, you should set the origin to a location that is close to the location where you are simulating vehicles. For example, by default, VR-Engage sets the origin to Honolulu, Hawaii, USA, the location of the terrain we use for the Test Drive and First Experience scenarios. If you want to simulate in some other location in the world, you should set the origin differently.

To set the origin, specify values for the `coordinateConverterOrigin` parameter in `./appData/scripts/vortexTerrainConfig.lua`. The values are in decimal degrees for latitude and longitude and meters for elevation. If the parameter is not specified, the default values are 0,0,0.

This parameter is only used for geocentric terrains. For projected terrains, the terrain data is used directly and no conversion is needed.



7. Controlling Aircraft

This chapter explains how to fly aircraft using VR-Engage.

Introduction	7-2
The Head-Up Display	7-3
The Instrument Panel	7-3
Aircraft Display Options.....	7-6
Taking Control of an Aircraft	7-7
Using Autopilot.....	7-8
Setting the Autopilot Mode	7-8
Bombing Targets	7-9
Targeting a Bomb Using a Laser Code	7-10
Air-to-Air Combat.....	7-11
Enabling and Disabling the Radar Warning Receiver	7-13
Controlling Landing Gear	7-13
Controlling Flaps.....	7-14
Launching Countermeasures (Chaff and Flare).....	7-14
Disabling Instrument Panel Instruments.....	7-14
Requesting SAR Images from RadarFX Server.....	7-15
Requesting a SAR Image	7-15
Configuring a SAR Request.....	7-16

7.1. Introduction

VR-Engage and VR-Engage Air let you control fixed-wing aircraft and rotary-wing aircraft. VR-Engage uses the RTDynamics RotorLib and FixedWingLib libraries to provide realistic aircraft behaviors and controls. VR-Engage includes mappings for the Thrustmaster HOTAS Warthog™ flight controller, the T.Flight Hotas X flight controller, and the Gamepad F310 and F710.

When you are flying an aircraft, you have an out-the-window head-up display (HUD) and an instrument panel. VR-Engage also supports a 3D cockpit. For more information about display options, please see [“Aircraft Display Options,”](#) on page 7-6.

The following types of aircraft are available to control out-of-the-box:

- ♦ F/A-18 Hornet.
- ♦ F-16A Fighting Falcon.
- ♦ F-35 Lightning II.
- ♦ T-38C Talon.
- ♦ MiG-29 Fulcrum.
- ♦ AH-64A Apache.
- ♦ CH-149 Cormorant.
- ♦ CH-47 Chinook.
- ♦ UH-60 Blackhawk.

You can add more aircraft. For details, please see Chapter 12, [Adding and Editing VR-Engage Entity Models](#).

7.1.1. The Head-Up Display

The head-up display (HUD) provides an out-the-window view with an overlay showing speed, altitude (R = above ground level; AL = above mean sea level), and heading.

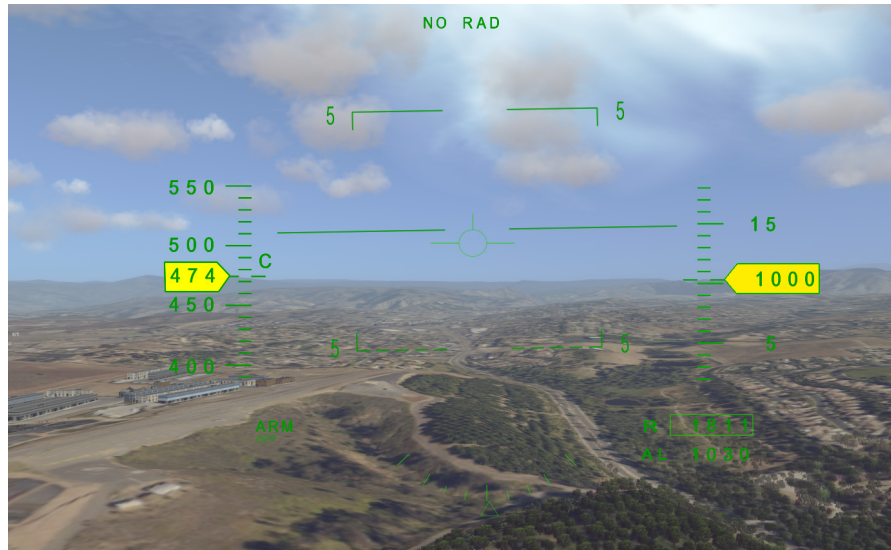


Figure 7-1. HUD

7.1.2. The Instrument Panel

The instrument panel ([Figure 7-2](#)) has six gauges and four multi-function displays (MFD).



The instrument panel is an independent window. You can minimize and maximize it. If you are using one monitor, it may get hidden behind the HUD. If that happens, press **Alt+Tab** to bring it to the front.

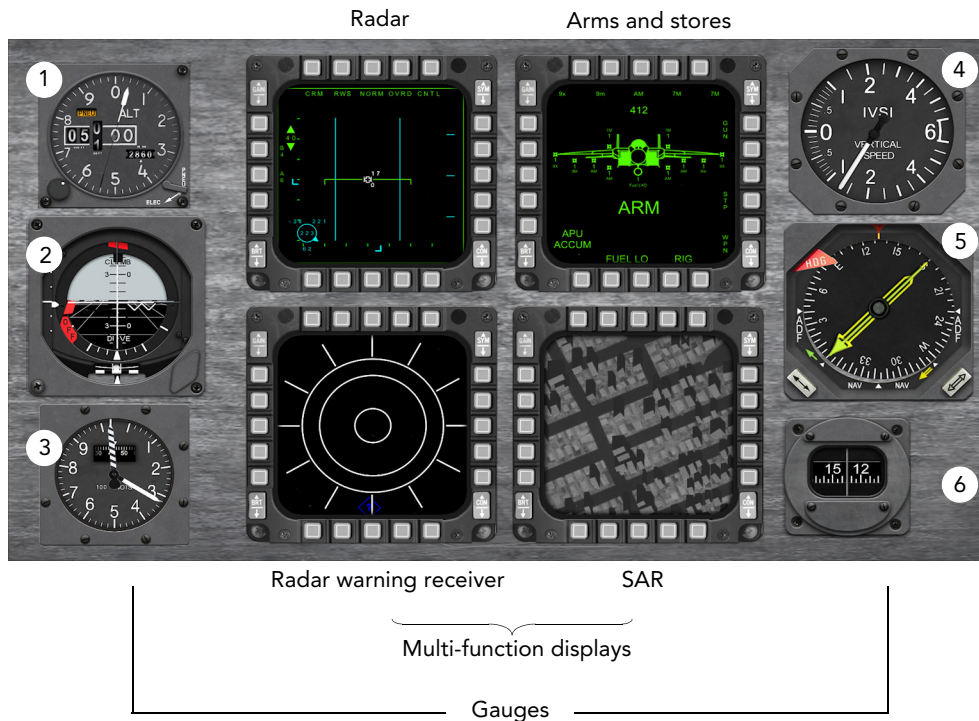


Figure 7-2. Instrument panel

The gauges are:

- ♦ 1 – Altimeter.
- ♦ 2 – Attitude Indicator (Artificial Horizon).
- ♦ 3 – Airspeed Indicator.
- ♦ 4 – Vertical Speed Indicator.
- ♦ 5 – Heading Indicator.
- ♦ 6 – Compass.

The MFDs are:

- ♦ Tactical Situation Display (Radar Indicator).
- ♦ Weapons/Stores Control Panel.
- ♦ Synthetic Aperture Radar (SAR) view.
- ♦ Radar Warning Receiver. Shows entities that are detecting you on their radar. The rings show the effective threat range.
- ♦ Visual Sensor Display. Displays the view from the gimbaled sensor or a plan view display of the scenario.

Changing the Multi-Function Display

Each MFD window can display any of the possible display types.



Figure 7-3. Multi-function display

- To change the display, click one of the buttons along the bottom of the display.

i

- ♦ If the instrument panel does not respond when you click a button, it might not have focus. Click it a few times or expand the window to gain focus.
- ♦ You cannot change the multi-function display in a 3D cockpit.

7.1.3. Aircraft Display Options

VR-Engage has the following options for displaying the head-up display (HUD) and instruments panel:

- ♦ 1 Screen Horizontal. HUD and instrument panel are integrated in one window, optimized for a single monitor in horizontal (landscape) orientation.
- ♦ 1 Screen Vertical. HUD and instrument panel are integrated in one window, optimized for a single monitor in vertical (portrait) orientation.
- ♦ 2 Screen. The HUD and instrument panel are in separate windows. If you have two monitors you can move the instrument panel into the second monitor to see both displays at the same time. If you choose this option and are using one monitor, the HUD is full screen and the instrument panel is in a separate window (which might be hidden behind the HUD). (You can configure the size of the instrument panel window, including setting it to be full screen, by editing the `instrumentPanels` block in `./appData/scripts/playerDefinitions/pilot.lua`.)
- ♦ Instruments Only. Only the instrument panel is displayed.
- ♦ HUD Only Horizontal. Displays the HUD only, optimized for a monitor in horizontal (landscape) mode.
- ♦ HUD Only Vertical. Displays the HUD only, optimized for a monitor in vertical (portrait) mode.
- ♦ 3D Cockpit. A 3D cockpit that has the HUD and instruments ([Figure 7-4](#)). In this display option, you cannot change the multi-function display. The 3D cockpit is not available for all aircraft. (In VR-Engage 1.4, it is available for the T38-C Talon jet.)
- ♦ VR Headset. Select this option if you are using a head-mounted display. (Available only if an HMD is connected.)
- ♦ MR Headset. Select this option if you are using a mixed reality head-mounted display. That is, an HMD with a camera attached so that you can see both the virtual world and real world objects such as your hands and joysticks. (Available only if an HMD is connected.)



Figure 7-4. 3D cockpit

To choose an aircraft display option:

1. In the Choose Role Panel, select the aircraft you want to control.
2. In the Display(s) list, select the display option.

7.2. Taking Control of an Aircraft

To take control of an aircraft, you select it in the Choose Role Panel, just as you would for a human character or a vehicle.

It is beyond the scope of this manual to teach you how to fly a fixed-wing or rotary-wing aircraft. For a brief tutorial on flying the aircraft in VR-Engage, please see the section for fixed-wing aircraft in Chapter 2, [Controlling Entities in VR-Engage](#), in *VR-Engage First Experience*.

You can use an HMD while you control an aircraft. Hand controllers are not supported for flying aircraft. You must still control them using a Gamepad or flight controller.

i

If you take control of an aircraft that is in the air, you must start flying the aircraft as soon as you click Engage. Even though it may take several seconds or longer to display the HUD and instrument panel, the aircraft is already flying. If you take control of an aircraft that is close to the ground, such as a low flying helicopter, there is a risk that it could crash before the HUD is available if you do not immediately maintain its altitude.

7.3. Using Autopilot

You can set an aircraft to use autopilot while still otherwise controlling it. Autopilot has the following modes:

- ♦ **ALT.** Set the altitude and use the current heading. (Equivalent to VR-Forces Fly Altitude task.)
- ♦ **HDG.** Set the heading and use the current altitude. (Equivalent to VR-Forces Fly Heading task.)
- ♦ **ALT/HDG.** Fly at the specified altitude and heading. If no altitude, heading, or both is specified, use the aircraft's current settings.



If a helicopter is on the ground and you set it to ALT/HDG without specifying an altitude, it takes off, moves to an altitude of 33 meters and flies at its current heading. If a fixed-wing aircraft is on the ground, it does not take off. For more information about how aircraft respond to ALT/HDG, please see the Fly Heading and Altitude task in *VR-Forces Users Guide*.

If you are using a joystick, pressing the PATH button causes the plane to fly a pattern hold around a waypoint called PATH, if it exists. Otherwise it flies a pattern hold around the current location.

7.3.1. Setting the Autopilot Mode

To set the autopilot mode or turn off autopilot:

1. On the Action menu, choose **Autopilot**. The menu changes to the Autopilot menu.
2. Choose a setting. The menu changes as follows based on the autopilot setting you choose:
 - If you choose **ALT**, the **Set Hold Altitude** option is added to the menu.
 - If you choose **HDG**, the **Set Hold Heading** option is added to the menu.
 - If you choose **ALT/HDG**, **Set Hold Altitude** and **Set Hold Heading** options are added to the menu.
3. Choose the altitude or heading option that you want to set. An input dialog box opens.
4. Type the altitude or heading that you want to set.
5. Press **Enter**.

7.4. Bombing Targets

You can drop a bomb at any time. By default, bombs try to hit wherever the sensor view is looking at. You can specify a target using MGRS coordinates, or you can lase the target and look at the location being lased. (Lasing can be done by a VR-Forces entity or a VR-Engage character.) For lased targets, you can look at the target once, or you can continuously track what the laser is targeting.

MGRS coordinates must specify a zone, a grid, and an x, y offset. The x and y offsets must be the same number of digits. For example, a code of 04QFJ190557 would be built from:

- ♦ Zone: 04Q.
- ♦ Grid: FJ.
- ♦ X offset: 190.
- ♦ Y offset: 557.

In VR-Engage, if you change the coordinate system to MGRS (Display Settings dialog box, Measurement Units page), the 3D entity label for an entity (windowed mode, 3D view) displays its location in MGRS coordinates. You can then use this value to specify the coordinates for dropping a bomb. To get the MGRS coordinates for a tactical graphic, you can view the state data in VR-Forces.

For more information about MGRS coordinates, please see relevant pages available on the Internet.

To drop a bomb using MGRS coordinates:

1. On the Action menu, select Gimbaled Sensor. The Gimbaled Sensor menu is displayed.
2. Select Set MGRS Target.
3. The Input MGRS Coordinate dialog box opens.
4. Type the coordinates you want to target.
5. Click OK.
6. Press the trigger to drop the bomb.

7.4.1. Targeting a Bomb Using a Laser Code

There is no way to find out the laser code at runtime. You must communicate with other simulation participants to find out what it is. When the aircraft detects a laser code, it displays it in the HUD.

To set the laser code without tracking the target:

1. On the Action menu, select Gimbaled Sensor. The Gimbaled Sensor menu is displayed.
2. Select Set Laser Code.
3. The Input Laser Code dialog box opens.
4. Type the laser code you are looking for.
5. Click OK.
6. Press the trigger to drop the bomb.

To set the laser code and track the target continuously:

1. On the Action menu, select Gimbaled Sensor. The Gimbaled Sensor menu is displayed.
2. Select Continuous Track.
3. The Input Laser Code dialog box opens.
4. Type the laser code you are looking for.
5. Click OK.
6. Press the trigger to drop the bomb.

7.5. Air-to-Air Combat

To fire a missile at another aircraft, you must have a valid target in the Radar Indicator (Figure 7-5). A blue cursor along the bottom of the Radar Indicator shows when the radar is scanning. Yellow icons indicate detected targets.

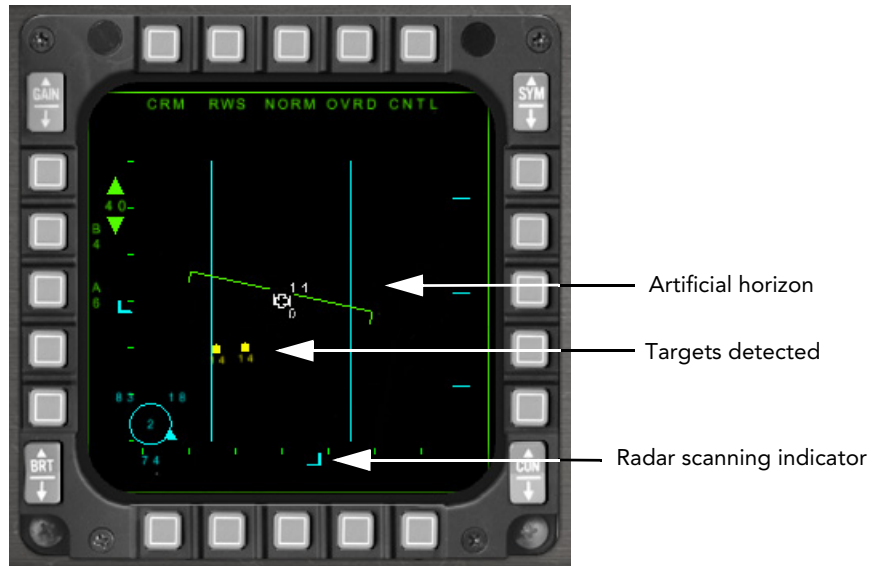


Figure 7-5. Radar Indicator

You may also see targets as green diamonds on the HUD (Figure 7-6).



Figure 7-6. Targets in HUD

Select the target using the cursor select controls. Once you have locked on a target (Figure 7-7), you can fire a missile at it. You can tell you have locked on a target when the following things happen in the Radar Indicator:

- ♦ The target icon becomes an outline instead of being solid.
- ♦ The radar scanning indicator tracks the target instead of sweeping back and forth.
- ♦ The gates (the two vertical lines in the Radar Indicator) are no longer displayed.

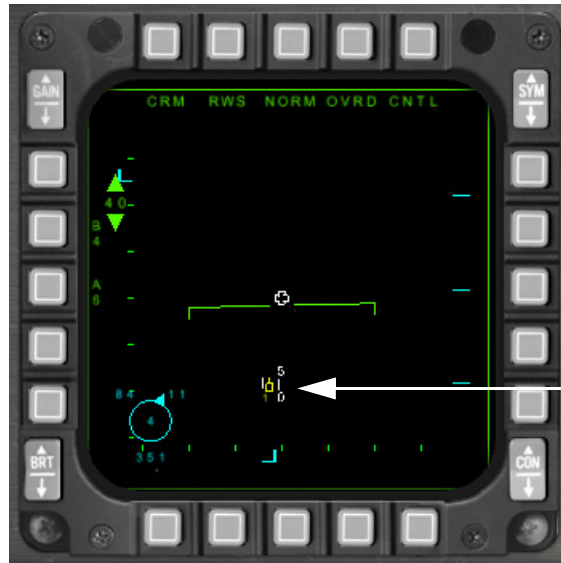


Figure 7-7. Radar lock

7.6. Enabling and Disabling the Radar Warning Receiver

Rotary-wing and fixed-wing entities have a radar warning receiver. It sounds a warning if it detects opposing force radar.

To enable or disable the radar warning receiver:

1. Open the Action menu.
2. Choose **RWR Sounds**.
3. Use an Action menu control method to toggle sounds on or off.



You can also toggle the radar warning receiver by pressing **M**.

7.7. Controlling Landing Gear

Fixed-wing entities can raise and lower landing gear.

To control landing gear:

1. Open the Action menu.
2. Choose **Landing Gear**.
3. Use an Action menu control method to cycle through the options – Up, Down, MVR (Maneuver).



You can also toggle landing gear by pressing **G**.

7.8. Controlling Flaps

You can set the flaps on a fixed-wing entity up or down.

To control flaps:

1. Open the Action menu.
2. Choose **Flaps**.
3. Use an Action menu control method to select Up or Down.



You can also control flaps using a joystick or GamePad.

7.9. Launching Countermeasures (Chaff and Flare)

By default, aircraft automatically launch countermeasures (chaff and flare) when they detect a threat. You can disable automatic countermeasures and launch chaff and flare manually.

To enable or disable countermeasures:

1. Open the Action menu.
 2. Choose **Auto Launch CM**.
 3. Use an Action menu control method to toggle automatic countermeasures on or off.
- To launch countermeasures manually, press **C** for chaff and **F** for flare.

7.10. Disabling Instrument Panel Instruments

The example scenarios provided with VR-Engage include a background process that lets you disable the instruments on the instrument panel of the T-38C Talon aircraft. You might want to trigger these events to see how a pilot reacts to instrument failure.

The Test Drive and First Experience scenarios have scenario events that toggle selected instruments on and off. The events are as follows:

- ♦ ADI. Attitude indicator.
- ♦ ALT. Altimeter.
- ♦ ASI. Airspeed indicator.
- ♦ HSI. Heading indicator.
- ♦ MI. Magnetic compass.
- ♦ VSI. Vertical speed indicator.



Triggering an instrument failure affects all T-38C aircraft in the scenario. You cannot direct the failure to a specific aircraft.

To use these events, you must:

1. Install the VR-Forces overlay in a supported version of VR-Forces.
2. Run one of the example scenarios.
3. Connect to the scenario with VR-Engage.
4. Engage as the T-38C Talon.
5. In VR-Forces, toggle the events on and off on the Quick Launch Toolbar or in the Scenario Event Manager.

7.11. Requesting SAR Images from RadarFX Server

VR-Engage can request synthetic aperture radar (SAR) images from RadarFX Server. To use this feature, you must install a licensed version of RadarFX Server. For details about using RadarFX Server, please see *RadarFX Users Guide*.

When you request an image, the server returns the image and it is displayed in the multi-function display window of an aircraft's instrument panel.

7.11.1. Requesting a SAR Image

When you request a SAR image, VR-Engage sends the request using the settings configured in the SAR Request Settings dialog box.



RadarFX Server must be running when you request a SAR image.

To request a SAR image, do one of the following:

- ♦ On the Action menu, choose **Request SAR Image**.
- ♦ On the multi-function display, while the SAR image is selected, click the Request SAR Image button ([Figure 7-8](#)).

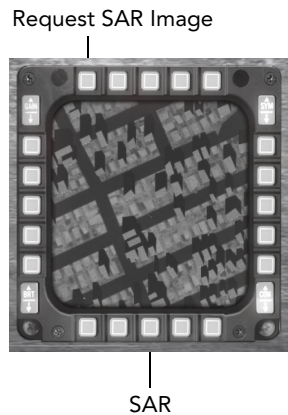


Figure 7-8. SAR image

- ♦ Press the appropriate button on your joystick.
- ♦ Press **S**.

7.11.2. Configuring a SAR Request

When you request a SAR image, you must specify:

- ♦ The location of the sensor.
- ♦ The area of interest.
- ♦ The amount power the SAR system should use.

You can also configure the properties of the image that will be returned.

Specifying the Location of the Sensor

You must tell the server where the sensor that will take the image is located.

You can:

- ♦ Use the location of the VR-Engage's observer. This option is most useful when both the server and the client are running on the same machine and you can manually move the observer into position and then request a radar image.
- ♦ Attach to an entity in the simulation. VR-Engage must be connected to a session and an entity must be selected in the Choose Role Panel.
- ♦ Enter a location manually in latitude, longitude, and altitude.

To specify a location:

1. Choose **Settings** → **SAR Settings**. The SAR Request Settings dialog box opens.
2. Select the Request tab ([Figure 7-9](#)).

The screenshot shows a window titled "SAR Request Settings" with a standard Windows title bar (minimize, maximize, close buttons). Below the title bar is a toolbar with icons for help, save, load, and other functions. The main content area has three tabs: "Request" (selected), "Settings", and "Connection". Under the "Request" tab, there are two main sections: "Sensor Location" and "Area of Interest".

Sensor Location

- ☒ Use Simulated Entity Location
 - Entity Name: UAV 1
- ☐ Use Observer Location
 - Observer Name: No Valid Observers
- ☐ Set Location Manually
 - Latitude (deg): 0.000000
 - Longitude (deg): 0.000000
 - Altitude (meters): 0.000000

Area of Interest

- ☒ Set Area of Interest by mouse click
- ☐ Use Simulated Entity Location
 - Entity Name: CamSuspec 2
- ☐ Use Ownship Entity Sensor Field of View
 - Sensor Name: No Valid Sensors
- ☐ Set Location Manually
 - Latitude (deg): 21.412044
 - Longitude (deg): -157.878761
 - Altitude (meters): 366.096556

Figure 7-9. SAR Request Settings, Request tab

3. In the Sensor Location group box, choose one of the options.
4. If you choose Use Simulated Entity Location, select an entity in the Entity Name list.

If you choose Use Observer Location, select an observer in the Observer Name list.

If you choose Set Location Manually, specify Latitude, Longitude, and Altitude.

Specifying the Area of Interest

The area of interest is the area that you want to take an image of. You can specify the area of interest as:

- ♦ An area centered on an entity.
- ♦ An area centered on the ownship vehicle's Targeting Pod.
- ♦ An area centered on a mouse click on the terrain.
- ♦ An area centered on a specified latitude and longitude.

The cross range and down range values specify the size, in meters, of the area of interest centered on the target location, as illustrated in [Figure 7-10](#).

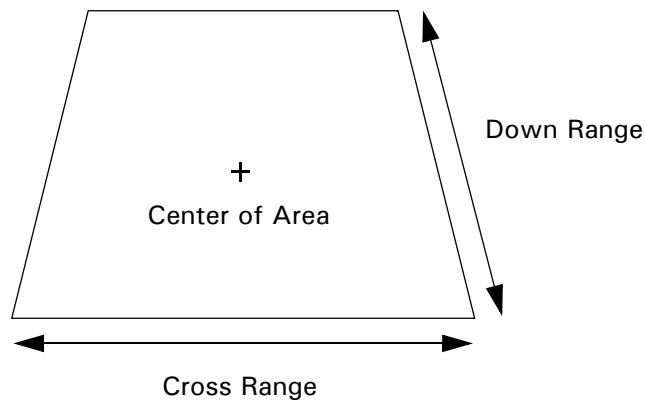


Figure 7-10. Area of interest

To specify the area of interest:

1. Choose **Settings** → **SAR Settings**. The SAR Request Settings dialog box opens.
2. Select the Request tab ([Figure 7-9](#)).
3. In the Area of Interest group box, select an option.
4. If you choose Set Area of Interest by Mouse Click, click on the terrain to set the center of the area of interest.

If you choose Use Simulated Entity Location, select an entity in the Entity Name list.

If you choose Use Ownship Entity Sensor Field of View, select the sensor to use in the Sensor Name list.

If you choose Set Location Manually, specify Latitude, Longitude, and Altitude.

5. Select the Settings tab ([Figure 7-11](#)).

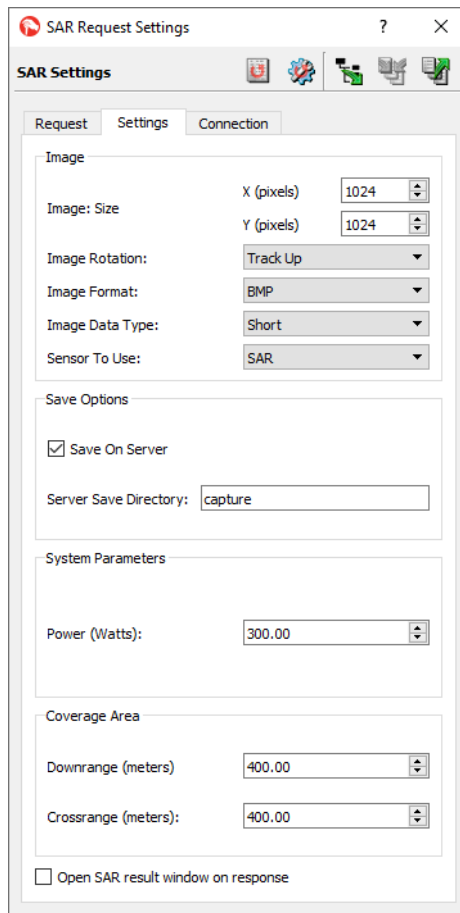


Figure 7-11. SAR Request Settings, Settings tab

6. In the Coverage Area group box, specify the Downrange and Crossrange values.

Specifying the Power

The power value is the amount of power that the SAR system should use to generate the image. Higher power levels increase the image gain. Lower levels result in a darker image.

To specify the power

1. Choose **Settings** → **SAR Settings**. The SAR Request Settings dialog box opens.
2. Select the Settings tab (Figure 7-11).
3. In the System Parameters group box, enter a value in the Power box.

Configuring Image Properties

You can specify the properties of the image that the server returns. You can also specify that the image be saved on the server. You can specify the following properties:

- ♦ Image size, in pixels.
- ♦ Image Rotation. The image can be rotated so that North is up or the sensor's view is up.
- ♦ Image Format. Options are PNG, JPG, BMP, Raw, and NITF (National Imagery Transmission Format).
- ♦ Image Data Type. Byte, short, or float.

To specify image properties:

1. Choose **Settings** → **SAR Settings**. The SAR Request Settings dialog box opens.
2. Select the Settings tab (Figure 7-11).
3. In the Image group box, change properties as desired.
4. To save the image on the server, in the Save Options group box, select Save On Server. Specify the directory in which to save images.

Configuring the SAR Connection

To connect to a RadarFX Server, you must specify an IP address and port that matches the port used by the server. The default connection settings on the Connection tab of the SAR Request Settings dialog box match the default settings used by RadarFX Server. If you do not change the settings on the server, you do not have to make any changes in VR-Engage.



8. Controlling Drones

This chapter explains how to deploy and control drones in VR-Engage.

Introduction	8-2
Drone Camera Display	8-3
Video and Images	8-4
Drone Battery Life	8-4
Operating the Drone	8-4
Deploying the Drone	8-4
Stopping and Resuming Use of the Drone	8-4
Switching Control Between Character and Drone	8-5
Landing the Drone	8-5
Returning the Drone to its Starting Position	8-5
Recovering the Drone	8-5

8.1. Introduction

Drone operation is a feature of specific human entities in VR-Engage. It allows you to deploy and fly a quadcopter while playing the role of a human in the scenario.

The three entities that can deploy the quadcopter drone are:

- ♦ Civilian Female With Drone.
- ♦ Civilian Male With Drone.
- ♦ Police Officer With Drone.

After you deploy the drone, it appears and the perspective switches from first person to third person ([Figure 8-1](#)). It also displays the drone's camera view ([Figure 8-2](#)).

The Gamepad controls the drone. VR-Engage includes mappings for the Gamepad F310 and F710. You can use the **W**, **A**, **S**, and **D** keys to move the human entity. As the drone moves, the human character operating it pivots to keep it in the center of the main screen.



Figure 8-1. Police officer with drone and drone camera view



If at any point the drone is destroyed, you can reset the character in place to restore the drone. To learn how to reset entities, please see [“Resetting Entities,”](#) on page 4-8.

8.1.1. Drone Camera Display

The drone camera view shows what the drone can see and also indicates the status of the drone (Figure 8-2).

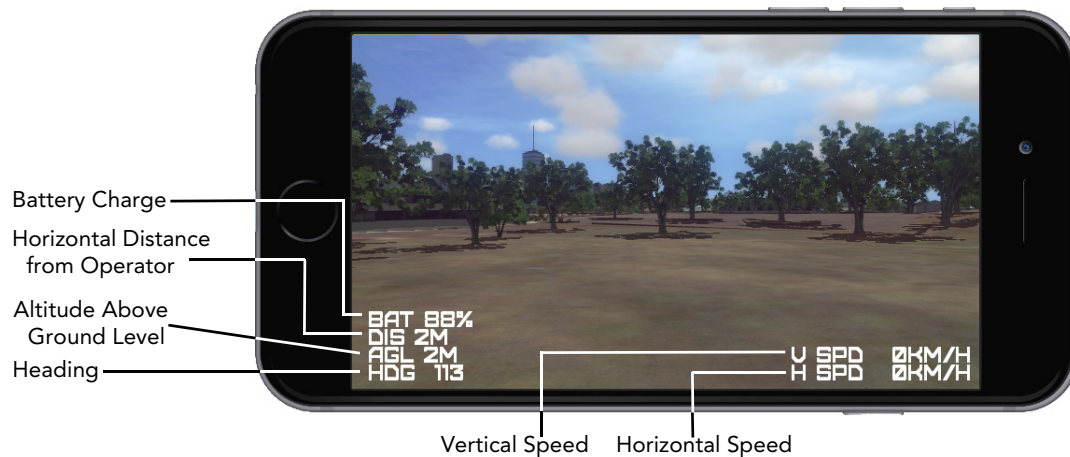


Figure 8-2. Drone camera view and status indicators

The drone operator can pan the camera up or down, and also zoom in or out.

To operate the drone's camera:

1. Add or select a character with a drone.
2. Engage the character.
3. To pan the camera up and down, use the Gamepad's right shoulder button and trigger (buttons 6 and 8).
4. To zoom out or in, use the Gamepad's left shoulder button and trigger (buttons 5 and 7).

The default location for the drone camera view is at the top right of the VR-Engage window, but you can configure this.

To change the camera view in the interface:

1. Press **F6** one time to change the whole screen to display the camera view instead of the third-person view.
2. Press **F6** a second time to return to the third-person view without the camera view.
3. Press **F6** a third time to return to the default view.



To change the size of the drone camera view, edit **viewportConfigurations** in the `./appData/scripts/playerDefinitions/human.lua` file.

8.1.2. Video and Images

You can use the drone to stream video and capture images. Please see Chapter 10, [Video Stream and Image Capture](#).

8.1.3. Drone Battery Life

The drone has a limited battery life. The current charge status displays in the drone's camera view ([Figure 8-2](#)). If the battery charge falls below about 5% while it is in the air, the drone descends to the ground. To restore the drone, open the Action menu and choose **Reset in Place**.

8.2. Operating the Drone

To deploy and operate a quadcopter drone, you must engage as one of the three entities with the drone. The MAK Suite Demo scenario includes a Civilian Male With Drone entity in the neutral (green) force.



You can create one of the drone operator entities to use if you do not want to use the MAK Suite Demo scenario. To learn how to create entities, please see [“Creating a New Entity,”](#) on page 3-6.

8.2.1. Deploying the Drone

When you deploy the drone, the default is to control its movements using the Gamepad and the character's movements with the keyboard. **To deploy the drone:**

1. Add or select a character with a drone.
2. Engage the character.
3. Open the Action menu and choose **Deployable Objects** → **Deploy Spark**.
4. Use the Gamepad to control the drone (please see [“Gamepad Mappings for Drones,”](#) on page 11-12). Use the **W**, **A**, **S**, and **D** keys to move the character.

8.2.2. Stopping and Resuming Use of the Drone

While the drone is deployed, you can stop or resume use of the drone.

To stop or restart using the drone:

1. Open the Action menu and choose **Drone** to open the Drone submenu.
2. Choose the appropriate option:
 - **Stop Using Drone.** Closes the drone's camera view and leaves the drone in its current location. You can control the human character with the Gamepad.
 - **Use Drone.** Resumes using the drone. The camera view reopens.

8.2.3. Switching Control Between Character and Drone

You can change whether the Gamepad controls the human character or the drone.

To change what the Gamepad controls:

1. Open the Action menu and choose **Drone**.
2. Use an Action menu control to toggle the **Gamepad Control**:
 - Human: The Gamepad controls the human character.
 - Drone: The Gamepad controls the drone.

You can also choose whether the human character's focus is on the drone.

To change the character's focus:

1. Open the Action menu and choose **Drone**.
2. Use an Action menu control to toggle the **View Focus**:
 - Human: The human character no longer keeps the drone in the center of the screen.
 - Drone: The human character keeps the drone in his or her sights.

8.2.4. Landing the Drone

You can tell the drone to land itself at its current location.

- To land the drone, open the Action menu and choose **Drone → Land**. It descends to the ground.

8.2.5. Returning the Drone to its Starting Position

You can send a command to the drone to have it return from where it is currently located to the starting point where it was first deployed.

- To return the drone to its starting location, open the Action menu and choose **Drone → Return to Home**.

The drone camera view closes and the drone flies itself back to its starting position.

8.2.6. Recovering the Drone

When you are finished using the drone, you can command it to return and stow itself.

- To recover the drone, open the Action menu and choose **Drone → Recover**.

The drone camera view closes and the drone flies itself to your location from where it was. Afterward, its battery is immediately recharged to full.



If the drone is low on battery power, it cannot fly itself to you. You can reset it in place or move to the drone's location on the ground and then recover it.



9. Sensor Operator Role

This chapter explains the sensor operator role in VR-Engage. The sensor operator is included in the full version of VR-Engage and is also available as an independently licensed capability.

The Sensor Operator Role	9-2
Focusing the Sensor	9-3
Changing the Sensor Mode	9-4
Resetting the Sensor	9-5
Video and Pictures	9-5
Placing Sensors on Remote Entities	9-5
Configuring the Location of the Remote Camera	9-5
Configuring the Sensor Operator Overlay	9-7

9.1. The Sensor Operator Role

VR-Engage players can control sensors and remote cameras using the sensor operator role. The sensor operator can slew the sensor, zoom in and out, and can focus it on specific locations and entities.



Figure 9-1. Sensor operator view

You can add remote cameras to a scenario and set their heading and pitch. VR-Engage is also configured to automatically add cameras to remotely simulated (that is, non-VR-Forces) F-18 and UAV entities.



You can expand the remote cameras to other entities by modifying the `componentAttachmentTable.mtl` in the SMS.

If a sensor is mounted on an entity, the sensor operator does not control the entity. Therefore, you need another player to operate the entity, it must have a VR-Forces plan or task, or it must be mounted on a remote entity.

To operate a camera:

1. In the Objects Panel, select a camera or an entity whose sensor you want to control.
2. In the Role list, choose Sensor Operator.
3. Click Engage. The window changes to 3D mode and a sensor overlay is displayed.
4. To zoom in and out, use the Gamepad's right thumbstick, or use your joystick.
5. To slew the sensor, use your joystick or the Gamepad's left thumbstick.

9.1.1. Focusing the Sensor

You can focus the sensor on:

- ♦ The center of the screen.
- ♦ On a location specified by an MGRS coordinate or laser designation code.

When you specify an MGRS coordinate or laser designation code, the sensor focuses on that spot. However, if a laser spot moves, the sensor does not follow it. If you specify a laser code for continuous tracking, the sensor follows the laser spot as it moves.

- ♦ On a waypoint. If a scenario has waypoints, you can focus on them.
- ♦ On a street. If a terrain has shapefiles that have street names, you can focus on a street. The sensor tracks the closest vertex. It must be within five kilometers of the X,Y coordinates of the sensor.

To set an MGRS target or laser code:

1. Engage an aircraft as the sensor operator or engage a remote camera.
2. On the Action menu, choose **Gimbaled Sensor**. The Gimbaled Sensor menu opens.
3. Choose **Set MGRS Target** or **Set Laser Code**. A data entry dialog box opens.
4. Type the code.
5. Press **Enter**.

To track a laser spot continuously:

1. Engage an aircraft as the sensor operator or engage a remote camera.
2. On the Action menu, choose **Gimbaled Sensor**.
3. On the Gimbaled Sensor menu, choose **Continuous Track**. A data entry dialog box opens.
4. Type the code.
5. Press **Enter**.

To track a waypoint:

1. Engage an aircraft as the sensor operator or engage a remote camera.
2. On the Action menu, choose **Gimbaled Sensor**.
3. On the Gimbaled Sensor menu, choose **Track Waypoint**. A list of waypoints opens.
4. Select the waypoint you want to track.
5. Press **Enter**.

To track a street:

1. Engage an aircraft as the sensor operator or engage a remote camera.
 2. On the Action menu, choose **Gimbaled Sensor**.
 3. On the Gimbaled Sensor menu, choose **Enter Street Name**. A text entry dialog box opens.
 4. Type the name of the street you want to track.
 5. Press **Enter**.
- To focus the sensor on the center of the screen, press the A button on your Gamepad.

9.1.2. Changing the Sensor Mode

A sensor operator can view the scenario in visual mode, NVG mode, or IR mode. You can set the available modes in `./appData/scripts/playerdefinitions/sensorOperator.lua` by editing the `sensorModes` array. When you change the sensor mode, it cycles through the available modes in the order specified in the array.

To change the sensor mode:

1. Engage an aircraft as the sensor operator or engage a remote camera.
2. On the Action menu, choose Gimbaled Sensor.
3. On the Gimbaled Sensor menu, choose **Mode**.
4. Cycle through the modes to choose the one you want.



You can also change the sensor mode by pressing the X button on a Gamepad.

9.1.3. Resetting the Sensor

When you reset the sensor, it returns to a fixed angle at the neutral azimuth and elevation.

To reset the sensor:

1. On the Action menu, choose **Gimbaled Sensor**.
2. On the Gimbaled Sensor menu, choose **Reset Sensor**.



You can also change the sensor mode by pressing the Y button on a Gamepad.

9.1.4. Video and Pictures

You can use the sensor operator to stream video and capture images. Please see Chapter 10, [Video Stream and Image Capture](#).

9.2. Placing Sensors on Remote Entities

VR-Engage uses the VR-Forces remote component attachment feature to automatically place gimbaled sensors on remotely simulated entities. A remotely simulated entity is an entity that is part of an exercise, but is simulated by an application other than VR-Forces. The sensor is attached to the remote entity and moves with it. You can use the sensor operator role to operate the sensor. You cannot operate the remote entity.

The entities to which VR-Engage automatically attaches sensors are configured in `./data/simulationModelSets/VR-Engage/extra/componentAttachment-Table.mtl`.

The location where the sensor is embarked on the remote entity is configurable in the VR-Forces Simulation Object Editor.

If your scenario uses multiple simulation engines, then by default, the remote sensor is simulated on the first one.

9.2.1. Configuring the Location of the Remote Camera

VR-Engage places a sensor on a remote entity at a location relative to the center of the entity. You can specify an offset from the default location.

To specify the offset for placing a sensor on a remote entity:

1. In a version of VR-Forces that has the VR-Engage add-ons installed, open the Simulation Object Editor.
2. Open `VR-Engage.sms`.
3. In the list of objects, select the VR-Forces entity that you want to configure to use a remote camera.
4. On the right, select the Systems tab.

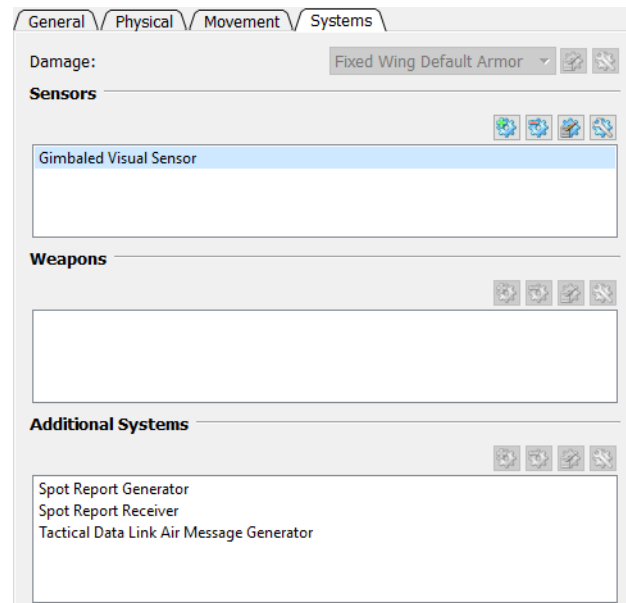


Figure 9-2. Gimbaled Visual Sensor system

5. Select the Gimbaled Visual Sensor System.
6. Click the Properties button (🔧). The Gimbaled Visual Sensor Properties dialog box opens.

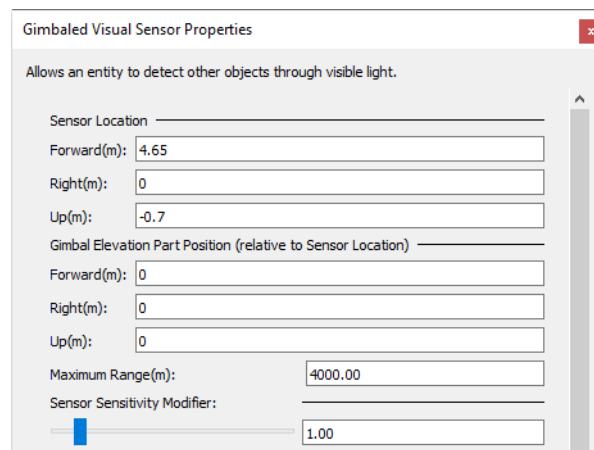


Figure 9-3. Gimbaled Visual Sensor Properties

7. Edit the Sensor Location parameters.
8. Click OK.
9. Save the SMS.
10. Copy the updated SMS to your VR-Engage installation's `./data/simulation-ModelSets` directory. (Or you can just copy the `./data/simulationModelSets/VR-Engage/vrfSim/Remote Sensor.entity` file.)

9.3. Configuring the Sensor Operator Overlay

The information displayed on the sensor operator overlay is controlled by keywords in the following lines in `./appData/scripts/playerDefinitions/sensorOperator.lua`:

```
includes={
  --include these regardless of entity type
  "devices/menu.lua";
  "devices/radio.pilot.lua";

  --When entering this role, the configuration that best matches
  --the ownship's entity type will be used.
  ["-1:-1:-1:-1:-1:-1:-1"] = {
    components = {
      { componentType = "DtVrvSensorOverlayUpdater";
        priority = 10;
        sections = {"Crosshair", "PlatformInfo", "VreTargetInfo",
                   "VreDisplayInfo", "Pitch", "Reticle", "Compass", "Time"};
      };
    };
  };
  ["1:2:-1:-1:-1:-1:-1"] = {
    components = {
      { componentType = "DtVrvSensorOverlayUpdater";
        priority = 10;
        sections = {"Crosshair", "PlatformInfo", "VreMgrsTargetInfo",
                   "VreDisplayInfo", "Pitch", "Reticle", "Compass", "Time"};
      };
    };
  };
  ["5:-1:-1:-1:-1:-1:-1"] = {
    components = {
      { componentType = "DtVrvSensorOverlayUpdater";
        priority = 10;
        sections = {"Rec", "Reticle", "DateTime"};
      };
    };
  };
};
```

The overlay to use is chosen based on the object type enumeration. You can add or remove overlay components by adding or removing keywords. The keywords are as follows, referenced to [Figure 9-4](#) and [Figure 9-5](#):

- ♦ Crosshair (1).
- ♦ VreTargetInfo (2). Show location using latitude/longitude coordinates.
- ♦ VreMgrsTargetInfo (2). Show location using MGRS coordinates.
- ♦ PlatformInfo (includes data and time) (3).
- ♦ VreDisplayInfo (4).
- ♦ Pitch (5).
- ♦ Reticle (6).
- ♦ Compass (7).
- ♦ Time (8).
- ♦ Rec (Record. This is just text. VR-Engage does not record anything.) (9).
- ♦ DateTime (10).

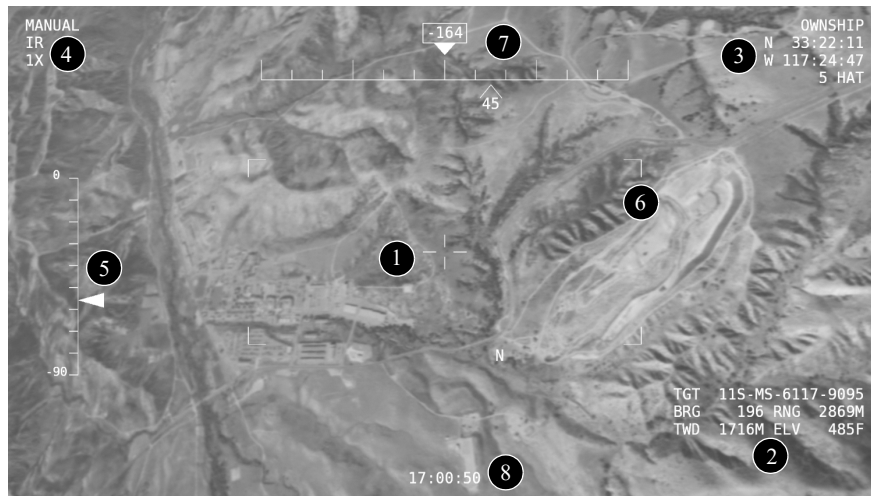


Figure 9-4. Sensor operator overlay for aircraft



Figure 9-5. Sensor operator overlay for security camera



10. Video Stream and Image Capture

This chapter explains how to use the Video Stream and Capture Image features for the Sensor Operator and Drone.

Introduction	10-2
Video Streams.....	10-2
Streaming Video as a Sensor Operator.....	10-2
Streaming Video from a Drone.....	10-2
Editing the Video Stream File Settings.....	10-3
Receiving a Video Stream.....	10-3
Capturing Images.....	10-4

10.1. Introduction

You can use the sensor operator or the drone to stream video and take pictures.



Please see Chapter 8, *Controlling Drones* and Chapter 9, *Sensor Operator Role* for more about those features.

10.2. Video Streams

Sensor operators and drones can stream video. The default is to stream to a file. To receive the video stream, you must install a media player that can process the video stream, such as VLC media player.

10.2.1. Streaming Video as a Sensor Operator

The sensor operator streams the camera's video feed.

To stream video as a sensor operator:

1. Add or select an entity that has a sensor.
2. Engage as the Sensor Operator.
3. Open the Action menu and choose **Gimbaled Sensor**.
4. Use an Action menu control to toggle **Video Stream** to Started.

A user can then receive the video stream (see “[Receiving a Video Stream](#),” on page 10-3).

10.2.2. Streaming Video from a Drone

The drone can stream the full VR-Engage window or only the drone's camera view.

To stream video from a drone:

1. Add or select an entity with a drone.
2. Engage the character.
3. Open the Action menu and choose **Deployable Objects** → **Deploy Spark**.
4. From the Drone submenu, choose **Streaming Video** and use an Action menu control to open the submenu. The Streaming Video submenu opens.
5. Use an Action menu control to toggle **Video Stream** to Started.
6. Choose **Video Source** and use an Action menu control to open the submenu. The Video Source menu opens.
7. Select whether the source of the video stream should be the Main Window or the Drone View.

A user can then receive the video stream (see “[Receiving a Video Stream](#),” on page 10-3).

10.2.3. Editing the Video Stream File Settings

The sensor operator and drone video streams default to a file. You can change the stream settings by editing the **DtStreamingVideoUpdater** definition in the *sensorOperator.lua* or *human.lua* file in *./appData/scripts/playerDefinitions*.

10.2.4. Receiving a Video Stream

To receive the video stream, you must have a viewing application installed and have access to the VR-Engage installation where the video is being streamed. For details about configuring the video stream, please see Chapter 8, [Using Streaming Video](#), in *VR-Vantage Users Guide*.



The default stream is *H264 HW-MPGTS-FILE*, saved in *./appData/videoStreams*, but you can edit it.

To receive the video stream:

1. Launch the viewing application.
2. Select the stream file in the directory where VR-Engage is streaming the video.

As long as the video stream is turned on for the sensor or drone, the video stream displays in the viewing application.

10.3. Capturing Images

The sensor operator and drone have cameras that can take screen shots of the camera view and save them to your computer.

To take pictures with the sensor operator:

1. Add or select an entity that has a sensor.
2. Engage as the Sensor Operator.
3. Open the Action menu and choose **Gimbaled Sensor** → **Capture Image**.

A screen capture of the camera view is saved in `./userData/screenshots` as a *PNG* file.

To take pictures with the drone:

1. Add or select a character with a drone.
2. Engage the character.
3. Open the Action menu and choose **Deployable Objects** → **Deploy Spark**.
4. Fly the drone to the location where you want to take a picture.
5. Open the Action menu and choose **Drone** → **Capture Image**.

A screen capture of the camera view is saved in `./userData/screenshots` as a *PNG* file.



11. Mouse, Keypad, and Controller Mappings

This chapter describes mouse and keyboard mappings and controller mappings for VR-Engage. For details about configuration additional controllers, please see “Configuring Joysticks and Keyboard Control,” on page 11-32.

Mouse and Keyboard Mappings	11-2
Gamepad Mappings for Human Control	11-5
Gamepad Mappings for Using the Action Menu	11-6
Gamepad Mappings for the LAV and M1A2	11-7
Racing Wheel Controllers	11-9
Gamepad Mappings for Cars and Trucks	11-11
Gamepad Mappings for Drones	11-12
Flight Controllers	11-13
HOTAS Warthog Mappings for Fixed-Wing Entities	11-13
HOTAS Warthog Mappings for Rotary-Wing Entities	11-17
T.Flight Hotas X Mappings for Fixed-Wing Entities	11-19
T.Flight Hotas X Mappings for Rotary-Wing Entities	11-22
Gamepad Flight Control Mappings for Fixed-Wing Entities	11-25
Gamepad Flight Control Mappings for Rotary-Wing Entities	11-27
Gamepad Flight Control Mappings for the Sensor Operator	11-28
Head-Mounted Display Controllers	11-28
Generic Gamepad Button Numbering	11-31
Configuring Joysticks and Keyboard Control	11-32
Creating a Joystick Configuration	11-32
Mapping the Joystick Stick	11-35
Mapping Joystick Buttons and Keyboard Keys	11-36
Configuring “Switch Between” Options	11-39

11.1. Mouse and Keyboard Mappings

Table 11-1 lists mouse and keyboard mappings for human players.

Table 11-1: Human player mouse and keyboard controls

Mouse Mappings	
Turn and move weapon	Mouse move
Fire	Left mouse button
Zoom in	Mouse wheel forward
Zoom out	Mouse wheel backward
Aim	Right mouse button
Keyboard Mappings	
Application Management	
Reset in current position (the scenario continues to run)	Ctrl + F5
Reset to starting position (the scenario continues to run)	F5
Toggle Action menu	~ (tilde)
Toggle full screen	Ctrl + Enter
Enable/disable mouse control	Ctrl
Stop playing	Esc
Movement	
Run forward	Shift + W
Walk forward	W
Walk slowly	Alt + W
Walk backward	S
Turn left	Left arrow
Turn right	Right arrow
Posture up	Q
Posture down	E
Toggle First-person/3rd person mode	V
Parachuting	
Deploy parachute	Spacebar
Turn left or right	A, D
Slow rate of descent	A + D

Table 11-1: Human player mouse and keyboard controls

Engagement	
Aim	M
Fire	Spacebar
Strafe left	A
Strafe right	D
Pitch weapon up	Up arrow
Pitch weapon down	Down arrow
Toggle Weapon State (Stowed, Ready, Aiming)	G
View and Accessories	
Toggle night vision goggles	N
Binoculars	B
Talk on the radio	T
Zoom in	=
Zoom out	- (dash)
Toggle flashlight	F

[Table 11-2](#) lists keyboard controls for the LAV in driver mode.

Table 11-2: Keyboard mappings for LAV driver

Function	Key
Steer left	A
Steer right	D
Throttle	W
Brake	S
Gear up	Q
Gear down	E
Start/stop engine	X
Differential lock	C
Turret left	J
Turret right	L
Turret up	I
Turret down	K
Fire	F
Headlights	H

Table 11-2: Keyboard mappings for LAV driver

Function	Key
Parking brake	P
Next weapon	R
Previous weapon	V

Table 11-3 lists the keyboard mappings for aircraft.

Table 11-3: Keyboard mappings for fixed-wing aircraft

Function	Key
Target pod track	1
Synchronize laser code	2
Synchronize laser code continuous	3
Toggle radar warning receiver	M
Launch chaff	C
Launch flares	F
Observer mode	V
Landing gear	G

Table 11-4 lists keyboard controls for the Action menu.

Table 11-4: Action menu mouse and keyboard mappings

Mouse Mappings	
Select menu item	Mouse click
Keyboard Mappings	
Next menu item	Up arrow
Previous menu item	Down arrow
Select menu item	Right arrow or Enter
Return to previous menu	Left arrow

11.2. Gamepad Mappings for Human Control

Figure 11-1 illustrates Gamepad mappings for controlling humans.

i

The Mode button switches the functions of the D-pad and the left thumbstick. Since it is easy to inadvertently press it, if the D-pad and thumbstick are not working as expected, check the Mode button. It should be off (no green light).



Figure 11-1. Human controls

11.3. Gamepad Mappings for Using the Action Menu

Figure 11-2 illustrates Gamepad mappings for the Action menu.



Figure 11-2. Gamepad menu controls

11.4. Gamepad Mappings for the LAV and M1A2

Gamepad mappings for controlling the LAV and M1A2 depend on the role you are playing. They are illustrated as follows:

- ♦ [Figure 11-3](#) illustrates driver controls. These controls also apply to driving the M1A2 Abrams tank, except as noted.
- ♦ [Figure 11-4](#) illustrates commander controls.
- ♦ [Figure 11-5](#) illustrates gunner controls. These controls also apply to driving the M1A2 Abrams tank.



Figure 11-3. Driver controls for LAV and M1A2



Figure 11-4. LAV commander controls



Figure 11-5. Gunner controls for LAV and M1A2

11.5. Racing Wheel Controllers

VR-Engage supports the Logitech G27 and G29 racing wheel controllers.

[Figure 11-6](#) illustrates the mappings of the G27 racing wheel.



If your racing wheel is not working as expected, make sure you are using the latest drivers.



Figure 11-6. G27 racing wheel controls

[Figure 11-7](#) illustrates the mappings of the G29 racing wheel.

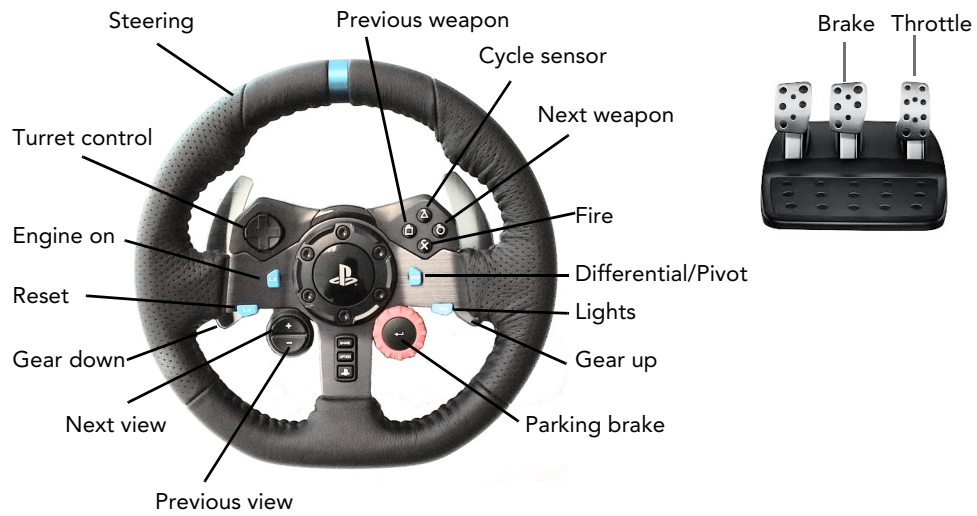


Figure 11-7. G29 racing wheel controls

11.6. Gamepad Mappings for Cars and Trucks

This section describes Gamepad mapping for cars and trucks. These vehicles have a driver role, but for the most part do not have weapons.



Figure 11-8. Driver controls for cars and trucks

11.7. Gamepad Mappings for Drones

Figure 11-9 illustrates the drone controls for Gamepads.



Figure 11-9. Drone controls

Table 11-5 lists the Gamepad controls for the drone.

Table 11-5: Gamepad control mappings - drone

Function	Key/Button
Drone Flight Controls	
Altitude	Left thumbstick, forward/back
Direction	Left thumbstick, left/right
Movement	Right thumbstick, forward/backward/left/right
Drone Camera Controls	
Zoom in	Button 7
Zoom out	Button 5
Pan up or down	D-pad, up/down

11.8. Flight Controllers

VR-Engage includes mappings for the Thrustmaster HOTAS Warthog flight (Joystick- HOTAS Warthog) controller, the T.Flight Hotas X (T.Flight Hotas X) flight controller, and the Gamepad F310 and F710 (Logitech Dual Action).

11.8.1. HOTAS Warthog Mappings for Fixed-Wing Entities

[Figure 11-10](#) and [Figure 11-11](#) show the mappings for the Thrustmaster Warthog flight controller for fixed-wing entities.



Figure 11-10. Thrustmaster HOTAS Warthog joystick mappings - fixed-wing

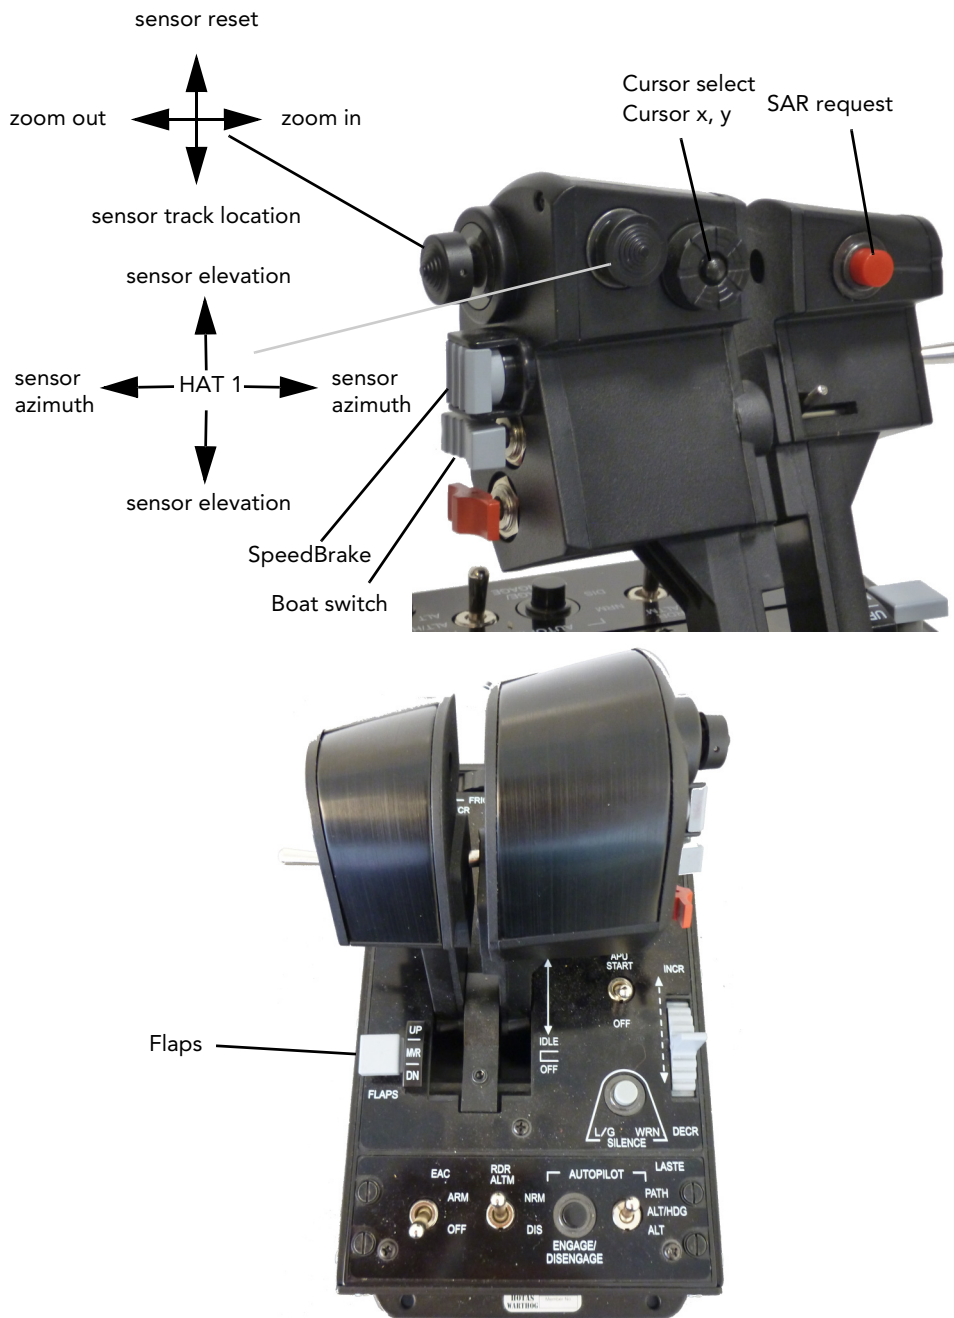


Figure 11-11. Thrustmaster HOTAS Warthog throttle mappings - fixed-wing

Table 11-6 lists the flight controls for the Thrustmaster HOTAS Warthog controller for fixed-wing entities.

Table 11-6: Thrustmaster HOTAS Warthog mappings - fixed-wing

Function	Key/Button
Extended Flight Controls	
AutopilotMode1	Throttle Button 27 Down
AutopilotMode2	Throttle Button 28 Down
AutopilotToggle	Throttle Button 26 Down
Flap 1	Throttle Button 22 Down. Toggle states match joystick up, maneuver, down.
Flap 2	Throttle Button 23 Down. Toggle states match joystick up, maneuver, down.
NoseWheelSteering	Button 3 Down Toggle
ToggleLandingGear	G Toggle
Fire Missile	
fire	Button 1
FixedWingLib CGF Flight Controls	
air brake	Boat Switch (Button 10) Down. This causes excess drag and the plane's speed drops quickly.
pitch	Joystick forward and back (Axis 2)
roll	Joystick left and right (Axis 1)
throttle	Throttle lever (Axis 3)
wheel brake	SpeedBrake (Button 7) Down, button 8 Down. If you pull back and release, it recenters. If you push forward, it locks in place. Both directions activate full brakes.
Gimbaled Sensor	
sensor-azimuth	Throttle HAT 1 Right (Up), HAT 1 Left (Down)
sensor-elevation	Throttle HAT 1 Up (Up), HAT 1 Down (Down)
sensor-reset	Throttle Button 3 Down
sensor-track-location	Throttle Button 5 Down
sensor-zoom	Throttle Button 4 (Down), Button 6 (Up)
Observer Control	
ObserverAttachMode	V

Table 11-6: Thrustmaster HOTAS Warthog mappings - fixed-wing

Function	Key/Button
Radar Scope	
cursor-select	Button 1
cursor-x	Axis 1
cursor-y	Axis 2
Release Bomb	
release	Button 2
SAR	
request	Throttle Button 15

11.8.2. HOTAS Warthog Mappings for Rotary-Wing Entities

Figure 11-12 and Figure 11-13 show the mappings for the Thrustmaster Warthog flight controller for rotary-wing entities.

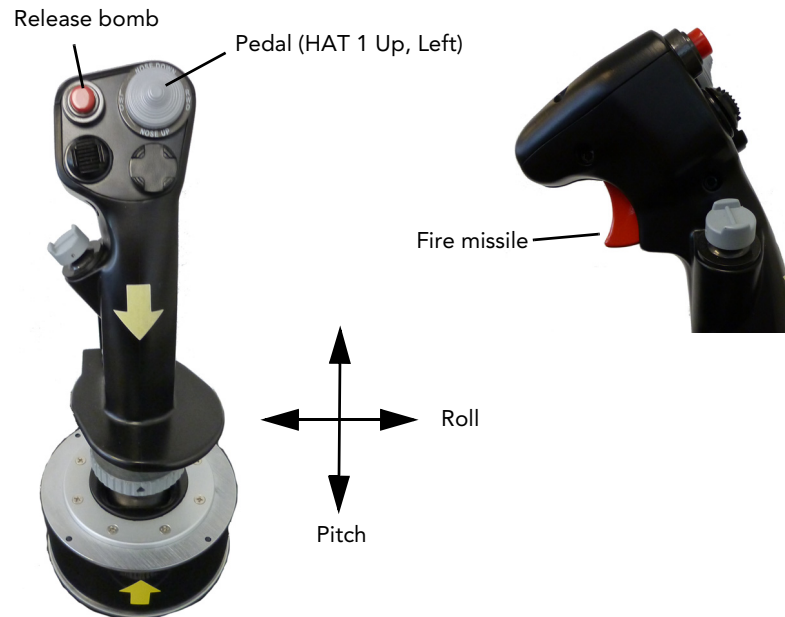


Figure 11-12. Thrustmaster HOTAS Warthog joystick mappings - rotary-wing

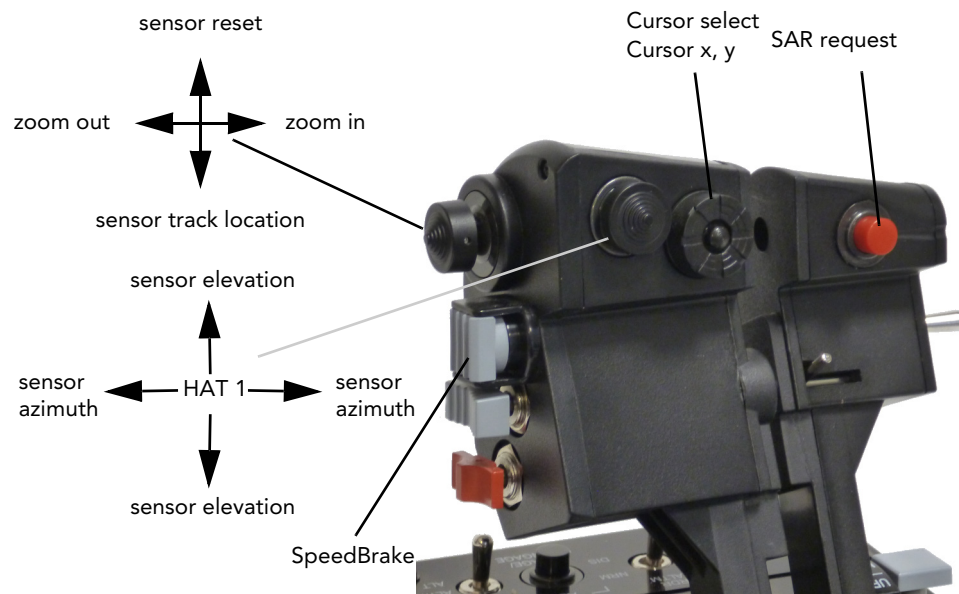


Figure 11-13. Thrustmaster HOTAS Warthog throttle mappings - rotary-wing

[Table 11-7](#) lists the flight controls for the Thrustmaster HOTAS Warthog controller for rotary-wing entities.

Table 11-7: Thrustmaster HOTAS Warthog mappings - rotary-wing

Function	Key/Button
Fire Missile	
fire	Button 1 Down
Gimbaled Sensor	
sensor-azimuth	Throttle HAT 1 Right (Up), HAT 1 Left (Down)
sensor-elevation	Throttle HAT 1 Up (Up), HAT 1 Down (Down)
sensor-reset	Throttle Button 3 Down
sensor-track-location	Throttle Button 5 Down
sensor-zoom	Throttle Button 4 (Down), Button 6 (Up)
Radar Scope	
cursor-select	Button 1
cursor-x	Axis 1
cursor-y	Axis 2
Release Bomb	
release	Button 2
RotorLib CGF Rotary Wing Controls	
collective	Axis 3, <UP>, <DOWN>
pedal	HAT 1 Up, HAT 1 Left
pitch	Axis 2, W
roll	Axis 1, D (Up), A (Down)
wheel brake	SpeedBrake (Button 7) Down, button 8 Down. If you pull back and release, it recenters. If you push forward, it locks in place. Both directions activate full brakes.
SAR	
request	Button 15

11.8.3. T.Flight Hotas X Mappings for Fixed-Wing Entities

Figure 11-14 shows the joystick controls for the T.Flight Hotas X flight controller for fixed-wing entities.

VR-Engage also supports the T.Flight Hotas 4 controller. The button layout is similar to the T.Flight Hotas X.



Figure 11-14. Fixed-wing T.Flight Hotas X joystick - fixed wing

Figure 11-15 shows the throttle controls for the T.Flight Hotas X flight controller for fixed-wing entities.

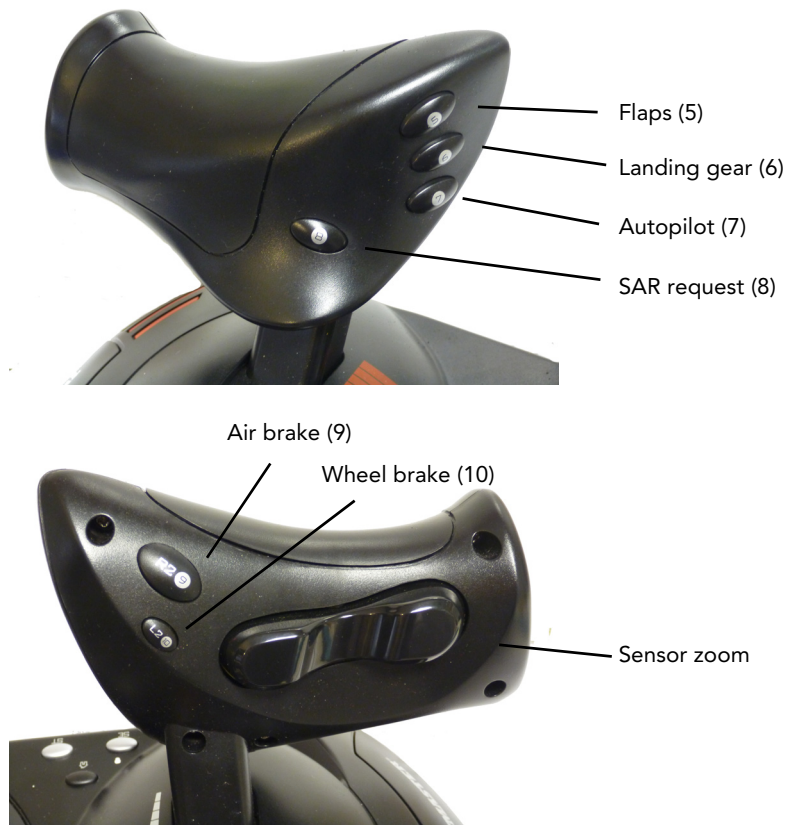


Figure 11-15. Fixed-wing T.Flight Hotas X throttle - fixed-wing

[Table 11-8](#) lists the flight controls for the T.Flight Hotas X controller for fixed-wing entities.

Table 11-8: T.Flight Hotas X mappings - fixed-wing

Function	Key/Button
Fire Missile	
fire	Button 2 Down
cursor select target	Button 3
FixedWingLib CGF Flight Controls	
pedal	Joystick twist left and right (Axis 4)
pitch	Joystick forward and back (Axis 2)
roll	Joystick left and right (Axis 1)
throttle	Throttle forward and back (Axis 3)
autopilot	Button 7
air brake	Button 9 Down

Table 11-8: T.Flight Hotas X mappings - fixed-wing

Function	Key/Button
landing gear	Button 6
flaps	Button 5
wheel brake	Button 10 Down
Menu	
Action menu	Button 4 Down
down	HAT 1 Down, <DOWN>
left	HAT 1 Left, <LEFT>
right	HAT 1 Right, <RIGHT>
up	HAT 1 Up, <UP>
Observer Control	
Attach mode	V
Radar Scope	
down	HAT 1 Down, <DOWN>
left	HAT 1 Left, <LEFT>
right	HAT 1 Right, <RIGHT>
up	HAT 1 Up, <UP>
Release Bomb	
release	Button 1 Down
SAR	
request	S, Button 8 Down

11.8.4. T.Flight Hotas X Mappings for Rotary-Wing Entities

Figure 11-16 shows the joystick controls for the T.Flight Hotas X flight controller for rotary-wing entities.

VR-Engage also supports the T.Flight Hotas 4 controller. The button layout is similar to the T.Flight Hotas X.



Figure 11-16. Fixed-wing T.Flight Hotas X joystick - rotary-wing

Figure 11-17 shows the throttle controls for the T.Flight Hotas X flight controller for rotary-wing entities.



Figure 11-17. Fixed-wing T.Flight Hotas X throttle - rotary-wing

[Table 11-9](#) lists the flight controls for the T.Flight Hotas X controller for rotary-wing entities.

Table 11-9: T.Flight Hotas X mappings - rotary-wing

Function	Key/Button
Fire Missile	
fire	Button 2 Down
cursor select target	Button 3
Menu	
Action menu	Button 4 Down
down	HAT 1 Down, <DOWN>
left	HAT 1 Left, <LEFT>
right	HAT 1 Right, <RIGHT>
up	HAT 1 Up, <UP>

Table 11-9: T.Flight Hotas X mappings - rotary-wing

Function	Key/Button
Radar Scope	
down	HAT 1 Down, <DOWN>
left	HAT 1 Left, <LEFT>
right	HAT 1 Right, <RIGHT>
up	HAT 1 Up, <UP>
Release Bomb	
release	Button 1
RotorLib CGF Rotary Wing Controls	
collective	Throttle forward and back (Axis 3)
pedal	Joystick twist left and right (Axis 4)
pitch	Joystick forward and back (Axis 2)
roll	Joystick left and right (Axis 1)
wheel brake	Button 10 Down
SAR	
request	S, Button 8

11.8.5. Gamepad Flight Control Mappings for Fixed-Wing Entities

Figure 11-18 illustrates the fixed-wing flight controls for Gamepads.



Figure 11-18. Fixed-wing flight controls

Table 11-10 lists the flight controls for Gamepads for fixed-wing entities.

Table 11-10: Gamepad flight control mappings - fixed-wing

Function	Key/Button
Fire Missile	
fire missile	Button 8
FixedWingLib CGF Flight Controls	
pedal	Axis 1 (Left thumbstick, left/right)
pitch	Axis 4 (Right thumbstick, forward/back)
roll	Axis 3 (Right thumbstick, left/right)
throttle	Axis 2 (Left thumbstick, forward/back)
air brake	Button 2
wheel brake	Button 1
flaps	Button 4

Table 11-10: Gamepad flight control mappings - fixed-wing

Function	Key/Button
Release Bomb	
release	Button 7

11.8.6. Gamepad Flight Control Mappings for Rotary-Wing Entities

Figure 11-19 shows the buttons for the F310 Gamepad for rotary-wing control.



Figure 11-19. Gamepad rotary-wing flight controls

Table 11-11 lists the flight controls for Gamepads. for rotary-wing entities

Table 11-11: Gamepad flight control mappings - rotary-wing

Function	Key/Button
Fire Missile	
fire missile	Button 8 Down Toggle
RotorLib CGF Rotary Wing Controls	
collective	Axis 2
pedal	Axis 1
pitch	Axis 4
roll	Axis 3
SAR	
request	S

11.8.7. Gamepad Flight Control Mappings for the Sensor Operator

Figure 11-19 shows the buttons for the F310 Gamepad for the sensor operator role.



Figure 11-20. Gamepad sensor operator controls

Table 11-12 lists the controls for Gamepads for the sensor operator

Table 11-12: Gamepad mappings - sensor operator

Function	Key/Button
Sensor orientation	Left thumbstick
Sensor mode	Button 1
Track location	Button 2
Track the entity closest to the center of the screen	Button 3
Reset sensor	Button 4
Zoom	Right thumbstick

11.9. Head-Mounted Display Controllers

The Oculus Rift and HTC Vive head-mounted displays support hand controllers. This section shows the mappings for these controllers. If you do not have hand controllers, you can use the keyboard and Gamepad controls. (HMD hand controllers are not mapped in joystick settings.)

Figure 11-21 illustrates the controls on the Oculus Rift touch controller.



Figure 11-21. Oculus Rift touch controller

[Figure 11-22](#) illustrates the controls on the Oculus Rift touch controller.

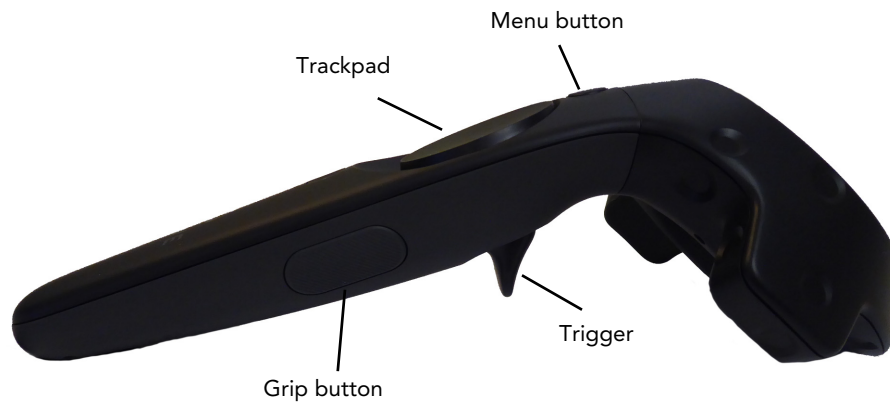


Figure 11-22. HTC Vive controller

The controls work as follows:

- ♦ Fire. Press the trigger on the dominant hand to fire the weapon.
- ♦ Aim. Press the grip button to raise the weapon to the aim-down-sights position.
- ♦ Move. Movement is controlled by the right hand joystick (Oculus Rift) or trackpad (HTC Vive), as follows:
 - Walk forward. Push/touch forward. Movement is based on the orientation of the entity, not the direction it is looking or aiming.
 - Walk backwards. Pull/touch backward.
 - Walk sideways. Push/touch left and right
 - Sprint. Push down while pressing forward.
- ♦ Turn. Press/touch the left hand joystick or trackpad to the left or right.
- ♦ Change posture. Press the trigger on the non-dominant hand for Posture Up. Press the grip button on the non-dominant hand for Posture Down.
- ♦ Action menu. To open, press Y on the non-dominant hand Oculus touch controller. Press the menu button on the non-dominant hand HTC Vive controller. While the menu is open, the joystick or trackpad acts as a D-pad.

11.10. Generic Gamepad Button Numbering

Game controllers are mapped in the Joystick Configuration page of the Application Settings dialog box. (For details, please see [“Configuring Joysticks and Keyboard Control,”](#) on page 11-32.) The mappings are identified by button and axis numbers. [Figure 11-23](#) identifies the button and axis numbering scheme.

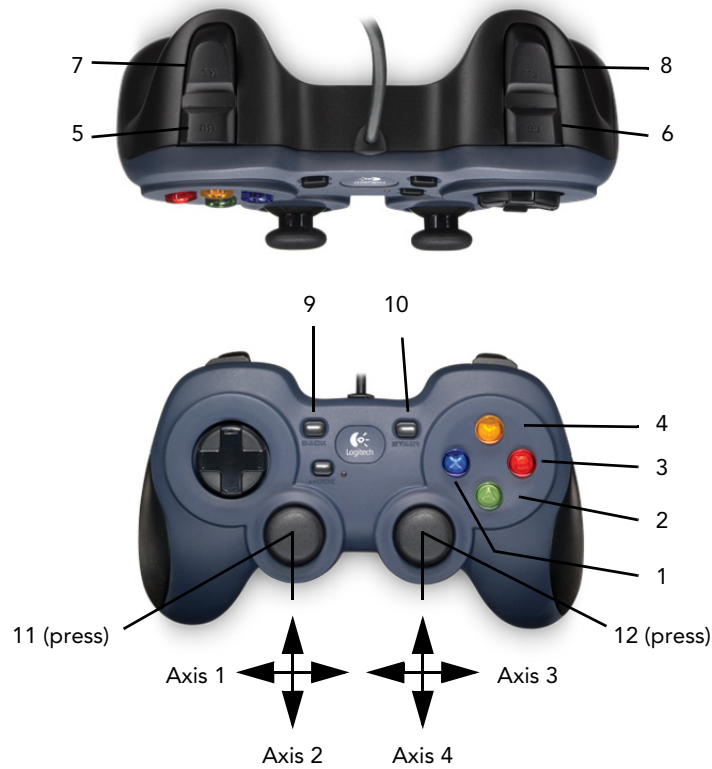


Figure 11-23. Button and axis numbering

11.11. Configuring Joysticks and Keyboard Control

You can control entity movement and weapon fire using a joystick, the keyboard, or both. You can attach multiple joysticks and can use a mix of joystick and keyboard control at the same time. You configure joystick and keyboard mappings on the Application Settings dialog box, Joystick Configuration page. You must add a new configuration for each controller that you want to use.

Windows Game Controllers

VR-Engage requires that devices be a USB Windows Game Controller (as opposed to a USB human interface device) You can verify that a USB device is a game controller with the Game Controllers dialog. If the device is a game controller, you will see an entry for the device in that dialog when the device is connected (Figure 11-24).

To open the Game Controllers dialog:In the Windows 10 search bar, enter Set Up USB Game Controllers and then select the entry.

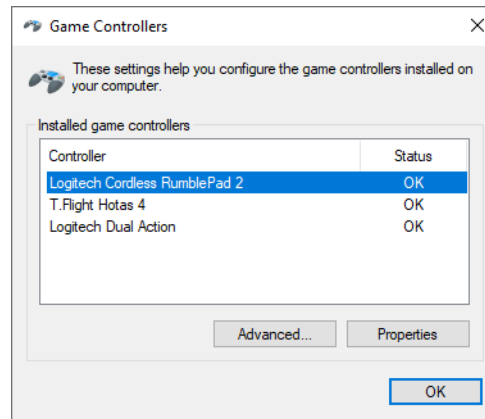


Figure 11-24. Game Controllers dialog box

11.11.1. Creating a Joystick Configuration

A joystick configuration contains the joystick mappings and, optionally, keyboard mappings that you can use to control an entity. VR-Engage includes default configurations for several game controllers.

To create a joystick configuration:

1. Create or open a scenario.
2. Choose **Settings** → **Application**. The Application Settings dialog box opens.
3. Select the Joystick Configuration page (Figure 11-25).

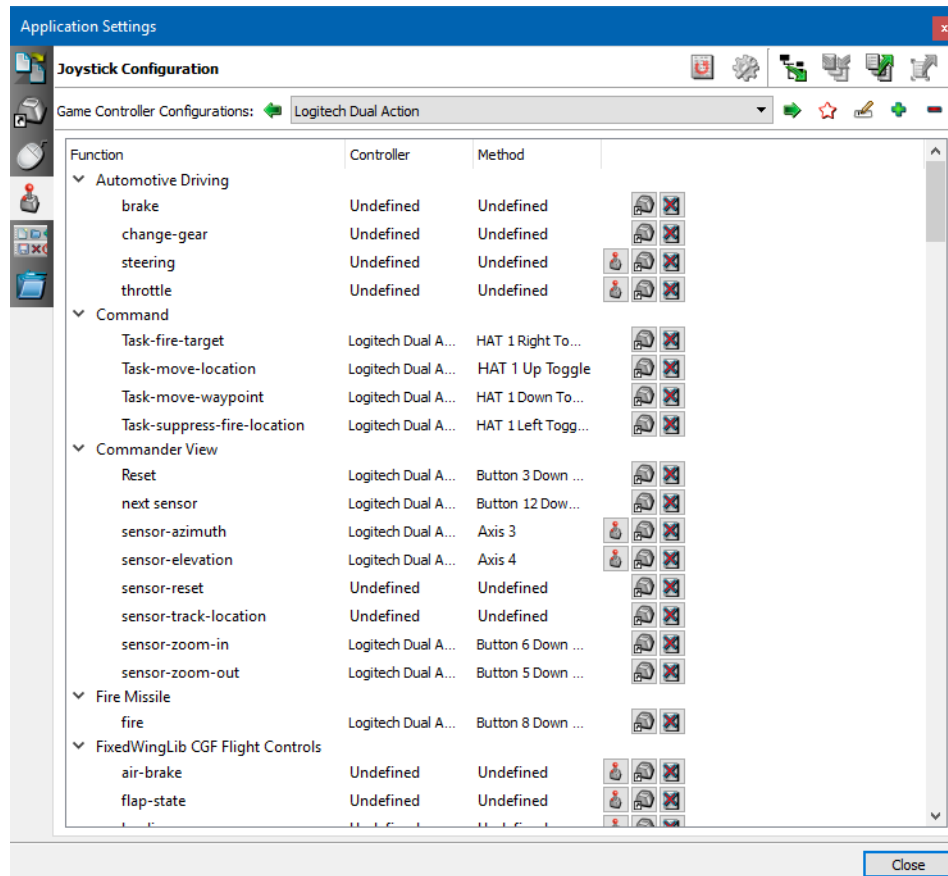


Figure 11-25. Joystick Configuration page

- Click the Add button (+). The New Configuration dialog box opens.
- Type a name for the configuration.



The name you give the configuration must match the name that the controller identifies itself as when it connects to the computer.

- Click OK. The window redisplay to show the functions that this device can control (Figure 11-26).

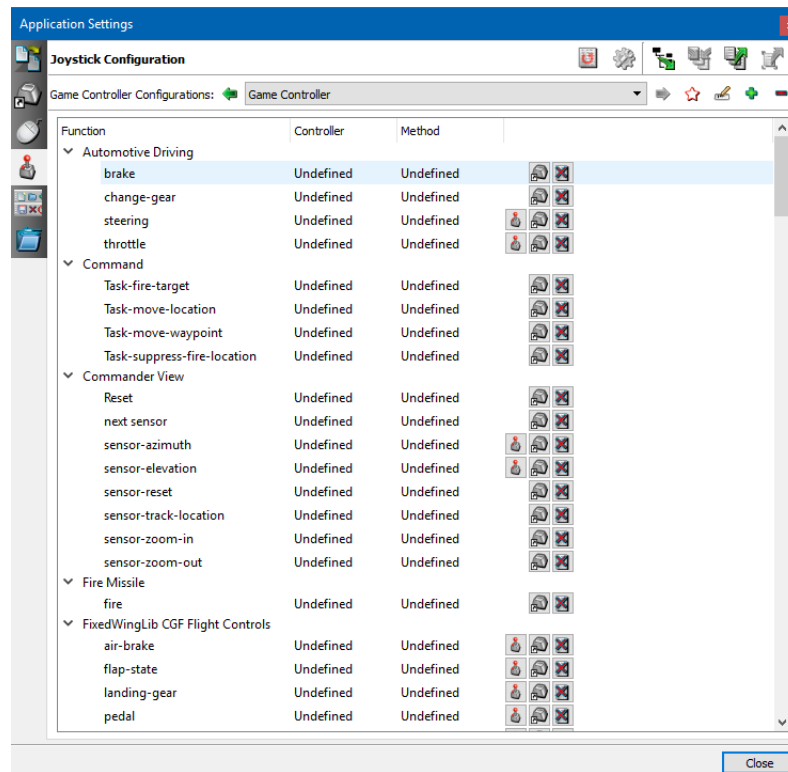


Figure 11-26. Joystick configuration

7. Edit the joystick and keyboard mappings as described in [“Mapping the Joystick Stick,”](#) on page 11-35 and [“Mapping Joystick Buttons and Keyboard Keys,”](#) on page 11-36.

11.11.2. Mapping the Joystick Stick

To control an entity with a joystick, you map the joystick controls to specific entity movement components and weapons.

To map joystick controls:

1. Create a joystick configuration, as described in [“Creating a Joystick Configuration,”](#) on page 11-32.
2. On the Joystick Configuration page ([Figure 11-26](#)), click the Joystick button (🎮) for the function you want to map. A joystick configuration dialog box opens ([Figure 11-27](#)).

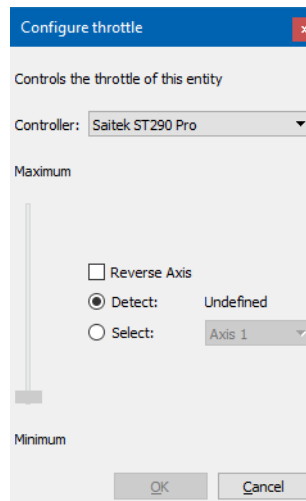


Figure 11-27. Joystick configuration dialog box

3. In the Controller list, select the controller you want to configure.
4. Configure each axis as follows:
 - a. To let VR-Engage select the axis, select the Detect option and move the joystick in the axis you want to use for this control.
 - b. To choose the axis, select the Select option and select an Axis from the list.
 - c. Move the joystick in the axis you are configuring. If the Maximum/Minimum slider moves in the direction that you expect, you are finished. If the slider moves opposite to what you expect, select the Reverse Axis check box. It should now move as expected.
5. Click OK.
6. Repeat this process for each function you want to control with the joystick.

11.11.3. Mapping Joystick Buttons and Keyboard Keys

You can map joystick buttons and keyboard keys to entity movement control and weapon control. When entity control is enabled, the entity control key mappings override any other key mappings, such as observer control mappings.

To map joystick buttons and keyboard keys to entity control:

1. Create a joystick configuration, as described in [“Creating a Joystick Configuration,”](#) on page 11-32.
2. On the Joystick Configuration page ([Figure 11-25](#)), click the Key Mapping button (🖱️) for the control you want to map. A configuration dialog box opens. It may call for a range of values ([Figure 11-28](#)), or just be a toggle ([Figure 11-29](#)).

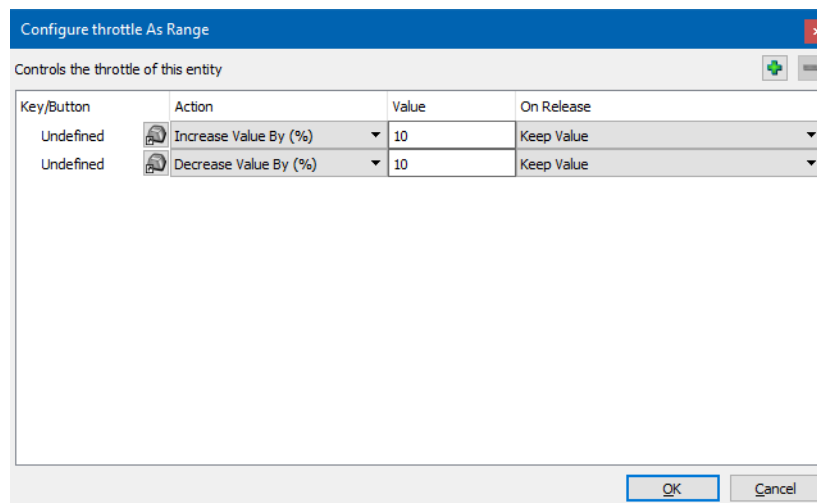


Figure 11-28. Key mapping configuration dialog box

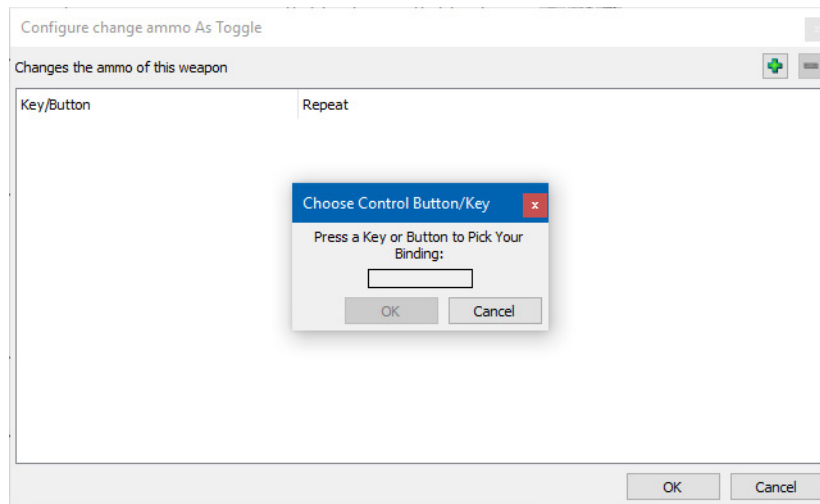


Figure 11-29. Key mapping configuration as toggle dialog box

3. If the mapping requires a range, for each row in the dialog box, do the following:
 - a. Click the Key Mapping button (🖱️). The Choose Control Button/Key dialog box opens (Figure 11-29).
 - b. Press the joystick button or keyboard key that you want to use to activate this control. It is displayed in the dialog box (Figure 11-30). (If a key binding is not available, the OK button does not become activated.)

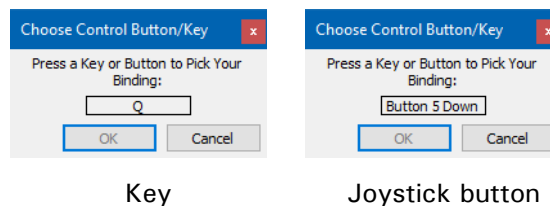


Figure 11-30. Choose Control Button/Key dialog box with selection

- c. Click OK.
- d. In the Action column, select an option from the list.
- e. In the Value column, enter an appropriate value for the Action option.
- f. In the On Release column, select an option from the list. (This is what happens when you release the key.) A complete dialog box looks similar to Figure 11-31.

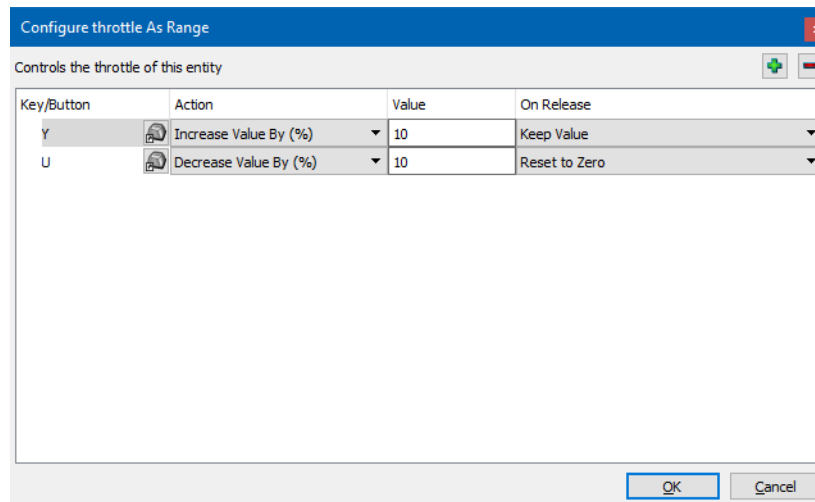


Figure 11-31. Key mapping configuration dialog box

4. If the keyboard mapping is a toggle, the Choose Control Button/Key dialog box opens automatically. Do the following:
 - a. Press the key or joystick button that you want to use.
 - b. Click OK.
 - c. In the Repeat column, select Yes or No. Yes means that the action repeats if you hold down the key. No means it happens one time for each key press.
5. Click OK.
6. Repeat this process for each function you want to configure.

11.11.4. Configuring “Switch Between” Options

Some entities may have multiple systems of a certain type, such as weapons. You might want to be able to control all similar systems with the same set of keys and joystick controls. VR-Engage lets you do this with switch groups. You can specify a key or button to press to switch between the different systems in a switch group. For example, you might press a button to switch between a tank’s main battle gun and a machine gun.

The controls for which you can specify a switch between option are listed in the Switch Between section of the Joystick Configuration page ([Figure 11-32](#)). Specifying the key or button to use is described in [“Mapping Joystick Buttons and Keyboard Keys,”](#) on page 11-36.

Switch Between			
weapon	Undefined	Undefined	
weapon:120mm Ballistic Gun			
change ammo	Undefined	Undefined	
elevation	Undefined	Undefined	
fire	Undefined	Undefined	
slew	Undefined	Undefined	
weapon:M2 Ballistic Gun			
change ammo	Undefined	Undefined	
elevation	Undefined	Undefined	
fire	Undefined	Undefined	
slew	Undefined	Undefined	
weapon:M240-7-62mm Ballistic Gun			
change ammo	Undefined	Undefined	
elevation	Undefined	Undefined	
fire	Undefined	Undefined	
slew	Undefined	Undefined	

Figure 11-32. Switch between option



12. Adding and Editing VR-Engage Entity Models

This chapter explains how to edit the VR-Engage simulation model set to add or edit models that you can control from VR-Engage. If you want to make additional customizations to entities using Lua scripts, please see Chapter 13, *Customizing Overlays*.

The VR-Engage Simulation Model Set.....	12-2
Extending VR-Engage.sms	12-3
Creating a New Simulation Model Set	12-3
Creating a New VR-Engage-Controllable Entity	12-4
Editing a VR-Engage-Controllable Entity.....	12-5
Deploying the SMS to VR-Engage	12-5

12.1. The VR-Engage Simulation Model Set

The entity models that VR-Engage simulates are defined in a set of files called a simulation model set (SMS). VR-Engage includes an SMS called *VR-Engage.sms*. The example scenarios included with VR-Engage all use this SMS. If you create an unhosted session, the list of entities available to you is drawn from *VR-Engage.sms*. If you install the VR-Forces Add-on package, *VR-Engage.sms* is installed into VR-Forces.

VR-Engage.sms includes all of the simulation objects in the default VR-Forces SMS, *EntityLevel.sms*. A subset of human, ground, and air entities are modified so that they can be controlled by a human player using VR-Engage. When you create a scenario in VR-Forces for use with VR-Engage, you can use any of the simulation objects in the SMS. The extended *VR-Engage.sms* entities function in the scenario as they normally would (that is, as they do in *EntityLevel.sms*) when they are controlled by VR-Forces. However they can also be controlled at any time by a VR-Engage user.

You can edit the entity models in *VR-Engage.sms* and add new ones. You add and edit models using the VR-Forces Simulation Object Editor, an application included with VR-Forces. If you do not have VR-Forces, please contact your VT MAK salesperson for information about obtaining VR-Forces.

i

This chapter assumes that you understand the concepts of SMSs and how to use the Simulation Object Editor. For details, please see relevant chapters in Section XI, “Creating and Editing Simulation Models,” in *VR-Forces Users Guide*.

12.2. Extending VR-Engage.sms

You may want to edit simulation models or add new ones for any of the following reasons:

- ♦ Create an entity similar to an existing one (for example, a new type of car or aircraft).
- ♦ Change the performance characteristics of an existing entity.
- ♦ Replace the 3D model associated with an entity.
- ♦ Replace or modify the first person model.

The first three modifications can typically be done using the Simulation Object Editor. Replacing or changing the first person model requires different tools and a different skill set. Contact VT MAK for more information about changing the first person model.

The overall approach to extending *VR-Engage.sms* is:

1. Create a new SMS that includes *VR-Engage.sms*.
2. Make the desired changes to the SMS.
3. Copy the new SMS to your VR-Engage installation.
4. Configure VR-Engage to use the new SMS by default when starting an unhosted session or creating a new scenario in a hosted session.

12.2.1. Creating a New Simulation Model Set

If you want to modify or extend the VR-Engage simulation model set, we recommend you create a new simulation model set that includes *VR-Engage.sms*. This makes the differences between your customizations and the installed SMS clear. It also makes it easier to revert to the installed SMS if your new SMS has problems.

For information about other ways to create an SMS, please see *VR-Forces Users Guide*.

To create a new simulation model set:

1. Open the Simulation Object Editor.
2. Choose **File** → **New Simulation Model Set**. The New Simulation Model Set dialog box opens.
3. Select New Simulation Model Set.
4. Click Next. The Simulation Model Set Type page displays.
5. Select Extend Existing Simulation Model Set.
6. Click Next. The Extend Existing Simulation Model Set page displays.
7. Select *VR-Engage.sms*.
8. Click Next. The New Model Set Name page displays.
9. In the File Name box, type a name for the new model set.

10. Click Finish. The Simulation Object Editor loads systems information from the included model sets and displays the new SMS. Since all of the simulation objects are included from other SMSs, none of them are currently editable. They are listed in the Objects List using gray text.
11. Choose **File** → **Save Simulation Model Set**.

12.2.2. Creating a New VR-Engage-Controllable Entity

The recommended way to create a new entity that can be controlled by a VR-Engage player is to base it on an existing entity of the type you want to create. To control an entity in VR-Engage, it must be one of the entities that was included from *VR-Engage.sms*. Entities that are included from *EntityLevel.sms* cannot be controlled from VR-Engage.

To create a new entity that can be controlled by a VR-Engage player:

1. In the Simulation Object Editor, load your new SMS.
2. In the Tags list, select VR-Engage. The Objects List is filtered to show only models that are included from *VR-Engage.sms*.
3. Select an entity similar to the one you want to create. (A yellow bar is added to the window. It displays the SMS where the selected entity is originally included.)
4. Choose **Model** → **New Model from Existing**. The Create New Model dialog box opens.
5. Type a name for the new model.
6. Optionally, edit the Entity Type.
7. Click OK.
8. Edit the new entity.
9. Save the SMS.

12.2.3. Editing a VR-Engage-Controllable Entity

You can only edit models that are part of the loaded SMS. You cannot edit models that are included from another SMS. Therefore, if you want to edit one of the models included from *VR-Engage.sms*, you must promote it to your SMS. (You can always edit any of the models you created using the procedure in “Creating a New VR-Engage-Controllable Entity,” on page 12-4.)

1. In the Simulation Object Editor, load your SMS.
2. In the Tags list, select VR-Engage. The Objects List is filtered to show only models that are included from *VR-Engage.sms*.
3. Select the entity you want to edit. If the entity is not part of the main SMS, a yellow bar is added to the window. It displays the SMS where the selected entity is currently included.
4. If the entity is not part of the main SMS, choose **Model** → **Promote to Main Simulation Model Set** or click the Promote button in the yellow bar. The model is promoted. It is now shown in dark text at the top of the Objects List.
5. Edit the model as desired.
6. Save the SMS.

12.2.4. Deploying the SMS to VR-Engage

After you create the new SMS, you must copy it to VR-Engage. This allows you to run scenarios that were created in VR-Forces using the new SMS. You can also specify that the new SMS be used by default when you create an unhosted session or create a new scenario in a hosted session in VR-Engage.

1. Copy the SMS file and associated data folder to your VR-Engage installation, preserving the path. The path to your SMS will look something like this:

```
./data/simulationModelSets/<your SMS name>.sms  
./data/simulationModelSets/<your SMS name>
```

2. Configure VR-Engage to use the new SMS by default:

- a. In a text editor, open `./appData/scripts/playerStation.lua`.
- b. Set the variable `defaultSimulationModelSets` to point to your new SMS, for example:

```
-- Default simulation model set to use when launching the simulation  
engine.  
defaultSimulationModelSets = {  
    "../data/simulationModelSets/<your SMS name>.sms"  
};
```




13. Customizing Overlays

This chapter provides examples of how you can customize the overlay for an entity.

Overview of Custom Overlays	13-2
Types of Overlays	13-2
Examples of Each Type of Overlay	13-2
Adding a Simple Scripted Overlay	13-3
Adding a Custom Sensor Overlay	13-5
Adding a GL Studio Overlay	13-6
Creating a GL Studio RSO	13-6
Creating VR-Vantage GL Studio Updaters	13-6
Configuring the VR-Vantage GL Studio Model Definition	13-7
Modifying Role Configuration Scripts	13-7

13.1. Overview of Custom Overlays

There are several ways to customize the overlays for an entity's role. Depending on the complexity of the overlay, you may need to modify a configuration script, write code, or use GL Studio.

This chapter provides typical examples of customizing overlays. It does not cover overlays that involve extensive development. If you need a complex overlay that requires C++ development, such as those used in 3D cockpits or those used with VR, AR, or MR displays, please contact support@mak.com for assistance.

13.1.1. Types of Overlays

The types of overlays covered in this chapter are:

- ♦ Simple scripted overlays, which are defined in the role configuration scripts. These overlays can display dynamic text objects, lines, and graphical images placed on the screen. This requires some familiarity with the Lua scripting language; please refer to <https://www.lua.org/docs.html>.
- ♦ Sensor overlays, which use the built-in capabilities of VR-Vantage and are further customized by allowing you to declare which elements you want to make visible. This also requires you to edit the Lua configuration files.
- ♦ GL Studio overlays, which are dynamic overlays that require some C++ development. These provide the most flexibility. This requires using the GL Studio editor from DiSTI to create an RSO. To use your own RSO, you must have a GL Studio runtime license from DiSTI. Please contact support@mak.com for assistance with licenses.

13.1.2. Examples of Each Type of Overlay

Scripted overlays allow you to display:

- ♦ Text on the screen to reflect the state attribute of the entity.
- ♦ Lines, such as simple crosshairs.
- ♦ Simple, static graphics.

Sensor overlays allow you to have a dynamic UAV-style overlay that display:

- ♦ Target information.
- ♦ Location data.
- ♦ Reticle or crosshairs.
- ♦ Heading, pitch, or roll information.
- ♦ Compass elements.

GL Studio overlays can be dynamic and include:

- ♦ Rich graphics.
- ♦ User interaction.

13.2. Adding a Simple Scripted Overlay

Using Lua script, you can add a simple, scripted overlay by adding a **DtOverlayComponent** to the role definition. There is an example of a role using the **DtOverlayComponent** in the *carDriver.lua* definition file, found in *./appData/scripts/playerDefinitions*:

```
{ componentType = "DtOverlayComponent";
  priority = 10;
  elements = {
    {type = "text"; text = "Speed: $(speed)"; position =
      {x = 0.01, y = 0.08}};
    {type = "text"; text = "RPM: $(rpm)"; position =
      {x = 0.01, y = 0.06}};
    {type = "text"; text = "Gear: $(set-gear)"; position =
      {x = 0.01, y = 0.04}};
    {type = "text"; text = "Fuel: $(resource:movement|fuel)";
      position = {x = 0.9, y = 0.08}};
  };
};
```



Figure 13-1. Car driver overlay

The **DtOverlayComponent** has an element list. Each element can be one of three types of elements: text, line, and quad.

Colors can be defined as a string in quotes or as an RGBA color value. If you want to use a color name, the syntax is **color = "white"** and you can specify white, black, blue, green, red, orange, or yellow. If you want to use RGBA values, the syntax is **color = {r=RR, g=GG, b=BB [, a=AA]}**. **A** is optional and allows you to specify the alpha channel (opacity) in addition to the red, green, and blue channels.

Text

The **text** element includes a text field, position in normalized screen coordinates, color, font, and font size. The **color**, **font**, and **fontSize** are optional, and default to white text that is sixteen pixels high in the default VR-Engage font.

```
{type = "text"; text = "Speed: $(speed)"; position =  
  {x = 0.01, y = 0.08}};
```

The **text** element can reference any VR-Engage state attribute using the **\$(attribute_name)** syntax. The available attributes are covered in comments in the corresponding *.lua* file.



Normalized screen coordinates convert the value between 0 and 1.0 to a pixel value to place the element on the screen.

Line

The **line** element has a start point and an end point, a color, and a line width. The color and line width are optional; the default color is white and the line width is 1 pixel wide.

```
{type = "line"; startPoint = {x = 0; y = 0.01};  
  endPoint = {x = 1; y = 0.01}};
```

Quad

The **quad** element places a textured image on the screen. The position and size are in normalized screen coordinates.

```
{type = "quad"; texture= "$(DATA_DIR)/overlays/m9_icon.png";  
  position = {x = 0.1; y = 0.2}; size= {x = 0.1; y= 0.1}};
```

13.3. Adding a Custom Sensor Overlay

If you need an overlay that is similar to the VR-Vantage sensor overlay ([Figure 13-2](#)), you can configure it by adding a **DtVrvSensorOverlayUpdater** component to a sensor operator's role definition Lua script and indicating which sections of the built-in overlay should be seen in your version.



Figure 13-2. Sensor overlay

For details on customizing the overlay for sensor operator roles, see [“Configuring the Sensor Operator Overlay,”](#) on page 9-7.

i

Sensor overlays pull data from the current observer. If you need sensor overlay sections in addition to those in the built-in overlay, you must use the VR-Vantage API to build a plug-in and add the section.

13.4. Adding a GL Studio Overlay

VR-Engage supports overlays created with DiSTI's GL Studio. VR-Engage uses VR-Vantage's GL Studio integration to configure and update any loaded RSOs. You must have a GL Studio license to develop a GL Studio RSO.

To add a new GL Studio overlay, you need to complete a series of procedures:

1. Create the new RSO using DiSTI's GL Studio editor.
2. Create VR-Vantage GL Studio updaters as needed.
3. Create a new VR-Vantage GL Studio model definition.
4. Modify the role configuration scripts to use the new model definition.

Please refer to DiSTI's documentation on GL Studio for details on creating an RSO.



Figure 13-3. GL Studio overlay

13.4.1. Creating a GL Studio RSO

To create a new GL Studio RSO, use DiSTI's GL Studio application. You can create the overlay and its properties. The properties provide a way to update values seen on the overlay or drive the dynamic components in the overlay.

The output from GL Studio is source code that is compiled into a DLL file. Save the DLL file in `./data/huds64`.

13.4.2. Creating VR-Vantage GL Studio Updaters

To update the RSO with data, you must configure the RSO's model definition with the list of VR-Vantage GL Studio updaters to provide data to the RSO.

For a list of available updaters, please see Section 35.2.2, “[Creating a Model Definition for a Cockpit](#),” in *VR-Vantage Users Guide*.

13.4.3. Configuring the VR-Vantage GL Studio Model Definition

VR-Engage includes the Model Definition Editor in the Visual Model Editors dialog, which allows you to configure model definitions for GL Studio RSOs.

For more information, please see Chapter 32, *Model Definitions*, in *VR-Vantage Users Guide*.

13.4.4. Modifying Role Configuration Scripts

VR-Engage entity roles are defined with Lua scripts in `./appData/scripts/playerDefinitions`. To use your new GL Studio model definition when a role is activated, you need to add a **DtG1StudioHudMapperLogic** component to the role definition. In this example, we are using our **vreHUDPlusMFDs** model:

```
{ componentType = "DtG1StudioHudMapperLogic";  
  priority = 10;  
  modelDefinitions = {"vreHUDPlusMFDs"};  
}
```

This component overrides the entity type mapping of VR-Vantage with the declared mapping.



14. Activating Scripts in VR-Forces

Characters in VR-Engage can activate scripts in the VR-Forces simulation engine.

Activating Lua Scripts in VR-Forces	14-2
Adding a Script to the Action Menu	14-2
Activating a Script	14-3

14.1. Activating Lua Scripts in VR-Forces

VR-Forces lets users add tasks and set data requests by writing Lua scripts. Lua is a scripting language that does not require compilers and software development tools like those required by the VR-Forces C++ toolkit. Also, you do not need a VR-Forces developers license to add Lua scripts.

VR-Engage characters can trigger scripts or activate them in the VR-Forces simulation engine. Once a script is triggered, there is no further involvement of the character you are playing. The script must have previously been written in VR-Forces. Then it must be added to the Action menu to be accessible to characters.

For information about how to write a script, please see *VR-Forces Users Guide*. This chapter explains how to add a script to the Action menu and how to execute it.

14.2. Adding a Script to the Action Menu

The Action menu for human characters is configured in the file `.\appData\scripts\playerDefinitions\human.lua`.

The Action menu and the Scripts submenu are configured in the following lines of the file (comments have been removed):

```
updaters={
  DtActionMenuUpdater = {
    menus={
      ["Action"] = {
        parent="";
        size={x = 400, y = 300};
        position={ x= 100, y = 300};
        elements={
          {label = "Flashlight:", action = "toggleFlashlight",
            decorator="$STATE", stateAttribute="flashlight",
            stateList={"OFF", "ON"} };
          {label = "Night Vision:", action = "toggleNvg",
            decorator="$STATE", stateAttribute="NVG", stateList={"OFF",
              "ON"} };
          {label = "Radio", action = "cycleRadio", decorator="$STATE",
            stateAttribute="currentRadio"};
          {label = "Task entity", action = "selectMenu",
            param = "Select Entity"};
          {label = "Execute Script", action = "selectMenu",
            param = "Scripts"};
          ...
        };
      };
    };
    ...
  }
  ["Scripts"] = {
    parent="Action";
    elements={
      {label = "Script 1", action="scriptedTask",
        param="Fire_For_Effect_on_Location",
        cursor="selectLocationCursor"};
    };
  };
};
```

...



The `label = "Execute Script"` line might be commented out. You need to uncomment it for the Execute Script menu command to be enabled.

The Scripts menu option is added as an element of the Action menu. It has an element for each script to be listed on the submenu. In this case, there is one script with the following parameters:

- ♦ `label`. The text shown on the menu.
- ♦ `action`. Must be `scriptedTask`.
- ♦ `param`. The name of the Lua script.
- ♦ `cursor`. A location selected by the player. This is the only input to the script.

The only input that a VR-Engage character can provide to a script is a cursor position.

14.3. Activating a Script

You can tell VR-Forces to activate a script.

To activate a script:

1. Open the Action menu.
2. Select Execute Script.
3. Press the **Right Arrow** key, or the right button on the D-pad to show the submenu. The Scripts menu opens.
4. Select the script that you want to activate.
5. Press the **Right Arrow** key or right button on the D-pad.



Index

- command-line option 3-24
- alphaBits command-line option 3-24
- antiAliasing command-line option 3-24
- appDataDir command-line option 3-24
- autoConnect command-line option 3-24
- autoReconnectPeriod command-line option 3-24
- dataDir command-line option 3-24
- depthBuffer command-line option 3-24
- disableDynamicTerrain command-line option 3-24
- disableKDTrees command-line option 3-25
- disableOcclusionCulling command-line option 3-24
- discoveredModelPreloadFileName command-line option 3-24
- displayEnginePort command-line option 3-24
- dispSetting command-line option 3-24
- enableMultipleBackends command-line option 3-22, 3-25
- enableVSync command-line option 3-25
- entDispSetting command-line option 3-25
- entityDefsDir command-line option 3-25
- entTypeMap command-line option 3-25
- envSetting command-line option 3-25
- extraArgs command-line option 3-25
- factoryRootDir command-line option 3-25
- forceTextShaping command-line option 3-25
- frameRate command-line option 3-25
- fullScreen command-line option 3-25
- help command-line option 3-25
- highestPriority command-line option 3-25
- ignore_rest command-line option 3-24
- ignoreZoomForSpeedtreeLod command-line option 3-28
- initSettingsFile command-line option 3-25
- loadObservers command-line option 3-25
- locale command-line option 3-25
- logFileName command-line option 3-25
- mainScreenNum command-line option 3-26
- mergeEntityTypeMap command-line option 3-26
- mergeHierarchyEntityDef command-line option 3-26
- mergeHierarchyTacticalGraphicsDef command-line option 3-26
- mergeHierarchyUnitDef command-line option 3-26
- mergeLeafEntityDef command-line option 3-26
- mergeLeafTacticalGraphicsDef command-line option 3-26
- mergeLeafUnitDef command-line option 3-26
- mergeModelDefs command-line option 3-26
- mergeTacticalGraphicsTypeMap command-line option 3-26
- mergeUnitTypeMap command-line option 3-26
- modelPreloadFileName command-line option 3-26

- noAppDataEntityDefs command-line option 3-27
- noAppDataEntityTypeMap command-line option 3-27
- noAppDataModelDefs command-line option 3-27
- noAppDataTacticalGraphicsDefs command-line option 3-27
- noAppDataTacticalGraphicsTypeMap command-line option 3-27
- noAppDataUnitDefs command-line option 3-27
- notifyLevel command-line option 3-26
- plugin command-line option 3-27
- pseudoFullScreen command-line option 3-27
- showConsole command-line option 3-24
- slave command-line option 3-27
- stationName command-line option 3-27
- stencilBits command-line option 3-27
- synchronizeOcean command-line option 3-27
- tcpSendTimeout command-line option 3-27
- unbatchedRendering command-line option 3-25
- unplug command-line option 3-27
- userDataDir command-line option 3-27
- useReverseZBuffer command-line option 3-28
- version command-line option 3-27
- withDisplayEngine command-line option 3-28
- e command-line option 3-25
- K command-line option 3-25
- Z command-line option 3-28
- z command-line option 3-28

Numerics

3D cockpit 7-6

A

- Action menu 4-2
 - Gamepad mapping 11-6
 - mouse and keyboard mappings 11-4
 - opening 4-2
 - selecting options 4-2

- activating, script 14-3
- adding, entities 3-6
- aiming
 - rifle and handgun 5-5
 - turret 6-5
 - weapon 5-5
- aircraft
 - configured 7-2
 - controlling 7-7
 - countermeasures 7-14
 - HMD 7-7
 - keyboard mapping 11-4
- air-to-air combat 7-11
- alpha bits 3-24
- altitude, setting for autopilot 7-8
- anti-aliasing 3-24
- application
 - data, specifying location of 3-24
- area of interest, specifying 7-18
- assigning task 5-14
- attach parameter 3-16
- audio 4-9
- Audio Settings dialog box 4-9, 4-10
- autopilot
 - mode 7-8
 - setting 7-8

B

- back-end, multiple 3-25
- battery, drone 8-4
- binoculars 5-17
- bit, depth 3-24
- bombing, target 7-9
- brake
 - parking, releasing and engaging 6-4
- braking, ground vehicle 6-3
- button
 - Joystick 11-35
 - Key Mapping 11-36

C

- C command-line option 3-24
- camera
 - drone view 8-3
 - remote 9-2
 - Vive, testing 3-20
- capturing images 10-4
- car, Gamepad mapping 11-11

-
- chaff 7-14
 - changing
 - human and drone Gamepad control 8-5
 - role 3-11
 - sensor mode 9-4
 - Choose Role Panel 3-11
 - choosing
 - role 3-5
 - weapon 5-3, 5-4
 - cockpit, 3D 7-6
 - combat, air-to-air 7-11
 - command line
 - loading terrain 3-27
 - options 3-24
 - commander, LAV 6-5
 - command-line option
 - 3-24
 - alphaBits 3-24
 - antiAliasing 3-24
 - appDataDir 3-24
 - autoConnect 3-24
 - autoReconnectPeriod 3-24
 - C 3-24
 - dataDir 3-24
 - depthBuffer 3-24
 - disableDynamicTerrain 3-24
 - disableKDTrees 3-25
 - disableOcclusionCulling 3-24
 - discoveredModelPreloadFileName 3-24
 - displayEnginePort 3-24
 - dispSetting 3-24
 - E 3-25
 - e 3-25
 - enableMultipleBackends 3-22, 3-25
 - enableVSync 3-25
 - entDispSetting 3-25
 - entityDefsDir 3-25
 - entTypeMap 3-25
 - envSetting 3-25
 - extraArgs 3-25
 - F 3-25
 - factoryRootDir 3-25
 - forceTextShaping 3-25
 - frameRate 3-25
 - fullScreen 3-25
 - G 3-25
 - h 3-25
 - help 3-25
 - highestPriority 3-25
 - command-line option (continued)
 - I 3-25
 - ignore_rest 3-24
 - ignoreZoomForSpeedtreeLod 3-28
 - initSettingsFile 3-25
 - K 3-25
 - L 3-25
 - l 3-25
 - loadObservers 3-25
 - locale 3-25
 - logFileName 3-25
 - mainScreenNum 3-26
 - mergeEntityTypeMap 3-26
 - mergeHierarchyEntityDef 3-26
 - mergeHierarchyTacticalGraphicsDef 3-26
 - mergeHierarchyUnitDef 3-26
 - mergeLeafEntityDef 3-26
 - mergeLeafTacticalGraphicsDef 3-26
 - mergeLeafUnitDef 3-26
 - mergeModelDefs 3-26
 - mergeTacticalGraphicsTypeMap 3-26
 - mergeUnitTypeMap 3-26
 - modelPreloadFileName 3-26
 - n 3-26
 - noAppDataEntityDefs 3-27
 - noAppDataEntityTypeMap 3-27
 - noAppDataModelDefs 3-27
 - noAppDataTacticalGraphicsDefs 3-27
 - noAppDataTacticalGraphics-TypeMap 3-27
 - noAppDataUnitDefs 3-27
 - notifyLevel 3-26
 - O 3-27
 - plugin 3-27
 - pseudoFullScreen 3-27
 - s 3-27
 - showConsole 3-24
 - slave 3-27
 - stationName 3-27
 - stencilBits 3-27
 - synchronizeOcean 3-27
 - tcpSendTimeout 3-27
 - unbatchedRendering 3-25
 - unplug 3-27
 - userDataDir 3-27
 - useReverseZBuffer 3-28
 - v 3-27
 - version 3-27
 - W 3-28

- command-line option (continued)
 - withDisplayEngine 3-28
 - Z 3-28
 - z 3-28
- configuration
 - entity display 3-25
 - environment 3-25
 - file, RTI 2-7
- configuration file, pilot.lua 7-6
- configuring
 - display 3-24
 - image properties 7-20
 - joystick 11-32
 - keyboard entity control 11-32
 - SAR request 7-16
 - system for MAK RTI 2-7
 - virtual reality 3-19
- connecting, to network automatically 3-24
- controller
 - flight 11-13
 - head-mounted display 11-28
 - T.Flight Hotas 4 11-19, 11-22
- controlling
 - aircraft 7-7
 - drone 8-4
 - VR-Forces entity 3-11
- conventions, manual xvi
- coordinateConverterOrigin parameter 6-7
- countermeasures, aircraft 7-14
- creating
 - entity 3-6
 - joystick configuration 11-32
 - simulation model set 12-3
- culling, occlusion 3-24
- custom overlays 13-2

D

- data
 - directory, specifying location of 3-24
- deploying
 - drone 8-4
 - weapon 5-8
- depth, bits 3-24
- detonation
 - event
 - mapping sound effects to 4-11
 - sound effects 4-9
- dialog box
 - Audio Settings 4-9, 4-10

- dialog box (continued)
 - License Setup 2-5
 - SAR Request Settings 7-16, 7-18, 7-19
 - Simulation Connections 3-14
- differential, locking and unlocking 6-4
- disabling
 - instrument panel 7-14
 - mouse control 5-3
- Disembark Entity task 5-14
- disembarking, vehicle 5-12
- display
 - aircraft 7-6
 - loading configuration 3-24
- door, opening and closing 5-20
- D-pad, controlling Action menu 4-2
- driver, role 6-5
- drone 8-5
 - battery 8-4
 - camera view 8-3
 - capturing images 10-4
 - changing Gamepad control 8-5
 - control mappings 11-12
 - deploying 8-4
 - landing 8-5
 - operators 8-2
 - recovering 8-5
 - restarting use 8-4
 - resuming use 8-4
 - returning home 8-5
 - starting 8-4
 - stopping use 8-4
 - streaming video 10-2
 - taking pictures 10-4
 - using 8-4
- drone operator, role 8-2
- dynamic terrain 3-24

E

- E command-line option 3-25
- editing, radio configuration 4-7
- embarking
 - on vehicle 3-12
 - vehicle 5-12
- emergency light 6-6
- enableJammers parameter 4-7
- enableMultipleBackends parameter 3-22
- enabling
 - laser designator 5-19
 - mouse control 5-3

- enabling (continued)
 - sound effects 4-9, 4-10
- engaging LAV gear 6-3
- entity
 - creating new 3-6
 - display settings 3-25
 - existing, choosing 3-6
 - mapping sound effects to 4-11
 - remote, placing sensor on 9-5
 - sound effects 4-9
 - task, assigning 5-14
 - VR-Forces, controlling 3-11
- entity parameter 3-16
- environment, loading configuration 3-25
- environment variable
 - MAKLMGRD_LICENSE_FILE 2-6
 - RTI_CONFIG 2-7
- escaping, role 3-13
- event, scenario 4-8
- exampleStartupConfig.lua 3-16
- executing, script 14-3

F

- F command-line option 3-25
- FDD file 2-7
- FED file 2-7
- file
 - FED 2-7
 - RID 2-7
- fire
 - event
 - mapping sound effects to 4-11
 - sound effects 4-9
- firing
 - missile 7-11
 - weapon 5-6, 6-5
- firing weapon, using HMD 5-6
- first person view mode 4-7
- fixed-wing, keyboard mapping 11-4
- flaps, raising and lowering 7-14
- flare 7-14
- flashlight, using 5-17
- FLEXIm 2-3, 2-4
- flight controller 11-13
- Follow Me task 5-15
- FOM 2-7
- frame rate, setting 3-25
- full screen 3-27
 - mode 3-25

- full-screen mode 3-16

G

- G command-line option 3-25
- G27 racing wheel, LAV controls 11-9
- G29 racing wheel, mappings 11-9
- Gamepad
 - fixed-wing flight control 11-25
 - generic mappings 11-31
 - mapping
 - Action menu 11-6
 - cars and trucks 11-11
 - drone 11-12
 - human 11-5
 - vehicle 11-7
 - rotary-wing flight control 11-27
- gear
 - LAV, engaging 6-3
- geocentric terrain, configuring Vortex
 - origin 6-7
- GL Studio, custom overlays 13-6
- graphic, depth 3-24
- green screen 3-20
- grenade, throwing 5-7
- ground vehicle
 - braking 6-3
 - throttle 6-3
- guiTerrain parameter 3-16
- gunner, role 6-5

H

- h command-line option 3-25
- hand controller
 - firing 5-6
 - handedness 5-6
 - mappings 11-28
- handgun
 - aiming 5-5
 - choosing, grenade 5-4
- heading, setting for autopilot 7-8
- headlights, turning on and off 6-4
- head-mounted display
 - controller 11-28
 - HMD, virtual reality 3-17
- head-up display 7-3
 - display options 7-6
- hiding, weapon 5-8

HMD 3-20

- aircraft 7-7
- enabling and disabling 3-18
- firing weapon 5-6
- optimizing performance 3-22

hosting, VR-Forces session 3-2

hostname, license server 2-5

HOTAS Warthog 11-13

HTC Vive 3-17, 5-6, 11-28

HUD 7-3, 7-6

See also overlay

human

- Gamepad mapping 11-5
- mouse and keyboard mappings 11-2
- resetting 4-8

I

-I command-line option 3-25

image

- properties, configuring 7-20

infrared sensor 5-18

initialization, settings 3-25

installing

RTI 2-7

VR-Forces plug-in 2-2

instancing 3-25

instrument panel 7-3

disabling 7-14

display options 7-6

intercom 4-3

using 6-5

intersection, KD trees 3-25

IR 5-18

IR mode, sensor 9-4

J

jamming, radio 4-7

joining, VR-Forces session 3-11

joystick

- configuration, creating 11-32
- configuring 11-32
- control, mapping 11-35
- switch between option 11-39

Joystick button 11-35

Joystick Configuration page 11-32, 11-35, 11-36

K

KD tree 3-25

Key Mapping button 11-36

keyboard

- control, mapping 11-36
 - controlling Action menu 4-2
 - entity control, configuring 11-32
 - mapping, Action menu 11-4
 - mappings 11-2
- keyboard mapping, aircraft 11-4

L

-L command-line option 3-25

-l command-line option 3-25

landing, drone 8-5

landing gear, raising and lowering 7-13

language, specifying 3-25

laser code

- targeting bomb with 7-10
- tracking with sensor 9-3

laser designator 5-19

enabling 5-19

lasing, targets 5-17, 5-19

LAV

- G27 racing wheel controls 11-9
- gear, engaging 6-3
- roles on 3-12

LAV commander 6-5

License Manager 2-3, 2-4

license server, hostname 2-5

License Setup dialog box 2-5

light, emergency 6-6

load balancing 3-22

loading

- display engine configuration 3-24
- entity display settings 3-25
- environment configuration 3-25
- object type mapping 3-25
- plug-ins 3-27
- preventing 3-27
- terrain, from command line 3-27

locale, specifying 3-25

localization, specifying 3-25

locking, differential 6-4

log file, specifying 3-25

M

MAK RTI, configuring 2-7
 MAKLMGRD_LICENSE_FILE,
 environment variable 2-6
 makRadio 4-5
 makRadio.lua 4-7
 manual, conventions xvi
 mapping
 G29 racing wheel 11-9
 Gamepad
 Action menu 11-6
 human 11-5
 vehicle 11-7
 joystick controls 11-35
 joystick keyboard controls 11-36
 keyboard 11-2
 mouse 11-2
 sound effects 4-11
 MaxBackends parameter 3-22
 menu, Action 4-2
 message, notification level 3-26
 MFD 7-5
 MGRS code, sensor 9-3
 minion parameter 3-16
 missile, firing 7-11
 mixed reality 3-20
 Mixed Reality Headset 3-17
 mode
 autopilot 7-8
 setting 7-8
 full screen 3-16
 sensor, changing 9-4
 view, view mode 4-7
 windowed 3-16
 mode parameter 3-16
 model, instancing 3-25
 monitor, display options for aircraft 7-6
 mouse
 controlling Action menu 4-2
 mappings 11-2
 Action menu 11-4
 mouse control, enabling and disabling 5-3
 Move to Location task 5-15
 Move to My Location task 5-16
 moving
 terrain on 5-3
 turret 6-5
 multi-function display 7-3, 7-5

multiple
 back-ends 3-25
 simulation engines 3-22

N

-n command-line option 3-26
 network
 connecting to, automatically 3-24
 night vision goggles 5-18
 notification level, specifying 3-26
 number key, controlling Action menu 4-2
 NVG 5-18
 NVG mode, sensor 9-4

O

-O command-line option 3-27
 object type
 mapping, loading 3-25
 occlusion culling 3-24
 ocean, synchronized 3-27
 Oculus Rift 3-17, 5-6, 11-28
 opening
 Action menu 4-2
 doors and windows 5-20
 operator
 drone 8-2
 sensor 9-2
 optimizing virtual reality 3-22
 option, command-line 3-24
 overlay
 custom 13-2
 GL Studio 13-6
 scripted 13-3
 sensor 13-5

P

page
 Joystick Configuration 11-32, 11-35, 11-36
 Virtual Reality Settings 3-18
 panel, instrument 7-3
 parachuting 5-13
 parameter
 attach 3-16
 coordinateConverterOrigin 6-7
 enableJammers 4-7

- parameter (continued)
 - `enableMultipleBackends` 3-22
 - entity 3-16
 - `guiTerrain` 3-16
 - `MaxBackends` 3-22
 - minion 3-16
 - mode 3-16
 - scenario 3-16
 - terrain 3-16
- paratrooper 5-13
- parking brake, releasing and engaging 6-4
- pausing, scenario 3-13
- performance
 - anti-aliasing 3-24
 - graphics, depth 3-24
 - instancing 3-25
 - load balancing 3-22
 - occlusion culling 3-24
 - setting application priority 3-25
 - stencil bits 3-27
- `pilot.lua` 7-6
- pivoting tank 6-6
- `playerstation.lua` 3-22
- plug-in
 - installing VR-Forces and VR-Vantage 2-2
 - loading 3-27
 - prevent loading 3-27
 - VR-Forces radio 4-4
- power, specifying 7-19
- product
 - technical support xv
 - upgrades xv
- properties, image 7-20

R

- radar, synthetic aperture 7-15
- Radar Indicator 7-11
- radar warning receiver, sounds 7-13
- RadarFX Server 7-15
- radio
 - application 4-5
 - configuration, editing 4-7
 - jamming 4-7
 - using 4-3
 - VR-Forces plug-in 4-4
- recovering 8-5
- remote camera 9-2
- remote entity, placing sensor on 9-5

- remote sensor, configuring offset 9-5
- requesting, SAR image 7-15
- resetting
 - entity 4-8
 - sensor 9-5
- restarting, drone use 8-4
- restoring, entities 4-8
- resuming, drone use 8-4
- returning, drone to home 8-5
- RID file 2-7
- rid.mtl* file 2-7
- rifle
 - aiming 5-5
 - choosing 5-4
- role
 - changing 3-11
 - by embarking 3-12
 - choosing 3-5
 - choosing existing 3-6
 - creating new 3-6
 - driver 6-5
 - escaping 3-13
 - gunner 6-5
 - on LAV 3-12
 - sensor operator 9-2
- rotary-wing, keyboard mappings 11-4
- RTI 2-7
 - definition of 2-7
- RTI_CONFIG environment variable 2-7

S

- s command-line option 3-27
- SAR 7-15
- SAR image, requesting 7-15
- SAR request, configuring 7-16
- SAR Request Settings dialog box 7-16, 7-18, 7-19
- scenario
 - pausing 3-13
 - state 3-13
- scenario event 4-8
- scenario parameter 3-16
- screen number, setting 3-26
- script
 - activating 14-3
 - startup 3-16
- scripted overlays 13-3
- sensor
 - capturing images 10-4

-
- sensor (continued)
 - centering on screen 9-3
 - focusing 9-3
 - infrared 5-18
 - IR mode 9-4
 - location, specifying 7-16
 - mode, changing 9-4
 - night vision 5-18
 - NVG mode 9-4
 - operator 9-2
 - placing on remote entity 9-5
 - remote, configuring offset 9-5
 - resetting 9-5
 - streaming video 10-2
 - street, tracking 9-3
 - taking pictures 10-4
 - tracking 9-3
 - resetting 3-17
 - tracking laser code 9-3
 - tracking MGRS 9-3
 - visual mode 9-4
 - sensor mode
 - changing, crew member 6-6
 - sensor operator 9-2
 - sensor overlay 13-5
 - session
 - hosting VR-Forces 3-2
 - starting 3-13
 - unhosted 3-4
 - VR-Forces, joining 3-11
 - setting
 - autopilot mode 7-8
 - frame rate 3-25
 - settings, initialization 3-25
 - sight, weapon 5-5
 - Simulation Connections dialog box 3-14
 - simulation engine, multiple 3-22, 3-25
 - simulation model set
 - new, creating 12-3
 - simulation network, connecting to 3-14
 - Simulation Object Editor 12-2
 - siren, enabling and disabling 6-6
 - sound effects 4-9
 - enabling 4-9, 4-10
 - mapping to entities 4-11
 - sounds, radar warning receiver 7-13
 - specifying
 - area of interest 7-18
 - language 3-25
 - log file 3-25
 - specifying (continued)
 - notification level 3-26
 - power 7-19
 - sensor location 7-16
 - SpeedTree
 - LOD, zoom 3-28
 - starting
 - drone use 8-4
 - session 3-13
 - VR-Engage 3-2
 - startup, script 3-16
 - state, scenario 3-13
 - SteamVR 3-17, 3-20
 - testing camera 3-20
 - stencil bits 3-27
 - stopping, drone use 8-4
 - stowing, weapon 5-8
 - streaming video
 - drone 10-2
 - receiving 10-3
 - sensor 10-2
 - street, tracking with sensor 9-3
 - support, technical xv
 - Suppress Location task 5-16
 - Switch Between option for joystick 11-39
 - switching, human and drone Gamepad
 - control 8-5
 - synchronized, ocean 3-27
 - synthetic aperture radar 7-15
- ## T
- taking pictures 10-4
 - tank, pivoting 6-6
 - target
 - bombing 7-9
 - lasing 5-17, 5-19
 - targeting
 - bomb, with laser code 7-10
 - task
 - assigning to entity 5-14
 - Disembark Entity 5-14
 - Follow Me 5-15
 - Move to Location 5-15
 - Move to My Location 5-16
 - Suppress Location 5-16
 - technical support xv
 - terrain
 - dynamic 3-24
 - loading, from command line 3-27

- terrain (continued)
 - moving on 5-3
- terrain parameter 3-16
- T.Flight Hotas 4 controller 11-19, 11-22
- T.Flight Hotas X 11-13
 - fixed-wing mappings 11-19
 - rotary-wing mappings 11-22
- third person view mode 4-7
- throttle, ground vehicle 6-3
- throwing, grenade 5-7
- Thrustmaster Warthog
 - fixed-wing mappings 11-13
 - rotary-wing mappings 11-17
- touch controller
 - firing 5-6
 - handedness 5-6
 - mappings 11-28
- tracking, waypoint 9-3
- tracking sensor, resetting 3-17
- triggering, script 14-3
- truck, Gamepad mapping 11-11
- turret
 - aiming 6-5
 - moving 6-5

U

- unhosted session 3-4
- unlocking, differential 6-4
- upgrades xv
- user data, specifying directory 3-27
- using
 - drone 8-4
 - flashlight 5-17
 - intercom 6-5
 - radio 4-3

V

- v command-line option 3-27
- vehicle
 - disembarking from 5-12
 - embarking on 3-12, 5-12
 - Gamepad mapping 11-7
 - intercom 6-5
 - resetting 4-8
- version, displaying 3-27
- video, receiving stream 10-3
- video stream
 - drone 10-2

- video stream (continued)
 - sensor 10-2
- virtual reality 3-20
 - configuring 3-19
 - enabling and disabling 3-18
 - optimizing 3-22
 - tracking sensor, resetting 3-17
- Virtual Reality Settings page 3-18
- visual mode, sensor 9-4
- visual sensor, vehicle crew 6-6
- Vive 3-20, 5-6
 - testing camera 3-20
- Vortex
 - configuring, for geocentric terrain 6-7
 - Gamepad mapping 11-11
- vortexTerrainConfig.lua 6-7
- VR-Engage, starting 3-2
- VR-Engage Air 7-2
- VR-Forces
 - entity, controlling 3-11
 - radio plug-in 4-4
 - session, hosting 3-2
- VR-Forces plug-in, installing 2-2
- VSync 3-25

W

- W command-line option 3-28
- waypoint, tracking with sensor 9-3
- weapon
 - aiming 5-5
 - choosing 5-3, 5-4
 - deploying or stowing 5-8
 - firing 5-6, 6-5
 - firing with HMD 5-6
 - sight 5-5
- window
 - opening and closing 5-20
 - specifying 3-25
- windowed mode 3-16
- Windows, installing on 2-2

X-Y-Z

- XML, RTI configuration file 2-7
- Z-fighting 3-28
- zoom, SpeedTree LOD 3-28
- zooming in and out 5-17



Link - Simulate - Visualize

VRN-1.4-1-190725