





Copyright © 2024 MAK Technologies  
All rights Reserved. Printed in the United States.

Under copyright laws, no part of this document may be copied or reproduced in any form without prior written consent of MAK Technologies.

VR-Exchange™, VR-TheWorld™, VR-Vantage™, DI-Guy™, and DI-Guy Scenario™ are trademarks of MAK Technologies. MAK Technologies®, VR-Forces®, RTIsPy®, B-HAVE®, and VR-Link® are registered trademarks of MAK Technologies.

GL Studio® is a registered trademark of The DiSTI® Corporation.

Portions of this software utilize SpeedTree® technology (©2008 Interactive Data Visualization, Inc.). SpeedTree is a registered trademark of Interactive Data Visualization, Inc. All rights reserved.

SilverLining™ is a trademark of Sundog Software.

Terrain Profiles are based in part on the work of the Qwt project (<http://qwt.sourceforge.net>).

3ds Max® is a registered trademark of Autodesk, Inc.

All other trademarks are owned by their respective companies.

For third-party license information, see "Third-Party Licenses" on page 22 in the Preface.

MAK Technologies  
10 Fawcett Street, Suite 204  
Cambridge, MA 02138 USA

Voice: +1 617.876.8085

Fax: +1 617.876.9208

[info@mak.com](mailto:info@mak.com)

[www.mak.com](http://www.mak.com)

Revision VRN-2.1.1-1-241001





# Contents

## PREFACE

|                                                        |    |
|--------------------------------------------------------|----|
| How the Manual Is Organized .....                      | 16 |
| Documentation Set .....                                | 17 |
| Try the Help .....                                     | 17 |
| Links Between PDFs .....                               | 18 |
| MAK Products .....                                     | 18 |
| How to Contact Us .....                                | 20 |
| Telephone .....                                        | 20 |
| E-mail .....                                           | 20 |
| Internet .....                                         | 20 |
| Post .....                                             | 20 |
| Document Conventions .....                             | 21 |
| Mouse Button Naming Conventions .....                  | 21 |
| Third-Party Licenses .....                             | 22 |
| Third-Party Libraries Supported .....                  | 22 |
| Library Licensing .....                                | 23 |
| Boost License .....                                    | 25 |
| libXML and libICONV .....                              | 26 |
| Third-Party Licenses for VR-Vantage Applications ..... | 26 |

## I. INTRODUCTION, INSTALLATION, AND STARTUP

### 1. Introduction to VR-Engage

|                                                    |    |
|----------------------------------------------------|----|
| 1.1. VR-Engage Features .....                      | 30 |
| 1.1.1 VR-Engage Versions .....                     | 30 |
| 1.1.2 Simulation (Role-Playing) Capabilities ..... | 31 |
| 1.1.3 User Interface .....                         | 35 |

|                                                                  |    |
|------------------------------------------------------------------|----|
| 1.1.4 Image Generator .....                                      | 35 |
| 1.1.5 Terrain .....                                              | 36 |
| 1.2. Integration with VR-Forces .....                            | 36 |
| 1.3. Integration with Other MAK ONE Products .....               | 37 |
| 1.3.1 After-Action Review Using MAK Data Logger .....            | 37 |
| 1.3.2 Network Interoperability with Other Federates .....        | 37 |
| 1.4. Extensibility .....                                         | 37 |
| 1.5. Licensing .....                                             | 37 |
| 1.5.1 Vortex License (for Ground Vehicle Dynamics) .....         | 38 |
| 1.5.2 RTDynamics License (For Aircraft) .....                    | 38 |
| 1.5.3 License Requirements for Hosting a VR-Forces Session ..... | 38 |

## 2. Installing VR-Engage

|                                                                   |    |
|-------------------------------------------------------------------|----|
| 2.1. Installing VR-Engage .....                                   | 42 |
| 2.1.1 Installation and Data Packages .....                        | 42 |
| 2.1.2 Installing VR-Engage on Windows .....                       | 42 |
| 2.1.3 Installing VR-Engage PDB Files for Debugging Purposes ..... | 44 |
| 2.1.4 The makData Package .....                                   | 45 |
| 2.1.5 Uninstalling from Windows .....                             | 47 |
| 2.2. Upgrading VR-Engage Simulation Model Sets .....              | 48 |
| 2.3. The VR-Engage Directory Structure .....                      | 48 |
| 2.4. Installing and Setting Up the MAK License Manager .....      | 49 |
| 2.4.1 Specifying the License Server .....                         | 49 |
| 2.5. Installing an RTI .....                                      | 51 |
| 2.5.1 Installing the MAK RTI .....                                | 52 |
| 2.6. Input Devices .....                                          | 53 |
| 2.6.1 HMD Support .....                                           | 53 |
| 2.7. Factors that Affect Performance .....                        | 53 |
| 2.8. Using MAK ONE Products on Virtual Machines .....             | 54 |
| 2.9. Localizing the Graphical User Interface .....                | 54 |
| 2.9.1 Translating Other Interface Files .....                     | 56 |
| 2.9.2 Applying the Language Files .....                           | 56 |

## 3. Starting VR-Engage

|                                             |    |
|---------------------------------------------|----|
| 3.1. Starting VR-Engage .....               | 58 |
| 3.1.1 Hosting a VR-Forces Session .....     | 58 |
| 3.1.2 Starting an Unhosted Session .....    | 60 |
| 3.1.3 Admin, User, and Lockdown Modes ..... | 61 |
| 3.2. Choosing a Role .....                  | 62 |
| 3.2.1 Choosing an Existing Role .....       | 63 |



|                                                                  |     |
|------------------------------------------------------------------|-----|
| 3.2.2 Creating a New Entity .....                                | 64  |
| 3.2.3 Using an HMD with an Entity .....                          | 66  |
| 3.2.4 Assigning Roles from VR-Forces .....                       | 66  |
| 3.3. Connecting to VR-Forces .....                               | 68  |
| 3.4. Changing Your Role .....                                    | 69  |
| 3.4.1 Changing Your Role in the Choose Role Panel .....          | 69  |
| 3.4.2 Changing Your Role by Embarking on a Vehicle .....         | 69  |
| 3.4.3 Switching Roles on a Vehicle .....                         | 70  |
| 3.5. Entity Engagement and Scenario State .....                  | 71  |
| 3.6. Overview of the Application Menu .....                      | 71  |
| 3.7. Starting a New Session .....                                | 73  |
| 3.8. Configuring the Simulation Connection .....                 | 73  |
| 3.8.1 HLA Connection Settings .....                              | 74  |
| 3.8.2 DIS Connection Settings .....                              | 75  |
| 3.9. Playing in Windowed Mode .....                              | 77  |
| 3.10. Introduction to Head-Mounted Displays .....                | 77  |
| 3.10.1 Prerequisites for Using an HMD .....                      | 77  |
| 3.10.2 Resetting the Tracking Sensor .....                       | 78  |
| 3.10.3 Calibrating the Eye Tracking for Varjo .....              | 78  |
| 3.10.4 Enabling and Disabling Virtual Reality Rendering .....    | 78  |
| 3.10.5 Configuration Options for Virtual and Mixed Reality ..... | 79  |
| 3.10.6 Setting Up Mixed Reality .....                            | 81  |
| 3.10.7 Optimizing Performance with HMDs .....                    | 83  |
| 3.11. Creating a Startup Configuration .....                     | 83  |
| 3.11.1 Minion and Boss Configuration .....                       | 84  |
| 3.12. Starting Multiple Simulation Engines .....                 | 84  |
| 3.13. Command-Line Options .....                                 | 86  |
| 3.14. Command-Line Options for Player Stations .....             | 99  |
| 3.15. Managing Plug-ins .....                                    | 99  |
| 3.15.1 Loading Plug-ins .....                                    | 100 |
| 3.15.2 Adding a Plug-in .....                                    | 100 |
| 3.15.3 Specifying the DLLs for a Plug-in .....                   | 101 |
| 3.15.4 Adding a Plug-in Configuration .....                      | 102 |
| 3.15.5 Deleting a Plug-in Configuration .....                    | 103 |
| 3.15.6 Deleting a Plug-in .....                                  | 103 |

## II. PLAYER FEATURES

### 4. Common Player and Entity Features

|                            |     |
|----------------------------|-----|
| 4.1. The Action Menu ..... | 108 |
|----------------------------|-----|

|                                                              |     |
|--------------------------------------------------------------|-----|
| 4.1.1 Selecting Options on the Action Menu .....             | 108 |
| 4.2. Using the Radio .....                                   | 109 |
| 4.2.1 Using MAK Radio in VR-Forces .....                     | 110 |
| 4.2.2 Using the Standalone Radio Application .....           | 110 |
| 4.2.3 Using the Intercom or a VOX Radio .....                | 112 |
| 4.2.4 Configuring the MAK Radio .....                        | 112 |
| 4.2.5 Audio Settings .....                                   | 115 |
| 4.2.6 Jamming Radios .....                                   | 116 |
| 4.2.7 Enabling the Radio by Default .....                    | 116 |
| 4.3. Dynamic Terrain Effects on Movement .....               | 116 |
| 4.4. Changing the View Mode .....                            | 117 |
| 4.5. Starting VR-Forces Events .....                         | 117 |
| 4.6. Introduction to Sound Effects .....                     | 117 |
| 4.6.1 Enabling Sound Effects .....                           | 118 |
| 4.6.2 Configuring Sound Effects .....                        | 118 |
| 4.6.3 Decibels Configuration .....                           | 119 |
| 4.6.4 Associating Sound Files with Entities and Events ..... | 120 |
| 4.7. Resetting Entities .....                                | 121 |
| 4.8. HMD Controls .....                                      | 121 |
| 4.9. Saved Observer Views .....                              | 121 |
| 4.9.1 Selecting a View .....                                 | 122 |
| 4.9.2 Transitioning to a View .....                          | 122 |
| 4.9.3 Resetting the View .....                               | 122 |

## 5. Controlling People

|                                                      |     |
|------------------------------------------------------|-----|
| 5.1. Introduction .....                              | 124 |
| 5.1.1 Enabling and Disabling Mouse Control .....     | 124 |
| 5.2. Basic Movements .....                           | 125 |
| 5.2.1 Moving Your Character Around the Terrain ..... | 125 |
| 5.2.2 Changing Your Character's Posture .....        | 125 |
| 5.2.3 Looking Around .....                           | 125 |
| 5.2.4 Gesturing and Signaling .....                  | 125 |
| 5.2.5 Climbing Ladders .....                         | 126 |
| 5.3. Navigation .....                                | 126 |
| 5.3.1 Using the Compass .....                        | 126 |
| 5.3.2 Using the Minimap .....                        | 127 |
| 5.4. Health and Stamina .....                        | 128 |
| 5.4.1 Sustaining Damage to Health .....              | 128 |
| 5.4.2 Experiencing Fatigue and Losing Stamina .....  | 129 |
| 5.5. Weapons .....                                   | 129 |

|                                                   |     |
|---------------------------------------------------|-----|
| 5.5.1 Choosing a Weapon .....                     | 130 |
| 5.5.2 Aiming a Weapon .....                       | 130 |
| 5.5.3 Firing a Weapon .....                       | 131 |
| 5.5.4 Firing Weapons with an HMD Controller ..... | 131 |
| 5.5.5 Throwing a Hand Grenade .....               | 132 |
| 5.5.6 Deploying and Stowing Weapons .....         | 133 |
| 5.5.7 Reloading a Weapon .....                    | 133 |
| 5.5.8 Rocket and Missile Launchers .....          | 134 |
| 5.6. Using the AN/PED-1 LLDR .....                | 139 |
| 5.7. Embarking on a Vehicle .....                 | 140 |
| 5.7.1 Embarking on the Stryker's Interior .....   | 140 |
| 5.7.2 Disembarking from a Vehicle .....           | 141 |
| 5.8. Carry or Drag a Person .....                 | 141 |
| 5.9. Parachuting .....                            | 142 |
| 5.10. Tasking Other Entities .....                | 143 |
| 5.10.1 Disembark Entity .....                     | 143 |
| 5.10.2 Follow Me .....                            | 144 |
| 5.10.3 Move to Location .....                     | 145 |
| 5.10.4 Move to My Location .....                  | 145 |
| 5.11. Turning on Your Flashlight .....            | 146 |
| 5.12. Using the Binoculars .....                  | 146 |
| 5.13. Changing Visual Sensors .....               | 147 |
| 5.14. Lasing Targets .....                        | 147 |
| 5.14.1 Defining the Laser Code .....              | 149 |
| 5.14.2 Displaying a Gimbaled Sensor's View .....  | 149 |
| 5.14.3 Enabling Laser Designators .....           | 149 |
| 5.15. Opening and Closing Doors and Windows ..... | 149 |

## 6. Controlling Ground Vehicles

|                                                      |     |
|------------------------------------------------------|-----|
| 6.1. Introduction .....                              | 152 |
| 6.1.1 Ground Vehicle Roles .....                     | 152 |
| 6.1.2 Ground Vehicle Display Options .....           | 153 |
| 6.2. Driving Ground Vehicles .....                   | 153 |
| 6.2.1 Starting the Engine .....                      | 153 |
| 6.2.2 Putting the Vehicle into Gear .....            | 154 |
| 6.2.3 Controlling the Throttle .....                 | 154 |
| 6.2.4 Steering a Vehicle .....                       | 154 |
| 6.2.5 Looking Around .....                           | 154 |
| 6.2.6 Using the Backup Camera View .....             | 155 |
| 6.2.7 Releasing and Engaging the Parking Brake ..... | 155 |

|                                                                |     |
|----------------------------------------------------------------|-----|
| 6.2.8 Locking and Unlocking the Differential .....             | 155 |
| 6.2.9 Turning the Headlights On and Off .....                  | 155 |
| 6.3. The Gunner Role .....                                     | 156 |
| 6.3.1 Firing a Vehicle's Gun .....                             | 156 |
| 6.3.2 Choosing a Weapon .....                                  | 156 |
| 6.3.3 Moving a Turret or Gun .....                             | 157 |
| 6.3.4 Stabilizing a Vehicle's Gun .....                        | 157 |
| 6.4. The Commander Roles .....                                 | 157 |
| 6.4.1 Changing Positions .....                                 | 158 |
| 6.4.2 Switching Views in the Commander Position .....          | 158 |
| 6.4.3 Overriding the Gunner .....                              | 158 |
| 6.4.4 Slewing the Gun to Designate a Target .....              | 158 |
| 6.4.5 Using the Laser Designator .....                         | 159 |
| 6.5. Using the Intercom .....                                  | 159 |
| 6.6. Changing the Sensor for a Vehicle Crew Member .....       | 159 |
| 6.7. Pivoting a Tank .....                                     | 160 |
| 6.8. Towing Other Ground Entities .....                        | 160 |
| 6.9. Emergency Lights and Sirens .....                         | 160 |
| 6.10. Configuring Ground Vehicles on Geocentric Terrains ..... | 161 |

## **7. Controlling Aircraft**

|                                                                       |     |
|-----------------------------------------------------------------------|-----|
| 7.1. Introduction .....                                               | 164 |
| 7.1.1 Aircraft Roles .....                                            | 164 |
| 7.1.2 The Head-Up Display .....                                       | 164 |
| 7.1.3 The Instrument Panel .....                                      | 166 |
| 7.1.4 Aircraft Display Options .....                                  | 168 |
| 7.2. Taking Control of an Aircraft .....                              | 169 |
| 7.3. Using Autopilot .....                                            | 170 |
| 7.3.1 Setting the Autopilot Mode .....                                | 170 |
| 7.4. Controlling Landing Gear .....                                   | 171 |
| 7.5. Controlling Flaps .....                                          | 171 |
| 7.6. Controlling the Engine on Rotary-Wing Aircraft .....             | 171 |
| 7.7. Selecting a Bullseye .....                                       | 172 |
| 7.8. Using the Radar Warning Receiver .....                           | 173 |
| 7.9. Launching Countermeasures (Chaff and Flare) .....                | 174 |
| 7.10. Choosing a Weapon .....                                         | 174 |
| 7.11. Air-to-Ground Combat .....                                      | 175 |
| 7.11.1 Targeting an Air-to-Ground Weapon Using MGRS Coordinates ..... | 175 |
| 7.11.2 Targeting an Air-to-Ground Weapon Using a Laser Code .....     | 176 |
| 7.12. Air-to-Air Combat .....                                         | 176 |



|                                                       |     |
|-------------------------------------------------------|-----|
| 7.12.1 Selecting Targets .....                        | 177 |
| 7.12.2 Firing an Air-to-Air Weapon .....              | 179 |
| 7.12.3 Focusing the Sensor on the Radar Target .....  | 180 |
| 7.13. Using the Common Operating Picture .....        | 180 |
| 7.13.1 Displaying COP Information for an Entity ..... | 180 |
| 7.13.2 Toggling the COP Focus Area .....              | 181 |
| 7.13.3 Selecting an Entity for the COP .....          | 181 |
| 7.14. Requesting SAR Images from RadarFX Server ..... | 181 |
| 7.14.1 Requesting a SAR Image .....                   | 181 |
| 7.14.2 Configuring a SAR Request .....                | 182 |

## 8. Controlling Drones

|                                                           |     |
|-----------------------------------------------------------|-----|
| 8.1. Introduction .....                                   | 186 |
| 8.1.1 Drone Camera Display .....                          | 186 |
| 8.1.2 Video and Images .....                              | 187 |
| 8.1.3 Drone Battery Life .....                            | 187 |
| 8.2. Operating the Drone .....                            | 187 |
| 8.2.1 Deploying and Flying the Drone .....                | 188 |
| 8.2.2 Stopping and Resuming Use of the Drone .....        | 188 |
| 8.2.3 Switching Control Between Character and Drone ..... | 188 |
| 8.2.4 Landing the Drone .....                             | 189 |
| 8.2.5 Returning the Drone to its Starting Position .....  | 189 |
| 8.2.6 Recovering the Drone .....                          | 189 |

## 9. Sensor Operator Role

|                                                           |     |
|-----------------------------------------------------------|-----|
| 9.1. The Sensor Operator Role .....                       | 192 |
| 9.1.1 Focusing the Sensor .....                           | 193 |
| 9.1.2 Changing the Sensor Mode .....                      | 194 |
| 9.1.3 Resetting the Sensor .....                          | 194 |
| 9.1.4 Video and Pictures .....                            | 194 |
| 9.1.5 Defining a Laser Code .....                         | 194 |
| 9.1.6 Lasing Targets .....                                | 195 |
| 9.1.7 Firing Weapons .....                                | 195 |
| 9.2. Creating a Remote Camera Entity .....                | 195 |
| 9.3. Placing Sensors on Remote Entities .....             | 196 |
| 9.3.1 Configuring the Location of the Remote Camera ..... | 196 |
| 9.4. Configuring the Sensor Operator Overlay .....        | 198 |

## 10. Video Stream and Image Capture

|                          |     |
|--------------------------|-----|
| 10.1. Introduction ..... | 202 |
|--------------------------|-----|

|                                                        |     |
|--------------------------------------------------------|-----|
| 10.2. Video Streams .....                              | 202 |
| 10.2.1 Streaming Video as a Sensor Operator .....      | 202 |
| 10.2.2 Streaming Video from a Drone .....              | 202 |
| 10.2.3 Specifying the Video Stream File Settings ..... | 203 |
| 10.2.4 Viewing a Video File .....                      | 203 |
| 10.2.5 Receiving a Video Stream .....                  | 203 |
| 10.3. Capturing Images .....                           | 204 |

## **11. Mouse, Keypad, and Controller Mappings**

|                                                                               |     |
|-------------------------------------------------------------------------------|-----|
| 11.1. Mouse and Keyboard Mappings .....                                       | 206 |
| 11.1.1 Application Management .....                                           | 206 |
| 11.1.2 Action Menu Controls .....                                             | 206 |
| 11.1.3 Human Controls .....                                                   | 207 |
| 11.1.4 Ground Vehicle Controls .....                                          | 209 |
| 11.1.5 Aircraft Controls .....                                                | 210 |
| 11.1.6 Sensor Operator Controls .....                                         | 211 |
| 11.2. Game Controller Mappings for Using the Action Menu .....                | 212 |
| 11.3. Game Controller Mappings for Human Control .....                        | 212 |
| 11.4. Game Controller Mappings for Drones .....                               | 213 |
| 11.5. Game Controller Mappings for the LAV and Tanks .....                    | 214 |
| 11.6. Game Controller Mappings for Cars and Trucks .....                      | 215 |
| 11.7. Racing Wheel Controllers .....                                          | 215 |
| 11.8. Flight Controllers .....                                                | 217 |
| 11.8.1 HOTAS Warthog Mappings for Fixed-Wing Entities .....                   | 218 |
| 11.8.2 HOTAS Warthog Mappings for Rotary-Wing Entities .....                  | 221 |
| 11.8.3 T.Flight Hotas X Mappings for Fixed-Wing Entities .....                | 223 |
| 11.8.4 T.Flight Hotas X Mappings for Rotary-Wing Entities .....               | 226 |
| 11.8.5 Game Controller Flight Control Mappings for Fixed-Wing Entities .....  | 229 |
| 11.8.6 Game Controller Flight Control Mappings for Rotary-Wing Entities ..... | 230 |
| 11.8.7 Game Controller Mappings for the Sensor Operator .....                 | 230 |
| 11.9. Head-Mounted Display Controllers .....                                  | 231 |
| 11.10. Game Controller Button Numbering .....                                 | 232 |
| 11.11. Tips for Logitech Gamepad .....                                        | 235 |
| 11.12. Configuring Game Controllers and Keyboard Control .....                | 235 |
| 11.12.1 Windows Game Controllers .....                                        | 236 |
| 11.12.2 The Game Controller Utility .....                                     | 236 |
| 11.12.3 File Structure .....                                                  | 237 |
| 11.12.4 Mappings .....                                                        | 238 |
| 11.12.5 Input Types .....                                                     | 239 |
| 11.12.6 Adding a New Input Device .....                                       | 241 |

|                                        |     |
|----------------------------------------|-----|
| 11.12.7 Player Controls State .....    | 244 |
| 11.12.8 Component Mapping Groups ..... | 245 |
| 11.12.9 List of Actions .....          | 246 |

## 12. Controllable Entities

|                                  |     |
|----------------------------------|-----|
| 12.1. Human Characters .....     | 256 |
| 12.2. Ground Vehicles .....      | 276 |
| 12.3. Fixed-Wing Aircraft .....  | 286 |
| 12.4. Rotary-Wing Aircraft ..... | 290 |
| 12.5. Other Entities .....       | 292 |

## III. CONFIGURATION AND SCENARIO CREATION

### 13. Adding and Editing VR-Engage Entity Models

|                                                           |     |
|-----------------------------------------------------------|-----|
| 13.1. The VR-Engage Simulation Model Set .....            | 296 |
| 13.2. Ground Vehicles and Vortex .....                    | 296 |
| 13.3. Extend the VR-Engage SMS .....                      | 298 |
| 13.3.1 Creating a New Simulation Model Set .....          | 298 |
| 13.3.2 Creating a New VR-Engage-Controllable Entity ..... | 299 |
| 13.3.3 Editing a VR-Engage-Controllable Entity .....      | 300 |
| 13.3.4 Deploying the SMS to VR-Engage .....               | 300 |
| 13.4. VR-Engage Extensions to .entity Files .....         | 301 |
| 13.4.1 Structure of Role Data in .entity Files .....      | 301 |
| 13.4.2 The vrEngageRoles and role Entries .....           | 301 |
| 13.4.3 The parameterOverride Entry .....                  | 303 |
| 13.4.4 Role-Slot Association .....                        | 304 |
| 13.4.5 Roles Included with VR-Engage .....                | 304 |

### 14. Model Customization Tutorial

|                                                   |     |
|---------------------------------------------------|-----|
| 14.1. Overview of Customizing a Model .....       | 308 |
| 14.2. Extending VR-Engage.sms .....               | 308 |
| 14.3. Editing the Entity in the SOE .....         | 309 |
| 14.3.1 Promote the Entity to your SMS .....       | 309 |
| 14.3.2 Review the Entity's Systems .....          | 310 |
| 14.4. Editing the Tank's .entity File .....       | 310 |
| 14.4.1 Specify a VR-Engage-Capable Platform ..... | 311 |
| 14.4.2 Add the VR-Engage Tag .....                | 311 |
| 14.4.3 Add the Driving Role Component .....       | 311 |
| 14.5. Test Driving Your Tank .....                | 312 |
| 14.5.1 Copy the SMS Files .....                   | 312 |

|                                                       |     |
|-------------------------------------------------------|-----|
| 14.5.2 Specify Your SMS as the Default .....          | 312 |
| 14.5.3 Drive Your Tank .....                          | 313 |
| 14.6. Creating the Views for Your Tank .....          | 313 |
| 14.6.1 Create a New Driver Views File .....           | 313 |
| 14.6.2 Override Tank Driver View with Your View ..... | 314 |

## **15. Creating VR-Engage Scenarios in VR-Forces**

|                                                        |     |
|--------------------------------------------------------|-----|
| 15.1. Installing the VR-Forces/VR-Engage Add-ons ..... | 318 |
| 15.2. Creating a VR-Engage Scenario in VR-Forces ..... | 318 |
| 15.2.1 Vortex While Untasked .....                     | 320 |
| 15.3. Running Your Scenario .....                      | 320 |
| 15.3.1 Hosting a Scenario in VR-Forces .....           | 320 |
| 15.3.2 Hosting a Scenario in VR-Engage .....           | 321 |

## **16. Customizing Overlays**

|                                                                    |     |
|--------------------------------------------------------------------|-----|
| 16.1. Overview of Custom Overlays .....                            | 324 |
| 16.1.1 Types of Overlays .....                                     | 324 |
| 16.1.2 Examples of Each Type of Overlay .....                      | 324 |
| 16.2. Adding a QML Overlay .....                                   | 325 |
| 16.2.1 Testing Your QML Overlay .....                              | 326 |
| 16.3. Adding a Custom Sensor Overlay .....                         | 327 |
| 16.4. Adding a GL Studio Overlay .....                             | 327 |
| 16.4.1 Creating a GL Studio RSO .....                              | 328 |
| 16.4.2 Creating VR-Vantage GL Studio Updaters .....                | 328 |
| 16.4.3 Configuring the VR-Vantage GL Studio Model Definition ..... | 328 |
| 16.4.4 Modifying Role Configuration Scripts .....                  | 329 |

## **17. Activating Scripts in VR-Forces**

|                                                 |     |
|-------------------------------------------------|-----|
| 17.1. Activating Lua Scripts in VR-Forces ..... | 332 |
| 17.2. Adding a Script to the Action Menu .....  | 332 |
| 17.3. Activating a Script .....                 | 333 |

## **IV. APPENDICES**

### **A. Troubleshooting**

|                                               |     |
|-----------------------------------------------|-----|
| A.1. Performance and Display Issues .....     | 338 |
| A.2. The Fault Tolerant Heap .....            | 338 |
| A.3. Graphics Card Binary Compatibility ..... | 338 |
| A.4. Issues with VRAM .....                   | 338 |

A.5. Remote Camera Placement ..... 339

A.6. Other Limitations .....339

**B. Embarkation Slot Configuration in VR-Engage**

B.1. Overview of Embarkation Slots ..... 342

B.2. Door Point-type Slots for Scripted Doors on Walkable Vehicles ..... 342

    B.2.1 Ingress vs. Egress Door Points ..... 342

    B.2.2 Example Door Point Slot Configuration .....342

    B.2.3 Door Point Parameters ..... 343

B.3. Embark Point-type Slots ..... 344

    B.3.1 Example Embark Point Slot Configuration .....344

    B.3.2 Embark Point Parameters ..... 345

**INDEX**







## Preface

This manual is for persons who will install or use VR-Engage. The manual assumes that you are familiar with basic administrative tasks and the graphical window environment for your operating system.

Please see release documentation for information about changes and updates to VR-Engage since this manual was completed.

## How the Manual Is Organized

This manual is organized as follows:

- "Section I. Introduction, Installation, and Startup" on page 27
  - "Chapter 1. Introduction to VR-Engage" on page 29 describes the basic features of VR-Engage.
  - "Chapter 2. Installing VR-Engage" on page 41 explains how to install VR-Engage software, the license manager, and an RTI.
  - "Chapter 3. Starting VR-Engage" on page 57 explains how to start and stop VR-Engage, load a terrain, and connect to a simulation.
- "Section II. Player Features" on page 105
  - "Chapter 4. Common Player and Entity Features" on page 107 describes features that apply to all platform types.
  - "Chapter 5. Controlling People" on page 123 explains how to play a human character, including moving, changing weapons, firing weapons, and embarking and disembarking.
  - "Chapter 6. Controlling Ground Vehicles" on page 151 explains how to drive ground vehicles, including the LAV, M1A2, and civilian vehicles.
  - "Chapter 7. Controlling Aircraft" on page 163 explains how to control aircraft and how to request SAR images.
  - "Chapter 8. Controlling Drones" on page 185 explains how to deploy and control the quadcopter drone.
  - "Chapter 9. Sensor Operator Role" on page 191 explains the sensor operator role and how to control the sensor interface.
  - "Chapter 10. Video Stream and Image Capture" on page 201 describes how to stream video or save images to a file from a quadcopter drone or sensor operator.
  - "Chapter 11. Mouse, Keypad, and Controller Mappings" on page 205 illustrates the mouse, keyboard, and game controller mappings configured in VR-Engage.
  - "Chapter 12. Controllable Entities" on page 255 lists the entity types that you can control in VR-Forces from VR-Engage if VR-Forces is running a scenario that uses VR-Engage.sms.
- "Section III. Configuration and Scenario Creation" on page 293
  - "Chapter 13. Adding and Editing VR-Engage Entity Models" on page 295 explains how to extend the VR-Engage simulation model set.
  - "Chapter 14. Model Customization Tutorial" on page 307 provides a simple example of how to create customize a model to make it available for player control.

- "Chapter 15. Creating VR-Engage Scenarios in VR-Forces" on page 317 describes what is involved in creating your own scenarios.
- "Chapter 16. Customizing Overlays" on page 323 describes how to edit entity configurations to customize what players can see and do.
- "Chapter 17. Activating Scripts in VR-Forces" on page 331 explains how to add scripts that you can send to VR-Forces.
- "Section IV. Appendices" on page 335
  - "Chapter A. Troubleshooting" on page 337 explains how to resolve some common problems that can arise with VR-Engage.
  - "Chapter B. Embarkation Slot Configuration in VR-Engage" on page 341 provides detailed information about configuring slots on vehicles to allow players to embark on them.

## Documentation Set

VR-Engage documentation is provided as manuals in PDF format and online help. Electronic versions of the documentation are in *vrengage/doc*. On Windows, you can access the documentation from the VR-Engage folder on the Start menu. You can also find the most current documentation on the [Product Specifications & Dependencies](https://www.mak.com/mak-one-specs) page for VR-Engage: see <https://www.mak.com/mak-one-specs>. The VR-Engage documentation set is:

- *VR-Engage Users Guide* describes how to use the VR-Engage and also provides some basic instructions on customizing how it works.
- *VR-Engage First Experience Guide* provides a brief guided tour of the most important VR-Engage features. It is primarily for new users and persons evaluating VR-Engage.
- Online help. The online help, accessible from the Help menu, presents most of the information in the *VR-Engage Users Guide* and Adding Content to MAK ONE Applications Reference Manual.
- *VR-Vantage Users Guide*. The VR-Engage Admin mode has many settings that affect the visual quality of your role-playing experience. These and other aspects of the graphical user interface are shared with VR-Vantage and VR-Forces. The *VR-Vantage Users Guide* is included to provide documentation for display settings, navigation of the GUI, and other information that may be of use to VR-Engage users, but which is not central to using VR-Engage.
- *Adding Content to MAK ONE Applications Reference Manual* explains how to add visual models and terrain to VR-Engage.
- *VR-Engage Release Notes* lists system requirements, release-specific requirements, new features and updates, bug fixes, and known problems.

## Try the Help

MAK's HTML5 help is the best way to use our documentation. It's easy to navigate, with improved natural language search tools and filters to focus your search. You can click the illustrations to see high-resolution enlargements that show more detail. It's built into the

product and installed locally — simply press **F1** to launch the help in your browser. You do not need to be connected to the internet to use it.

 If you attempt to view the help in a browser that does not fully support HTML5, you may experience issues with some features.

## Links Between PDFs

Many MAK PDF documents link to each other. For example, the description of a new feature in the release notes might include links to detailed information in a user guide, and there are also many links from user guides to the *Adding Content to MAK ONE Applications Reference Manual* and back. These links between PDFs rely on two things:

- The linked PDF files must be in the same directory. MAK installers put the PDFs for each product in that product's *doc* directory — in Windows, *./vrengage/doc*. If you move or copy a PDF away from that directory or download a new one to another location, any links between that PDF and the others stop working.
- You must use Acrobat Reader to read MAK PDFs. Links between PDFs do not work when you read with a web browser. Acrobat Reader is free; you can get it from Adobe at <https://get.adobe.com/reader>.

## MAK Products

The MAK Technologies product line includes:

- **VR-Link® Network Toolkit.** VR-Link is an object-oriented library of C++ functions and definitions that implement the High Level Architecture (HLA) and the Distributed Interactive Simulation (DIS) protocol. VR-Link has built-in support for the NETN FOM and RPR FOM and allows you to map to other FOMs. This library minimizes the time and effort required to build and maintain new HLA or DIS-compliant applications, and to integrate such compliance into existing applications. VR-Link includes a set of sample debugging applications and their source code. The source code serves as an example of how to use the VR-Link Toolkit to write applications. The executables provide valuable debugging services such as generating a predictable stream of HLA or DIS messages, and displaying the contents of messages transmitted on the network.
- **MAK RTI.** An RTI (Run-Time Infrastructure) is required to run applications using the High Level Architecture (HLA). The MAK RTI is optimized for high performance. It has an API, RTIspy®, that allows you to extend the RTI using plug-in modules. It also has a graphical user interface (the RTI Assistant) that helps users with configuration tasks and managing federates and federations.
- **VR-Forces®.** VR-Forces is a computer generated forces application and toolkit. It provides an application with a GUI, that gives you 2D and 3D views of a simulated environment.

You can create and view entities, aggregate them into hierarchical units, assign tasks, set state parameters, and create plans that have tasks, set statements, and conditional statements. You can simulate using entity-level modeling, which focuses on the actions of individual people and vehicles, and aggregate-level modeling, which focuses on the interaction of large hierarchical units.

VR-Forces also functions as a plan view display for viewing remote simulation objects taking part in an exercise. Using the toolkit, you can extend the VR-Forces application or create your own application for use with another user interface.

- VR-Vantage™. VR-Vantage is a line of products designed to meet your simulation visualization needs. It includes VR-Vantage and the VR-Vantage Toolkit.
  - VR-Vantage displays a realistic, 3D view of your virtual world, a 2D plan view, and an exaggerated reality (XR) view. Together these views provide both situational awareness and the big picture of the simulated world. You can move your viewpoint to any location in the 3D world and can attach it to simulation objects so that it moves as they do.
  - SensorFX. SensorFX is an enhanced version of VR-Vantage that uses physics-based sensors to view terrain and simulation object models that have been materially classified. It is built in partnership with JRM Technologies.
  - The VR-Vantage Toolkit is a 3D visual application development toolkit. Use it to customize or extend MAK's VR-Vantage applications, or to integrate VR-Vantage capabilities into your custom applications. VR-Vantage is built on top of OpenSceneGraph (OSG). The toolkit includes the OSG version used to build VR-Vantage.
- MAK Data Logger. The Data Logger, also called the Logger, can record HLA and DIS exercises and play them back for after-action review. You can play a recorded file at speeds above or below normal and can quickly jump to areas of interest. The Logger has a GUI and a text interface. The Logger API allows you to extend the Logger using plug-in modules or embed the Logger into your own application. The Logger editing features let you merge, trim, and offset Logger recordings.
- VR-Exchange™. VR-Exchange allows simulations that use incompatible communications protocols to interoperate. For example, within the HLA world, using VR-Exchange, federations using the HLA RPR FOM 1.0 can interoperate with simulations using RPR FOM 2.0, or federations using different RTIs can interoperate. VR-Exchange supports HLA, TENA, and DIS translation.
- VR-TheWorld™. VR-TheWorld is a simple, yet powerful, web-based streaming terrain server, developed in conjunction with Pelican Mapping. Delivered with a global base map, you can also easily populate it with your own custom source data through a web-based interface. The server can be deployed on private, classified networks to provide streaming terrain data to a variety of simulation and visualization applications behind your firewall.
- DI-Guy™. DI-Guy is an SDK that allows you to embed the DI-Guy library in your real-time application and populate your world with lifelike human characters. DI-Guy provides high-fidelity human characters that move realistically, respond to simple high-level commands, and travel throughout the environment as directed by the

hosting visual application. It comes with thousands of ready-to-use characters, appearances, and motions. DI-Guy character simulation is an integral part of all MAK's visual applications, including VR-Engage, VR-Forces, and VR-Vantage.

- **RadarFX.** RadarFX is a client-server application that simulates synthetic-aperture radar (SAR). The server application, which is based on VR-Vantage and SensorFX, loads a terrain database and, optionally, connects to simulations. A client application requests SAR images from the server. RadarFX includes a sample client application.
- **VR-Engage.** VR-Engage is a multi-role virtual simulator that lets users play the role of a first person human character, a ground vehicle driver, gunner or commander, a sensor operator, or the pilot of a fixed wing aircraft or helicopter. It incorporates the VR-Force simulation engine and the VR-Vantage graphics rendering capabilities.
- **WebLVC Server.** WebLVC Server implements the server side of the WebLVC protocol so that web-based simulation federates can participate in a distributed simulation. It is part of the WebLVC Suite, which includes the server and several sample applications that work with VR-Forces and VR-Vantage.
- **MAK Legion.** MAK Legion is a collection of applications and an SDK designed to support simulations with millions of simulation objects.

## How to Contact Us

For VR-Engage technical support, information about upgrades, and information about other MAK products, you can contact us in the following ways:

### Telephone

|                    |        |              |
|--------------------|--------|--------------|
| Call or fax us at: | Voice: | 617-876-8085 |
|                    | Fax:   | 617-876-9208 |

### E-mail

|                                |                 |
|--------------------------------|-----------------|
| Sales and upgrade information: | info@mak.com    |
| Technical support:             | support@mak.com |

### Internet

|                                           |                                                                                                |
|-------------------------------------------|------------------------------------------------------------------------------------------------|
| MAK website home page:                    | <a href="http://www.mak.com">www.mak.com</a>                                                   |
| License key requests:                     | <a href="http://www.mak.com/support/get-licenses">www.mak.com/support/get-licenses</a>         |
| Technical support:                        | <a href="http://www.mak.com/mak-one/support/portal">www.mak.com/mak-one/support/portal</a>     |
| Product version and platform information: | <a href="http://www.mak.com/support/product-versions">www.mak.com/support/product-versions</a> |
| For the free, unlicensed MAK RTI:         | <a href="http://www.mak.com/support/bonus-material">www.mak.com/support/bonus-material</a>     |

### Post

|                                |                                                                             |
|--------------------------------|-----------------------------------------------------------------------------|
| Send postal correspondence to: | MAK Technologies<br>10 Fawcett Street, Suite 204<br>Cambridge, MA 02138 USA |
|--------------------------------|-----------------------------------------------------------------------------|

When requesting support, tell us the product you are using, the version, and the platform on which you are running. If you are using VR-Vantage, VR-Forces, VR-Engage, or DI-Guy, please also include your data compatibility version and date.

## Document Conventions

This manual uses these typographic conventions:

|                                                                                     |                                                                                                                                                                                                        |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Sans Serif Bold</b>                                                              | Indicates a key on the keyboard or menu options. Mentions of letter keys do not require you to press the <b>Shift</b> key. If Shift is necessary, that will be included, for example, <b>Shift+Q</b> . |
|                                                                                     | Also indicates parameters.                                                                                                                                                                             |
| Monospaced                                                                          | Indicates values you enter such as commands or arguments.                                                                                                                                              |
| <i>Monospaced</i>                                                                   | Indicates command variables that you replace with appropriate values.                                                                                                                                  |
| <b>{ }</b>                                                                          | Indicates required arguments.                                                                                                                                                                          |
| <b>[ ]</b>                                                                          | Indicates optional arguments.                                                                                                                                                                          |
| <b> </b>                                                                            | Separates options in a command where only one option may be chosen at a time.                                                                                                                          |
| <b>(   )</b>                                                                        | In command syntax, indicates equivalent alternatives for a command-line option, for example, <b>(-h   --help)</b> .                                                                                    |
| <b>/</b>                                                                            | Indicates a directory. Since MAK products run on both Linux and Windows PC platforms, we use the <b>/</b> (slash) for generic discussions of pathnames.                                                |
| <i>Italic</i>                                                                       | Indicates a file name, pathname, or a class name.                                                                                                                                                      |
| ►                                                                                   | Indicates a procedure.                                                                                                                                                                                 |
| <b>Menu &gt; Option</b>                                                             | Indicates a menu choice. For example, an instruction to select the Save option from the File menu appears as:<br>Choose <b>File &gt; Save</b> .                                                        |
|  | Indicates supplemental or clarifying information.                                                                                                                                                      |
|  | Indicates additional information that you must observe to ensure the success of a procedure or other task.                                                                                             |

Directory names are preceded with dot and slash characters that show their position with respect to the VR-Engage home directory. For example, the directory *./vrengage2.1.1/doc* appears in the text as *./doc*.

For anything in the data directory, the path is shown starting with *./SharedData/18/latest* to be clear that it is not in the VR-Engage home directory. That is the default installation path. If you installed the data in a different directory, substitute your path.

## Mouse Button Naming Conventions

An instruction to click the mouse button refers to clicking the primary mouse button, usually the left button for right-handed mice and the right button for left-handed mice. The context-sensitive menu, also called a popup menu or right-click menu, refers to the menu displayed when you click the secondary mouse button, usually the right button on right-handed mice and the left button on left-handed mice.

## Third-Party Licenses

MAK software products may use code from third parties. This section contains summary license information and, where required, specific license documentation required by these third parties.

### Third-Party Libraries Supported

VR-Engage 2.1.1 uses the indicated versions of these libraries:

- VR-Link 5.9.1
- Qt 5.15.2 (VC 15 and Red Hat 8)
- OpenSceneGraph 3.6.4
- Boost 1.63.0
- FreeGlut 2.4.0 (Windows), 2.6.0 (Linux)
- GL Studio 8.2
- DI-Guy 13.7 (development version)
- Triton 4.43
- SilverLining 6.20
- SpeedTree 6.3.2
- Oculus Rift Development Kit 1.26
- CDB API 2.2 (Windows), 2.1 (Linux)
- osgEarth 3.2
- CUDA 11.7



## Library Licensing

These libraries are covered by the GNU Lesser General Public License (LGPL) license:

- CIGI
- DevIL
- GEOS
- GStreamer
- LibIconV
- LibWebSockets
- OPCode
- OpenAL
- OSG
- OsgEarth
- Pthread
- Qt
- Qwt

These libraries are covered by the ZLib license:

- Bullet Physics
- LibPNG
- LibSDL
- Minizip
- Zlib

These libraries are covered by the MIT license:

- Expat
- FreeGLUT
- GDAL
- GeoTIFF
- GLM
- HarfBuzz
- LibCURL
- LibSquish
- LibXML
- LUA
- LuaBind
- Proj
- SMHasher
- TCLAP
- Qt Visual Graph Editor
- ZeroBrane Studio

These libraries are covered by the BSD license:

- FreeType
- GLEW
- JPEG
- LibTiff
- Protobuf
- PCRE
- Ogg Vorbis
- WebP

These libraries are covered by the commercial licenses:

- FLEXlm
- Gameware
- GLStudio
- JRM Technologies SenSimRT and SigSimRT
- OpenFlight
- SpeedTree
- Sundog Triton
- Sundog SilverLining
- CDB API

These libraries are covered by custom licenses:

- NVIDIA CG Toolkit
- FreeImage (FreeImage Public License)
- Boost (Boost Software License)
- Poco (Boost Software License)

COLLADA DOM is covered by the SCEA Shared Source license.

Thread Building Blocks is covered by the GPL license:

SQLite is in the public domain.

SWIG is covered by the GPL license.

## Boost License

VR-Link, and all MAK ONE products that use VR-Link, uses some code that is distributed under the Boost License. All header files that contain Boost code are properly attributed. The Boost website is: [www.boost.org](http://www.boost.org).

Boost Software License - Version 1.63 - August 17th, 2003

Permission is hereby granted, free of charge, to any person or organization obtaining a copy of the software and accompanying documentation covered by this license (the “Software”) to use, reproduce, display, distribute, execute, and transmit the Software, and to prepare derivative works of the Software, and to permit third parties to whom the Software is furnished to do so, all subject to the following:

The copyright notices in the Software and this entire statement, including the above license grant, this restriction and the following disclaimer, must be included in all copies of the Software, in whole or in part, and all derivative works of the Software, unless such copies or derivative works are solely in the form of machine-executable object code generated by a source language processor.

THE SOFTWARE IS PROVIDED “AS IS”, WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE AND NON-INFRINGEMENT. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR ANYONE DISTRIBUTING THE SOFTWARE BE

LIABLE FOR ANY DAMAGES OR OTHER LIABILITY, WHETHER IN CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

## **libXML and libICONV**

VR-Link, and all MAK ONE products that use VR-Link, links in libXML and libICONV. On some platforms the compiled libraries and header files are distributed with MAK products. MAK has made no modifications to these libraries. For more information about these libraries, see the following websites:

- The LGPL license is available at: <http://www.gnu.org/licenses/lgpl.html>.
- Information about IconV is at: <http://www.gnu.org/software/libiconv>.
- Information about LibXML is at: <http://xmlsoft.org>.

## **Third-Party Licenses for VR-Vantage Applications**

VR-Vantage applications use a variety of third-party libraries. Developers who want to use these libraries may be required to purchase developer's licenses. Please see “Third-Party Software and Content” in Chapter 1, Introduction to VR-Vantage, in *VR-Vantage Users Guide* for details.



# I. Introduction, Installation, and Startup

VR-Engage is designed for simulation training and is a part of the MAK ONE suite.





# 1. Introduction to VR-Engage

This chapter is a brief introduction to VR-Engage.

|                                                                  |    |
|------------------------------------------------------------------|----|
| 1.1. VR-Engage Features .....                                    | 30 |
| 1.1.1 VR-Engage Versions .....                                   | 30 |
| 1.1.2 Simulation (Role-Playing) Capabilities .....               | 31 |
| 1.1.3 User Interface .....                                       | 35 |
| 1.1.4 Image Generator .....                                      | 35 |
| 1.1.5 Terrain .....                                              | 36 |
| 1.2. Integration with VR-Forces .....                            | 36 |
| 1.3. Integration with Other MAK ONE Products .....               | 37 |
| 1.3.1 After-Action Review Using MAK Data Logger .....            | 37 |
| 1.3.2 Network Interoperability with Other Federates .....        | 37 |
| 1.4. Extensibility .....                                         | 37 |
| 1.5. Licensing .....                                             | 37 |
| 1.5.1 Vortex License (for Ground Vehicle Dynamics) .....         | 38 |
| 1.5.2 RTDynamics License (For Aircraft) .....                    | 38 |
| 1.5.3 License Requirements for Hosting a VR-Forces Session ..... | 38 |

## 1.1. VR-Engage Features

VR-Engage was developed for use in training simulations or laboratory experimentation. It lets users play the role of a first person human character; a vehicle driver, gunner or commander; a sensor operator; a civilian drone operator; or the pilot of an airplane or helicopter.

VR-Engage is built on MAK's mature, proven technologies. It utilizes the simulation engine from VR-Forces, the game-quality 3D graphics from VR-Vantage, and the network interoperability from VR-Link.

VR-Engage includes:

- A high-fidelity vehicle physics engine needed for accurate vehicle motion.
- Ground, rotary- and fixed-wing vehicles, and a full library of friendly, hostile, and neutral DI-Guy characters.
- Radio and voice communications over DIS and HLA.
- Sensors, weapons, countermeasures, and behavior models for air-to-air, air-to-ground, on-the-ground, and person-to-person engagements.
- Vehicle- and person-specific interactions with the environment (open and close doors, move, destroy, and so on.)
- Terrain agility. As with VR-Vantage and VR-Forces, you can use the terrain you have or take advantage of innovative streaming and procedural terrain techniques.
- Support for virtual reality and mixed reality using head-mounted displays, such as Oculus Rift, Varjo, HTC Vive, Valve Index, and XTAL.

### 1.1.1 VR-Engage Versions

VR-Engage has these run-time versions:

- VR-Engage. Allows you to control air, ground, and human entities.
- VR-Engage with SensorFX. Includes the SensorFX plug-in, which gives you access to more sophisticated infrared and night vision settings.

Both configurations are installed as part of the standard VR-Engage installation process. Your access to them depends on your VR-Engage license. For simplicity, the procedures in this manual assume you are using VR-Engage.



- VR-Engage also includes a Remote Display Engine (RDE). Refer to the Section II of the *VR-Vantage Users Guide* to learn how to use the RDE.
- Terrains and models require special configuration to display in SensorFX. The terrains and models included with VR-Engage are configured to display correctly. If you need to create your own, please refer to the chapters on material classification in the *Adding Content to MAK ONE Applications Reference Manual*.



### 1.1.2 Simulation (Role-Playing) Capabilities

VR-Engage lets you choose which entity you want to simulate. Said another way, you choose the role you want to play. You can play:

- Dismounted soldiers and other human characters.
- A member of the crew of a ground vehicle.
- A helicopter or fixed-wing aircraft pilot.
- The operator of a gimbaled sensor on a UAV or a mounted camera.

#### Dismounted Soldiers and Other Human Characters

If you take the role of a dismounted soldier or other human character, you have access to the full DI-Guy library of friendly, hostile, and neutral characters. Your character can:

- Move (look, run, walk, crawl, crouch, prone).
- Interact with environment (open and close doors).
- Interact with other characters (shoot at and be shot at).
- Use sensors (binoculars and night vision goggles (NVG)).
- Use weapons (rifles, handguns, grenades).
- Use carried gear, such as a flashlight, range finder, or compass.
- Lase targets for other players or simulated entities.
- CGF Assist (passenger, fast-roping). When you are running a VR-Forces scenario, you can give up control of your character and let the simulation engine manage complex behaviors.
- Embark and disembark. Enter and leave vehicles and take on roles of vehicle crew members.

**Figure 1. Dismounted infantry**




## Ground Vehicle Crew

VR-Engage allows you to take on the roles of the driver, gunner, or commander of a ground vehicle that:

- Has physics-based ground vehicle dynamics model.
- Can interact with environment (destroy).
- Perform ground-to-ground engagements:
  - Sensors (EO, IR, NVG).
  - Weapons (main gun, machine gun).
  - Signals/Countermeasures (smoke grenades).
- Operate vehicle controls (headlights, tail lights).
- CGF Assist (drive, gun). In a VR-Forces scenario, as you switch roles, the simulation engine can take over the tasks and plans that manage the other roles for the vehicle. For example, if you are the gunner, VR-Forces can manage driving the vehicle.

**Figure 2. Bradley gunner**

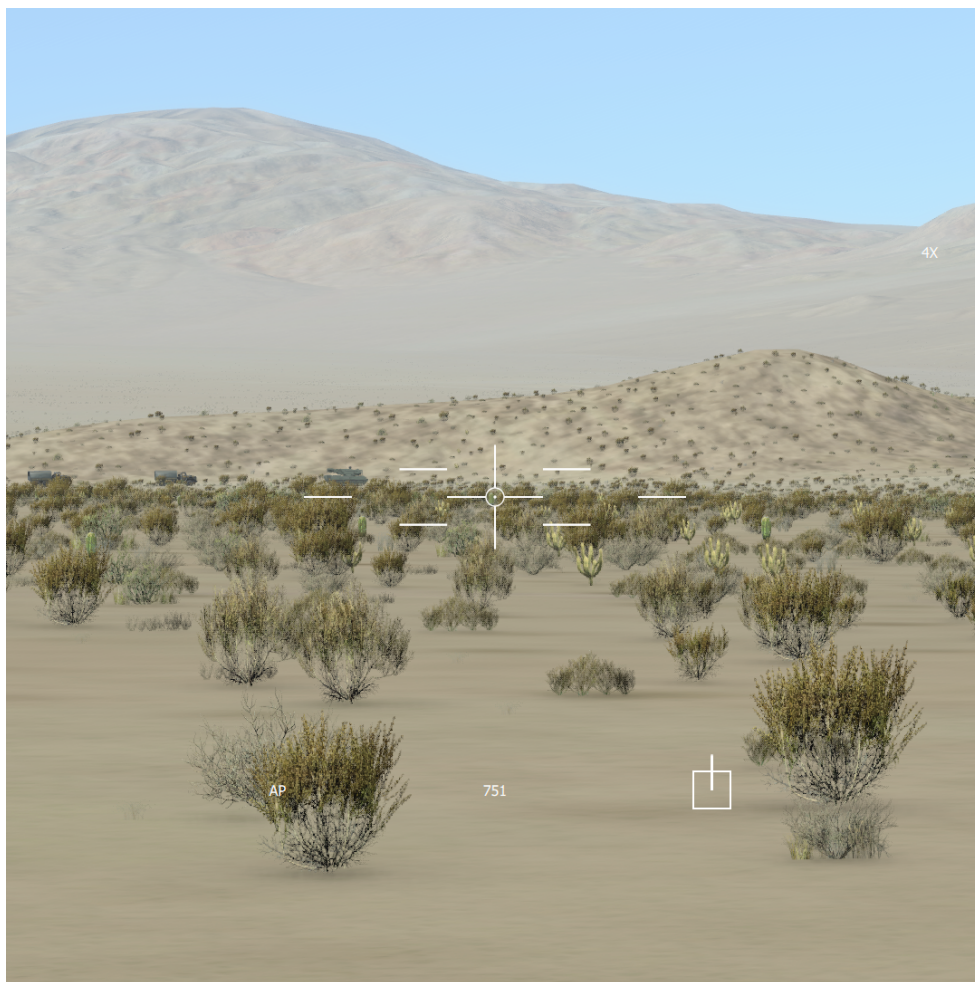

You can easily switch roles and also have the ability to disembark from the vehicle to assume the role of a dismounted soldier.

## Pilot

As a pilot, you can fly an aircraft with:

- Physics-based fixed & rotary wing dynamics models.
- Multi-function cockpit display. Flight instruments, map/chart, imagery.
- Air-to-Air Engagements:
  - Sensors (radar scope, radar warning receiver).
  - Weapons (missiles).
  - Countermeasures (chaff, flares).
- Air-to-Ground Engagements:
  - Sensors (IR targeting, SAR (requires RadarFX Server)).
  - Weapons (missiles, guns, bombs).
  - Countermeasures (chaff, flares).


Pilots use their out-the-window views and head-up display (HUD) (Figure 3) to understand their environment and control their aircraft.

- Single screen. Out-the-window view, on-screen controls, and HUD.
- Dual screen. Out-the-window view, on-screen controls, and HUD.
- On-screen multi-function display (IR, SAR (requires SensorFX)) (Figure 4).
- Slaved IG (requires VR-Vantage Remote Display Engine).
- Head-mounted display (HMD). Oculus Rift, Varjo, HTC Vive, Valve Index, and XTAL.

**Figure 3. Head-up display with instruments**



Figure 4. Instrument panel

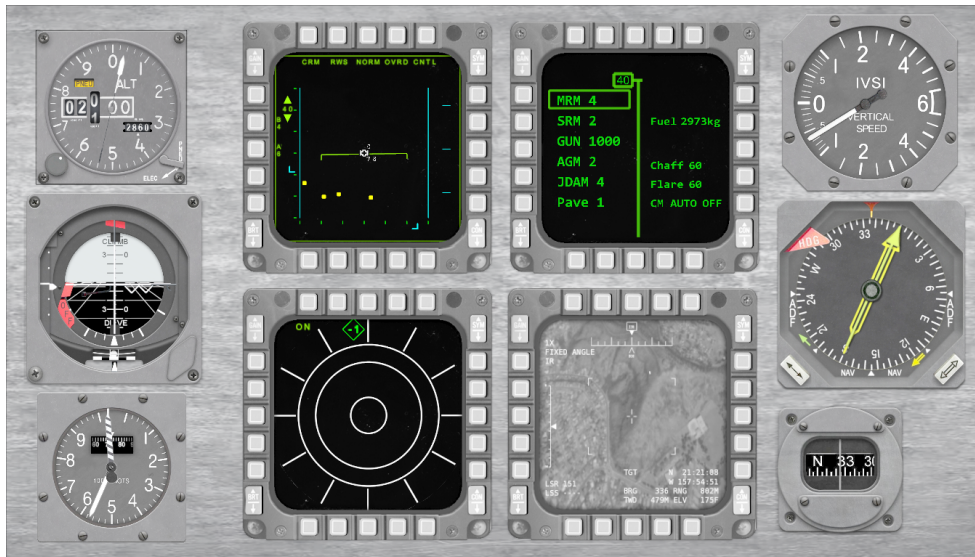

## Sensor Operator

In the sensor operator role, you can perform common surveillance and reconnaissance tasks, such as tracking fixed and moving targets, using a simulated E/O camera or IR sensor. You can control gimballed sensors using joysticks or game controllers or configure VR-Engage to work with sensor-specific hand controller devices. VR-Engage lets you attach cameras to entities and structures and set their initial heading and pitch. VR-Engage can also automatically attach cameras to remotely simulated (that is, non-VR-Forces) entities.

Figure 5. Sensor view





## Drone Operator

As a drone operator, you can deploy a small drone equipped with a camera and then fly it around. This role is designed to train people how to safely fly a drone without risking an actual device. You can use these in many different types of scenarios, such as simple infrastructure inspection or surveillance and reconnaissance.

**Figure 6. Drone operator**



### 1.1.3 User Interface

You can control your character using the keyboard, mouse, and game controllers. The graphical user interface provides command menus and cockpit and crew cabin displays. Other interfaces include:

- Radio (push-to-talk, radio channels, MAK Data Logger support).
- Control with role-specific devices (driver's steering wheel and pedals, pilot's HOTAS).
- Display system support (monitors, projectors, mixed and virtual reality headsets).
- Audio (engine sounds, environmental noise, event effects, warning tones).

### 1.1.4 Image Generator

VR-Engage includes a built-in image generator, based on VR-Vantage, that can support multiple display channels, to the limits of your installed graphics card. It can also be extended to fill larger multi-channel display systems by adding VR-Vantage Remote Display Engines. This is an example of the flexibility of MAK's product architecture that allows you to configure a system of any size.

Regardless of which role your VR-Engage simulator is playing, VR-Engage delivers realistic scene rendering (terrain, entities, interaction effects, weather, clouds, time-of-day, lighting, shadows, high dynamic range (HDR) lighting.)

The image generator supports:

- Single screen.
- Dual screen.
- Multi-channel distributed rendering (requires VR-Vantage Remote Display Engine). Spread the view across multiple monitors run by multiple computers.
- IR and NVG Sensors using the included CameraFX or optional SensorFX.
- On screen Multi-function Display (IR, SAR (requires SensorFX)).
- Head-mounted displays.

**i** When you use remote display engines with VR-Engage, you must connect to any remote display engine before hosting or joining a session. If you attempt to connect to a remote display engine after a session has started, VR-Engage leaves the session and then ends up in a state where it constantly makes unsuccessful attempts to rejoin the session.

### 1.1.5 Terrain

VR-Engage, like VR-Vantage and VR-Forces, allows you to use the terrain you have or take advantage of innovative streaming and procedural terrain techniques to simulate on large, complex terrains.

- Terrain agile (all types supported by VR-Vantage and VR-Forces).
- Dynamic terrain. Destroyable buildings, bridges, and props.
- Dynamic ocean. Waves, spray, wakes, wind.

VR-Engage includes a set of useful geo-specific terrains and options for building more. See the *Adding Content to MAK ONE Applications Reference Manual* for information about terrain support. (The *Adding Content to MAK ONE Applications Reference Manual* is included with VR-Engage.)

## 1.2. Integration with VR-Forces

When VR-Engage is used with a compatible version of VR-Forces and other MAK ONE products, you can reap the additional benefits of a common system architecture:

- Common representation of the environment across player and CGF stations, including synchronized weather, time-of-day, and dynamic terrain.
- Build terrains, models, and configurations once, and deploy them across VR-Engage player stations, VR-Forces simulation engines and GUIs, and any other applications that use VR-Vantage.
- Role-play multiple entities at a time by switching between manual and CGF control on-the-fly. Take control of VR-Forces-driven entities.
- Configure players with the VR-Forces Simulation Object Editor.
- Create scenarios in VR-Forces and load them in VR-Engage for standalone use.

- Automatic WebLVC integration (tablet-based IOS, and so on).
- Publish entity state properties and appearance bits.

 VR-Engage 2.1.1 is compatible with VR-Forces 5.1.1.

## 1.3. Integration with Other MAK ONE Products

Previous sections have discussed VR-Engage's integration with VR-Forces and VR-Vantage. Additionally, like all MAK ONE products, VR-Engage uses VR-Link for network interoperability and supports DIS and HLA. It integrates seamlessly with our other Link products, such as MAK Data Logger for recording and after-action review (AAR), the MAK RTI for HLA support, and VR-Exchange for data interchange in heterogeneous simulation environments.

### 1.3.1 After-Action Review Using MAK Data Logger

Whether in standalone mode or when playing with other simulation applications, VR-Engage publishes to the DIS or HLA network. Therefore, you can use the MAK Data Logger to record your simulation and play the recording back for AAR.

### 1.3.2 Network Interoperability with Other Federates

VR-Engage is natively compliant with DIS and HLA, allowing it to participate in any topology of networked simulators and simulation support systems, which includes multi-player classroom environments. It can interoperate with existing simulation applications and third-party simulators, semi-automated forces (SAFs), and computer-generated forces (CGFs).

## 1.4. Extensibility

VR-Engage is ready to use out-of-the-box. It can be deployed as a trainee simulator, as a role player station, an instructor aid, a desktop simulation game, or even as a VR headset experience.

Because MAK focuses on the needs of system integrators, we designed flexibility into VR-Engage. It can be customized and extended to meet program-specific requirements, and can also be integrated into a diverse range of system configurations. MAK has a pricing and support model that has proven to be effective with system integrators both before and after they choose MAK ONE products.

## 1.5. Licensing

The VR-Engage application requires a VR-Engage run-time license in order to run. Internally, VR-Engage relies on VR-Vantage capabilities for its 3D visualization, VR-Forces capabilities for its ownship simulation, VR-Link for its networking, and so on. These capabilities are part of VR-Engage and do not require separate run-time licenses of these MAK ONE products.

To learn about VR-Forces, see "1.5.3 License Requirements for Hosting a VR-Forces Session" below.

**i** You can run a limited version of VR-Engage—air, ground, or sensor—using the `--appMode` command-line option as described in "3.13. Command-Line Options" on page 86. If you only have a license for one of these limited versions and you run the full version of `vrEngage.exe` without one of the command-line options, you can see other features but not use them.

### 1.5.1 Vortex License (for Ground Vehicle Dynamics)

VR-Engage uses Vortex from CM Labs for its ground vehicle dynamics. This built-in runtime capability is included with VR-Engage. You do not need a separate license to run VR-Engage.

If you want to use the Vortex Editor to edit VR-Engage's built-in vehicle dynamics models or author new ones, you must purchase a copy of Vortex Studio directly from CM Labs. The right to execute the resulting custom content in VR-Engage is covered by the VR-Engage license, and does not require a separate Vortex runtime license.

**i** For more information, see "13.2. Ground Vehicles and Vortex" on page 296.

### 1.5.2 RTDynamics License (For Aircraft)

VR-Engage uses the RotorLib and FixedWingLib products from RTDynamics for its aircraft vehicle dynamics. This built-in runtime capability is included with the VR-Engage license. You do not need a separate RotorLib or FixedWingLib license key to run VR-Engage.

If you want to use RTDynamics's RIME editor to edit VR-Engage's built-in flight dynamics models or author new ones, you must purchase a copy of RIME or the RTDynamics SDKs. You can purchase these through MAK; contact your account representative or [sales@mak.com](mailto:sales@mak.com). The right to execute the resulting custom content in VR-Engage is covered by the VR-Engage license, and does not require a separate RTDynamics runtime license.

### 1.5.3 License Requirements for Hosting a VR-Forces Session

With only a VR-Engage license, you can run VR-Engage, choose a terrain database to simulate on, create and place one entity, and control that entity. VR-Engage can only simulate and control a single entity at a time. When you change roles and create a different entity to simulate, the entity you were previously simulating is deleted and replaced by the new one.

If you are running a copy of VR-Forces on your network (which requires a separate VR-Forces license), then VR-Engage can interact with VR-Forces:

- VR-Engage allows you to join a VR-Forces session and take manual control of one of the VR-Engage controllable entities in the VR-Forces scenario. If you are controlling an entity, and then change roles and ask to control a different entity, the original



entity continues to exist, as it is owned by VR-Forces.

- VR-Engage can initiate and receive changes to the terrain, for example, opening doors or destroying buildings. (VR-Forces acts as the dynamic terrain server.)
- VR-Engage can reflect changes to time-of-day and weather that are published by VR-Forces.
- VR-Engage allows you to assign certain tasks to entities that are simulated by VR-Forces (for example, tell a subordinate to follow you, or move to a location you designate).

To simplify the startup workflow for certain use cases, VR-Engage has the ability to launch a VR-Forces simulation engine directly from the VR-Engage user interface, and to instruct the sim. engine to load and host a scenario of your choice. This allows you to avoid separately launching VR-Forces from the Start menu or command line, and automatically ensures that VR-Forces uses the same interoperability parameters as VR-Engage.

A VR-Forces simulation engine license is always required to run VR-Forces, whether you launch it from the VR-Engage user interface or launch it separately from the Start menu or command line. If you do not have a VR-Forces simulation engine license available, VR-Engage does not allow you to launch VR-Forces and host a VR-Forces scenario.

When you start VR-Engage, it looks for a running instance of VR-Forces and, if it finds one, it connects to it. If it does not find one, it offers you the option to host and load a VR-Forces scenario or start an unhosted session. If you host a VR-Forces scenario, you consume a VR-Forces license, which prevents you from starting VR-Forces independently if you have only one license. If you start an unhosted session, you can start or join a session only as an individual player—you cannot load and run a scenario.



To learn about how VR-Engage connects to a VR-Forces session or allows you to create a hosted or unhosted session, see "3.1. Starting VR-Engage" on page 58.





## 2. Installing VR-Engage

This chapter explains how to install the VR-Engage applications and data. You must also install the MAK license manager. To use VR-Engage with HLA, you must install an RTI.

|                                                                   |    |
|-------------------------------------------------------------------|----|
| 2.1. Installing VR-Engage .....                                   | 42 |
| 2.1.1 Installation and Data Packages .....                        | 42 |
| 2.1.2 Installing VR-Engage on Windows .....                       | 42 |
| 2.1.3 Installing VR-Engage PDB Files for Debugging Purposes ..... | 44 |
| 2.1.4 The makData Package .....                                   | 45 |
| 2.1.5 Uninstalling from Windows .....                             | 47 |
| 2.2. Upgrading VR-Engage Simulation Model Sets .....              | 48 |
| 2.3. The VR-Engage Directory Structure .....                      | 48 |
| 2.4. Installing and Setting Up the MAK License Manager .....      | 49 |
| 2.4.1 Specifying the License Server .....                         | 49 |
| 2.5. Installing an RTI .....                                      | 51 |
| 2.5.1 Installing the MAK RTI .....                                | 52 |
| 2.6. Input Devices .....                                          | 53 |
| 2.6.1 HMD Support .....                                           | 53 |
| 2.7. Factors that Affect Performance .....                        | 53 |
| 2.8. Using MAK ONE Products on Virtual Machines .....             | 54 |
| 2.9. Localizing the Graphical User Interface .....                | 54 |
| 2.9.1 Translating Other Interface Files .....                     | 56 |
| 2.9.2 Applying the Language Files .....                           | 56 |

## 2.1. Installing VR-Engage

### 2.1.1 Installation and Data Packages

MAK ONE installations are provided in one or more files (packages) that you can download from the MAK website.

There are four types of installation products for MAK ONE:

- Product installers – Each product has a single main installer for each operating system.
- Optional installers – Some products have installers for developer options.
- Required data packages – MAK ONE applications (VR-Vantage, VR-Forces, VR-Engage, SensorFX, and RadarFX) and the DI-Guy SDK have a collection of data packages that are required for those products' basic functions.
- Recommended data packages – Additional data packages (if available) are recommended to access the full capabilities of MAK ONE applications.

As of spring 2022, new releases of MAK ONE applications share the same data installation, therefore the same set of data packages is all you need for any or all applications (VR-Vantage, VR-Forces, VR-Engage, SensorFX, and RadarFX).

#### Dependencies

Licensing tools and dependent products have their own installers. For details, see "2.4. Installing and Setting Up the MAK License Manager" on page 49.

For interoperability using HLA, see "2.5. Installing an RTI" on page 51.

Before you install VR-Engage, please read the release notes to see if there are any special instructions for installation.

### 2.1.2 Installing VR-Engage on Windows

Windows versions of VR-Engage are provided as downloaded files.

- To install VR-Engage, run the installer. Follow the instructions in the installation wizard. (You install the data used by VR-Engage separately, as described in "2.1.4 The makData Package" on page 45.)

Note the following:

- The installers are named to indicate the compiler used to build that version of VR-Engage.
- When you install large applications on Windows, there may be a delay of up to several minutes from the time you try to run the setup program to the time that an installation dialog box displays. This is due to how Windows scans setup programs before it executes them. If you experience this problem, turning off User Access Control can reduce or eliminate this delay.

## Installing the VR-Forces Plug-in

When the VR-Engage installer completes the data installation, it informs you of the plug-in that is available for VR-Forces. The VR-Forces plug-in allows you to take control of VR-Forces entities from VR-Engage if they are configured to be controlled by VR-Engage. If you have VR-Forces installed and want to install the plug-in, run the *VR-ForcesVR-EngageAdd-ons.exe* installer. This is packaged separately from the VR-Engage installer.

The VR-Forces plug-in makes the following changes to VR-Forces:

- Installs the *./data/simulationModelSets/VR-Engage.sms* and custom models.
- Replaces some VR-Forces level data or configuration files. In those cases, it saves the original version is preserved by the installer by copying it to *<original file name>.vrengage-addons-backup*. If you uninstall the VR-Engage add-ons installer, any VR-Forces files that the installer modified are restored by copying those *\*.vrengage-addons-backup* files to their original names.
- Adds RTDynamics and VREngage simulation model sets.
- Adds the VR-Engage revision to the About dialog box.

You must install the *VR-ForcesVR-EngageAdd-ons.exe* plug-in on top of a compatible version of VR-Forces. The *VR-ForcesVR-EngageAdd-ons.exe* installer attempts to check that the version of VR-Forces is compatible with your version of the VR-Engage add-ons. You can also refer to the VR-Engage release notes to learn which version of VR-Forces you can use with your version of VR-Engage. If you install the plug-in on an incompatible version of VR-Forces, it is not guaranteed to run reliably or correctly (if at all).

## Default Windows Installation Directory

The default root directory for installing MAK ONE products is *C:/MAK*.

You can use an environment variable, *MAK\_INSTALL\_DIR*, to specify a different location where all MAK ONE products and data should be installed by default. For example, if you define it as *MAK\_INSTALL\_DIR = D:\MyProject*, then all MAK ONE products automatically install to that location. The data packages and products would then install in that directory by default: *D:/MyProject/SharedData*, *D:/MyProject/vrlink5.9.1*, and so on.

## Installing the Product Documentation

Due to the limitations of Windows installers, the user and developer documentation for VR-Engage are in a separate installer. To access the documentation locally, you must run the product's *\*.docu.exe* installer and install the files in the product install directory.

The product documentation was not installed in the product's install directory. You must run the separate documentation installer to access the user and developer documentation locally.

### ► To install the documentation:

1. Run the product's documentation installer, *vrengage#.docu.exe*.
2. The wizard finds the location where you installed the product. Accept that location to ensure that links to the documentation work correctly.

3. Optionally, change the Start menu location for the shortcuts to the documentation. If you want, you can choose a location separate from product installation directory. For example, you might want to put MAK ONE documentation shortcuts in a central location. This change does not affect the documentation shortcuts folder that is already located in the product installation directory.
4. Complete the installation wizard. The product documentation will be available on your machine.

### 2.1.3 Installing VR-Engage PDB Files for Debugging Purposes

When a MAK ONE application crashes, it can be difficult to determine the cause of the crash. The application generates a *.dmp* file that contains valuable information about the state of the application at the time of the crash. MAK technical support can analyze this file to help diagnose the issue.

In addition, with the application's PDB (program database) files, the application is able to generate a call stack log file (*.callstack.log*) of the application at the time of the crash. The call stack log provides information in plain text about the sequence of functions that were called leading up to the crash, which is also helpful in identifying the specific cause.

By providing the *.dmp* or *.callstack.log* files to technical support, you help support personnel to resolve the issues. They use specialized debugging tools to analyze the files and determine the cause of the crash, and that information aids in the development of a solution to prevent future crashes.

Due to security reasons or organization policies, some customers cannot send the *.dmp* file to technical support. Because the call stack log file is a plain text file, it is easier to inspect and analyze than the *.dmp* file. Users can easily attach it to an email and pass it out of secure areas with visual inspection, making it a convenient option for customers with restrictions on sharing binary files.

It is important to note that the call stack log file alone might not be sufficient for support personnel to fully diagnose the issue. They may require more information to gain a complete understanding of the issue. A detailed procedure for reproducing the crash often helps them solve the problem you encountered.



- Support for the generation of the call stack log file was introduced in MAK ONE 2024. It is supported only in MAK ONE products part of that release and later versions.
- The PDB files are part of the Linux installation. You do not need to install them separately.

#### Installing PDB Files on Windows

Before installing the PDB files on Windows, you must install VR-Engage. Next, make sure that the PDB files you are installing are from the same build as the application. When you download the installer from the [MAK ONE Product Downloads](#) page, the appropriate PDB installer is also available for download.

► To install the PDB files:

1. After installing VR-Engage, run the PDB installer for that product.
2. The installer looks for the matching product directory by searching the registry and then it automatically sets the install directory to the appropriate path. If that is not correct for your product, see the note below.

For an installation of VR-Forces that will be used with VR-Engage, you should install the VR-Engage PDBs. This requires you to manually change the installation directory to the VR-Forces directory with no subdirectory, for example, `C:\MAK\vrforces5.1.1`. (You do not need to install the VR-Forces PDBs because they are included in the VR-Engage PDB installer.)

3. Complete the installation wizard. The necessary PDB files are installed in the product's `./bin64` directory.




- The default installation directory is `C:\MAK`. See "Default Windows Installation Directory" on page 43 to learn about setting the default to other locations.
- Be sure that the folder in the Select Destination Location page of the installation wizard is correct. It should be the top-level folder for the product installation.
- If the PDB installer displays a warning that the SVN revisions do not match, make sure that you have the correct PDB installer for the version of VR-Engage that you installed.

### Reporting an Issue Using the `.callstack.log` and `.dmp` Files

Send the `.callstack.log` and `.dmp` files (or only the `.callstack.log` if you are unable to provide the `.dmp` file) to MAK support through the Support Portal (<https://www.mak.com/support>) or [support@mak.com](mailto:support@mak.com). The files will have similar names and are located in the central directory for MAK ONE log files (Figure 7). Please also provide information on anything you experienced when the issue occurred.

**Figure 7. Example of `.callstack.log` and `.dmp` files for VR-Forces**

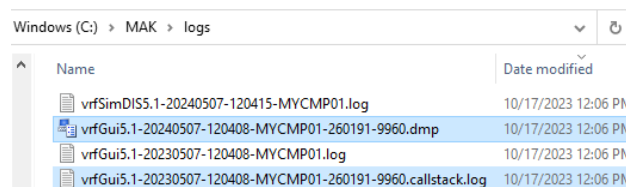

The default directory for MAK ONE log files is `C:/MAK/logs`. You can customize the location by specifying a different path in the `MAK_LOG_DIR` environment variable.

#### 2.1.4 The makData Package

The MAK Data Packages are used by multiple MAK ONE applications. The applications need to be able to find the data, wherever you install it. VR-Engage looks for data in a default location or uses a collection of environment variables to find the data in the

location where you installed it. You have several options for installing the data and telling VR-Engage where to look for it.

### MAK Data Installation Directory

The shared data files are stored in a directory file hierarchy. This structure allows for multiple versions of data to be installed for use with different versions of VR-Engage.

The directory looks like *shared-data-root/data-compatibility-version/stem/data-folders*, where:

- *shared-data-root* is the location of the shared data directory. The default is *C:/MAK/SharedData* on Windows and *~/MAK/SharedData* on Linux.
- *data-compatibility-version* is a number, such as 16 or 18.
- *stem* is the directory holding the data files, for example, *latest* for the most recent installation of that compatibility version or the date of a previous installation, such as *2024-03-14*.
- *data-folders* hold the various files that make up the MAK data files (models, audio files, fonts, and so on).

Advanced Windows users may want to install MAK Data Packages in a very specific way, for example, installing the data on a shared drive and configuring any machines with MAK ONE applications to look there for the data. Refer to the *MAK ONE Installation Guide* for instructions.

### Installing the makData Package

#### ► To install the data:

1. Install the MAK ONE Software Manager.
2. Run the MakOneSoftwareManager executable in the *.\bin64* folder.

On Windows 10 and 11, you can also open the Start menu and then choose **MAK Technologies > MAK ONE Software Manager**. (To launch MAK ONE products more easily than the Windows 10 Start menu, please see the *MAK ONE Installation Guide* or this blog entry: [Tech Tip: Starting MAK ONE Applications on Windows 10](#).)

3. Click Select and Install Data Packages in the welcome page.
4. Specify the directory where you saved the data files. The default is your Downloads folder, but you can click the folder icon to navigate to another folder.
5. Select the data files that you want to install.



MAK Technologies recommends that you install all of the data files if you have the space and are not absolutely sure which files you require.

You must install the Core data for VR-Engage to function. To have access to other terrains and to see anything other than notional models, install the other data packages provided by MAK. If you do not install any other data, it is assumed that you are providing your own models and terrains.

6. Optionally, choose the location where you want to install the data.



MAK recommends that you install the files in the default location. While MAK ONE products allow for diverse installations, the typical use is the standard installation. If you require a more complex installation, refer to the *MAK ONE Installation Guide*.

7. If you have a previous installation of data for the same compatibility version, you are prompted to choose whether to back up the previously installed data, delete it, or overwrite it. See "Options When Installing a Data Package" below.
8. Click Install. The MAK ONE Software Manager shows the progress of the data installation.
9. When the installation is complete, click Exit.

### Options When Installing a Data Package

When installing a data package using the MAK ONE Software Manager, if you have no preexisting installations of that compatibility version, it simply installs the data files in the `./SharedData/##/latest` folder (where `##` is the compatibility version).

If there is already a previous release of the same compatibility version installed, however, you are prompted to choose whether to back up, delete, or overwrite the data from the previous release.

- Backup. If you install a newer release and choose to create a backup the previous release, the files in the *latest* directory are moved to a new directory named for the data version's date in the same compatibility folder and the new files are then installed in the latest folder. For example, the old files move to `./SharedData/18/2024-03-14` and the new files are installed in `./SharedData/18/latest`.

Creating a backup is the recommended option in most circumstances. It allows all MAK ONE applications to use the newest data, while also giving you the option to revert to a previous release using command-line options or setting a Windows environment variable. See the *MAK ONE Installation Guide* for details.

- Delete. The installer deletes the old data from the *latest* directory and then installs the new data.
- Overwrite. The installer overwrites the previous data files in the *latest* directory with the newer ones you chose to install. It also adds files that are new and ignores files that were previously installed if the package you are installing does not include that file.

### 2.1.5 Uninstalling from Windows

MAK ONE product installations include an uninstaller application (*unins000.exe*), which you can find in the installation directory. Run that program to uninstall the product.

When you run other installers for the product, such as the PDBs and documentation, there are additional uninstallers. If you run the uninstallers from the highest number down (for example, *unins002.exe* and then *unins001.exe*), running *unins000.exe* uninstalls everything else and removes the install folder.

When you uninstall VR-Engage, files such as scenarios or SMSs that reside in the product directory are also deleted. Before uninstalling, copy any of your custom files from the product directory to another folder.

The uninstaller does not remove the data package. That is in a separate directory (for example, `./SharedData/18/latest`).

**i** If you run only the product uninstaller, you can then simply delete the rest of the product's install folder. Note that if you do not run all of the uninstallers, running only the product uninstaller may not remove all of the shortcuts from the Windows Start menu.

## 2.2. Upgrading VR-Engage Simulation Model Sets

When you upgrade to new, compatible versions of VR-Engage and VR-Forces, you must upgrade your simulation model set, as well. Refer to the documentation for the compatible version of VR-Forces, specifically the *VR-Forces Migration Guide* and "Upgrading Old Simulation Model Sets" in the *VR-Forces Users Guide*.

## 2.3. The VR-Engage Directory Structure

The installation process creates the VR-Engage directory structure shown in Figure 8. On PCs, the default installation directory is `C:\MAK\vrengage#.#.`

**Figure 8. VR-Engage directory structure**

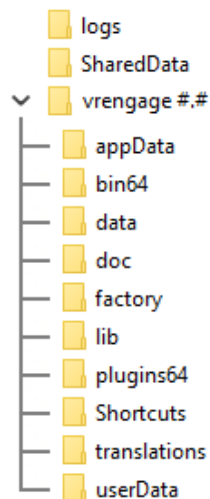


Table 1 describes the contents of the directories.

**Table 1. Contents of VR-Engage directories**

| Directory              | Directory contents                                                                                                                                                                   |
|------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>./appData</code> | Subdirectories contain data required by the VR-Engage applications, such as model definitions and saved settings. Also contains data required by the SensorFX plug-in for VR-Engage. |
| <code>./bin64</code>   | Executables and dynamic link libraries.                                                                                                                                              |
| <code>./data</code>    | Sample databases, images, and vehicle models.                                                                                                                                        |

**Table 1. Contents of VR-Engage directories (continued)**

| Directory                   | Directory contents                                                                                                                                   |
|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>./doc</code>          | VR-Engage documentation and class reference files.                                                                                                   |
| <code>./factory</code>      | Backups of the application data and settings provided by MAK. Also includes the default settings for SensorFX (for reverting to “factory” settings). |
| <code>./lib</code>          | Libraries for Tracy client.                                                                                                                          |
| <code>./plugins64</code>    | Plug-in shared libraries.                                                                                                                            |
| <code>./Shortcuts</code>    | Contains the shortcuts to the documentation and tools, which are used for the Windows Start menu.                                                    |
| <code>./translations</code> | Translation files for localizing VR-Engage menus.                                                                                                    |
| <code>./userData</code>     | Terrain and scenario files.                                                                                                                          |

## 2.4. Installing and Setting Up the MAK License Manager

Before you can use a MAK ONE product, you must obtain a valid license file, install the MAK License Manager, and configure the license server and client machines. The License Manager uses a client-server architecture, so you do not need to install the License Manager on every computer on which you install MAK ONE products. You only need to install it on the computer that you will use as the license server.

**i** If you have already installed the License Manager for another MAK ONE product, you do not have to install it again. You only need licenses for your newly installed products.

The License Manager installer is included with MAK installation media. It is separate from the product installers. You can download the installers from the [MAK ONE Product Downloads](https://www.mak.com/mak-one-downloads) page at <https://www.mak.com/mak-one-downloads>.


Complete installation and configuration instructions are included with the License Manager installer. The *MAK ONE Installation Guide* is available at <https://mak.com/mak-one-installation-guide>.

Some customers use dongle licenses instead of running a license server. Instructions for using dongles are also in the *MAK ONE Installation Guide*.

### 2.4.1 Specifying the License Server

The first time you run a MAK ONE product on a particular computer, the License Setup dialog box opens (Figure 9). It prompts you to enter the hostname of the license server and, optionally, a port number.

Figure 9. License Setup dialog box

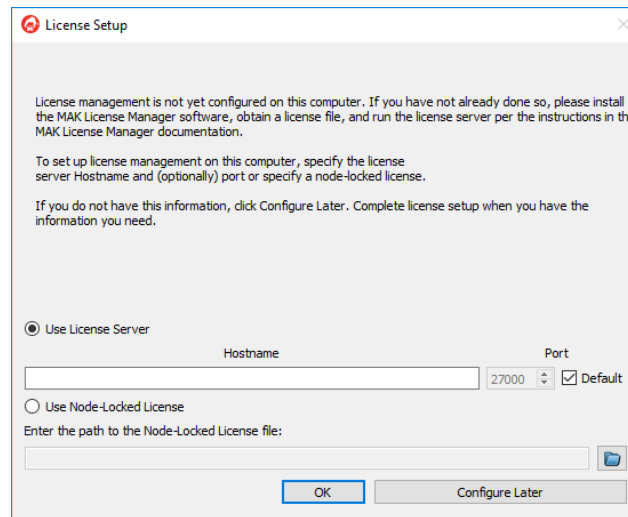

If you do not know the hostname of the license server, click **Configure Later**. When you have the hostname, you can start the application again and complete the dialog box. You will not be able to run any MAK ONE products until you set up license management.

If you know the hostname, enter it in the **Hostname** box and then click **OK**. The application will start.

Under limited circumstances, MAK issues node-locked licenses. If you have a node-locked license, select the **Use Node Locked License** option and enter the path to the license file.



- If you are running MAK ONE products on the license server machine, it is also a client, so you must specify the license server on that machine, too.
- If you change the license server, the saved configuration will no longer be valid and the License Setup dialog box will open the next time you start a MAK ONE product.
- If you have changed the license server, you may want to clear the license cache. You can clear the saved license configuration by deleting the cache file. On Windows, it is *C:\Users\user\_name\AppData\Roaming\MAK\licenses<n>.txt*. (The *AppData* directory is hidden by default.) On Linux, it is *.mak/license<n>.txt*. (There may be more than one cache file, for example, *licenses1.txt* and *licenses2.txt*.) You can also clear the cache in the RTI Assistant.

### Setting the MAKLMGRD\_LICENSE\_FILE Environment Variable

As an alternative to using the license setup procedure described in the previous section, you can configure the license server or node-locked license in an environment variable. The MAKLMGRD\_LICENSE\_FILE environment variable identifies the server machine. If you set this environment variable, it overrides the settings stored by the license setup procedure.

For license servers, the syntax for the environment variable is: `@server_name`. For example, if the server machine is oak, set the environment variable to `@oak`.

The following sections explain how to set environment variables on the different platforms that MAK ONE products run on.

### Windows

#### ► To set MAKLMGRD\_LICENSE\_FILE in Windows:

1. On the Start menu, click the Settings button (⚙️). The Settings window opens.
2. In the Search box, enter `environment`. A list of choices displays.
3. Select `Edit the System Environment Variables`. The System Properties dialog box opens to the Advanced tab.
4. Click the Environment Variables button. The Environment Variables dialog box opens.
5. Below the System Variables list, click `New`. The New System Variable dialog box opens.
6. In the Variable Name field, enter `MAKLMGRD_LICENSE_FILE`.
7. In the Variable Value field, enter `@server_name`, where `server_name` is the name of the license server.
8. Click `OK` to save out of each dialog box and set the variable.

### Linux

On Linux, you set environment variables in your `.cshrc` (or equivalent startup file).

#### ► To specify a license server, set the variable similarly to:

```
setenv MAKLMGRD_LICENSE_FILE @oak
```

If you are using the `sh` or `bash` shells, you set environment variables in your `.profile` file (or `.bashrc`). Set the variable similarly to:

```
MAKLMGRD_LICENSE_FILE=@oak
export MAKLMGRD_LICENSE_FILE
```

Do not put spaces around the equal (=) sign.

You are ready to run the license server and use your new licenses or MAK ONE products.

## 2.5. Installing an RTI

An RTI is a software library (and perhaps supporting executables) that implements an HLA Interface Specification. In HLA, applications exchange FOM data through RTI calls, which means that all HLA applications need to use an RTI. MAK Technologies has the MAK RTI, but MAK ONE products do not require that you use the MAK RTI.



Because of differences in the low-level network mechanisms used by different RTI implementations (which include, but are not limited to, packet layout), applications that want to interoperate in the same federation execution must use the same RTI implementation.

Because RTIs are usually provided as dynamic libraries that implement a fixed API, a federation can often switch from one RTI implementation to another between runs (without even recompiling the applications), but during each run, all participants must agree on which RTI to use, much as they must also agree on which FOM to use.

For the most recent information about the RTI versions supported by MAK ONE products, please visit the Product Specifications & Dependencies page (<https://www.mak.com/mak-one-specs>).

The following instructions explain how to install the MAK RTI. If you are using an RTI provided by another vendor, please refer to that RTI's documentation for installation and setup instructions.

### 2.5.1 Installing the MAK RTI

To install the MAK RTI, follow the instructions in Chapter 2 of *MAK RTI Users Guide*. To install another RTI, see the vendor's documentation.

#### Configuring Your System to Use the MAK RTI

The RTI dynamic libraries must be located somewhere on your dynamic library search path. The path is specified in the PATH environment variable. The path is indicated by an environment variable:

- Linux — LD\_LIBRARY\_PATH.
- Windows — PATH.
- The MAK RTI needs to know where to find these configuration files:
  - The federation configuration file (*.fed*, *.fdd*, or *.xml*) for your federation execution (required).
  - The RID file (*rid.mtl*) (optional).

Put the configuration files in the directory from which you are running, or set the environment variable RTI\_CONFIG to the directory that contains them.

#### Running Applications with the MAK RTI

##### ► To run a MAK ONE product with the MAK RTI:

1. Ensure that the license server is running.
2. Start the application. The RTI Assistant prompts you to choose an RTI configuration.
3. Choose a configuration. If necessary start the rtiexec.
4. Click Connect. The application should run.

In many cases, you do not need to run the rtiexec to use the MAK RTI, however you can run the rtiexec if you want to. (It is required to use certain features of the MAK RTI.) For more information, please see your RTI documentation.

## 2.6. Input Devices

VR-Engage can support any device that Windows recognizes as a game controller. VR-Engage is tested with these game controllers and has configurations for them:

- Xbox controller
- Logitech F310 Gamepad
- Logitech F710 wireless Gamepad
- Logitech G27 Steering Wheel
- Logitech G29 Driving Force game steering wheel
- Thrustmaster Hotas Warthog
- Thrustmaster T-Flight Hotas X

The mappings for these devices and the keyboard are described in "Chapter 11. Mouse, Keypad, and Controller Mappings" on page 205. Please contact support (<https://www.mak.com/support>) for assistance configuring other devices.

### 2.6.1 HMD Support

VR-Engage 2.1.1 supports a number of virtual and mixed reality devices. See "3.10. Introduction to Head-Mounted Displays" on page 77 and also the chapter [Using Head Mounted Displays for Virtual and Mixed Reality](#) in the *VR-Vantage Users Guide* to learn more.

## 2.7. Factors that Affect Performance

The performance of a visualization product such as VR-Engage depends on:

- Processor speed.
- Video card. (Always use the latest drivers for your video card.)
- Available memory.
- Size of the terrain database.
- The number and complexity of models loaded and how well they have been optimized for performance. For information about optimizing models, see "[Best Practices for Creating Models](#)" in the *Adding Content to MAK ONE Applications Reference Manual*.
- Number of objects in the simulation and how active they are.
- Use of model instancing.

**i** Nahimic audio software can have a negative impact on performance. See "A.1. Performance and Display Issues" on page 338 to learn how to add the application to the *BlackApps.dat* file.

## 2.8. Using MAK ONE Products on Virtual Machines

You can run MAK ONE products on virtual machines. For more information, see the *Running MAK ONE Products on Virtual Machines or Docker Containers* guide on our website at [https://www.mak.com/docs/products/MAK\\_ONE\\_Running\\_On\\_Virtual\\_Machines.pdf](https://www.mak.com/docs/products/MAK_ONE_Running_On_Virtual_Machines.pdf).


## 2.9. Localizing the Graphical User Interface

You can localize your MAK ONE product's graphical user interface so that it uses languages other than English. Your product includes a file called `./translations/product_untranslated.ts`, for example, `vre_untranslated.ts` or `vrv_untranslated.ts`. The file contains entries for all of the application-specific menu and dialog box text. The Qt Linguist tool, which is included with VR-Engage, lets you map the English text provided by MAK to your chosen language.

► To edit a resource file:

1. Start the Qt Linguist utility. It is `./translations/linguist.exe`
2. In the Qt Linguist window, choose **File > Open**. Select the file `./translations/product_untranslated.ts`. The Settings for *filename* dialog box opens (Figure 10).


**Figure 10. Linguist settings dialog box**

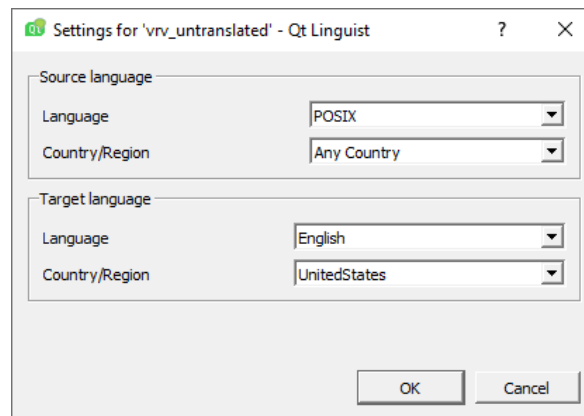

3. Select values for the source language, target language, and target region or country.
4. Click OK. The translation file opens and a list of classes displays on the left side of the window (callout 1 in Figure 11).




Figure 11. Linguist window

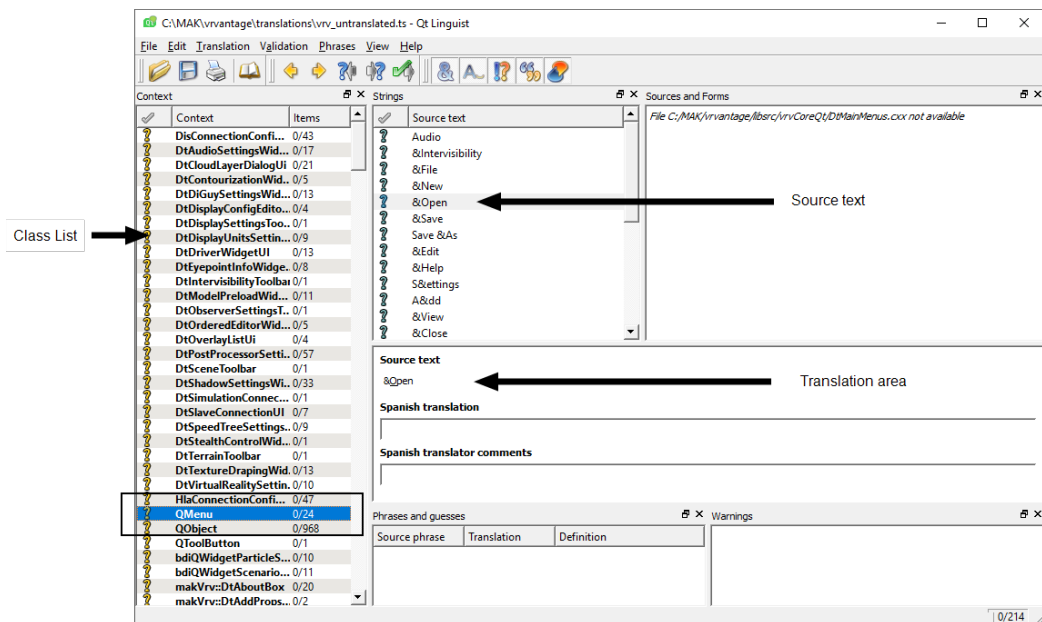

5. To translate text, select each class in turn and translate the text associated with that class. You do not have to understand anything about what the classes mean; you only need to translate the text. In Figure 11, **QMenu** is selected. The Strings window lists text that can be translated (callout 2). Text that has not been translated has a blue question mark in the checkmark column.
6. In the Source Text list, select the word you want to translate. The text displays under Source Text in the translation area (callout 3 in Figure 11).
7. Place the cursor in the text box below *language* Translation, where *language* is the target language that you selected when you opened the translation file.
8. Type the translation text.
9. When you are done and you are certain of the translation, select the Done and Next button (👉) on the toolbar. A green check mark replaces the question mark (Figure 12). If you move to a different text string without clicking Done and Next, a yellow question mark is displayed for the string you translated. When you translate all elements for a class, a green check mark replaces the question mark next to the class name.

Figure 12. Completed translation for Open

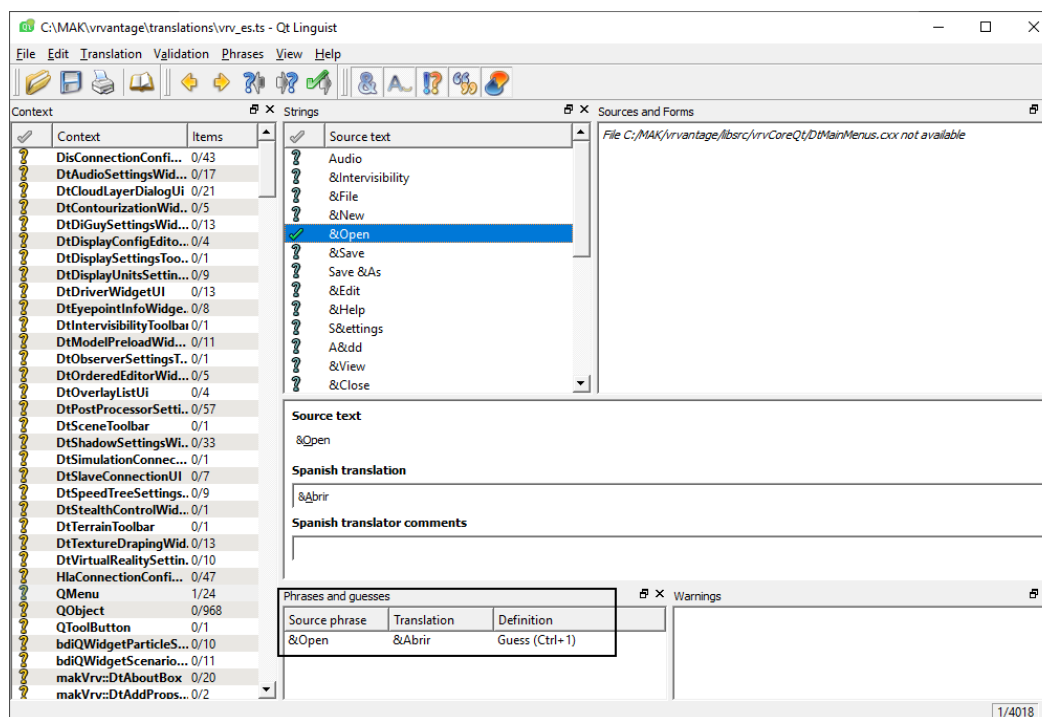

10. Repeat this process for each element of source text for each class.
11. Choose **File > Release**. The file is saved in the format *filename.qm*.
12. Rename the file to a name that indicates the language to which you have translated the file, using the two-character abbreviation typically used with your language. For example, a Spanish translation would be renamed *product\_es.qm*.
13. Save your translated *.ts* file.

### 2.9.1 Translating Other Interface Files

The *vre\_untranslated.ts* or *vrv\_untranslated.ts* file contains all the text used in the VR-Engage interface. However, there may be other text and messages that are not specific to VR-Engage that are generated by the software that implements the VR-Engage GUI. To translate this text, you need to translate the file *qt\_untranslated.ts*. Follow the same procedure as you did for *vre\_untranslated.ts*.

### 2.9.2 Applying the Language Files

► To put the language file into effect, use one of the following methods:

- Set your computer's environment to the proper language (LANG environment variable).
- Set the locale to the proper language.
- Start VR-Engage with the `-G locale` command-line option, where *locale* is the two-letter country code for the local language.



## 3. Starting VR-Engage

This chapter describes how to start up VR-Engage, connect to a session, and choose a role.

|                                                               |    |
|---------------------------------------------------------------|----|
| 3.1. Starting VR-Engage .....                                 | 58 |
| 3.1.1 Hosting a VR-Forces Session .....                       | 58 |
| 3.1.2 Starting an Unhosted Session .....                      | 60 |
| 3.1.3 Admin, User, and Lockdown Modes .....                   | 61 |
| 3.2. Choosing a Role .....                                    | 62 |
| 3.2.1 Choosing an Existing Role .....                         | 63 |
| 3.2.2 Creating a New Entity .....                             | 64 |
| 3.2.3 Using an HMD with an Entity .....                       | 66 |
| 3.2.4 Assigning Roles from VR-Forces .....                    | 66 |
| 3.3. Connecting to VR-Forces .....                            | 68 |
| 3.4. Changing Your Role .....                                 | 69 |
| 3.4.1 Changing Your Role in the Choose Role Panel .....       | 69 |
| 3.4.2 Changing Your Role by Embarking on a Vehicle .....      | 69 |
| 3.4.3 Switching Roles on a Vehicle .....                      | 70 |
| 3.5. Entity Engagement and Scenario State .....               | 71 |
| 3.6. Overview of the Application Menu .....                   | 71 |
| 3.7. Starting a New Session .....                             | 73 |
| 3.8. Configuring the Simulation Connection .....              | 73 |
| 3.8.1 HLA Connection Settings .....                           | 74 |
| 3.8.2 DIS Connection Settings .....                           | 75 |
| 3.9. Playing in Windowed Mode .....                           | 77 |
| 3.10. Introduction to Head-Mounted Displays .....             | 77 |
| 3.10.1 Prerequisites for Using an HMD .....                   | 77 |
| 3.10.2 Resetting the Tracking Sensor .....                    | 78 |
| 3.10.3 Calibrating the Eye Tracking for Varjo .....           | 78 |
| 3.10.4 Enabling and Disabling Virtual Reality Rendering ..... | 78 |

|                                                                  |     |
|------------------------------------------------------------------|-----|
| 3.10.5 Configuration Options for Virtual and Mixed Reality ..... | 79  |
| 3.10.6 Setting Up Mixed Reality .....                            | 81  |
| 3.10.7 Optimizing Performance with HMDs .....                    | 83  |
| 3.11. Creating a Startup Configuration .....                     | 83  |
| 3.11.1 Minion and Boss Configuration .....                       | 84  |
| 3.12. Starting Multiple Simulation Engines .....                 | 84  |
| 3.13. Command-Line Options .....                                 | 86  |
| 3.14. Command-Line Options for Player Stations .....             | 99  |
| 3.15. Managing Plug-ins .....                                    | 99  |
| 3.15.1 Loading Plug-ins .....                                    | 100 |
| 3.15.2 Adding a Plug-in .....                                    | 100 |
| 3.15.3 Specifying the DLLs for a Plug-in .....                   | 101 |
| 3.15.4 Adding a Plug-in Configuration .....                      | 102 |
| 3.15.5 Deleting a Plug-in Configuration .....                    | 103 |
| 3.15.6 Deleting a Plug-in .....                                  | 103 |

## 3.1. Starting VR-Engage

When you start VR-Engage, it looks for an instance of VR-Engage or VR-Forces that is running, to check for a session to join. A session manages the relationship between the simulation engine, or back-end, and the GUI, or front-end. For more information, see the chapter *VR-Forces Application Concepts* in the *VR-Forces Users Guide*.

If VR-Engage finds a session, it immediately connects to it, loads the terrain it is using, and then shows you a list of entities that you can control. If it does not find a session, it stops and prompts you to choose whether to host a VR-Forces session or start an unhosted session.

You can set some of the startup behaviors with a startup configuration script. For details, see "3.11. Creating a Startup Configuration" on page 83.

**i** If you join a session hosted by either VR-Forces or another instance of VR-Engage, your instance of VR-Engage does not create a sim engine by default.

If you want to run a simulation engine for your instance of VR-Engage, you must edit the `./appData/scripts/playerStation.lua` file and change the `alwaysRunOwnshipSim` parameter to `true`.

### 3.1.1 Hosting a VR-Forces Session

VR-Engage includes scenarios that were created using VR-Forces. When you host a VR-Forces session, you can load one of these scenarios or start an empty scenario on any installed terrain. If you run an existing scenario, you can control any of the entities in them. You can also add and control one other entity. If you start an unhosted (empty) scenario, you can only add and control one entity.

If other instances of VR-Engage are running, they can connect to the session. Each instance can only control one entity.

- i
  - You cannot save scenarios in VR-Engage. The principal benefit of hosting a VR-Forces session is that a VR-Forces session supports global weather and dynamic terrain. If you want to create and save scenarios for use with VR-Engage, you must run VR-Forces with the VR-Engage add-ons.
  - When you host a VR-Forces session, you use a VR-Forces license. If you only have one VR-Forces license and you host a VR-Forces session from VR-Engage, you will not be able to start the VR-Forces application.
  - By default, the list of scenarios comes from those saved in the `./userData/scenarios` directory, including any subfolders. You can change this by editing the `USER_DIR` environment variable or the `defaultScenariosDirectory` definition in the `./appData/scripts/playerStation.lua` file.

► **To start VR-Engage and host a VR-Forces session:**

1. On the Start menu, choose **MAK Technologies > VR-Engage 2.1.1**. The VR-Engage window opens.

- i

Windows 10 and 11 have a flatter Start menu structure than previous versions of Windows. They do not support nested folders. If you are interested in using a nested menu to start MAK ONE applications on Windows 10, please see the *MAK ONE Installation Guide* or this blog entry: [Tech Tip: Starting MAK ONE Applications on Windows 10](#).

2. In the Choose Connection screen, select the connection that you want to use and then click Connect. The Searching for a Session screen displays.

- i

Optionally, you can change the connection settings. For details, see "3.8. Configuring the Simulation Connection" on page 73.

3. If VR-Engage finds a VR-Forces session, it connects to it.

If it does not find a session, the Searching for Session screen provides you with the options to host a VR-Forces session or start an unhosted session (Figure 13).

Figure 13. Searching for Session



**i** By default, the VR-Engage window fills the screen, which we call full-screen mode. Admin mode shows title bar and menu bar typical of most windowed applications. We call this windowed mode. Full-screen mode does not have menus or other window controls. Although full-screen mode is the default for controlling characters, you can also control them in windowed mode. For details, see "3.9. Playing in Windowed Mode" on page 77.

4. Click Host VR-Forces Session. The Choose a Scenario for this Session dialog box opens, where you can load a scenario.
5. Select the scenario you want to load. Any information about the scenario displays at the right. If you are in Admin mode, the simulation model set also displays below the scenario information.
6. Click Load Scenario. A loading screen displays while opening the scenario and starting a sim engine. Once the terrain and scenario load, VR-Engage displays the scenario in 3D View mode and opens the Choose Role Panel (Figure 14 on page 62).
7. Choose a role, as described in "3.2. Choosing a Role" on page 62.

### 3.1.2 Starting an Unhosted Session

In an unhosted session, you cannot load scenarios. You can load an installed terrain and create a single entity on it to control. If there are other VR-Engage unhosted sessions running on the network, you can interact with them.



- Unhosted sessions do not support dynamic terrain. Destructible buildings and buildings with switchable state windows or doors do not function in an unhosted session. As a result, players cannot damage buildings and cannot open and close doors or windows on buildings.
- By default, the list of terrains comes from those saved in the `./SharedData/18/latest/TerrainData/TerrainConfiguration` directory. You can change this by editing the `SHARED_DATA_DIR` environment variable or the `defaultTerrainsDirectory` definition in the `./appData/scripts/playerStation.lua` file.

► **To start VR-Engage and host a VR-Forces session:**

1. On the Start menu, choose **MAK Technologies > VR-Engage 2.1.1**. The VR-Engage window opens.
2. In the Choose Connection screen, select the connection that you want to use and then click Connect. The Searching for Session screen displays (Figure 13 on the previous page).
3. Click Start Unhosted Session. The Choose Terrain list displays.
4. Select a terrain. Any information about the terrain displays at the right. If you are in Admin mode, the simulation model set also displays below the terrain information.
5. Click OK. VR-Engage displays the terrain in 3D View mode and the Choose Role Panel opens (Figure 14 on the next page).
6. Create an entity to control, as described in "3.2.2 Creating a New Entity" on page 64.

### 3.1.3 Admin, User, and Lockdown Modes

There are three modes for VR-Engage: Admin (administrator), User, and Lockdown:

- User mode, which is the default, is meant for role players that are allowed to set the DIS/HLA networking parameters, choose the sessions and entities that they engage with, and select their roles. This mode allows users to host a VR-Forces session (assuming you have a VR-Forces license), join an existing VR-Forces session, or add a new VR-Engage-owned entity to an exercise. Users can play and pause the scenario that they are hosting, or are participating in an unhosted scenario.

User mode does not allow the player to access the Qt-based menus and toolbars that VR-Engage inherits from VR-Vantage to set advanced visualization and application settings. It also omits administrative functionality, such as Reset and Reset in Place. You can switch to Admin mode to access those functions.

- Admin mode is for developers and administrative staff, allowing them to configure, debug, customize, and tune the performance of VR-Engage. It includes all of the capabilities of User mode, and adds the ability to edit Display Engine configurations as well as access many of the VR-Vantage rendering engine's menus and toolbars. From those UI elements, you can control and monitor visuals such as shadows, high-dynamic range rendering (HDR), lighting, ocean settings, time and weather, and much more. Admin mode also allows you to reset and restore an entity you are



controlling if it is destroyed or otherwise inoperable.

- Lockdown mode is intended for deployed training systems where the scenarios will be loaded and roles assigned by an instructor/operator using VR-Forces. It is more restrictive than User mode because it disables the Choose Session, Choose Role, and Create Entity functions. The player can only play the roles assigned to them through the instructor/operator station, scripts, or command-line options.

There are three methods for specifying the mode:


- Use the `--appMode` command-line option to specify which mode you want to use: user, admin, or lockdown.
- At runtime, toggle between the Admin and User modes by pressing **Shift+F12**. This does not work in Lockdown mode by default. You can choose to allow for Admin mode in Lockdown by using the `--enableAdminMode` command-line option.
- Specify the mode to use in the `./appData/scripts/playerStation.lua` file's **applicationMode** parameter.

## 3.2. Choosing a Role

When you connect to or start a session, you can then choose a role to play. The VR-Engage window lists the available roles in the Choose Role Panel (Figure 14). If another player station is controlling a role, that is indicated in the Engaged column and you cannot take control of that role.

If you load a scenario or connect to a simulation, you can choose one of the entities in the simulation or create a new entity (except in lockdown mode). If you start an unhosted session, you must create a new entity and choose that entity to control.

Figure 14. Choose Role Panel

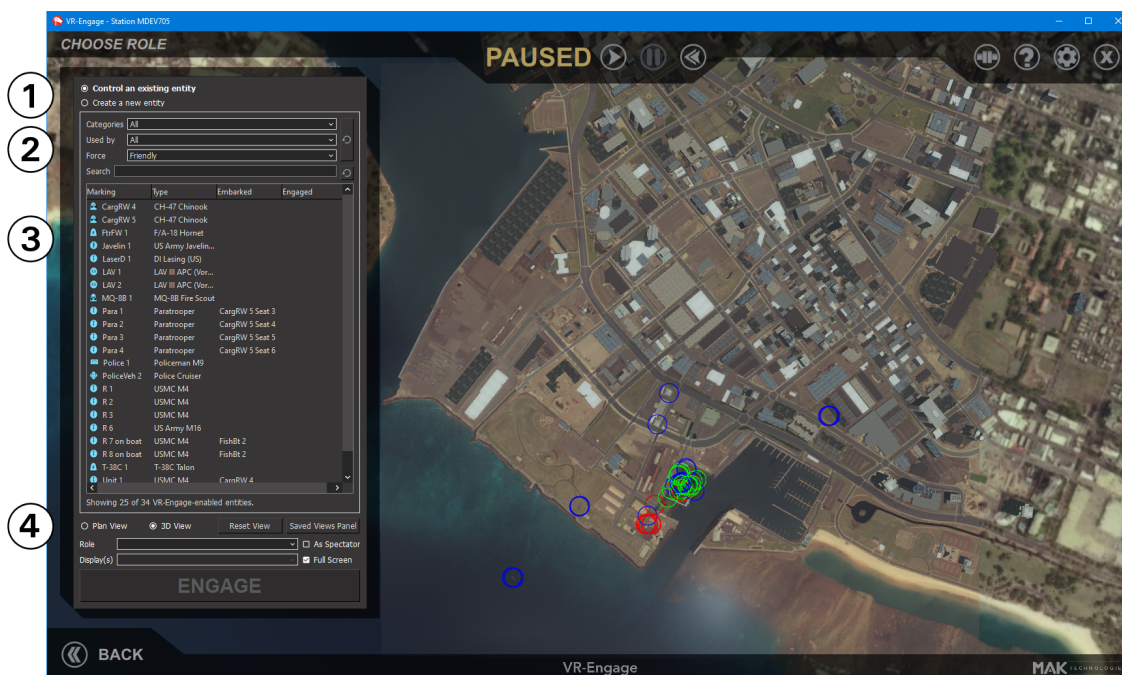



- 1 – Action type
- 2 – Filters
- 3 – Entity list
- 4 – View mode

VR-Engage users typically control a character in the simulation. However, you can also participate as a spectator. A spectator attaches to an entity in the same way as a player, but cannot control the entity. The entity is controlled by another player or by another application, such as VR-Forces. While the scenario is running, the spectator's display indicates that they are not actively playing the role.

When you host a session and engage in a role, the scenario begins to run. If you join a session hosted by VR-Forces or another instance of VR-Engage, the user of that application controls when the scenario is running or paused. If you create an unhosted session, the scenario does not begin to run until you click Play.

**i** Multiple players should not try to control the same vehicle or person in the same role. If multiple players take control of an entity in the same role, and then one of the players relinquishes control by returning to the Choose Role Panel, the remaining player also loses control of that entity. If this happens, the remaining player can regain control of the entity by going through the Choose Role process.

Note that two players can concurrently play different roles in the same vehicle, for example, one player is Driver and the other is Gunner or Commander.

### 3.2.1 Choosing an Existing Role

If you load a scenario or connect to a simulation that is publishing entities, you can select one of them as your role.

► **To choose a role:**

1. In the Choose Role Panel, select Control an Existing Entity. The panel lists the entities in the loaded scenario.
2. Optionally, filter the list by category, used by (country), force, or search string.
3. Optionally, switch from 3D view to the Plan View display mode (2D) by selecting an option at the bottom of the panel.
4. Select an entity by choosing it from the list or clicking it on the terrain.
5. If the selected entity has multiple roles, such as those on a vehicle, select an option from the Role list.
6. If the selected entity is an aircraft or a vehicle with different display options, select a display option from the Display(s) list. (For information about aircraft display options, see "7.1.4 Aircraft Display Options" on page 168.)
7. If you just want to observe the simulation from the perspective of the selected character but not actually control it, select the As Spectator check box.
8. If you want to use VR-Engage in full-screen mode, select the Full Screen check box.

If you want to use VR-Engage in windowed mode, clear the Full Screen check box.

9. Click Engage. You can now control your character and participate in the scenario (or watch, if you chose to be a spectator).

### 3.2.2 Creating a New Entity

When you are hosting a session or running an unhosted session, you can create a single entity and control it. That entity can participate in the simulation but, if you change roles, it is removed from the simulation.

► **To create an entity:**

1. In the Choose Role Panel, select the Create a New Entity option. The window lists the entity types that you can create.
2. Optionally, filter the list by category, country (used by), force, or search string.
3. Optionally, switch from the 3D view to the Plan View display mode (2D) by selecting an option at the bottom of the panel.
4. Select an entity in the list (Figure 15).

Figure 15. List of entities to create

5. Optionally, in the Marking box, you can type a name for the character. The maximum length is 11 characters.
6. Optionally, specify a heading.
7. Optionally, specify an altitude. By default, humans and ground vehicles are placed on the ground. Aircraft are placed at the altitude specified in the Altitude box. If you want an aircraft to be placed on the ground, you can change the specified altitude or select the Ground Clamp option. Similarly, if you want to create a paratrooper in the air, select the At Altitude option and specify an altitude.
8. Click on the terrain where you want to place the entity. (You can navigate the Plan View or 3D view using your mouse and keyboard. For details about navigating the terrain, see the chapter [Moving the Observer](#) in the *VR-Vantage Users Guide*.)
9. If the selected entity has multiple roles, such as those on a vehicle, select an option from the Role list.

10. If the selected entity is an aircraft or a vehicle with multiple views, select a display option from the Display(s) list. (For information about aircraft display options, see "7.1.4 Aircraft Display Options" on page 168.)
11. If you simply want to observe the simulation from the perspective of the selected character but not actually control it, select the As Spectator check box.
12. If you want to use VR-Engage in full-screen mode, select the Full Screen check box.  
If you want to use VR-Engage in windowed mode, clear the Full Screen check box.
13. Click Engage. You can now control your character and participate in the scenario (assuming you did not choose to be a spectator).


### 3.2.3 Using an HMD with an Entity

VR-Engage supports use of head-mounted displays to provide a virtual reality or mixed reality experience when you are controlling an entity. VR-Engage includes some entities that are configured for virtual or mixed reality. For entities that are configured for it, you can choose to use a VR or MR headset when one is connected. For details about configuring HMDs, see "3.10. Introduction to Head-Mounted Displays" on page 77.

► **To use a head-mounted display to control an entity:**

1. Start VR-Engage.
2. Join a session or load a scenario.
3. Create a new entity or select an existing entity.
4. On the Displays list, select VR Headset (virtual reality) or MR Headset (mixed reality), as appropriate.

**Figure 16. Displays list**

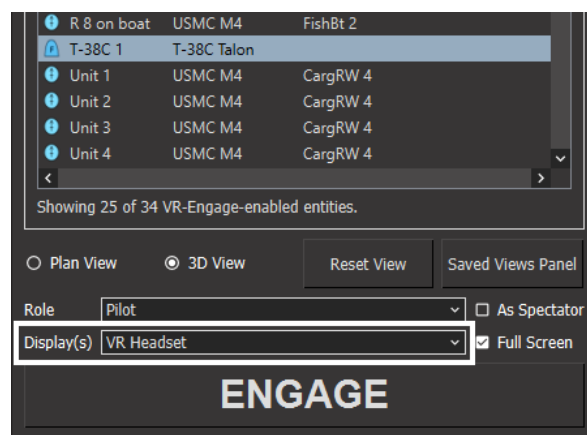

5. Engage the entity.

### 3.2.4 Assigning Roles from VR-Forces

If you install the VR-Engage Add-ons for VR-Forces in a compatible version of VR-Forces, you can assign roles from VR-Forces. This includes:


- Assigning an initial role for the player and starting the scenario.
- Specifying that the player be a spectator.
- Changing the role to None, which causes the VR-Engage session to revert to the Plan View role selection GUI.
- Changing the role to a different entity as the scenario progresses.

Managing entity assignments from VR-Forces does not prevent the VR-Engage player from using the VR-Engage GUI to select roles. If the VR-Engage player selects a role, that decision is reflected in the VR-Engage Manager Panel in VR-Forces.

► **To manage role assignments from VR-Forces:**


1. Start a version of VR-Forces that is compatible with your version of VR-Engage and has the VR-Engage Add-ons for VR-Forces installed.
2. Load the scenario you want to run.
3. Choose **View > VR-Engage Manager Panel**. The VR-Engage Manager Panel opens (Figure 17).

**Figure 17. VR-Engage Manager Panel**

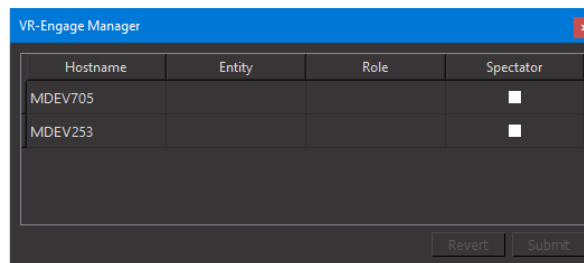


4. Start VR-Engage. It automatically connects to the VR-Forces session. The VR-Engage Manager Panel displays the hostname of the machine running VR-Engage. (If you have multiple instances of VR-Engage running, they are listed on additional rows in the panel.)
5. Click the Entity cell for the VR-Engage host to which you want to assign a role. The Select Entity to Control dialog box opens (Figure 18).

Figure 18. Select Entity to Control dialog box

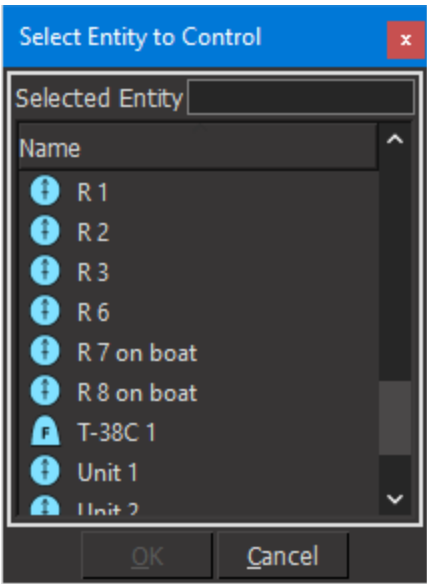

- 6. Select the entity that you want the VR-Engage player to control. If the player has a role and you want to set it to no role, select <NONE>.
- 7. Click OK. The entity is listed in the table cell and the role is listed in the Role cell.

Figure 19. VR-Engage Manager Panel with entity selected

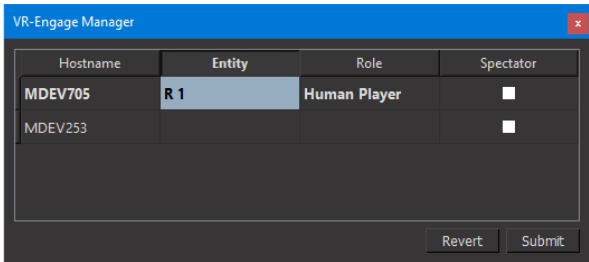

- 8. If the entity supports multiple roles, such as the LAV, you can select which role you want it to use. To select a role, click the Role cell. It becomes a list.
- 9. Select the role you want in the list. The panel automatically fills in the Station Name column.
- 10. If you want the player to participate as a spectator, select the Spectator check box.
- 11. Click Submit. The assignment is sent to the host. The player is automatically engaged in the assigned role on the host machine.

3.3. Connecting to VR-Forces

VR-Engage can interact with any DIS or HLA simulation. However, it has a particular ability to participate in simulations that use VR-Forces, MAK’s computer generated forces application. This allows you to switch between player and CGF control while the scenario is running. You can also use VR-Forces to create scenarios that include VR-Engage controllable entities in addition to CGF simulation objects.

By default, when you start VR-Engage, it looks for a VR-Forces session to join. If it connects to a complementary VR-Forces build that has the appropriate VR-Engage plugins installed, you can take control of entities being simulated by VR-Forces. You can assume control of VR-Forces entities and give up control as desired.

When you take control of a VR-Forces entity, the entity pauses the plan or task it is executing. When you give up control of the entity, control returns to VR-Forces and the entity resumes whatever task or plan it was executing before you took control of it.

For a list of entities that can be controlled by VR-Engage players out of the box, see "Chapter 12. Controllable Entities" on page 255.

To learn how to create your own VR-Forces scenarios, see "Chapter 15. Creating VR-Engage Scenarios in VR-Forces" on page 317.



- You can only control entities that are in the VR-Engage SMS or your own SMS that extends that SMS. The VR-Engage SMS includes most human characters, ground vehicles configured to use the Vortex libraries, and aircraft configured to use RotorLib or FixedWingLib.
- For more information on connecting and troubleshooting separate instances of MAK ONE products, please refer to the *MAK ONE Interoperability Guide*.

## 3.4. Changing Your Role

If a scenario has multiple entities, you can change the role you are playing to be any entity in a scenario. You can change your role by exiting the simulation and choosing a new role. You can also change a role by embarking on a vehicle and choosing an available role.

### 3.4.1 Changing Your Role in the Choose Role Panel

You can change your role by returning to the Choose Role Panel. When you engage characters or exit a character to the Choose Role Panel, the state of the scenario may change. For details, see "3.5. Entity Engagement and Scenario State" on page 71.

#### ► To change your role:

1. Press **Esc**. The Application Menu displays.
2. Click Choose Role. You return to the Choose Role Panel (Figure 14 on page 62).
3. Select the role you want, as described in "3.2. Choosing a Role" on page 62.
4. Click Engage.

### 3.4.2 Changing Your Role by Embarking on a Vehicle

You can change your role dynamically while you are participating in a simulation. For example, the LAV has several roles associated with it: Driver, Gunner, Commander, Passenger, and Driver/Gunner. Other vehicles can have different sets of roles available. If you embark on a LAV while playing a human character, you can assume any of these roles except for Driver/Gunner. (If you embark on a LAV from the Choose Role panel, you cannot select Passenger.)

► **To change your role by embarking on a vehicle:**

1. Walk towards a vehicle that supports embarkation. As you near the vehicle, the Embark menu opens.

**Figure 20. Embark LAV menu**



**i** If the Embark menu closes before you make a selection, back up your character a few steps and then approach the vehicle again.

2. Select a role using one of the following methods:
  - Use the up and down arrow keys or the up and down buttons on your D-pad to select a role. Then press the **Right arrow** key or right button on the D-pad to embark using the selected role.
  - Press the number key associated with the embarkation option you want.
  - Click the embarkation option you want. You can only use the mouse when mouse control is disabled.

### 3.4.3 Switching Roles on a Vehicle

Ground vehicles configured with more than one role allow the player to change roles when they are embarked. Using the Action menu or the square bracket keys ([ or ]), they can change to any of the roles (other than Passenger, even when that is one of the available roles).

► **To change roles while embarked using the Action menu:**

1. Open the Action menu and then select Switch Roles.
2. In the open Roles Positions submenu, use an Action menu command to select the desired role.



► To change roles while embarked using the keyboard, you can:

- Press [ to change to the previous role.
- Press ] to change to the next role.

## 3.5. Entity Engagement and Scenario State

The state of a scenario—running or paused—varies depending on whether you are actively engaged in controlling a character and which application started the scenario. The possible cases are:

- If VR-Engage is hosting a session:
  - When a player clicks Engage to control an entity, it puts the scenario in running state. The word "Running" displays briefly at the top of the screen.
  - When a player presses **Esc**, the Application Menu displays. The player can click the pause button (⏸) to pause the scenario. The word "Paused" displays at the top of the screen.
- If VR-Engage joined a session hosted by VR-Forces or another instance of VR-Engage:
  - When a player clicks Engage to control an entity, it does not change the scenario's state.
  - When a player presses **Esc** to bring up the Application Menu, it does not change the scenario's state.
- If VR-Engage started an unhosted session:
  - When a player clicks Engage to control an entity, it does not change the scenario's state. The player must start the scenario.
  - When a player presses **Esc** to bring up the Application Menu, it does not change the scenario's state.

When the scenario is not running, the word "Paused" displays at the top of the screen. Players can only act while the scenario is running, not while it is paused.

If a player uses VR-Engage to join a session hosted by VR-Forces or another instance of VR-Engage and the user on the hosting application closes the scenario, a message informs the player that the session has ended and returns the player to the Searching for Session screen.

## 3.6. Overview of the Application Menu

When you are engaged in a role and press **Esc**, you see the Application Menu. This screen contains a number of options.

Figure 21. Application Menu



- 1 – Click Return to Role to exit the Application Menu and return to the role you were playing.
- 2 – Click Choose Role to return to the Choose Role panel.
- 3 – Click Choose Session to leave the session and return to the Choose Session screen.
- 4 – Click Exit VR-Engage to close the application.
- 5 – The current status of the scenario, either Running or Paused.
- 6 – Play the scenario.
- 7 – Pause the scenario.
- 8 – Rewind the scenario.

**i** The Play, Pause, and Rewind buttons are available only when you are hosting the session.

- 9 – Click Back to exit a submenu, such as the Connection Menu. If you are not in a submenu, clicking Back exits the Application Menu and returns you to the role you were playing.
- 10 – Display your connection information.
- 11 – Open the control mappings.
- 12 – Access the About dialog box. If you are in Admin mode, you can also access some advanced settings.
- 13 – Close VR-Engage.
- 14 – The Status is information about your character and the scenario.

### 3.7. Starting a New Session

If the instance of VR-Engage that you are using is hosting the session, you can exit the session you are participating in and join or start a new session.

► **To change the scenario:**

1. Press **Esc**. The Application Menu displays.
2. Click Choose Session.
3. Click Yes in the message to confirm that you want to leave the session. The Searching for Session screen displays.
4. Follow the procedure for starting a session, as described in "3.1. Starting VR-Engage" on page 58.

### 3.8. Configuring the Simulation Connection

To participate in a simulation, you must connect VR-Engage to a simulation network. VR-Engage includes connectors for DIS and HLA Evolved (IEEE 1516-2010, also referred to as HLA 1516e).


In User and Admin modes, you can change the configuration values of the default connectors and you can add connectors. You connect VR-Engage to a network at startup. To change the connection, click the Connection button at the top right.

For complete details about connection settings and parameters, see the *VR-Vantage Users Guide*.

► **To set up the simulation connection at startup:**

1. Start VR-Engage.
2. In the top left of the Connection Menu, select a connection.
3. At the bottom right of the Connection Menu, review the connection settings.

**Figure 22. Connection Menu**

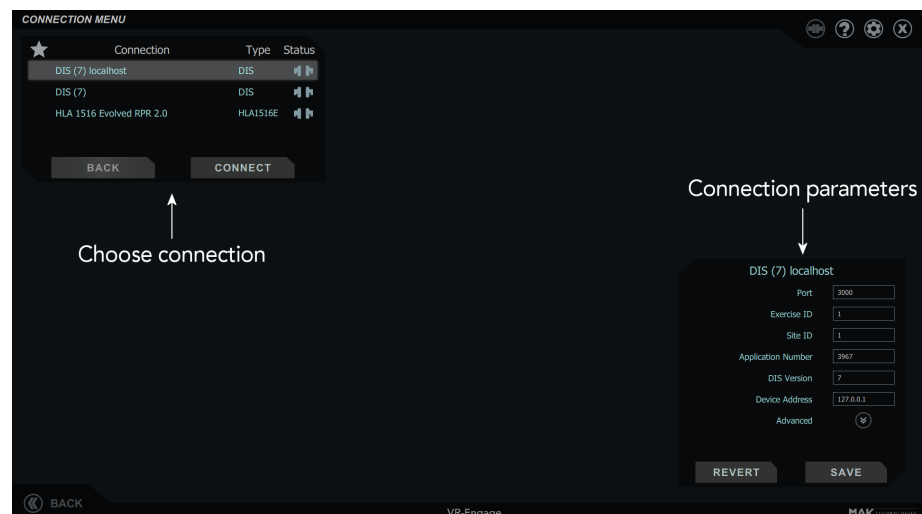

4. Change the connection parameters as needed. If necessary, click the down arrows to access the advanced settings. Those connection settings are described in Table 2 on the facing page and Table 3 on page 76.
5. If you want to use those connection parameters in future sessions, click Save.
6. Click Connect to connect to the network.

### 3.8.1 HLA Connection Settings

Table 2 describes the connection settings for HLA 1516e.

**Table 2. HLA connection settings**

| Parameter                 | Description                                                                                                                                                                                                                                |
|---------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Federation Name           | Specifies the federation execution name.                                                                                                                                                                                                   |
| FED File Name             | Specifies the FED file. Default: the federation name with <i>.xml</i> appended.                                                                                                                                                            |
| Federate Type             | Federate Type can be used to distinguish different categories of federates, and its only practical use is in save-and-restore.                                                                                                             |
| <b>Advanced</b>           |                                                                                                                                                                                                                                            |
| Federate Name             | Specifies a unique name that can be assigned to the federate. No two federates within the same federation can have the same name. If no name is specified, the RTI will automatically assign a unique name for the federate.               |
| Local Settings Designator | Specifies an optional RTI-specific string used for configuration.                                                                                                                                                                          |
| Site ID                   | Specifies the site number for the observer. The Site ID and Application Number uniquely identify the observer.                                                                                                                             |
| Application Number        | Specifies the application number for the observer.                                                                                                                                                                                         |
| Use RPR FOM               | Specifies use of a version of the RPR FOM.                                                                                                                                                                                                 |
| RPR FOM Version           | Specifies the RPR FOM version. VR-Engage has built-in support for RPR FOM version 2.0. You must specify the correct FED file for the version you use.<br>If you use a different FOM, you must specify the correct FED file and FOM Mapper. |
| Use Custom FOM            | Specifies use of a FOM other than the RPR FOM.                                                                                                                                                                                             |
| FOM Mapper Library        | Specifies the name of a FOM Mapper library.                                                                                                                                                                                                |
| Initialization String     | Specifies initialization data for the specified FOM Mapper, if required. It is your responsibility to know if your FOM Mapper needs initialization data.                                                                                   |

**Table 2. HLA connection settings (continued)**

| Parameter                                 | Description                                                                                                             |
|-------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| FOM Modules                               | Lets you specify FOM Modules. Consult your RTI documentation for information about FOM Modules.                         |
| Publish Observers                         | Specifies whether to publish an entity for the observer that is using this connection.                                  |
| Override Global View Control Setting      | Apply the setting in this connection to instead of the setting in the GUI. If this is used, the GUI setting is ignored. |
| Listen for View Controls                  | Specifies whether or not to respond to view control messages sent by other applications.                                |
| Ignore Advisories                         | Enables or disables use of HLA advisory messages.                                                                       |
| Implicit Geographic DDM                   | Enables or disables use of implicit DDM. Valid only with the MAK RTI.                                                   |
| Use Absolute Time Stamps                  | Enables or disables use of absolute timestamps.                                                                         |
| Use Topo for Flat Earth Vector Conversion | Enables or disables the use of the pre-2.0 conversion method for Flat Earth Vectors.                                    |

### 3.8.2 DIS Connection Settings

Table 3 describes the connections settings for DIS connections.

**Table 3. DIS connection settings**

| Parameter          | Description                                                                                                                                                                                                                                                                   |
|--------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Port               | The DIS port to connect to.                                                                                                                                                                                                                                                   |
| Exercise ID        | Specifies the exercise ID for VR-Engage.                                                                                                                                                                                                                                      |
| Site ID            | Specifies the site number for VR-Engage.                                                                                                                                                                                                                                      |
| Application Number | VR-Engage can send PDUs to the network to communicate the observer's position and orientation. By default, these PDUs are sent to the host machine's broadcast address. You may want to direct VR-Engage data to a unicast address so it is received by only one application. |
| DIS Version        | Specifies the DIS version: 7.                                                                                                                                                                                                                                                 |
| Device Address     | On computers with multiple network cards, the address of the network card to use.                                                                                                                                                                                             |

**Table 3. DIS connection settings (continued)**

| Parameter                                 | Description                                                                                                                                                                                                          |
|-------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Advanced</b>                           |                                                                                                                                                                                                                      |
| Destination Address                       | Specifies the destination address for outgoing PDUs. Default: the computer's broadcast address.                                                                                                                      |
| Subnet Mask                               | Specifies a subnet mask. VR-Engage can usually figure out the subnet mask from the IP address. However, if it does not do this correctly, you can explicitly specify the subnet mask using this command-line option. |
| Send Buffer Size                          | Increasing the send and receive buffer size can reduce dropped packets. If the parameters are set to 0, the system default setting is used.                                                                          |
| Receive Buffer Size                       | Increasing the send and receive buffer size can reduce dropped packets. If the parameters are set to 0, the system default setting is used.                                                                          |
| Multicast TTL                             | Specifies the number of routers that a message can pass through when PDUs are sent to multicast addresses.                                                                                                           |
| Enable Timeout Processing                 | Enables or disables applying a timeout value to discovered objects.                                                                                                                                                  |
| Timeout Interval                          | The number of seconds to wait without receiving an updated before timing out an object.                                                                                                                              |
| Use Asynchronous IO                       | Enables or disables asynchronous IO. Use of asynchronous IO can reduce dropped packets.                                                                                                                              |
| Use Absolute Time Stamps                  | Enables or disables use of absolute timestamps.                                                                                                                                                                      |
| Show Self Published Objects               | Broadcast the location of objects that VR-Engage creates - primarily the observer.                                                                                                                                   |
| Publish Observers                         | Specifies whether or not to publish an entity for the observer that is using this connection.                                                                                                                        |
| Override Global View Control Setting      | Apply the setting in this connection to instead of the setting in the GUI. If this is used, the GUI setting is ignored.                                                                                              |
| Listen for View Controls                  | Specifies whether or not to respond to view control messages sent by other applications.                                                                                                                             |
| Use Topo for Flat Earth Vector Conversion | Enables or disables the use of the pre-2.0 conversion method for Flat Earth Vectors.                                                                                                                                 |

## 3.9. Playing in Windowed Mode

By default, when you click Engage to control a character, you go into full-screen mode. There are no menus or other window controls available. If you want access to menus (Admin mode only) or the title bar without escaping to the Choose Role Panel, you can exit full-screen mode and still control your character. This is called windowed mode.

Whenever you go from full-screen to windowed mode, VR-Engage releases mouse control so that you can use the mouse to access menus or other applications. You can also toggle mouse control on and off. (For more information about mouse control, see "5.1.1 Enabling and Disabling Mouse Control" on page 124.)

 To access menus, you must be in Admin mode. See "3.1.3 Admin, User, and Lockdown Modes" on page 61.

- To change from full-screen mode to windowed mode, press **Ctrl+Enter**. To return to full-screen mode, press **Ctrl+Enter** again.

## 3.10. Introduction to Head-Mounted Displays

VR-Engage is integrated with several virtual reality head-mounted displays (HMDs). VR-Engage can render stereo views, which are presented inside the HMD. The head position and orientation tracking of the HMD are reflected in the observer as the wearer of the HMD moves their head.

VR-Engage uses the OpenVR, Oculus SDK, Varjo SDK, and VRgineers libraries to integrate with virtual reality systems. Any system that is capable of using OpenVR should work with VR-Engage.

VR-Engage has been tested with:

- Oculus Rift and Rift S
- HTC Vive and HTC Vive Pro
- Valve Index
- Varjo XR-1, XR-3, XR Elite, VR-2, and VR-3
- VRgineers XTAL 2 and XTAL 3
- Meta Quest 3

### 3.10.1 Prerequisites for Using an HMD

To use an HMD, you need specific software and VR-Engage setup:

- SteamVR. Required for the Vive and other small-type OpenVR headsets. It is installed through the Steam digital distribution platform (<https://store.steampowered.com>).
- The Oculus Rift requires that you install the Oculus Runtime.

- For a Varjo headset, you must install Varjo Base. The Varjo XR-range devices support mixed reality. The XR-1 requires that you also install Thunderbolt 3. XR-3 and later require only USB 3.

For information on Varjo system requirements, see <https://varjo.com/user-center/get-started/varjo-headsets/system-requirements>.

- XTAL headsets require the VRengineers software.
- If you are using Microsoft Mixed Reality devices, the "Windows Mixed Reality for SteamVR" add-on must be installed through Steam.

### 3.10.2 Resetting the Tracking Sensor

For user comfort, you can reset the origin of the positional tracking performed by the HMD. This allows you to restart the head tracking once you have put on the HMD and assumed a comfortable position. You can reset the sensor at any time by pressing the **F8** key, except for the Varjo. On a Varjo headset, press the Action button.

 You can also reset the tracking position:

- Choose **Reset VR Head Tracking** on the Action menu.
- Press the right thumbstick on a game controller.
- Press button 5 on the HOTAS Warthog joystick.

You can change the keyboard assignment by editing the `./data/simulationModelSets/myVR-EngageSMS/input/common/keyboard.lua` file:

```
DeviceType="keyboard";
MappingGroups = {
{
    Group="entity-control";
    Mappings={
        ...
        {type="key"; key="<F8>"; action="reset-vr-head-position"};
    }
}
```

### 3.10.3 Calibrating the Eye Tracking for Varjo

Varjo devices allow applications that use eye tracking can start multi-dot calibration for more accurate eye tracking data. By default, it calibrates each time a user dons the headset. You can access the Varjo's eye tracking calibration by pressing the Menu button on the headset or using Varjo Base.

### 3.10.4 Enabling and Disabling Virtual Reality Rendering

By default, when you start VR-Engage with an HMD connected, rendering to the HMD is enabled at startup. If needed, you can enable or disable rendering to the HMD at runtime. You must be in Admin mode to manage the virtual reality settings. If you cannot see the menu bar, press **Shift+F12** to enter Admin mode.




**⚠** To use an HMD, you must connect and power on the device before starting VR-Engage. Failure to do so can prevent the HMD from working properly with a VR-Engage player role.

► **To enable or disable virtual reality rendering:**

1. Choose **Settings > Application**. The Application Settings dialog box opens.
2. Select the Virtual Reality Settings page (Figure 23).

**i** The Virtual Reality Settings page is available only when the virtual reality plug-in is loaded. The default settings for VR-Engage load this plug-in.

**Figure 23. Virtual Reality Settings page**

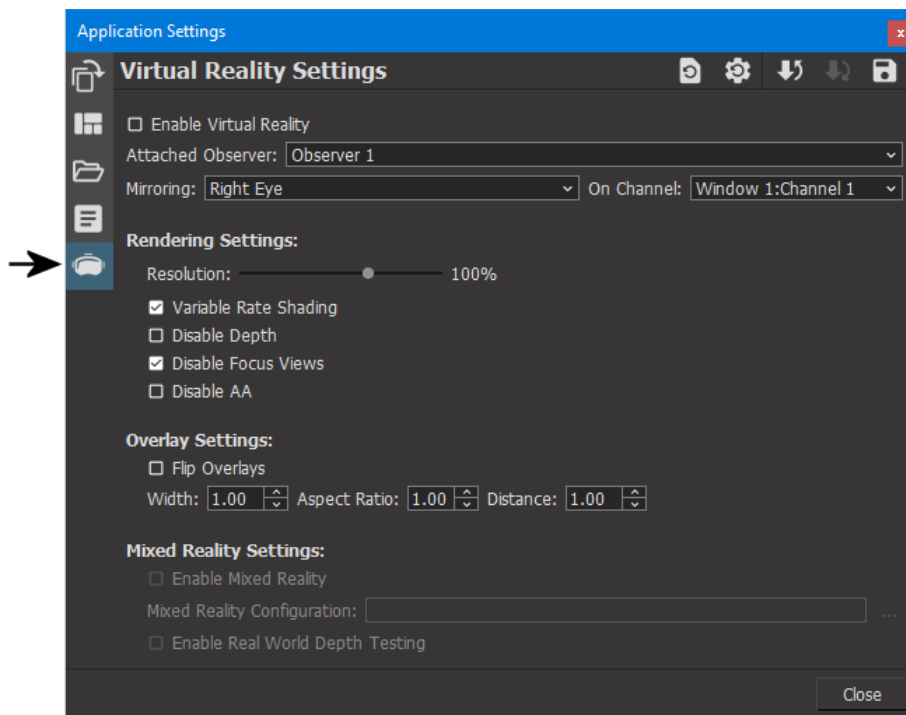

3. Select or clear the Enable Virtual Reality check box.

**i** You can also enable or disable virtual reality by choosing **Settings > Enable Virtual Reality**.

### 3.10.5 Configuration Options for Virtual and Mixed Reality

You can configure these options for virtual and mixed reality:

- **Attached Observer.** This is the observer that the HMD will attach to and render the perspective from. The default is to attach to Observer 1.

- **Mirroring.** This copies the image rendered for a given eye to the selected channel in the main display. The default is to render the right eye to the main channel. Mirroring disables the normal render pass of the attached channel to help with performance.

**i** If mirroring is enabled and the HMD is attached to the observer that is driving a displayed channel, then the main view will be rendered from the HMD perspective. This affects performance, because the scene will be rendered a third time.

- **Rendering Settings.**
  - **Rendering Resolution.** The slider bar allows you to dynamically adjust the resolution. Overlays remain at their native resolution.
  - **Variable Rate Shading.** Improves performance in VR by lowering the precision and accuracy of GPU fragment operations in certain areas of the frame.
  - **Disable Depth.** Some headsets support depth-based warping, which is a way of making image appear smooth with lower frame rates. Currently, this applies to Varjo headsets and the Oculus Rift. When you select Disable Depth, you disable the depth-based warp (VR-Engage does not pass the depth buffer to the headset SDKs). If the depth warp is causing cockpit windows to display artifacts and otherwise look incorrect, selecting Disable Depth can help.
  - **Disable Focus Views.** This applies only to Varjo devices and is selected by default. Select it to force the Varjo provider to render only the context views. The result is a single multi-view channel instead of the standard two channels, which improves performance.

If you use a Varjo headset older than the XR-4, you should also enable Simple Rendering in Varjo Base. It is in the Headset tab of Varjo Base. XR-4 and later use only one channel per eye.
  - **Disable AA.** This disables multisampling, which improves performance by saving on rendering time. Note that it does so by disabling alpha to coverage and therefore can cause transparency issues and visual artifacts.
- **Overlay Settings.**
  - **Flip Overlays.** Currently this applies only to the HTC Vive. Enabling this option flips the overlays vertically. Select this check box when overlays display upside down.
- **Mixed Reality Settings.**
  - **Enable Mixed Reality, MR Configuration, and Enable Real World Depth Testing.** These options do not apply to VR-Engage.

► **To set virtual reality configuration settings:**

1. Choose **Settings > Application**. The Application Settings dialog box opens. (If the menu bar is not visible, press **Shift+F12** to enter Admin mode.)

2. Select the Virtual Reality Settings page (Figure 23 on page 79).
3. Change the settings as desired.

### 3.10.6 Setting Up Mixed Reality

VR-Engage supports the use of the forward-facing cameras on the Vive, Vive Pro, Varjo XR range, and XTAL headsets to add real elements such as a joystick, throttle, or other physical controls to the virtual world. Mixed reality modes are available for human roles and aircraft pilot roles for aircraft configured for VR. When you select a compatible entity, MR Headset is an option in the Display(s) list. Select this option to use mixed reality mode.

To use Mixed Reality mode in VR-Engage, you need a Vive, Vive Pro, Varjo XR, or XTAL, and the appropriate software (described in "3.10.1 Prerequisites for Using an HMD" on page 77). If you are using a Vive HMD, you also need a green screen and you must start SteamVR and turn on the HMD before you start VR-Engage. We strongly recommend that you test the Vive HMD camera before each use. For details, see "Testing the Vive Camera" below.

For the Vive and Vive Pro, green screen masks out real-world elements that should not appear in the simulation. For the VR-Engage pilot role with mixed reality, the green screen is expected to cover an area approximately 120 degrees wide at -90 degrees elevation extending up to 60 degrees wide at 0 elevation, from the player's point of view. If seated at a table or desk, the desk should be covered with a green screen approximately five feet wide and extending up to at least seated eye level. The only controls that should be visible on top of the green screen are those that you want to see in the mixed reality view. The green screen should be well-illuminated with soft, diffused light so that the green color is clear and uniform.

#### Mixed Reality Masks

The MR\_VR\_Flight\_Demo scenario contains examples of both VR and MR configurations in a T-38 fixed wing aircraft. VR-Engage allows you to specify the mask file used for a particular display layout. In this example, it's a mask of the lower part of the T-38's cockpit.

In the `./data/simulationModelSets/VR-Engage/roles/t38Pilot.lua` file, there is an MR Headset displayLayout. This demonstrates how to make a Mixed Reality displayLayout. To use a different mask for your own layout, refer to the "cameraProjectionGeometry" field. This is where the mixed reality mask definition file for the displayLayout is specified. For more information, see "[Configuration for Mixed Reality](#)" in the *VR-Vantage Users Guide*.

#### Testing the Vive Camera


If you are using the Vive HMD, you must turn it on before you start VR-Engage. We also recommend that you test the camera every time SteamVR or the computer is restarted, and prior to running VR-Engage. In some cases, the camera does not work unless you initialize it before starting VR-Engage.

##### ► To test the Vive camera:

1. Turn on the Vive HMD.
2. Start SteamVR.


3. On the SteamVR menu, choose **Settings** (Figure 24). The Settings dialog box opens.

**Figure 24. SteamVR menu**

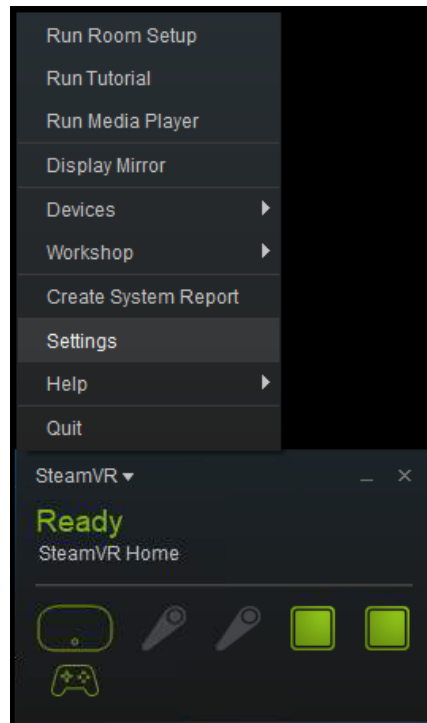

4. Select the Camera page (Figure 25).

**Figure 25. Camera page**

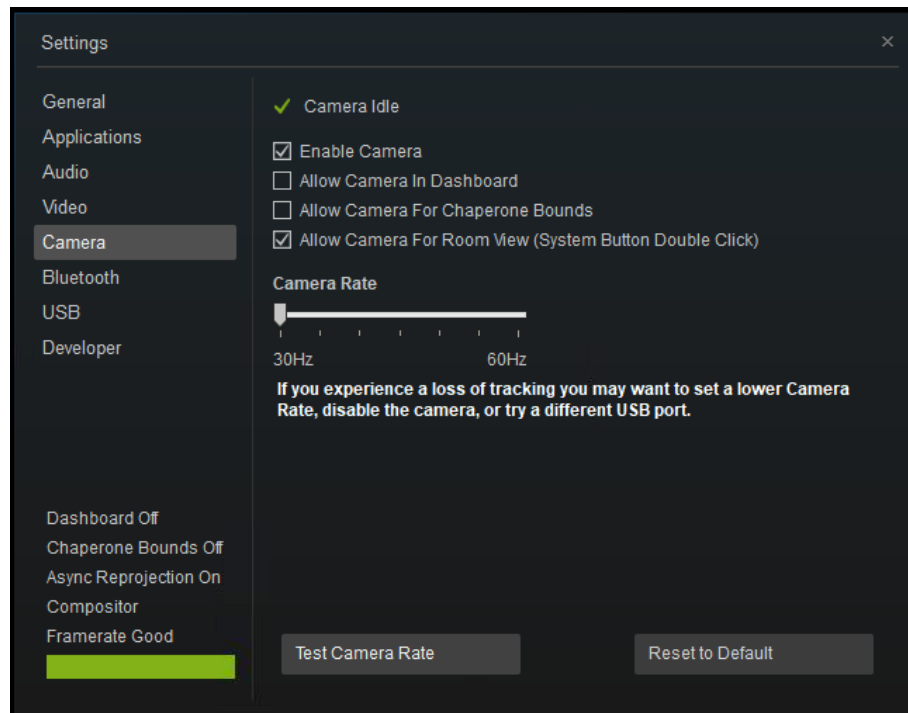

5. Click Test Camera Rate.
6. Confirm that the camera is working. (Wait until three green check marks appear.) If a red x appears, or if the Test Camera Rate button is not available, verify that the Vive is connected to a USB-3-capable port, and reboot the Vive headset and/or the computer.
7. If the test fails, restart the Vive HMD and SteamVR.

### 3.10.7 Optimizing Performance with HMDs

Virtual reality headsets require a high frame rate for a comfortable viewing experience. There are many factors that determine frame rate, such as complexity of the scene being rendered, terrain, special effects such as HDR and shadows, and environmental effects such as clouds. You may need to make trade-offs when selecting a terrain database, entity models, and applying certain visual effects at runtime.

For convenience, we have included an overlay installer that makes a number of these trade-offs to optimize performance in VR in the context air entities. The VR-Engage installation includes an installer named *MR\_VR\_FlightSettingsOverlay.exe*, located at the top level folder. Please see the associated *README\_MR\_VR\_FlightSettingsOverlay.txt* for details on the settings it modifies.

 To improve performance, VR-Engage disables ambient occlusion (HBAO+) by default when you use a virtual reality device (HMD).

## 3.11. Creating a Startup Configuration

You can create a startup configuration to automate some aspects of VR-Engage startup. VR-Engage includes a fully commented example startup configuration script called *exampleStartupConfig.lua* in *./appData/scripts*.

You can specify the following startup parameters in a script:

- **mode**. Tells VR-Engage to only join a running session, immediately host a session, or immediately start an unhosted session.
- **scenario**. Optional. If the **mode** is host, specifies the scenario to host. If you do not specify a scenario, VR-Engage uses the value for **terrain** or prompts you to specify a terrain.
- **terrain**. Specifies the terrain to load in start mode, or in host mode if you do not specify a scenario.
- **guiTerrain**. Optional. Specifies the terrain to use for visualization if you want to visualize on a terrain that is different from the simulation terrain.
- **attach**. Specifies an entity to control or attach to as a spectator.
- **entity**. Optional. If **attach** is not specified, this parameter specifies an entity to create.
- **minion**. Causes this instance of VR-Engage to connect to the entity being controlled by another instance of VR-Engage.

To use a startup configuration script, create a shortcut or batch file with the command:

```
vrEngage.exe --initSettingsFile startupConfigFile.lua
```

where:

- `vrEngage.exe` is the VR-Engage executable.
- `startupConfigFile` is the name of your startup configuration file, including the `.lua` extension. If you use a simple file name, VR-Engage looks for the file in `./appData/scripts`. You can also specify a relative path from the `./bin64` directory or a fully qualified path.

### 3.11.1 Minion and Boss Configuration

The **minion** startup configuration configures one station to watch the entity engagement status of another station, and automatically engage with that same entity. You would use it in conjunction with other startup options to create a multi-head station, where you have more than one instance of VR-Engage, on one or more machines, to create a full player interface.

The most common use case is for creating aircraft stations, although it applies to other entity types. You would have one or more VR-Engage stations running an out-the-window aircraft HUD display, and another one running the instrument panels.

On a single machine, a single instance of VR-Engage is able to create a separate instrument panel window, so this can be done with only one VR-Engage instance running. For performance reasons, however, you might want to use multiple machines. In that case, you need one instance of VR-Engage on one machine to run the out-of-window view, and a second instance of VR-Engage on another machine to run the instrument panel window. One of these is the Boss, which takes player input and controls the entity, and the other is the Minion running as Spectator. The function of Minion mode then is to make these two stations behave as one when switching which entity is engaged.

 The terms Master and Slave are technically a different context, which is why we use the terms Boss and Minion to differentiate.

## 3.12. Starting Multiple Simulation Engines

VR-Forces scenarios can be designed to use multiple simulation engines to improve performance, although this is no longer recommended. The preferred method for optimizing the performance of scenarios is to manage multiprocessors usage as described in "Optimizing Multiprocessor Usage for Simulation Engine" in the *VR-Forces Users Guide*.

When using multiple simulation engines, each sim engine simulates a subset of the simulation objects in the scenario. This is called load balancing. If a scenario is designed to use multiple simulation engines, VR-Engage can automatically start up the required number of simulation engines.

By default, use of multiple simulation engines is disabled and the maximum number of simulation engines to use is set to 1. To enable use of multiple simulation engines, you can either:

- Start VR-Engage with the `--enableMultipleBackends` command-line argument.
- In `./appData/scripts/playerStation.lua`, uncomment the **enableMultipleBackends** parameter and set it to true.

By default, the maximum number of simulation engines that VR-Engage can start is `number of logical processors/2`. The minimum is always 1. You can change the maximum number of simulation engines to start by uncommenting the **MaxBackends** parameter in `./appData/scripts/playerStation.lua` and setting it to your desired value.

If you enable multiple simulation engines but do not have enough licenses for the number of simulation engines that a scenario is configured to use, VR-Engage simulates all entities on one simulation engine.

 If you start a scenario in VR-Forces and do not have the configured number of simulation engines running, VR-Forces prompts you to remap the entities to the existing simulation engines. For information about load balancing and remapping scenarios, see the *VR-Forces Users Guide*.

You must have a VR-Forces license for each simulation engine you start.

### 3.13. Command-Line Options

Table 4 lists VR-Engage's command-line options.

VR-Engage also allows you to use startup and player station configuration files to determine some options when the program launches. See "3.11. Creating a Startup Configuration" on page 83 and "3.14. Command-Line Options for Player Stations" on page 99.

**Table 4. VR-Engage command-line options**

| Option                               | Description                                                                                                                                                                                                                                                                                                                                                                                              |
|--------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>(--   --ignore_rest)</code>    | Ignore all of the command-line options that are listed after this argument. This option is useful for disabling part of a command line in a script for test purposes so that you do not have to retype all of the command options at a later point.                                                                                                                                                      |
| <code>--airMode</code>               | Launches VR-Engage in Air mode. You can create and control only aircraft and humans.                                                                                                                                                                                                                                                                                                                     |
| <code>--antiAliasing level</code>    | Set the anti-aliasing level (0, 2, 4, 8, or 16). Default: 4.<br><br>Depending on your graphics card and driver, some combinations of anti-aliasing and bit settings ( <code>--depthBits</code> , <code>--stencilBits</code> , and <code>--alphaBits</code> ) may be incompatible. For example, if you set stencil bits to 8, the depth must be set to 24 and anti-aliasing may need to be set to 0 or 2. |
| <code>--appCacheDir directory</code> | Use <code>--appCacheDir</code> to specify a directory for the cache. This allows you to run multiple remote display engines (RDEs) or other instances of VR-Engage from the same installation. Running two RDEs on the same machine helps compensate for the limited threading in VR-Engage.                                                                                                             |
| <code>--appDataDir directory</code>  | Specifies the location of application data. If not specified, VR-Engage uses the default: <code>./appData</code> .                                                                                                                                                                                                                                                                                       |



Table 4. VR-Engage command-line options (continued)

| Option                                                                                                            | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|-------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>--appMode [user admin lockdown]</code>                                                                      | <p>Controls the features that are available to the user.</p> <ul style="list-style-type: none"> <li>• User mode does not display the menus when you start VR-Engage.</li> <li>• Admin mode shows the menus when you start VR-Engage.</li> <li>• Lockdown mode disables the ability to toggle to Admin mode.</li> </ul> <p>User mode is the default behavior. In VR-Engage, you can toggle between the User and Admin modes by pressing Shift+F12.</p>                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <code>--autoReconnectPeriod <i>period</i></code>                                                                  | Specifies the amount of time, in seconds, to wait before trying to attach to disconnected remote displays.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <code>(-B   --bindObservers)<br/>"observer1,...,observern,../<br/>saved_views_file" "../terrain_<br/>file"</code> | <p>If you load a scene that has multiple observers, this command assigns the views in the specified saved views file to the specified observers. The first saved view is assigned to the first observer, the second to the second observer, and so on. If the observers are not specified as arguments, only the first observer in the display engine configuration is assigned a view. The entire string must be quoted. There are no spaces after commas.</p> <p>You must specify a terrain database for this command to work. You would ordinarily also specify a display configuration that contains the observers with <code>--dispSetting</code>.</p> <p>For more information about using this command-line option, see "<a href="#">Attaching the Observer at Startup</a>" in the VR-Vantage Users Guide, the attaching the observer to an entity at startup tutorial.</p> |
| <code>(-c   --showConsole)</code>                                                                                 | Display a console window.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <code>(-C   --autoConnect) {<i>filepath</i><br/>  <i>connector_name</i>}</code>                                   | Automatically connect to the network using the specified connector.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <code>--dataDir <i>directory</i></code>                                                                           | Specifies the location of the application's data directory. If not specified, VR-Engage uses the default: <code>./data</code> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |

Table 4. VR-Engage command-line options (continued)

| Option                                                    | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|-----------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>--depthBits <i>bits</i></code>                      | Sets the depth of graphics to 24 bits or 32 bits. The default is 24, This has no effect when reverse Z is enabled, which is the default for VR-Engage. The number of depth bits in reverse Z is always 32 bits float.                                                                                                                                                                                                                                                      |
| <code>--disableBufferClearUsesCompute</code>              | Do not use this option unless directed to do so by MAK technical support.                                                                                                                                                                                                                                                                                                                                                                                                  |
| <code>--disableDynamicTerrain</code>                      | Disables the dynamic terrain engine. May slightly speed up terrain loading and paging.                                                                                                                                                                                                                                                                                                                                                                                     |
| <code>--disableErrorDialog</code>                         | Prevents error messages from displaying. Errors print to the console instead.                                                                                                                                                                                                                                                                                                                                                                                              |
| <code>--disableEscapeKey</code>                           | Disable use of the <b>Esc</b> key while the player is engaged in a role.                                                                                                                                                                                                                                                                                                                                                                                                   |
| <code>--disableIndirectEntities</code>                    | Disables indirect rendering of entities. This is primarily for debugging and fixing any regression with the old path. It may or may not match the behavior with the default path (which is indirect).                                                                                                                                                                                                                                                                      |
| <code>--disableIndirectExternalRenderer</code>            | Disables the indirect external renderer, which minimizes state changes by default. When this is used, state changes are not minimized.                                                                                                                                                                                                                                                                                                                                     |
| <code>--disableModelSets "<i>model-set-number</i>"</code> | <p>Disables one or more model sets. Model set numbers are:</p> <ul style="list-style-type: none"> <li>• 0 - 3D Model Set</li> <li>• 1 - Colorized Models Model Set</li> <li>• 4 - Minimap</li> <li>• 5 - 2D Icons Model Set</li> </ul> <p>To disable multiple model sets, separate them with commas. For example:<br/> <code>--disableModelSets "0, 1"</code> disables the 3D and XR model sets<br/> <code>--disableModelSets "0, 1, 5"</code> disables all model sets</p> |
| <code>--disableNvidiaBindlessFix</code>                   | Do not use this option unless directed to do so by MAK technical support.                                                                                                                                                                                                                                                                                                                                                                                                  |
| <code>(-z   --disableReverseZBuffer)</code>               | Disables use of reverse Z buffering, which is enabled by default. Leaving reverse Z buffering enabled can reduce Z-fighting when viewing the terrain from a distance. (3D observer modes only.)                                                                                                                                                                                                                                                                            |

Table 4. VR-Engage command-line options (continued)

| Option                                                                       | Description                                                                                                                                                                                                                                                                                                                                                              |
|------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>--disableTerrainObserverViews</code>                                   | Disables the loading of terrain observer view files. Loading a terrain does not clear the observer views and the terrain's observer views do not load.                                                                                                                                                                                                                   |
| <code>--discoveredModelPreloadFileName <i>filename</i></code>                | Specifies a file to which the list of models discovered during a session that were not preloaded is written.                                                                                                                                                                                                                                                             |
| <code>--displayEnginePort <i>port</i></code>                                 | Specifies the display engine port used by a remote display engine. Used only if <code>--slave</code> is specified.                                                                                                                                                                                                                                                       |
| <code>--dispSetting <i>filename</i></code>                                   | Specifies the display engine configuration to load.                                                                                                                                                                                                                                                                                                                      |
| <code>--enableAdminMode</code>                                               | When VR-Engage is in Lockdown mode, Admin mode is disabled by default. This option enables the Admin mode hot keys, allowing you to access that mode.                                                                                                                                                                                                                    |
| <code>--enablePersistentShadowTechnique</code>                               | Use this command-line option to enable persistent shadows. By default, shadows are disabled: the shadow camera traversal is skipped but the shaders remain the same, preventing additional shader sets in SpeedTree and instant switching. If the VP for the shadow pass is always installed, SpeedTree (and other drawables) do not regenerate VP shaders/user shaders. |
| <code>(-e   --extraArgs) <i>string</i>   "<i>string1 ... stringn</i>"</code> | Allows you to send arbitrary strings to the initializer, which can be queried for by plugins. This option works around the restriction on adding new command-line arguments. It can take one argument or multiple arguments. Multiple arguments must be wrapped in double quotes.                                                                                        |
| <code>(-E   --entTypeMap) <i>filename</i></code>                             | Load the specified object type mapping file. The filename extension determines the type of mapping.                                                                                                                                                                                                                                                                      |
| <code>--enableDofConstraints</code>                                          | Enables the use of degree(s) of freedom constraints on simulation object models.                                                                                                                                                                                                                                                                                         |
| <code>--enableMultipleBackends</code>                                        | Causes VR-Engage to load the number of sim. engines required by a scenario up to the maximum number specified in <code>./appData/scripts/playerStation.lua</code> .                                                                                                                                                                                                      |

Table 4. VR-Engage command-line options (continued)

| Option                                                                                                                                               | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>--enableSensorFX</code>                                                                                                                        | Load the SensorFX plug-in. SensorFX uses more advanced rendering to display infrared and night vision.                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <code>--enableTracyProfiling</code>                                                                                                                  | Enables the Tracy Client when you launch the application.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <code>--enableVSync</code>                                                                                                                           | Turns on VSync.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <code>--entDispSetting <i>filename</i></code>                                                                                                        | Specifies the entity display setting to load.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <code>--entityDefsDir <i>directory</i></code>                                                                                                        | Loads the <i>.hier</i> and <i>.leaf</i> files in the specified directory to the entity element definition manager.                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <code>--entityGridCellSize <i>x y z</i></code><br><code>--entityGridCellSize <i>x,y,z</i></code><br><code>--entityGridCellSize <i>integer</i></code> | <p>Use this option for debugging, particularly looking for bottlenecks in the code. Entities (in indirect) are divided into a grid of cells. The cells have the same size. This is a regular (sparse) grid that allows for efficient, higher-level culling. The default cell size is 5000 5000 5000. You can specify three values or one, for example:</p> <ul style="list-style-type: none"> <li>• 2000 2000 2000</li> <li>• 2000</li> <li>• 2000 200 10000</li> <li>• -1 -1 -1 (one cell, infinite cell size)</li> <li>• -1 (one cell, infinite cell size)</li> </ul> |
| <code>--envSetting <i>filename</i></code>                                                                                                            | Specifies the environment configuration file to load.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <code>--factoryRootDir <i>directory</i></code>                                                                                                       | Set the root directory used to restore settings to factory defaults.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <code>--forceTextShaping</code>                                                                                                                      | Force all text to use HarfBuzz shaping. Use this option if you need support for right-to-left languages. It may affect performance.                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <code>(-F   --frameRate) <i>rate</i></code>                                                                                                          | If <i>rate</i> is 0, the frame rate is variable. Otherwise, specifies a fixed frame rate for rendering.                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <code>--fullScreen</code>                                                                                                                            | Start with the window in full screen mode.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <code>(-G   --locale) <i>language</i></code>                                                                                                         | Specifies the locale (for localization).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <code>--groundMode</code>                                                                                                                            | Run VR-Engage in Ground mode. You can create and control only ground vehicles and humans.                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |

Table 4. VR-Engage command-line options (continued)

| Option                                                                                                                                                                                                                         | Description                                                                                                                                                                                                                                  |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>--guiwindowRectangle "width height x y"</code><br><code>--guiwindowRectangle width,height,x,y</code>                                                                                                                     | Specifies the window size and location at startup.                                                                                                                                                                                           |
| <code>(-h   --help)</code>                                                                                                                                                                                                     | (Display command-line usage information in a console window.)                                                                                                                                                                                |
| <code>--highestPriority</code>                                                                                                                                                                                                 | Changes the priority of the application and the main render thread to the highest available priority. This command may starve other processes.                                                                                               |
| <code>--initSettingsFile filename</code>                                                                                                                                                                                       | Name of the initialization settings file to load.                                                                                                                                                                                            |
| <code>(-K   --disableKDTrees)</code>                                                                                                                                                                                           | Disable creation of KD trees for intersections.                                                                                                                                                                                              |
| <code>(-L   --loadObserverViews filename)</code>                                                                                                                                                                               | Loads the saved observer view states in the specified file. You can use this command multiple times, for example:<br><code>--loadObserverViews file1</code><br><code>--loadObserverViews file2</code>                                        |
| <code>(-l   --logFileName) filename</code>                                                                                                                                                                                     | Specifies the log file name.                                                                                                                                                                                                                 |
| <div>  Use the texture limiting command-line options to limit and debug the memory usage and then observe the total GPU memory used. </div> |                                                                                                                                                                                                                                              |
| <code>--limitEarthSplattingTextures "width and height"</code>                                                                                                                                                                  | Restricts the size of an earth file's splatting textures to the specified resolution. The width and height must be a power of 2, for example, "16". If you do not enter a power of 2, VR-Engage converts it to the next highest power of 2.  |
| <code>--limitEarthTerrainTextures "width and height"</code>                                                                                                                                                                    | Restricts the size of an earth file's terrain textures to the specified resolution. The width and height must be a power of 2, for example, "16". If you do not enter a power of 2, VR-Engage converts it to the next highest power of 2.    |
| <code>--limitEarthVegetationTextures "width and height"</code>                                                                                                                                                                 | Restricts the size of an earth file's vegetation textures to the specified resolution. The width and height must be a power of 2, for example, "16". If you do not enter a power of 2, VR-Engage converts it to the next highest power of 2. |

Table 4. VR-Engage command-line options (continued)

| Option                                                                                                                                                                                                                                                                              | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>--limitEntityTextures "width height"</code>                                                                                                                                                                                                                                   | Uses only mipmap levels at or below the resolution for entities. Use two integers for the maximum width and height of the texture mipmap to use, for example, "1024 1024" or "2k 2k". To turn off the texture limit function, use <code>--limitEntityTextures "-1 -1"</code> .                                                                                                                                                                                                                  |
| <code>--limitEntityTexturesExclusions "texture"</code>                                                                                                                                                                                                                              | Excludes textures from texture reduction limits for indirect. Specify the texture(s) that you want to exclude, for example, <code>--limitEntityTexturesExclusions "SurfaceCVN-75HarrySTruman, SurfaceCruiseShip, FixedwingF-16, FixedwingRQ-1Predator"</code> .                                                                                                                                                                                                                                 |
| <code>--limitTerrainTextures "width height"</code>                                                                                                                                                                                                                                  | Uses only mipmap levels at or below the resolution for terrain. Use two integers for the width and height, for example, "1024 1024" or "2k 2k".                                                                                                                                                                                                                                                                                                                                                 |
| <p><b>i</b> In most situations, using <code>--limitEntityTextures</code> and <code>--limitTerrainTextures</code> prevents crashes with high VRAM. If you continue to experience crashes, use <code>--limitGpuMemoryPercentage</code> in addition to these command-line options.</p> |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <code>--limitGpuMemoryPercentage integer</code>                                                                                                                                                                                                                                     | Set the cutoff percentage as a value between 0 and 100. (Typical values are between 85 and 100.) Beyond the specified percentage, VR-Engage does not make new textures or buffers as a percentage of the available video RAM. This applies only to VR-Engage-side textures: terrain insets, entities, indirected osgEarth layers (feature_geom and buildings). It does not apply to SilverLining, Triton, or osgEarth tiles. The latter are controlled by the <code>.earth</code> file options. |
| <p><b>i</b> Typically, you would use <code>--limitGpuMemoryPercentage</code> in conjunction with <code>--limitEntityTextures</code> and <code>--limitTerrainTextures</code> when you see crashes with high VRAM.</p>                                                                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <code>--mainScreenNum num</code>                                                                                                                                                                                                                                                    | Specifies the display that the main window should use. The screen number can be a number from 0 to the number of screens -1. This number matches the screen number used in the Display Engine Configuration Editor for a window.                                                                                                                                                                                                                                                                |

Table 4. VR-Engage command-line options (continued)

| Option                                                                  | Description                                                                                                                                                                                                                                                                                                                      |
|-------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>--mergeEntityTypeMap {directory   filename}</code>                | Merges all entity type mapping files (*.metx) in a directory or individual entity type mapping files. Can be used multiple times. See note below.                                                                                                                                                                                |
| <code>--mergeHierarchyEntityDef {directory   filename}</code>           | Merges the .hier files in the specified directory or the individual .hier file into the default hierarchy (usually loaded from <code>./SharedData/18/latest/ModelData/Configuration/Original/Definitions</code> ). Merging is additive only. No nodes in a previously loaded hierarchy are replaced. Can be used multiple times. |
| <code>--mergeHierarchyTacticalGraphicsDef {directory   filename}</code> | Merges the specified .hier file(s) into the default hierarchy (usually loaded from <code>./SharedData/18/latest/ModelData/Configuration/Original/Definitions</code> ). Merging is additive only. No nodes in a previously loaded hierarchy are replaced. Can be used multiple times.                                             |
| <code>--mergeHierarchyUnitDef {directory   filename}</code>             | Merges the specified .hier file(s) into the default hierarchy (usually loaded from <code>./SharedData/18/latest/ModelData/Configuration/Original/Definitions</code> ). Merging is additive only. No nodes in a previously loaded hierarchy are replaced. Can be used multiple times.                                             |
| <code>--mergeLeafEntityDef {directory   filename}</code>                | Merges the leaf files in the specified directory or the individual leaf file into the default entity element definitions. Can be used multiple times.                                                                                                                                                                            |
| <code>--mergeLeafTacticalGraphicsDef {directory   filename}</code>      | Merges the leaf files in the specified directory or the individual leaf file into the default tactical graphics element definitions. Can be used multiple times.                                                                                                                                                                 |
| <code>--mergeLeafUnitDef {directory   filename}</code>                  | Merges the leaf files in the directory or the specified individual leaf file into the default unit element definitions. Can be used multiple times.                                                                                                                                                                              |
| <code>--mergeModelDefs {directory   filename}</code>                    | Merges all model definition files (*.ommx) in the specified directory or individual model definition files. Can be used multiple times.                                                                                                                                                                                          |

Table 4. VR-Engage command-line options (continued)

| Option                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | Description                                                                                                                                                                                        |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>--mergeTacticalGraphicsTypeMap {<i>directory</i>   <i>filename</i>}</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                    | Merges all tactical graphics type mapping files (*.mtgx) in a directory or individual tactical graphics type mapping files. Can be used multiple times. See note below.                            |
| <code>--mergeUnitTypeMap {<i>directory</i>   <i>filename</i>}</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                | Merges all unit type mapping files (*.magx) in a directory or individual unit type mapping files. Can be used multiple times. See note below.                                                      |
| <p><b>i</b> The options for merging type maps (<code>--mergeEntityTypeMap</code>, <code>--mergeTacticalGraphicsTypeMap</code>, and <code>--mergeUnitTypeMap</code>) allow you to merge your type mapping with those that already exist. By default, that does not overwrite the existing mappings. Your merged mappings will exist alongside those that were already loaded.</p> <p>If you want to overwrite the existing ones, use the merge option alongside the <code>--overwriteMappingsOnMerge</code> command-line option.</p> |                                                                                                                                                                                                    |
| <code>--modelPreloadFileName <i>filename</i></code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Specifies a file that has a list of models to preload.                                                                                                                                             |
| <code>(-n   --notifyLevel) <i>notification_level</i></code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | Specifies the notification level for application messages, where <i>notification_level</i> is a number from 0 through 4. The least verbose message level is 0, the highest is 4. The default is 2. |
| <code>--noAppDataEntityDefs</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Do not load the entity element definitions in <i>./SharedData/18/latest/ModelData/Configuration/Definitions</i> .                                                                                  |
| <code>--noAppDataEntityTypeMap</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | Do not load entity type mappings in <i>./SharedData/18/latest/ModelData/Configuration/Definitions</i> .                                                                                            |
| <code>--noAppDataModelDefs</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | Do not load model definitions in <i>./SharedData/18/latest/ModelData/Configuration/Definitions</i> .                                                                                               |
| <code>--noAppDataTacticalGraphicsDefs</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Do not load the tactical graphics element definitions in <i>./SharedData/18/latest/ModelData/Configuration/Definitions</i> .                                                                       |
| <code>--noAppDataTacticalGraphicsTypeMap</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | Do not load tactical graphics type mappings in <i>./SharedData/18/latest/ModelData/Configuration/Definitions</i> .                                                                                 |
| <code>--noAppDataUnitDefs</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | Do not load the unit element definitions in <i>./SharedData/18/latest/ModelData/Configuration/Definitions</i> .                                                                                    |



Table 4. VR-Engage command-line options (continued)

| Option                                             | Description                                                                                                                                                                                                                                                                             |
|----------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>--noAppDataUnitTypeMap</code>                | Do not load unit type mappings in <i>./SharedData/18/latest/ModelData/Configuration/Definitions</i> .                                                                                                                                                                                   |
| <code>--noGui</code>                               | Start without the graphical user interface.                                                                                                                                                                                                                                             |
| <code>(-O   --hasNTPSync)</code>                   | Enables the synchronization of all time-based features between different VR-Vantage applications, such as instances of VR-Vantage or the VR-Forces GUI. Note that system clocks must be synchronized. Time-based features include the rendering of ocean waves, clouds, and SpeedTrees. |
| <code>--overwriteMappingsOnMerge</code>            | Any mapping merge specified on the command line overwrites mappings in the default files. Use in conjunction with the command-line options for type maps (above).                                                                                                                       |
| <code>--plugin filename</code>                     | Load the specified plug-in. Can be used multiple times.                                                                                                                                                                                                                                 |
| <code>--pseudoFullScreen</code>                    | Use pseudo full screen for full screen mode. This may improve performance when using dynamic ocean.                                                                                                                                                                                     |
| <code>-m, --realizeMinimap</code>                  | Realize the minimap model set.                                                                                                                                                                                                                                                          |
| <code>(-s   --slave)</code>                        | Run as a remote display engine.                                                                                                                                                                                                                                                         |
| <code>(-S   --suppressHatIntersectOnAttach)</code> | Suppress the periodic HAT intersection when attached. This setting can improve performance if you need to attach the observer to ground vehicles a lot, but do not need to attach to air vehicles.                                                                                      |
| <code>--sensorMode</code>                          | Run VR-Engage Sensor Operator. You can create and control only sensors and humans.                                                                                                                                                                                                      |
| <code>--sharedDataDir directory path</code>        | Use this to specify the location of the shared data directory if you installed it somewhere other than the default, which is <i>./SharedData</i> .                                                                                                                                      |
| <code>--sharedDataRoot directory root</code>       | Specifies the location of the shared data root. This combined with the stem and data version creates the shared data path.                                                                                                                                                              |
| <code>--sharedDataStem directory stem</code>       | Specifies the location of the shared data stem. This combined with the data root and data version creates the shared data path.                                                                                                                                                         |
| <code>((-s   --siteId) ID)</code>                  | Specifies the site ID.                                                                                                                                                                                                                                                                  |
| <code>--stationName</code>                         | Station name of application as seen by the VR-Engage manager.                                                                                                                                                                                                                           |

Table 4. VR-Engage command-line options (continued)

| Option                                                                                                                                                                                                                                                                                                      | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>--stencilBits <i>bits</i></code>                                                                                                                                                                                                                                                                      | Sets the number of stencil bits (0 or 8). Default: 0.                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <code>--tacticalGraphicsDefsDir <i>filename</i></code>                                                                                                                                                                                                                                                      | Loads the <i>.hier</i> and <i>.leaf</i> files in the specified directory to the tactical graphics element definition manager.                                                                                                                                                                                                                                                                                                                                               |
| <code>--tcpSendTimeout</code>                                                                                                                                                                                                                                                                               | Sets the timeout (in seconds) for the master display engine to wait for a remote display engine before giving up on a send. Default: 30 seconds.                                                                                                                                                                                                                                                                                                                            |
| <code>(<i>terrain_MTF_file</i>   <i>scene_MSF_file</i>)</code>                                                                                                                                                                                                                                              | Specifies a terrain (MTF) or scene (MSF) file to load. By default, VR-Engage looks in the expected data location for terrain or scene files in either the default location, <i>C:\MAK\SharedData</i> , or the one specified by the environment variables <i>MAK_SHARED_DATA_ROOT</i> and <i>MAK_SHARED_DATA_STEM</i> . (If the file is in another location, the path must be a relative path from <i>./bin64</i> to the file, for example, <i>../myTerrains/MTF_file</i> .) |
| <code>--unitDefsDir <i>filename</i></code>                                                                                                                                                                                                                                                                  | Loads the <i>.hier</i> and <i>.leaf</i> files in the specified directory to the unit element definition manager.                                                                                                                                                                                                                                                                                                                                                            |
| <code>--unplug <i>filename</i></code>                                                                                                                                                                                                                                                                       | Do not load the specified plug-in. Can be used multiple times.                                                                                                                                                                                                                                                                                                                                                                                                              |
| <code>--useAbsoluteTimeStamps</code>                                                                                                                                                                                                                                                                        | Enables use of absolute timestamps. Otherwise uses relative timestamps.                                                                                                                                                                                                                                                                                                                                                                                                     |
|  If you select <code>--useAbsoluteTimeStamps</code> , it is your responsibility to ensure that the time clocks of exercise participants are synchronized. If they are not synchronized, VR-Engage may not work properly. |                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <code>--userDataDir <i>directory</i></code>                                                                                                                                                                                                                                                                 | Specifies the location of user data directory. If not specified, VR-Engage uses the default: <i>./userData</i> .                                                                                                                                                                                                                                                                                                                                                            |
| <code>(-v   --version)</code>                                                                                                                                                                                                                                                                               | Displays version information.                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <code>--windowedMode</code>                                                                                                                                                                                                                                                                                 | Starts VR-Engage in windowed mode instead of full screen.                                                                                                                                                                                                                                                                                                                                                                                                                   |

Table 4. VR-Engage command-line options (continued)

| Option                                                                                                                                                                                                                                                                                                                                                   | Description                                                                                                                                                                                                                                                                                                                 |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| (-w   --withDisplayEngine) <i>port@netAddress</i> , <i>displayConfigFilename</i><br>Legacy Windows syntax:<br>(-w   --withDisplayEngine) <i>port@netAddress</i> ;<br><i>displayConfigFilename</i> (semicolon separator)<br>Legacy Linux syntax:<br>(-w   --withDisplayEngine) <i>port@netAddress</i> ;<br><i>displayConfigFilename</i> (colon separator) | Connect to a display engine running on another computer. For more information with an example, see " <a href="#">Loading Multiple Display Engine Configurations from the Command Line</a> " under " <a href="#">Loading a Display Engine Configuration</a> " in <i>VR-Vantage Users Guide</i> . Can be used multiple times. |
| (-Z   --ignoreZoomForSpeedtreeLod)                                                                                                                                                                                                                                                                                                                       | Disable zoom for SpeedTree LOD.                                                                                                                                                                                                                                                                                             |
| <b>HLA Only</b>                                                                                                                                                                                                                                                                                                                                          | <b>These options are available if you specify --hla1516e.</b>                                                                                                                                                                                                                                                               |
| (-a   --appNumber) <i>number</i>                                                                                                                                                                                                                                                                                                                         | Specifies the application number.                                                                                                                                                                                                                                                                                           |
| (-f   --fomMapperLib <i>libname</i> ) <i>libname</i>                                                                                                                                                                                                                                                                                                     | FOM Mapper library name.                                                                                                                                                                                                                                                                                                    |
| (-F   --fedFileName) <i>fedfile_name</i>                                                                                                                                                                                                                                                                                                                 | FED file name.                                                                                                                                                                                                                                                                                                              |
| --fileTransporterReceivePort <i>port</i>                                                                                                                                                                                                                                                                                                                 | Port for the file transporter. This is the port used to receive order of battle and plan files.                                                                                                                                                                                                                             |
| (--fomMapperInitData <i>data</i> )                                                                                                                                                                                                                                                                                                                       | FOM Mapper initialization data.                                                                                                                                                                                                                                                                                             |
| --fomModules <i>module</i>                                                                                                                                                                                                                                                                                                                               | Specifies an HLA Evolved FOM module. Can be used multiple times.                                                                                                                                                                                                                                                            |
| (-H   --hostAddressString) <i>address</i>                                                                                                                                                                                                                                                                                                                | Specifies the host address. This is usually the same as the device address.                                                                                                                                                                                                                                                 |
| (-i   --sessionId) <i>ID</i>                                                                                                                                                                                                                                                                                                                             | Specifies the session ID for this instance of the GUI.                                                                                                                                                                                                                                                                      |
| --ignoreAdvisories                                                                                                                                                                                                                                                                                                                                       | Enables or disables HLA advisory messages. Default: true.                                                                                                                                                                                                                                                                   |
| (-S   --localSettingsDesignator <i>designator</i> )                                                                                                                                                                                                                                                                                                      | Specifies a string that is passed to the RTI during federate connect when using HLA Evolved. It is usually used to provide additional RTI configuration, but every RTI uses it differently. Please consult your RTI documentation for proper usage.                                                                         |

Table 4. VR-Engage command-line options (continued)

| Option                                     | Description                                                                                                                                                                                                                                                                                                                                                                                                                             |
|--------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| (-N   --federateName) <i>federate_name</i> | Specifies a unique name that can be assigned to the federate. No two federates within the same federation can have the same name. If no name is specified, the RTI automatically assigns a unique name for the federate. Default: VR-Forces. (HLA Evolved only)                                                                                                                                                                         |
| (-p   --federateType) <i>type</i>          | Federate Type can be used to distinguish different categories of federates, and its only practical use is in save-and-restore.                                                                                                                                                                                                                                                                                                          |
| --reportedHostAddressString <i>address</i> | Specifies how VR-Forces reports its IP address to another VR-Forces application for the purpose of file transfers. It is only important when you have a GUI or remote controller on one side of a router and a simulation engine on the other, and there is some kind of network address translation occurring whereby they have to connect to one another using an IP address other than the one they recognize themselves at locally. |
| --rprFomRevision <i>revision_number</i>    | RPR FOM revision for RPR FOM 2.0, draft 17.                                                                                                                                                                                                                                                                                                                                                                                             |
| --rprFomVersion <i>version_number</i>      | RPR FOM version. (0.5, 0.7, 0.8, 1.0, 2.0006, 2.0014, 2.0017, or 2.0)                                                                                                                                                                                                                                                                                                                                                                   |
| --useGeographicDdm                         | Specifies use of geographic DDM if you are using the MAK RTI. Default: false.                                                                                                                                                                                                                                                                                                                                                           |
| (-x   --execName) <i>exec_name</i>         | Execution name. Default: MAK-RPR-2.0.                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>DIS Only</b>                            | <b>These options are available if you specify --dis.</b>                                                                                                                                                                                                                                                                                                                                                                                |
| (-a   --appNumber) <i>number</i>           | Specifies the application number.                                                                                                                                                                                                                                                                                                                                                                                                       |
| (-A   --destAddrString) <i>address</i>     | Specifies the destination address.                                                                                                                                                                                                                                                                                                                                                                                                      |
| --appIdRange <i>range</i>                  | The application ID range for VR-Forces sim. engines.                                                                                                                                                                                                                                                                                                                                                                                    |
| --defaultObjectTimeout <i>timeout</i>      | Specifies the timeout interval for objects.                                                                                                                                                                                                                                                                                                                                                                                             |
| --deviceAddress <i>address</i>             | Specifies the address of the network card to use for UDP traffic.                                                                                                                                                                                                                                                                                                                                                                       |
| (--disVersion <i>version</i> )             | The DIS version. Default: 7.                                                                                                                                                                                                                                                                                                                                                                                                            |
| --fileTransporterReceivePort <i>port</i>   | Port for the file transporter. This is the port used to receive order of battle and plan files.                                                                                                                                                                                                                                                                                                                                         |
| (-H   --hostAddressString) <i>address</i>  | Specifies the host address. This is usually the same as the device address.                                                                                                                                                                                                                                                                                                                                                             |
| --mcastTtl <i>time</i>                     | Specifies the multicast time-to-live. Default: -1.                                                                                                                                                                                                                                                                                                                                                                                      |

Table 4. VR-Engage command-line options (continued)

| Option                                                  | Description                                                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>--multicastAddresses address1 ... addressn</code> | Specifies one or more multicast addresses.                                                                                                                                                                                                                                                                                                                                                                                              |
| <code>(-P   --disPort) port</code>                      | DIS port.                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <code>--recvBufferSize size</code>                      | Receive buffer size.                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <code>--reportedHostAddressString address</code>        | Specifies how VR-Forces reports its IP address to another VR-Forces application for the purpose of file transfers. It is only important when you have a GUI or remote controller on one side of a router and a simulation engine on the other, and there is some kind of network address translation occurring whereby they have to connect to one another using an IP address other than the one they recognize themselves at locally. |
| <code>--sendBufferSize size</code>                      | Send buffer size. Default: -1.                                                                                                                                                                                                                                                                                                                                                                                                          |
| <code>--subnetMask mask</code>                          | Specifies a subnet mask.                                                                                                                                                                                                                                                                                                                                                                                                                |
| <code>--useAsyncIO</code>                               | Use asynchronous I/O. Default: False.                                                                                                                                                                                                                                                                                                                                                                                                   |
| <code>--useIpv6</code>                                  | Specifies that the DIS exercise connection use the IPV6 protocol, if available.                                                                                                                                                                                                                                                                                                                                                         |
| <code>(-x   --exerciseId) ID</code>                     | Exercise ID.                                                                                                                                                                                                                                                                                                                                                                                                                            |

### 3.14. Command-Line Options for Player Stations

You can specify additional command-line options by editing `./appData/scripts/playerStation.lua` and adding command-line options to **additionalBackendCommandLineParameters**. For example:

```
additionalBackendCommandLineParameters = --outputLogFile my-log-file
--startInRunMode --userDataDir my-data-directory
```

Please note:

- The connection settings in the VR-Engage GUI's current connection options. A warning displays in the GUI console and in `vrEngage.log` for each ignored parameter, and what the replacement is.
- If you supply a DIS-specific command to HLA, or vice versa, the application will not start correctly.

### 3.15. Managing Plug-ins

One way to extend the functionality of VR-Engage is by loading plug-ins that have been written for it by MAK or other software vendors. You can manage which plug-ins are loaded when VR-Engage starts. You can also view information about the plug-ins that have been loaded. This is primarily used for sim. engine plug-ins.

Plug-ins are implemented as one or more dynamic linked libraries (DLL or SO files). The DLLs can be release or debug and for a specific protocol or protocol-independent. Each association of an application, platform, build type, and transport type is called a configuration. Use the Plug-ins Editor to specify the DLLs for use with each of the desired configurations.

- Changes to plug-in configurations do not take effect until the next time you start the affected VR-Engage application.
- To access the Settings menu, you must be in Admin mode. See "3.1.3 Admin, User, and Lockdown Modes" on page 61.


### 3.15.1 Loading Plug-ins

You can specify which plug-ins to load using the Plug-ins dialog box. Those plug-ins load the next time VR-Engage starts.

► To specify that a plug-in be loaded or not loaded in the Plug-ins dialog box:

1. Choose **Settings > Plug-ins**. The Plug-ins dialog box opens (Figure 26).

Figure 26. Plug-ins Editor

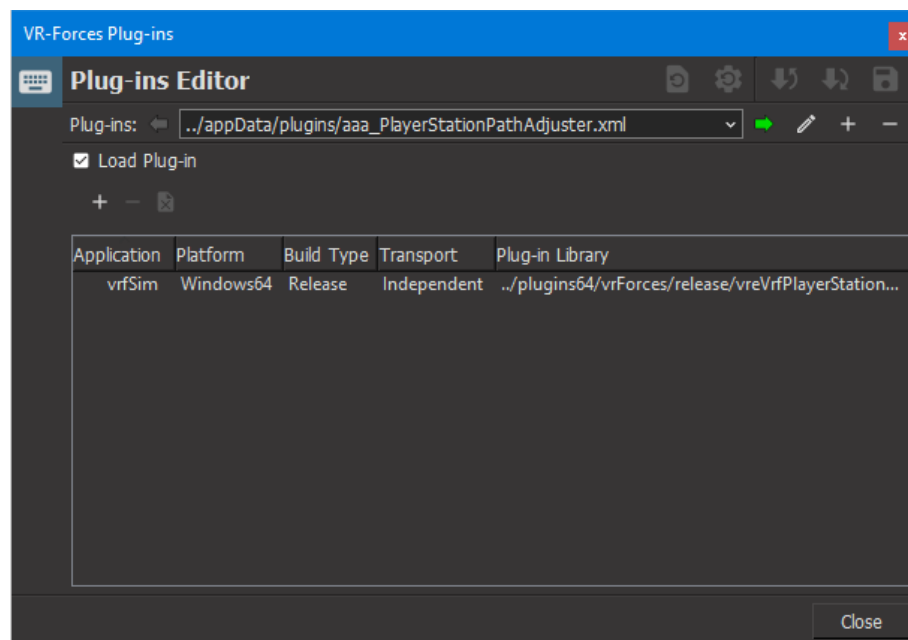

2. In the list of plug-ins at the top of the page, select the one that you want to edit. The configurations for that plug-in are listed in the window.
3. Select or clear the Load Plug-in check box.

### 3.15.2 Adding a Plug-in


When you add a plug-in, VR-Engage creates an XML file (in `./appData/plugins`) that contains all of the information VR-Engage needs to load the plug-in. New plug-ins are added with entries for each of the configurations (application, platform, build type,

transport). After you add a plug-in, you must specify the DLLs for each configuration that you want to support.

► **To add a plug-in:**

1. Choose **Settings > Plug-ins**. The Plug-ins dialog box opens (Figure 26 on the previous page).
2. Click the Add button (+) at the upper right corner of the page (#1 in Figure 27). The New Plug-in dialog box opens.
3. Type a name for the plug-in.
4. Click OK. The plug-in is added to the Plug-ins list. It has configurations for each of the combinations of application, platform, build type, and transport (Figure 27) as shown in the figure.

**Figure 27. New plug-in**

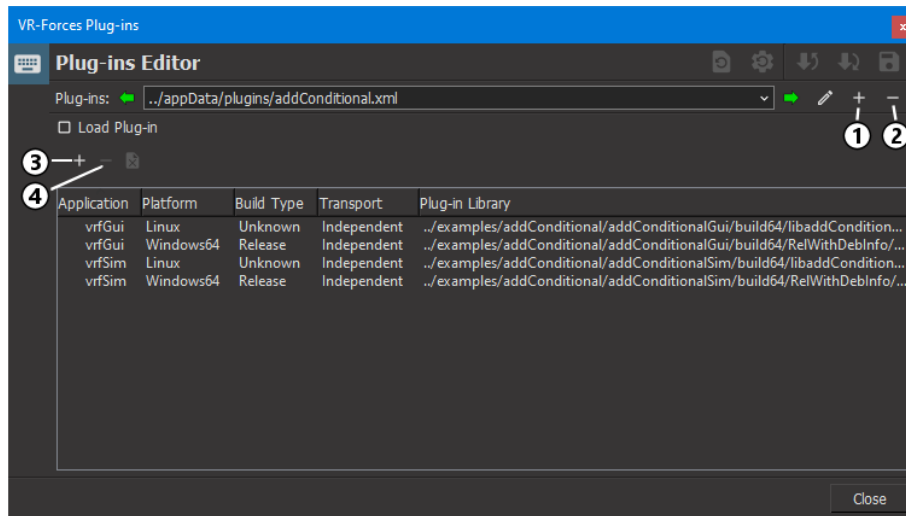

5. Specify the DLL for each configuration that you want to support, as described in "3.15.3 Specifying the DLLs for a Plug-in" below.


### 3.15.3 Specifying the DLLs for a Plug-in

Each plug-in configuration that you want to be able to load must specify the DLL to load for that configuration.

► **To specify the DLL for a plug-in configuration:**

1. Choose **Settings > Plug-ins**. The Plug-ins dialog box opens (Figure 28).

**Figure 28. Plug-ins Editor**

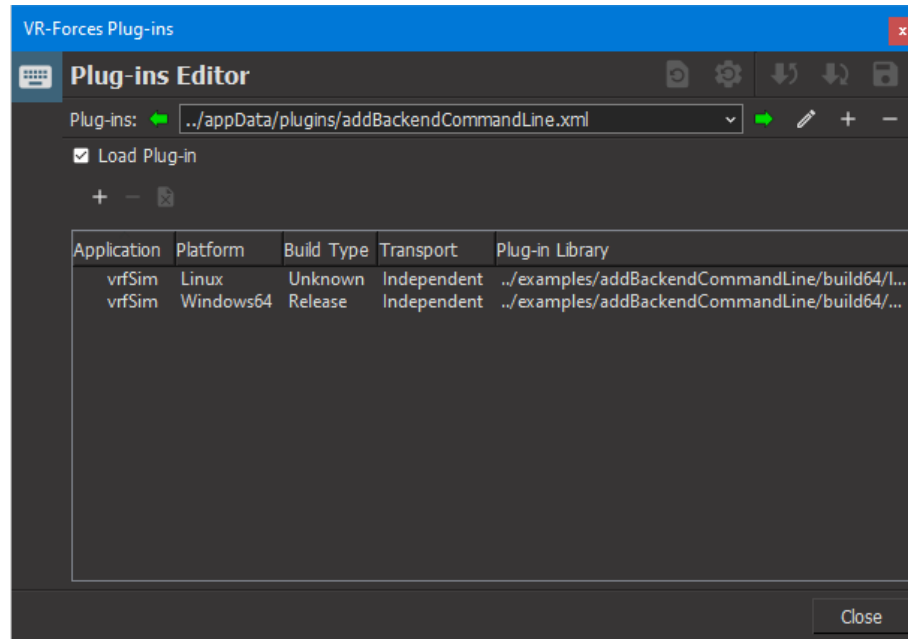

2. In the list of plug-ins at the top of the page, select the one that you want to edit.
3. Click the Plug-in Library column for the configuration that you want to edit. The Select Plug-in dialog box opens.
4. Select the DLL that you want to load for this configuration.
5. Click Open. The value changes.

### Removing a Plug-in's DLL

You can remove the DLL assignment for a plug-in configuration without removing the configuration.

► **To remove the DLL assignment for a plug-in:**

1. Choose **Settings > Plug-ins**. The Plug-ins dialog box opens.
2. Select the Plug-ins Editor page (Figure 28).
3. Select the configuration whose DLL assignment you want to remove.
4. Click the Erase button (✕).

### 3.15.4 Adding a Plug-in Configuration


A plug-in configuration is a row in the Plug-ins Editor window. It specifies an application, platform, build type, transport type, and plug-in library.



► **To add a plug-in configuration:**

1. Choose **Settings > Plug-ins**. The Plug-ins dialog box opens (Figure 26 on page 100).
2. In the list of plug-ins at the top of the page, select the one that you want to edit.
3. Click the Add button (+) above the list of configurations (#3 in Figure 27 on page 101). The Add Plug-in dialog box opens (Figure 29).

**Figure 29. Add Plug-in dialog box**

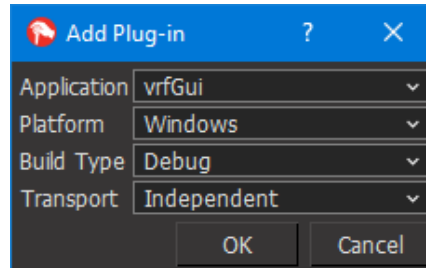

4. For each parameter (Application, Platform, Build Type, and Transport), select a value from the list.
5. Click OK. The configuration is added to the list.
6. Specify a DLL for the configuration, as described in "3.15.3 Specifying the DLLs for a Plug-in" on page 101.

### 3.15.5 Deleting a Plug-in Configuration

► **To delete a plug-in configuration:**

1. Choose **Settings > Plug-ins**. The Plug-ins dialog box opens (Figure 26 on page 100).
2. In the list of plug-ins at the top of the page, select the one that you want to edit.
3. Select the configuration that you want to delete.
4. Click the Delete button (—) that is above the list of configurations (#4 in Figure 27 on page 101).

### 3.15.6 Deleting a Plug-in

When you delete a plug-in, you delete the XML configuration file in `./appData/plugins` that specifies the plug-in configurations and whether or not to load it.

► **To delete a plug-in:**

1. Choose **Settings > Plug-ins**. The Plug-ins dialog box opens (Figure 26 on page 100).
2. In the list of plug-ins at the top of the page, select the one that you want to delete.
3. Click the Delete button (—) to the right of the plug-ins list (#2 in Figure 27 on page 101).





## II. Player Features

The chapters in this section explain how you can engage and participate in a scenario in the role of a first person human character; a vehicle driver, gunner or commander; a sensor operator; a civilian drone operator; or the pilot of an airplane or helicopter.





## 4. Common Player and Entity Features

This chapter describes actions that are common to all types of entities in a scenario.

|                                                              |     |
|--------------------------------------------------------------|-----|
| 4.1. The Action Menu .....                                   | 108 |
| 4.1.1 Selecting Options on the Action Menu .....             | 108 |
| 4.2. Using the Radio .....                                   | 109 |
| 4.2.1 Using MAK Radio in VR-Forces .....                     | 110 |
| 4.2.2 Using the Standalone Radio Application .....           | 110 |
| 4.2.3 Using the Intercom or a VOX Radio .....                | 112 |
| 4.2.4 Configuring the MAK Radio .....                        | 112 |
| 4.2.5 Audio Settings .....                                   | 115 |
| 4.2.6 Jamming Radios .....                                   | 116 |
| 4.2.7 Enabling the Radio by Default .....                    | 116 |
| 4.3. Dynamic Terrain Effects on Movement .....               | 116 |
| 4.4. Changing the View Mode .....                            | 117 |
| 4.5. Starting VR-Forces Events .....                         | 117 |
| 4.6. Introduction to Sound Effects .....                     | 117 |
| 4.6.1 Enabling Sound Effects .....                           | 118 |
| 4.6.2 Configuring Sound Effects .....                        | 118 |
| 4.6.3 Decibels Configuration .....                           | 119 |
| 4.6.4 Associating Sound Files with Entities and Events ..... | 120 |
| 4.7. Resetting Entities .....                                | 121 |
| 4.8. HMD Controls .....                                      | 121 |
| 4.9. Saved Observer Views .....                              | 121 |
| 4.9.1 Selecting a View .....                                 | 122 |
| 4.9.2 Transitioning to a View .....                          | 122 |
| 4.9.3 Resetting the View .....                               | 122 |

## 4.1. The Action Menu

The Action menu lets you turn several features on and off (toggles) and lets you assign tasks to other entities if you are hosting a VR-Forces scenario or connected to a VR-Forces session. The Action menu is context-sensitive.

Figure 30. Action menu

| Action              |         |
|---------------------|---------|
| 1: Weapon State:    | Aiming  |
| 2: Weapon:          | M4>     |
| 3: Reload           |         |
| 4: Night Vision:    | OFF     |
| 5: Flashlight:      | OFF     |
| 6: Compass:         | ON      |
| 7: Compass Units:   | Degrees |
| 8: North Reference: | True    |
| 9: Task Entity      | >       |
| 0: Gesture          | >       |
| ...                 |         |

► To open the Action menu, you can either:

- Press ~.
- Press the menu button on your game controller or head-mounted display (HMD) controller (the Back button on game controllers).

**i** The Oculus Rift, HTC Vive, and Varjo HMDs configure the Action menu differently. If the Action menu is displayed upside down, you must change the configuration. For details, see "3.10.5 Configuration Options for Virtual and Mixed Reality" on page 79.

### 4.1.1 Selecting Options on the Action Menu

You can choose options on the Action menu using the keyboard (arrow keys or number keys), the D-pad on a game controller or HMD controller, or your mouse.

► To choose an option on the Action menu using the arrow keys or D-pad:

1. Press the **Up arrow** and **Down arrow** keys on your keyboard or the up and down buttons on a game controller's D-pad to highlight an option.
2. Press the **Right arrow** key or the right button on the D-pad to toggle the option on or off or to display a submenu.

When you choose an option with the mouse, if it is a toggle, the state changes immediately. If it displays a submenu, the menu changes immediately. If it is a task, the entity executes that task immediately. Therefore, if a task requires input, such as a location, do not use the mouse to choose it. Use the arrow keys.

► To choose an option on the Action menu using a mouse, click the menu option.

Each option on the Action menu has a number. When you choose an option with a number key, if it is a toggle, the state changes immediately. If it displays a submenu, the menu changes immediately. If it is a task, the entity executes that task immediately. Therefore, if a task requires input, such as a location, do not use a number key to choose it. Use the arrow keys.

 Numbers are reassigned dynamically if you scroll the Action menu or menu commands are removed due to some change in the state of the character. Therefore, you cannot assume that a particular number always controls the same command.

- To choose an option on the Action menu using a number key, press the number associated with the menu option.

## 4.2. Using the Radio

VR-Engage supports voice communications over radios and intercoms. You can communicate with anyone using the radio application that is in the same exercise. There are 2 radios, each of which has 2 channels. (The radios are configurable. For details, see "4.2.4 Configuring the MAK Radio" on page 112.) Two applications can communicate only when the radios are tuned to the same frequency and that frequency is not being jammed.

Ground vehicles have an intercom, which has one channel. The intercom allows the crew to communicate among themselves. For information about the intercom, see "4.2.3 Using the Intercom or a VOX Radio" on page 112.

Audio data from the radio system is sent as signal interactions/PDUs on the simulation network. It can be received in other applications that can receive standard signal interactions/PDUs.

Radio communications are perfect. Radio signals are not affected by terrain, weather, distance, or other factors. However, you can use the VR-Forces radio panel or the standalone radio application included with VR-Engage to jam radios. For more information about jamming, see "4.2.6 Jamming Radios" on page 116.

The radio uses the audio devices configured in the Audio Settings dialog box for capture and playback. See "4.6.2 Configuring Sound Effects" on page 118.

### ➤ To use the radio:

1. Open the Action menu.
2. Choose **Radio** to toggle it to one of the available radios, for example, Radio 1, Radio 2, or Intercom (if one is configured).
3. When you select a radio, the channel, frequency, and other settings display. You can toggle those setting using Action menu commands.
4. To talk, hold down the **T** key or, if you are controlling a human character and using a game controller, press the A button. To hear others, release the key or button.



- You cannot hear other people talking while you are pressing the talk key or button.
- By default, radios are disabled and must be turned on manually. You can configure the roles to default to enabling the radios when a player engages in that role. See "4.2.7 Enabling the Radio by Default" on page 116.

### 4.2.1 Using MAK Radio in VR-Forces

The MAK Radio feature in VR-Forces allows VR-Forces users to use the radio to talk to VR-Engage players or anyone running the radio application.

To learn more about using the MAK Radio in VR-Forces, please refer to the *VR-Forces Users Guide* or online help.

### 4.2.2 Using the Standalone Radio Application

VR-Engage includes a standalone radio application. It lets you communicate with VR-Engage players without running VR-Engage. The application has different versions for the protocols supported by VR-Engage.



The default key for Push to Talk is **T**, but you can specify other keys in the Audio Settings. See "4.2.5 Audio Settings" on page 115.

#### ► To use the VR-Engage standalone radio:

1. In a console window or File Explorer, change to `./bin64`.
2. Run the executable for the protocol you are using:

DIS:

`makRadioAppDIS.exe`

HLA Evolved:

`makRadioAppHLA1516e.exe`


HLA13:

`makRadioAppHLA13.exe`

MAK Radio opens (Figure 31).



Figure 31. MAK Radio

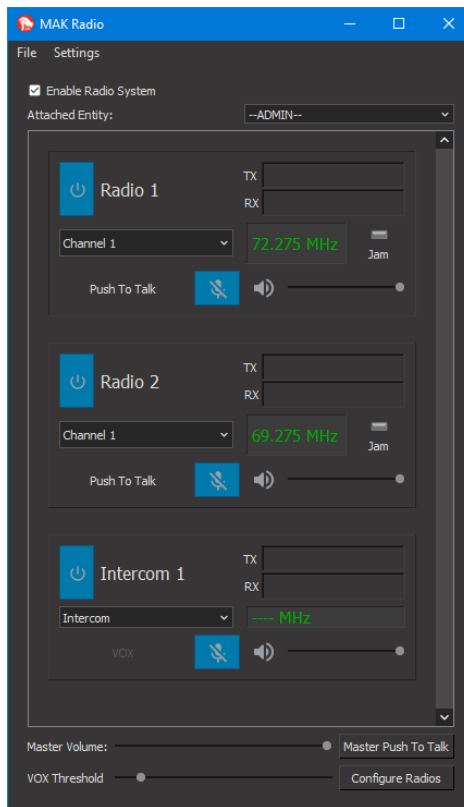

3. Optionally, adjust the Master Volume slider to adjust the volume of all radios.
4. Optionally, adjust the VOX Threshold slider to adjust the level of sound needed to enable voice activated transmission. (This is usually used for intercoms, not radios.)
5. Optionally, click Master Push to Talk to transmit on all radios that are not muted.
6. To operate a radio head:
  - a. Make sure the radio head power button is enabled (🔌).
  - b. Optionally, select a channel from the list.
  - c. Click Push to Talk or press **T** (or other key) to talk (if this is not a Vox radio).
  - d. Click the microphone button (🎤) to mute the microphone or enable it.
  - e. Click the speaker button (🔊) to mute the speaker or enable it.
  - f. Adjust the slider to change the radio's volume.
  - g. Click the Jam button (📡) to jam the radio frequency.
7. Click Configure Radios to edit the radio configuration. See "4.2.4 Configuring the MAK Radio" on the next page for details.
8. Optionally, choose **Settings > Audio Settings** to select the Playback Device (speaker) and Recording Device (microphone).

### 4.2.3 Using the Intercom or a VOX Radio

The intercom and VOX radios are voice activated and transmit any sound greater than the VOX threshold.

► **To use the intercom or a Vox radio:**

1. In the MAK Radio Application, select the Attached Entity.
2. In the application, make sure the power button is enabled (🔌).
3. Make sure that the microphone is not muted.
4. If you are using a Vox radio, you can select a channel.
5. Start talking.

### 4.2.4 Configuring the MAK Radio

You can configure the number of radios and channels, the channel frequencies, the sample rate, and the format. The Modulation and Crypto settings for radios are as defined for the Transmitter PDU in the IEEE DIS standard, IEEE Std 1278.1-2012.


If there is a mismatch between two or more radios in the Transmission, Modulation, and Crypto settings, they cannot talk to each other. The settings must match between communicating radios for the signals to be processed and the transmissions to be heard.

Changes that you make persist from one session of VR-Engage and MAK Radio to another, and the settings are the same for both.

► **To configure the MAK Radios:**

1. In the MAK Radio application, click Configure Radios. The Radio System Configuration dialog box opens (Figure 32).

**Figure 32. Radio System Configuration**

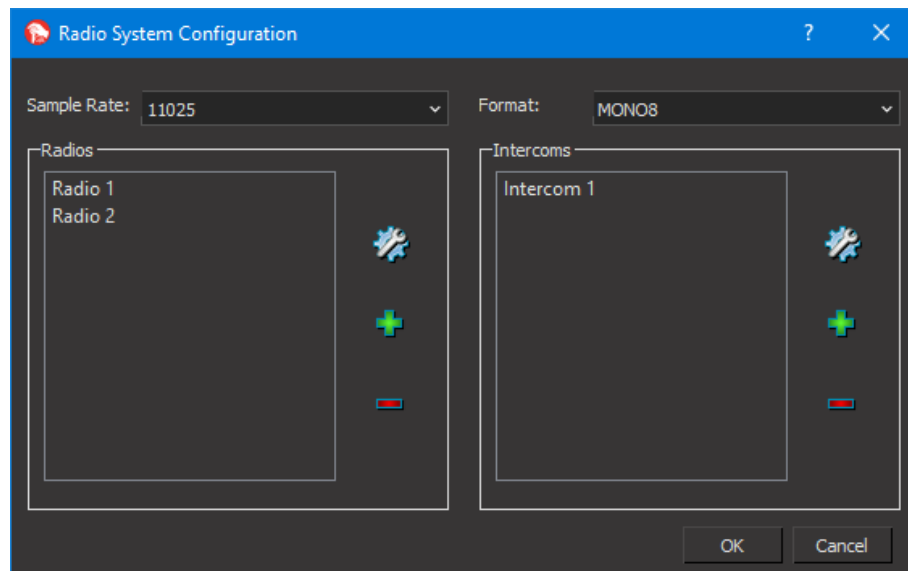


2. To change the sample rate for all radios, select the rate from the list.

3. To change the format for all radios, select the format from the list.
4. To add or edit a radio:
  - a. Click the Add Radio (+) or Edit button (✎) next to the list of radios. The Radio Configuration dialog box opens.
  - b. Configure the radio as needed. Table 5 on page 115 describes the settings.

**Figure 33. Radio Configuration**

- c. Click OK.
5. To add or edit an intercom:
  - a. To add an intercom, click the Add Intercom (+). A row is added.
  - b. To edit a new or existing intercom, select the row and then click the Edit button (✎) next to the intercom list. The Intercom Configuration dialog box opens (Figure 34).
  - c. If desired, edit the name of the intercom.
  - d. Configure the intercom as needed. Table 5 provides information about the settings. Note that only Duplex and Audio Toggles settings are available for intercoms.

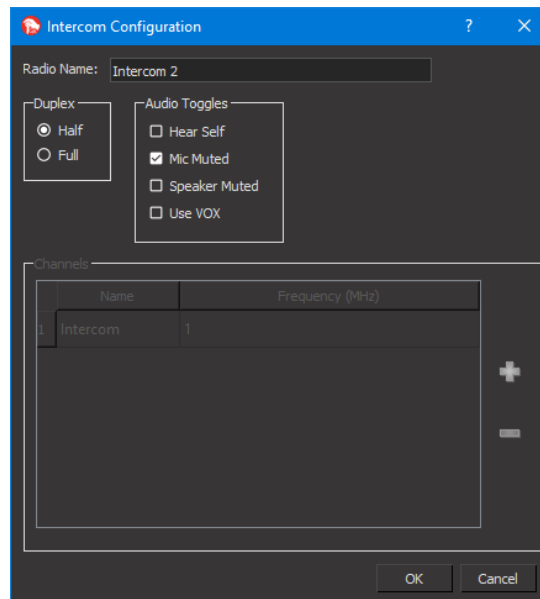**Figure 34. Intercom Configuration**

- e. Click OK.
6. When you are finished, click OK in the Radio System Configuration dialog box. You return to the Radio Communications dialog box. If you added or removed a radio or intercom, the list updates.

**Table 5. Radio and Intercom settings**

| Setting                     | Options                                                                                                                                                                                                                                                                                                                                                                      |
|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Radios and Intercoms</b> |                                                                                                                                                                                                                                                                                                                                                                              |
| Duplex                      | <ul style="list-style-type: none"> <li>— Half. Only one user can talk at a time.</li> <li>— Full. All users can speak simultaneously.</li> </ul>                                                                                                                                                                                                                             |
| Audio Toggles               | <ul style="list-style-type: none"> <li>— Hear Self. Users can hear themselves over the speaker.</li> <li>— Mic Muted. Microphone defaults to muted.</li> <li>— Speaker Muted. Speaker defaults to muted.</li> <li>— Use Vox. Radio is voice-activated.</li> </ul>                                                                                                            |
| <b>Radios only</b>          |                                                                                                                                                                                                                                                                                                                                                                              |
| Transmission Toggles        | <ul style="list-style-type: none"> <li>— Frequency Hopping. Switches frequencies during transmission to reduce interference and avoid interception.</li> <li>— Time Hopping. Varies the period and duty cycle to achieve anti-jamming or low probability of intercept.</li> <li>— Pseudo Noise. Introduces a deterministically generated random sequence of bits.</li> </ul> |

Table 5. Radio and Intercom settings (continued)

| Setting    | Options                                                                                                                                                                                                                                                                                                                                                          |
|------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Modulation | <ul style="list-style-type: none"> <li>— System. Radio system type: Generic, SINGCGARS, and so on.</li> <li>— Major. Modulation type: Amplitude, Pulse, and so on.</li> <li>— Detail. Additional information about the modulation type (options based on the Major setting).</li> </ul>                                                                          |
| Crypto     | <ul style="list-style-type: none"> <li>— System. Cryptographic system for the radio: VINSON, KY-100, and so on.</li> <li>— Mode. Crypto mode: Baseband, Dipphase, and so on.</li> <li>— Key. A simulated cryptographic key. This key is a non-zero integer value for simulating secured communication. Set to 0 when simulating plain communications.</li> </ul> |
| Channels   | <ul style="list-style-type: none"> <li>— Use the Add or Delete buttons to manage the radio's channels.</li> <li>— In the rows, double-click to edit each channel's name and frequency as needed.</li> </ul>                                                                                                                                                      |

### 4.2.5 Audio Settings

In the MAK Radio standalone application, you can access the Audio Settings. These settings allow you to specify the Playback Device (speaker), Recording Device (microphone), and one or more push-to-talk buttons.

The options are saved in `./appData/settings/makRadio/radioAudioSettings.csv`. You can copy the CSV file to other workstations that should have the same settings.


► **To choose a Playback Device or Recording Device:**

1. In the MAK Radio standalone application, choose **Settings > Audio Settings**. The Audio Settings dialog box opens.
2. Choose the speaker or microphone from the appropriate list.
3. Click OK.

► **To set the default push-to-talk key:**

1. If the Audio Settings dialog box is not open, choose **Settings > Audio Settings**.
2. Click on the Push To Talk Keys box to give it focus.
3. Press the desired key or key combination. If you want to use more than one key, continue pressing keys. Each key or key combination is separated by a comma (Figure 35).
4. Click OK.

Figure 35. Audio Settings for MAK Radio

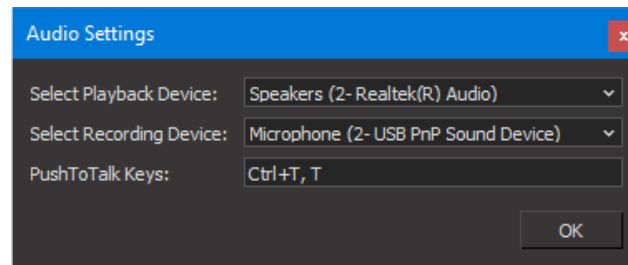

### 4.2.6 Jamming Radios

The MAK Radio Application allows you to jam radio frequencies. When you click the Jam button on a radio head, it creates another radio that jams the frequency of the currently selected channel. The users will not be able to hear the radio communications, and will not see an indication that their radio is jammed.

- To jam a radio frequency, click the Jam button (Jam).

### 4.2.7 Enabling the Radio by Default

You can add the `defaultRadio` parameter in the `./data/simulationModelSets/VR-Engage/roles/devices/radio.[role].lua` files, where `[role]` is the name of the role. You can enter the name of a configured radio, such as Radio 1, to automatically enable the radio for entities who engage in that role.

The information goes inside the `components` block. This is an example of the `radio.human.lua` file set to enable Radio 1:

```
components={
  ["radioLogic"] = {
    componentType = "DtRadioLogic";
    ...
  };

  defaultRadio="Radio 1";

  radios={
    ...
  }
}
```

## 4.3. Dynamic Terrain Effects on Movement

Dynamic terrain events cause changes to parts of the terrain, such as explosions that create craters in the ground. Those changes affect entities moving across that area of the terrain, impeding and possibly preventing their movement. For example, a human character or a ground vehicle can hide in a ditch, go over berm, or become trapped in a crater.

## 4.4. Changing the View Mode

By default, when you assume a role, you are in first-person view mode. That is, the eyepoint is placed as if you were looking out of the eyes of a human character or from the appropriate position of a character in a vehicle, such as the driver or pilot. Using the keyboard, you can switch to third-person view so that you can see the character you are playing in its context in the terrain. While driving a vehicle, you can have up to six views of the vehicle from different angles available if they are configured.

► **To change the view mode, do one of the following:**

- For human characters and aircraft, press **V**.
- For ground vehicles, press **V** or a number **1** through **6**.

**i** Ground vehicle views are defined for the vehicle and role. For information, see "Chapter 14. Model Customization Tutorial" on page 307.

## 4.5. Starting VR-Forces Events

VR-Forces scenarios can include scenario events, which can consist of text, audio, video, graphics, or some combination of these. A scenario event represents an incident or condition that exercise participants can respond to, for example a political event, a natural disaster, or some other novel event that might require a participant to respond. Events can also be used to satisfy the conditions in a trigger.

If you are in Admin mode, are controlling a character in a VR-Forces scenario, and the scenario has scenario events, you can trigger them. The scenario events are displayed in the VR-Forces GUI. They are not displayed in the VR-Engage window. If VR-Engage is hosting a scenario (and there are no VR-Forces GUIs in the exercise), the events are listed on the Action menu, but triggering them may have no visible effect.

The Action menu lists all of the events that have been created for the scenario, but does not indicate their status. A VR-Engage character can only start an event. If an event is active, you cannot stop it from VR-Engage.

► **To start a scenario event:**

1. Be sure that you are in Admin mode (**Shift+F12**).
2. Open the Action menu.
3. Choose **Trigger Event**.
4. Choose the event you want to trigger.

## 4.6. Introduction to Sound Effects


VR-Engage can associate sound effects with entities, fire events, and detonation events. You can enable and disable use of sound effects and you can specify that the player will hear sounds only when their character is within a certain distance of the entity or event that generates them.

### 4.6.1 Enabling Sound Effects

► To enable sound effects in Admin mode:

1. Choose **Settings > Audio Settings**. The Audio Settings dialog box opens (Figure 36).

Figure 36. Audio Settings page

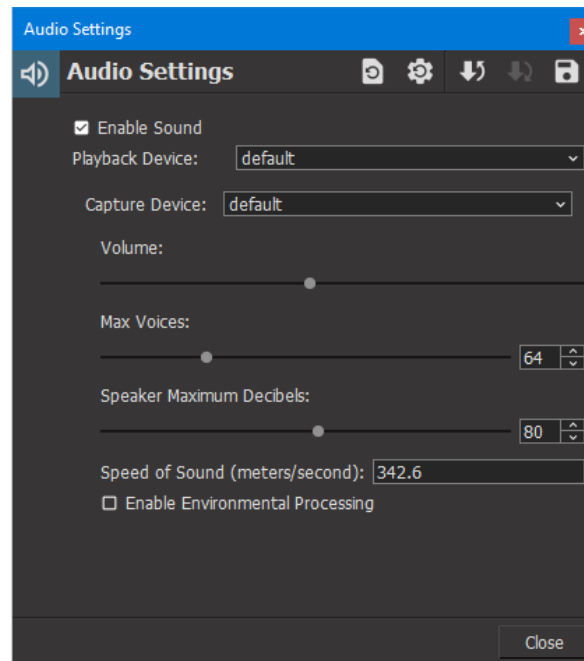

2. Select the Enable Sound check box.
3. Optionally, specify the playback device (speaker) and capture device (microphone).

### 4.6.2 Configuring Sound Effects

You can configure the sound settings in Admin mode.

- **Playback Device.** Select the speaker for the audio output.
- **Capture Device.** Select the microphone to use. This is typically for use with MAK Radio.
- **Volume.** This is the volume of the system.
- **Max Voices.** You can have from 1 to 256 voices, or maximum simultaneous playing sounds. Sounds that play at the same time are mixed into a single sound wave prior to being sent to the speaker. This mixing has a CPU cost. A high number of allowable voices can affect performance when there are many audio sounds trying to play.
- **Speaker Maximum Decibels.** Calibrates the audio system for the speakers that the system is played on. This affects how sounds at a distance fall off so that the sound loudness is realistically replicated. The default setting of 80 db represents headphones or a desktop PC's speakers. See "4.6.3 Decibels Configuration" on the



facing page for more information.

- **Speed of Sound.** This is the speed of sound in the atmosphere in meters/second. The default value is derived by using a standard day as parameters (20° C, 50% relative humidity, 1013.25 mbar/29.92 inHg). This affects the delay in playing sounds at a distance. For example, an explosion 2 km away has a several second delay from the time you can see the visual effect to when you can hear the audio effect.
- **Enable Environmental Processing.** Enables low pass filtering. As sound propagates through air, higher frequency sounds are more absorbed the further you move from the source of the sound. This setting replicates air absorption of a sound based on the distance the sound is from the listener.

► **To configure sound settings:**

1. Choose **Settings > Audio Settings**. The Audio Settings dialog box opens (Figure 36 on the previous page).
2. To select the speaker, choose a device from the Playback Device list.
3. To select the microphone, choose a device from the Capture Device list.
4. To set the volume, adjust the Volume slider.
5. To specify the maximum number of voices, adjust the Max Voices slider or change the value in the text box.
6. To set the speaker maximum decibels, adjust the Speaker Maximum Decibels slider or change the value in the text box.
7. To set the speed of sound, type a value in the Speed of Sound box.
8. To enable lowpass filtering, select the Enable Environmental Processing check box.

### 4.6.3 Decibels Configuration

As a feature, the VR-Engage audio system uses a sound decibel scaling system to compensate for the deployed sound systems such as headphones, computer speakers, and amplifiers. This helps provide a similar audio experience regardless of the system that you use.

You can configure each individual entity sound to match real world characteristics. For example:

- A whisper or rustling of leaves registers at 20 dB.
- A conversation at home is approximately 50 dB.
- A passenger car traveling on the freeway at 50 feet away is 70 dB.
- Inside a helicopter cabin 100 dB.

When configuring the decibels (dB) for a sound, you should select a decibel level that represents the level near the sound source. The dB setting should be the loudest level that you would ever want to hear the sound, which might differ from the real-life level. This allows the audio system to calibrate the sound levels automatically.

For each sound, based on the Speaker Maximum Decibels setting, the audio system computes a sound "reference" distance and "falloff" distance:


- The reference distance is the distance at which the sound is the loudest it can be heard.
- The falloff distance is the distance at which the sound can no longer be heard.

These examples show when a VR-Engage entity's sound is configured to be 80 dB and the observer is close to the entity:

- If the Speaker Maximum Decibels is set to 80 dB or lower, then the sound will be played and heard at its maximum volume.
- If the Speaker Maximum Decibels is set to 120 dB, then the sound will be played at a lower volume because the speaker system is expected to increase the heard volume to 80 dB.

Other sound effects settings are covered in "4.6.2 Configuring Sound Effects" on page 118.

**Figure 37. Example of entity decibel attribute in Entity Definition Editor**

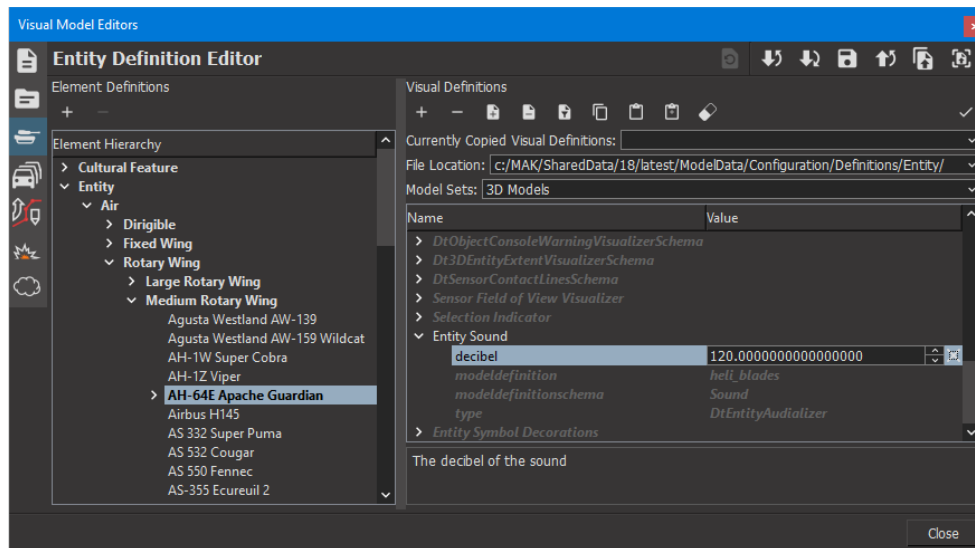

#### 4.6.4 Associating Sound Files with Entities and Events

VR-Engage includes a set of sound files (WAV format) for generic entity platforms and for fire and detonation events. The files are in `./SharedData/18/latest/Audio/Sounds`. You add and edit mappings between entity types, fire events, or detonation events and sound files in the Visual Models Editor. Sound files are associated with model definitions. For example, the **filename** parameter for the `heli_blades` model definition specifies `$(SHARED_DATA_DIR)/Audio/Sounds/heli_blades.wav`. The Rotary Wing element definition has a parameter called **Entity Sound**. The value for the **model definition** attribute is `heli_blades`.

You can quickly see which model definitions are available for sounds by filtering the list of the Visual Model Editors, Model Definitions Editor page for the Sound schema.

## 4.7. Resetting Entities

In Admin mode, you can reset entities, which can be useful during tests or other situations. When you reset an entity, their health is restored, their resources are replenished, such as fuel and munitions, and, in the case of vehicles, they are set upright. You might want to reset the entity if you die, roll a vehicle, crash a plane, expend all of your ammunition, or are otherwise rendered unable to continue performing the desired task. To learn about Admin mode, see "3.1.3 Admin, User, and Lockdown Modes" on page 61.

There are two types of reset:

- **Reset.** Restores the entity and returns it to the location it had when you took control. If you are controlling a human entity that disembarked from a vehicle role, it resets to the location at which it disembarked.
- **Reset in Place.** Restore the entity at its current location.

 When you reset an entity to the location it had when you took control, none of the other entities in the scenario will reset. As a result, the location might no longer make sense in the context of the overall scenario.

- To reset an entity, press **F5** (Reset) or **Ctrl+F5** (Reset in Place).

You can also reset an entity using the Action menu.

- To reset an entity, open the Action menu and then choose **Reset** or **Reset in Place**.

## 4.8. HMD Controls

There are some minor differences for head-mounted displays.

- The Play and Pause controls are located in the Action menu.
- Pressing **Esc** returns you to the main menu and exits VR mode. You return to VR when you select Resume from the menu.

## 4.9. Saved Observer Views

At any given moment, the state of the observer is called its view. Most terrains included with VR-Engage include saved observer views. Saved views are listed in the Observer Views Panel, which you open by clicking Saved Views Panel in the Choose Role panel.

Figure 38. Saved Observer Views



### 4.9.1 Selecting a View

- To recall a view, select it in the Saved Observer Views panel. The view changes immediately.

### 4.9.2 Transitioning to a View

Normally, when you select an observer view, the observer jumps immediately to the new view. However, VR-Engage can smoothly transition from the current observer view to a saved view.

- To transition between observer views, hold down the **Ctrl** key and click the view in the Saved Observer Views panel that you want the observer to move to.

### 4.9.3 Resetting the View

You can change the observer position from the default using the standard observer keys and the mouse. You can reset to the default view for the selected observer view.

- To reset the view to the saved observer view, click Reset View.



## 5. Controlling People

This chapter describes how to control human characters and interact with the environment and other characters.

|                                                      |     |
|------------------------------------------------------|-----|
| 5.1. Introduction .....                              | 124 |
| 5.1.1 Enabling and Disabling Mouse Control .....     | 124 |
| 5.2. Basic Movements .....                           | 125 |
| 5.2.1 Moving Your Character Around the Terrain ..... | 125 |
| 5.2.2 Changing Your Character's Posture .....        | 125 |
| 5.2.3 Looking Around .....                           | 125 |
| 5.2.4 Gesturing and Signaling .....                  | 125 |
| 5.2.5 Climbing Ladders .....                         | 126 |
| 5.3. Navigation .....                                | 126 |
| 5.3.1 Using the Compass .....                        | 126 |
| 5.3.2 Using the Minimap .....                        | 127 |
| 5.4. Health and Stamina .....                        | 128 |
| 5.4.1 Sustaining Damage to Health .....              | 128 |
| 5.4.2 Experiencing Fatigue and Losing Stamina .....  | 129 |
| 5.5. Weapons .....                                   | 129 |
| 5.5.1 Choosing a Weapon .....                        | 130 |
| 5.5.2 Aiming a Weapon .....                          | 130 |
| 5.5.3 Firing a Weapon .....                          | 131 |
| 5.5.4 Firing Weapons with an HMD Controller .....    | 131 |
| 5.5.5 Throwing a Hand Grenade .....                  | 132 |
| 5.5.6 Deploying and Stowing Weapons .....            | 133 |
| 5.5.7 Reloading a Weapon .....                       | 133 |
| 5.5.8 Rocket and Missile Launchers .....             | 134 |
| 5.6. Using the AN/PED-1 LLDR .....                   | 139 |
| 5.7. Embarking on a Vehicle .....                    | 140 |
| 5.7.1 Embarking on the Stryker's Interior .....      | 140 |

|                                                   |     |
|---------------------------------------------------|-----|
| 5.7.2 Disembarking from a Vehicle .....           | 141 |
| 5.8. Carry or Drag a Person .....                 | 141 |
| 5.9. Parachuting .....                            | 142 |
| 5.10. Tasking Other Entities .....                | 143 |
| 5.10.1 Disembark Entity .....                     | 143 |
| 5.10.2 Follow Me .....                            | 144 |
| 5.10.3 Move to Location .....                     | 145 |
| 5.10.4 Move to My Location .....                  | 145 |
| 5.11. Turning on Your Flashlight .....            | 146 |
| 5.12. Using the Binoculars .....                  | 146 |
| 5.13. Changing Visual Sensors .....               | 147 |
| 5.14. Lasing Targets .....                        | 147 |
| 5.14.1 Defining the Laser Code .....              | 149 |
| 5.14.2 Displaying a Gimbaled Sensor's View .....  | 149 |
| 5.14.3 Enabling Laser Designators .....           | 149 |
| 5.15. Opening and Closing Doors and Windows ..... | 149 |

## 5.1. Introduction

VR-Engage allow you to control individual human characters. VR-Engage includes models for several types of dismounted infantry and civilian characters, including:

- Dismounted infantry
- Dismounted infantry with lasing capability
- Dismounted infantry with missile launchers
- Paratroopers
- Police officers

### 5.1.1 Enabling and Disabling Mouse Control

When mouse control is enabled, you can use the mouse to turn a character, fire, and other actions. When it is disabled, you can access menus (in windowed mode) and do other typical mouse actions.

When you take control of a character, mouse control is automatically enabled. When you switch to windowed mode, it is automatically disabled. You can toggle mouse control on and off at any time in both full-screen mode and windowed mode.

- To enable or disable mouse control, press **Ctrl**. You can also double-click in the application to re-enable mouse control.

## 5.2. Basic Movements

As a player, you can move your character around and perform gestures.

### 5.2.1 Moving Your Character Around the Terrain

You can move your character around the terrain using the keyboard, game controller, or head-mounted display (HMD) controller. You can look around using the keyboard, game controller, HMD controller, or mouse. You can increase and decrease the speed at which you move.

### 5.2.2 Changing Your Character's Posture

You can change your character's posture. The default is to be standing upright, but you can also crouch or lie prone. Crouching helps you move into spaces with a low clearance or hide behind obstacles. Lying prone makes you less of a target for enemies and improves your accuracy when aiming a weapon.

An icon indicates your character's posture.

► **To change your character's posture:**

- Press **E** to move down to a crouching, kneeling, or prone position.
- Press **Q** to move up to a kneeling, crouching, or standing position.
- Press **Z** to lay prone from any position.
- Press **C** to stand from any position.
- Press the B button on the game controller to cycle between standing, crouching, kneeling, and lying prone.

### 5.2.3 Looking Around

You can look around by turning only your character's head, instead of turning the entire body. While you are looking, you cannot fire a weapon.

► **To look without moving your body:**

1. Press and hold **.** (period) or the right thumbstick.
2. Use the mouse, the right thumbstick, or the **H**, **K**, **U**, or **J** keys to look around you.

### 5.2.4 Gesturing and Signaling

Your character can perform a gesture or signal, such as pointing or surrendering. Some signals have military meanings, which are only available to military characters.

► **To make a gesture:**

1. Open the Action menu.
2. On the Action menu, choose **Gesture**.
3. Use an Action menu control to show the submenu. The Gesture menu opens.
4. Choose a gesture.

Your character performs the gesture. People looking at your character will see the gesture. (If you are in the first-person view, you will not see yourself performing the gesture. You can see it in third-person view.)

### 5.2.5 Climbing Ladders

If there are ladders in the terrain, you can climb them.

► **To climb a ladder:**

1. Move your character to the base or top of the ladder. When your character mounts the ladder, the ladder fills the view.
2. Climb up or down the ladder:
  - To climb up the ladder, move forward.
  - To climb down the ladder, move backward.

## 5.3. Navigation

While playing a human character, you can use the compass and the minimap to help you navigate the terrain.

### 5.3.1 Using the Compass

The compass at the top allows you to see which direction your character is facing. The compass is horizontal and shows the direction where your character is looking.

While in the human role, you can choose whether the compass should show degrees or NATO-MIL. You can also choose whether you want the compass to reference True, Magnetic, or Grid north. True north, also known as geodetic north, is the direction pointing to the geographic location of the North Pole. Magnetic north, on the other hand, is the point where the magnetic field points down. In VR-Engage, it is determined by the World Magnetic Model (WMM). The current parameters are good until 2025. To learn more about the WMM, visit <https://www.ngdc.noaa.gov/geomag/WMM>. Lastly, grid north is the direction indicated by the vertical grid lines on ordnance survey maps.

**Figure 39. Compass**





► **To enable or disable the compass:**

1. Open the Action menu (Figure 30 on page 108).
2. On the Action menu, choose **Compass**.
3. Use an Action menu control method to toggle the compass on or off.

► To toggle the compass on or off, you can also press **G**.

► **To change the units displayed in the compass:**

1. Open the Action menu.
2. Use an Action menu control method to toggle the Compass Units to either NATO-MIL or Degrees.

► **To specify which north the compass should use:**

1. Open the Action menu.
2. Use an Action menu control method to toggle the North Reference to True, Magnetic, or Grid.

**i** The default settings for the compass are based on the 3D Compass and Heading specified in the Display Units Settings; see "[Specifying Display Units](#)" in the *VR-Vantage Users Guide* to learn how to adjust these settings while in Admin mode.


### 5.3.2 Using the Minimap

You can open a minimap that shows where your character is in relation to the terrain.

The minimap is hidden by default. Use the Action menu or the keyboard to select the display format. Using the keyboard, you can also zoom in or out of the minimap.

You can configure the available map sizes and the minimap's border in `./data/simulationModelSets/VR-Engage/role/devices/minimap.lua`.

**Figure 40. Minimap - corner and center**

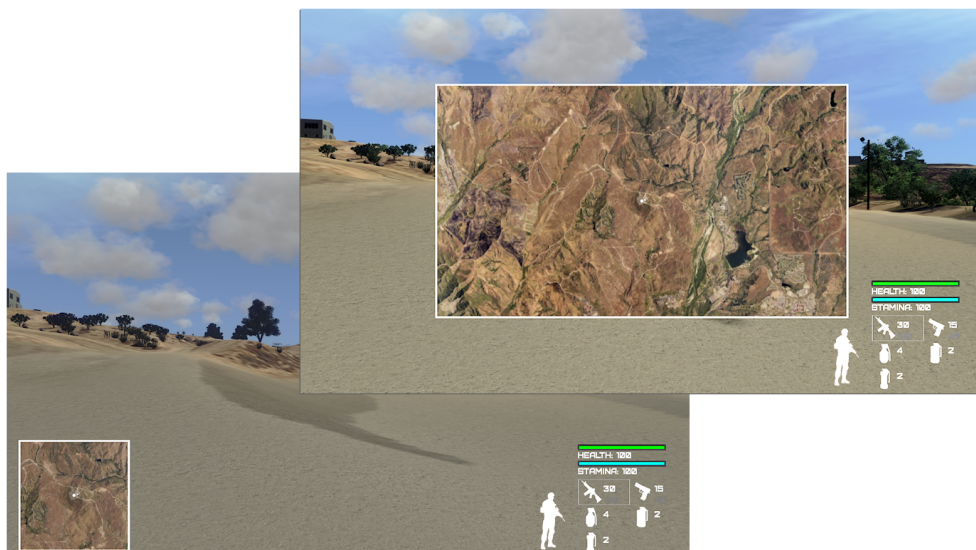

► To show or hide the minimap display using the Action menu:

1. Open the Action menu (Figure 30 on page 108).
2. On the Action menu, choose **Minimap**.
3. Use an Action menu control method to toggle the setting: hidden, corner, or center.

► To control the minimap display using the keyboard:

- Press **M** to cycle through the corner, center, and hidden views.
- Press **+** on the number pad to zoom in on the minimap.
- Press **-** on the number pad to zoom out of the minimap.
- Press **0** on the number pad to reset the minimap to the default zoom.

## 5.4. Health and Stamina

The human entity overlay includes bars that indicate the current health and stamina for your character (Figure 41). Health and stamina are depleted as your character sustains damage and experiences fatigue. Tracking human entities' health and stamina adds realism to your simulation.

**Figure 41. Health and stamina bars**



### 5.4.1 Sustaining Damage to Health

Unless your character is set to be invulnerable, you will sustain damage when other characters attack you. The health bar indicates the state of your health (Figure 41 above). As you take damage and your health is depleted, you will have trouble moving around and aiming weapons. After a certain amount of damage, you fall to the ground in pain. At that

point, your view lowers to ground level, and you cannot move or aim a weapon. Other characters in the scenario also sustain damage and experience the same effects (if they are not invulnerable).

The location on the body where a character is injured determines how much damage a character sustains. For example, a shot in the leg or arm is less lethal than a shot to the torso or head.

As you take damage, the screen shows some red. When you are hit from the side, the corners of that side of the screen are highlighted in red. If you are shot from the front or the back, all corners of the screen are highlighted. In addition, as your health is depleted, the screen takes on a red tint and your aiming will be less accurate.

Human characters that are only slightly injured and sustain no further damage will recover to full health after 30 seconds.

### 5.4.2 Experiencing Fatigue and Losing Stamina

Sprinting, crawling, walking in a crouched position, and carrying or dragging a wounded human are more challenging and therefore they cause you to use your stamina and experience fatigue. The stamina bar displays your current level of stamina (Figure 41 on the previous page). As you grow fatigued and your stamina reserves are reduced, you cannot move quickly and you will also see a greater margin of error when you fire a weapon.

When you walk or stop moving, you regain your stamina. You recover faster if you stop moving than if you walk.

## 5.5. Weapons

Infantry characters have a rifle, a handgun, and several types of grenades. The name indicates a character's primary weapon; for example, characters with an M4 in their name have an M4 rifle. A graphic in the lower right corner of the screen shows the current weapon (Figure 42).

**Figure 42. Weapon overlay for humans**



### 5.5.1 Choosing a Weapon

- To cycle through the weapon list, use the Select Weapon button on your game controller or press the **Spacebar**.
- To choose a specific weapon using the keyboard, press the number key that correlates to the weapon.
- **To choose a weapon using the Action menu:**
  1. Open the Action menu (Figure 30 on page 108).
  2. On the Action menu, choose **Weapon**.
  3. Use an Action menu control method to show the submenu. The Weapons menu opens.
  4. Choose a weapon.

### 5.5.2 Aiming a Weapon

You can aim a weapon using the reticle or the sight (Figure 43 and Figure 44).

The reticle indicates the accuracy of your shots. If you are moving, fatigued, or wounded, there is a greater margin of error in your accuracy and the reticle increases in size. To improve your accuracy, you can hold still or change to a prone position. The reticle shrinks to indicate a lesser margin of error.

**Figure 43. Aiming with the reticle**

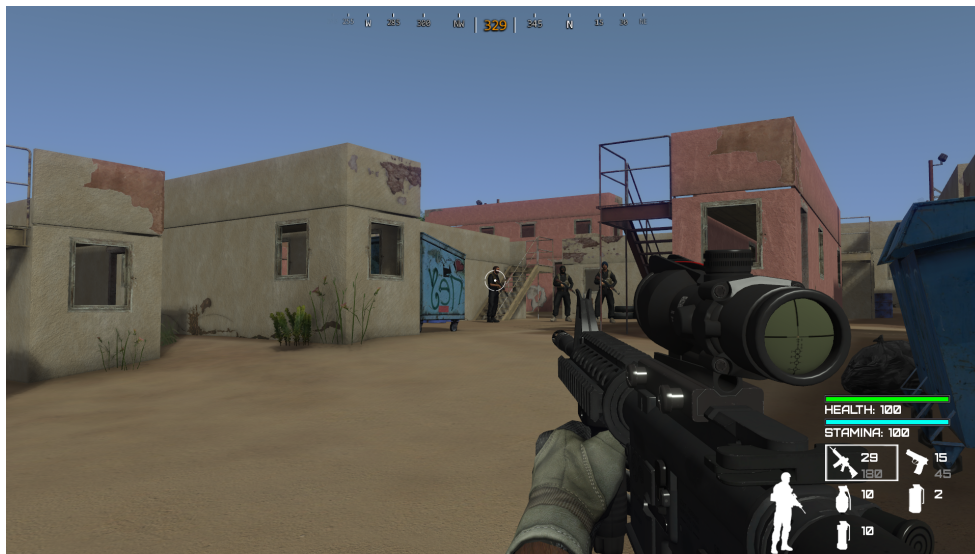




Figure 44. Aiming with sight



- To aim a weapon using the reticle, turn and raise or lower the weapon using the mouse (in mouse-look mode) or the right thumbstick on the game controller, or by pressing the **H**, **K**, **U**, or **J** keys.
- **To aim a weapon using the sight:**
  1. Hold down the right mouse button (in mouse-look mode), the left trigger on your game controller, or the **,** (comma) key.
  2. Aim the sight using the mouse or the right thumbstick, or by pressing **H**, **K**, **U**, or **J**.

### 5.5.3 Firing a Weapon

Most guns shoot once each time you fire the weapon. The AK-47 fires in three-shot bursts.

- **To fire a weapon, you can either:**
  - Click the left mouse button.
  - Press the right trigger on your game controller.

### 5.5.4 Firing Weapons with an HMD Controller

If you are using a head-mounted display (HMD) with hand controllers, you can fire weapons using your controller. By default, the right hand controller is the dominant controller. You can change this by changing the **rightHanded** parameter in `./data/simulationModelSets/VR-Engage/roles/displayLayouts/humanVrLayouts.lua` from true to false.

- If you have a pistol, hold the controller in front of you to aim. Press the trigger to fire. The pistol only tracks the position of the dominant hand.
- If you have a rifle, align the two controllers as if you were holding a rifle, with the dominant hand closer to your body. Aim the rifle and fire.

Figure 45. Firing a rifle using HMD hand controllers



### 5.5.5 Throwing a Hand Grenade

Soldiers can throw fragmentation grenades, smoke grenades, and flash bang grenades. Grenades are thrown at a target point. (If the soldier is aiming towards an area with a light background, the target point may be hard to see.)

Figure 46. Grenade target point



#### ► To throw a grenade:

1. Use the mouse or the right thumbstick to aim the grenade.
2. Click the left mouse button (in mouse-look mode) or press the right trigger on your game controller.

**i** To use the keyboard to aim the grenade, press the **H**, **K**, **U**, or **J** keys.


### 5.5.6 Deploying and Stowing Weapons

When a weapon is deployed (Aiming state), you see it in first-person view and you can fire it. When it is in the Stowed or Ready state, you cannot see it in first-person view and you cannot fire it.

The weapon overlay indicates the status of the weapon, as follows and as illustrated in Figure 47:

- Aiming. Weapon icon has a thick rectangle around it.
- Ready. Weapon has a thin rectangle.
- Stowed. Weapon has a bracketed rectangle.

**Figure 47. Weapon status**

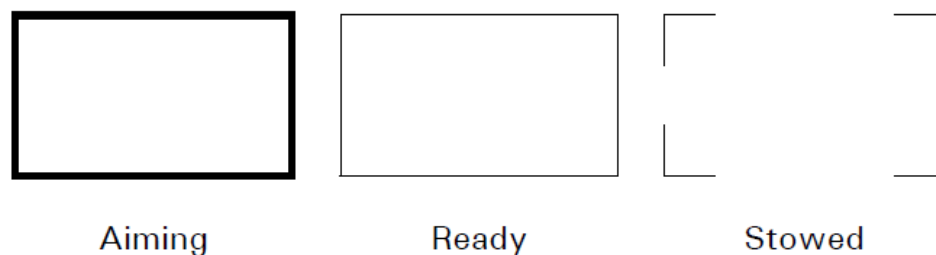

► **To deploy or stow a weapon:**

1. Open the Action menu.
2. On the Action menu, choose **Weapon State**.
3. Use an Action menu control method to toggle between states.

► **To cycle the weapon state, press ' (apostrophe).**

- **To move a weapon from the Ready state to the Aiming state, press the left mouse button or right trigger on the controller.**

### 5.5.7 Reloading a Weapon

As you fire a weapon, the system tracks the amount of ammunition left in the magazine. When the magazine is depleted, your character automatically pauses to reload. At any point, you can also manually reload the weapon. The character reloads a magazine's worth of ammunition.

Figure 48. Magazine and ammunition counts



- 1 - Remaining in magazine
- 2 - Available to load

► To reload your weapon with a fresh magazine, you can either:

- Press R.
- Open the Action menu and then choose **Reload**.

### 5.5.8 Rocket and Missile Launchers

Entities configured for shoulder-mounted weapons can be equipped with different launchers in either VR-Forces or VR-Engage's Admin mode at runtime. You can equip them with any of the launchers available in VR-Forces by setting the launcher equipment resources on the entities.

Out of the box, VR-Engage has two characters that are already equipped with Javelin missile launchers: one with a shoulder-mounted Javelin missile launcher (US Army Javelin) and one that can deploy a tripod-mounted Javelin (US Army Javelin (Tripod)).

#### Equipping Soldiers with Launchers


You can equip soldiers and police officers with shoulder-mounted weapons and rockets or missiles at runtime, either in VR-Forces or as a VR-Engage player in Admin mode.

#### *Equipping an Entity in VR-Forces*

► To equip a human character with a weapon in VR-Forces:

1. In VR-Forces, select the entity and then choose **Set > Disposition > Resources**. The Resources parameters open.

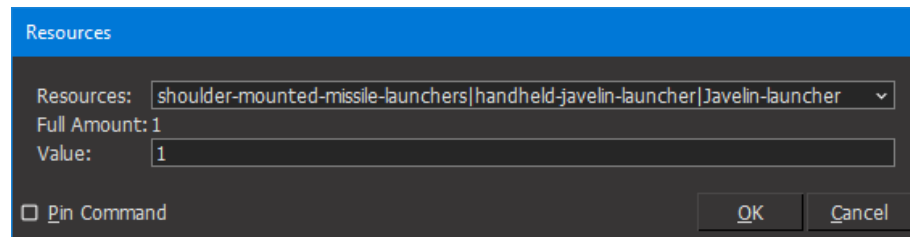


**Figure 49. VR-Forces Resources dialog box with weapon selected**

2. Select the weapon from the list.
3. In the Value box, enter 1 to indicate that the entity has the weapon.
4. Click OK.

You can supply the entity with munitions using the same set data request. By default, entities that are configured for shoulder-mounted weapons already have resources for those weapons.

► **To supply a human character with munitions for the weapon in VR-Forces:**

1. In VR-Forces, select the entity and then choose **Set > Disposition > Resources**. The Resources parameters open.

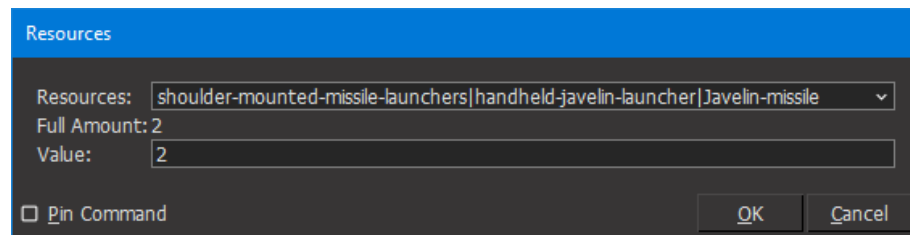**Figure 50. VR-Forces Resources dialog box with munition selected**

2. Select the appropriate munition from the list.
3. In the Value box, enter the number of munitions that the entity should have.
4. Click OK.

### ***Equipping an Entity in VR-Engage***

► **To equip a human character in VR-Engage as a player:**

1. Make sure you are in Admin mode (**Shift+F12**).
2. Engage as a soldier or police character.
3. Open the Action menu and then choose **Load Resource**. The Load Resource submenu opens.
4. Use an Action menu command to choose one of the available weapons.

### Using the Shoulder-Mounted Missile Launcher


The shoulder-mounted missile launcher simulates an FGM-148 Javelin. It has two methods of firing: direct or top attack. The minimum range is 65 m for direct attacks and 150 m for top attacks. It is configured with a maximum range of 4 km. You must seek and lock onto a legitimate target before firing the weapon.

By default, the US Army Javelin entity is equipped with the Javelin as one of its weapons. If you want another entity to use a Javelin, see "Equipping Soldiers with Launchers" on page 134.

#### *The Javelin Command Launch Unit Display*

The Javelin's command launch unit (CLU) display shows the status indicators.

**Figure 51. Javelin CLU display**

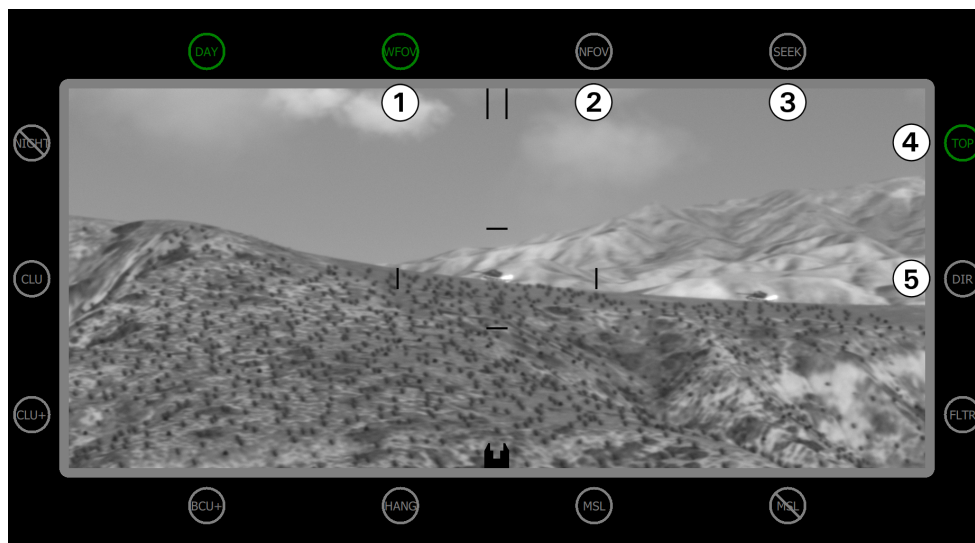

- 1 – WFOV. Indicates when you are using the wide field-of-view.
- 2 – NFOV. Indicates when you are using the narrow field-of-view.
- 3 – Seek. Indicates whether you are in Seek mode.
- 4 – Top. Indicates that the Javelin is set to top attack.
- 5 – Dir. Indicates that the Javelin is set to direct attack.


#### *Aiming and Firing the Javelin*

##### ► To use the shoulder-mounted missile launcher:

1. While engaged as a character equipped with a Javelin, select that weapon using one of the standard weapon selection methods.
2. Aim the Javelin using one of the weapon aiming methods. The view changes to show the Javelin CLU, zoomed in where you are looking.
3. Optionally, use the mouse wheel to change between NFOV (scroll forward) and WFOV (scroll backward).

4. Optionally, you can toggle between top attack and direct attack by pressing **M**.
5. Press **left Alt** or the left shoulder button to enter Seek mode, where you can detect legitimate targets. The cross-hairs display and the Seek icon is green (Figure 52).
  - If there is no target, the cross-hairs and reticle blink.
  - When you have a target, nothing blinks.

**Figure 52. CLU display, target found**

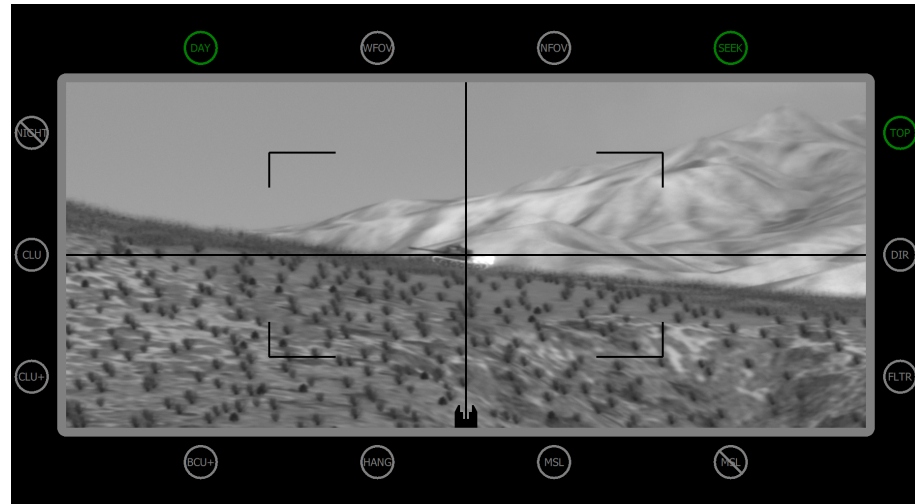

6. Fire the weapon using a standard weapon firing method.

### Using the Tripod-Mounted Missile Launcher


The tripod-mounted missile launcher is an object that the US Army Javelin (Tripod) character can deploy. Until it is deployed, it is not part of the scenario. Once it is deployed, it is an independent entity in the scenario. Other characters can fire it. Only the character that originally deployed it can recover it; that is, remove it from the scenario.

A tripod-mounted missile launcher has an azimuth (horizontal range) of 45 degrees to the left and right. It has an elevation (vertical range) of 30 degrees. When a tripod-mounted missile launcher is deployed, it faces in the direction of the entity that deployed it. Once it is deployed, you cannot change its heading.

#### ► To deploy the tripod-mounted Javelin:

1. Add or select the US Army Javelin (Tripod) character.
2. Engage the character. The default presentation is that of a US Army M4 character.
3. Walk to the location where you want to deploy the missile launcher.
4. Face the heading that you want the missile launcher to be deployed to.
5. Optionally, stow your rifle.
6. On the Action menu, choose **Deployable Objects > Deploy Javelin Launcher**. The Javelin Missile Launcher is added to the scenario. The Action menu changes to show Javelin Launcher menu options.

Figure 53. Tripod-mounted Javelin

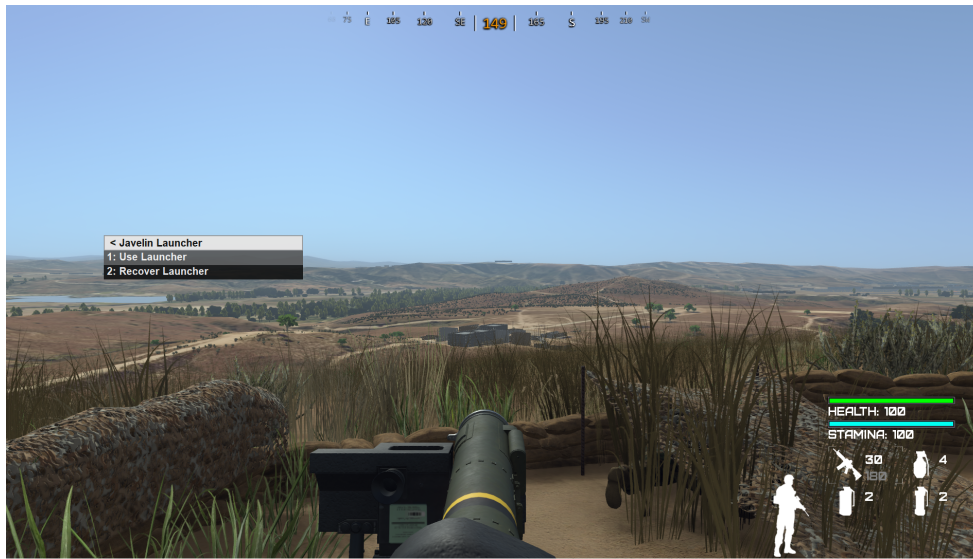

### *Using a Tripod-Mounted Missile Launcher*

Once a missile launcher is deployed, any character can use it.

#### ► To use the missile launcher:

- If your character is close to the missile launcher, on the Action menu, choose **Javelin Launcher > Use Launcher**.
- If your character is not close to the missile launcher, walk towards it until the Javelin Launcher menu displays and then choose **Use Launcher**. The display changes to show the CLU (Figure 51 on page 136).

The tripod-mounted missile launcher aims and fires using the same methods as the shoulder-mounted one. See "The Javelin Command Launch Unit Display" on page 136 and "Using the Shoulder-Mounted Missile Launcher" on page 136 for instructions.

### *Recovering a Tripod-Mounted Missile Launcher*

When you recover a tripod-mounted Javelin, you remove it from the scenario. It is not available for use until you deploy it again. Only the character that deployed the Javelin can recover it.

- To recover the missile launcher, choose **Javelin Launcher > Recover Launcher** on the Action menu. If you are not within a few feet of the missile launcher, the Javelin Launcher menu option is not available. If you walk towards the missile launcher, it opens automatically.

### *Using a Rocket Launcher*

Soldiers and police officers can be equipped with rocket launchers. These are simpler weapons than the Javelin, in that they do not detect legitimate targets. Players simply point and fire the weapon.

► **To use a rocket launcher:**

1. While engaged as a character equipped with a rocket launcher, select that weapon using one of the standard weapon selection methods.
2. Aim the launcher using one of the weapon aiming methods. The HUD displays the simple iron sight. (Aiming is optional.)
3. Fire the weapon using a standard weapon firing method.

## 5.6. Using the AN/PED-1 LLDR

You can use the AN/PED-1 LLDR (Lightweight Laser Designator Rangefinder AN/PED-1) in VR-Engage for forward observer training. A player operating the LLDR can look around, lase targets that are within line of sight, use the radio, change the camera on the LLDR,


The device is a standalone entity, not attached to any other character. You can include it in a scenario that includes human characters for them to use, or create it as an entity and operate it directly from the Choose Role panel.

 You can use the LLDR with VR devices.

► **To operate the LLDR as a human character:**

1. Approach the AN/PED-1 LLDR. When the LLDR menu opens, use an Action menu command to choose **Use LLDR**. Your view changes to the LLDR HUD (Figure 54).
2. Move the view to a point of interest.

**Figure 54. LLDR HUD**

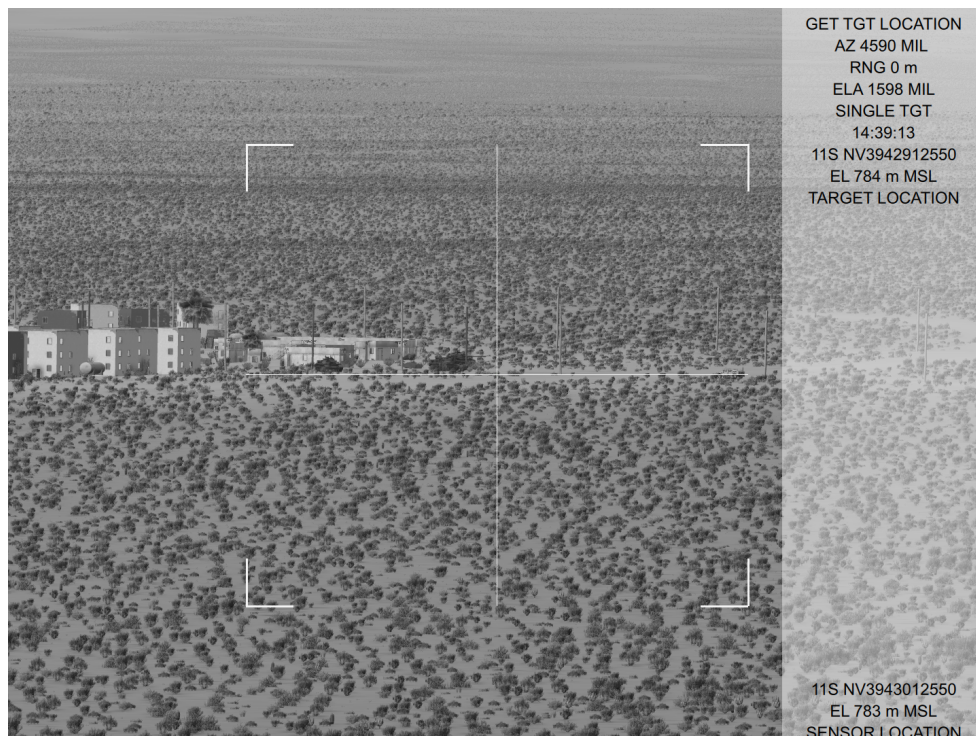



- To lase a target, open the Action menu and toggle Lasing to On. The HUD indicates that you are lasing a target: the top line changes from ELRF\_IDLE to GET TGT LOCATION.
- To define a laser code:
  1. In the Action menu, choose **Laser Code**. The Set Laser Code dialog box opens.
  2. Enter a laser code and then press **Enter**.

## 5.7. Embarking on a Vehicle

If a vehicle supports embarkation, characters can embark on it and move with it as it moves. If the vehicle has interior geometry, your character can look around and walk around on the floor of the vehicle. Among the vehicles provided with VR-Engage, the 5-ton truck, the Stryker, the police car, and the CH-47 Chinook and CH-149 Cormorant helicopters have interior geometry. Other vehicles, such as the LAV and M1A2, support embarkation but do not have interior geometry.

### ➤ To embark on a vehicle:

1. Have your character walk up to the vehicle. When the character is within a meter or so of the vehicle, the embarkation menu for the vehicle displays.

Figure 55. Embark menu



2. Select a role or seat.
3. Press the **Right arrow** key or right D-pad button to initiate the action. The character is placed on the vehicle.

### 5.7.1 Embarking on the Stryker's Interior

The M1126 Stryker ICV with M2 has an interior that allows you to board and choose an available seat.

► **To embark on the Stryker from the interior:**

1. Have your character walk up to the back of the vehicle. When the character is within a meter or so of the vehicle, the Stryker menu displays.
2. If the door is not open, select **Door**. The door opens, providing a ramp into the Stryker.
3. Walk your character up the ramp and into the interior. Your character automatically shifts to a crouching posture.

As you navigate the interior, the seat closest to your character displays in the Stryker menu. Different seats display in the menu based on your position.

4. Choose the seat from the menu. This can be a seat in the back, the Driver Seat, or the Commander seat. (You can also embark as the driver or commander directly from the Stryker menu as described in "5.7. Embarking on a Vehicle" on the previous page.)

### 5.7.2 Disembarking from a Vehicle

There are a couple of ways that you can disembark a vehicle, depending on how the vehicle is configured.

► **To disembark from a vehicle, you can either:**

- On the Action menu, choose Disembark. The character is placed outside of the vehicle.
- Have the character walk off the back of the vehicle.

## 5.8. Carry or Drag a Person

In some situations, it is necessary to carry or drag a person, such as someone who is injured. VR-Engage allows you to replicate that in a scenario. If there is a vehicle in a scenario, you can embark the person you are carrying on that vehicle.

**Figure 56. Drag and carry**





- If a human character is dead, you cannot carry or drag them.
- The ability to drag or carry an entity is currently limited to some of the US soldier entities.

► **To drag or carry a character:**

1. Approach the injured person.
2. Open the Action menu.
3. Select the character and then press the **Right arrow** key or right D-pad button.
4. Choose the method you want to use:
  - Armpit Drag. Put your hands under the injured person's armpit to move them.
  - Strap Drag. Take the injured person by the strap on the back of their vest to move them.
  - Fireman Carry. Put the injured person over your shoulder to carry them.

The camera switches to third-person view.

5. Move in the direction where you want to take the injured person.
6. At any point, you can open the Action menu and choose **Drop Injured** to place the person on the ground.

- To place the person in a vehicle, choose **Embark Injured** from the Action menu.

## 5.9. Parachuting

The paratrooper character can parachute out of aircraft. The descent starts in free fall. The paratrooper's weapon is hidden. After the parachute is deployed, the drift of the paratrooper is affected by wind speed and direction. You can turn the parachute to the left or right and you can slow the rate of descent. When the paratrooper lands, the parachute is hidden and the paratrooper's weapon is again available. It returns to whichever view mode it was in before it jumped.



Figure 57. Parachute deployed



- To jump from an aircraft, walk out of an open cargo door. If the door is not open, you can open it.
- To deploy a parachute, press **Spacebar** or the A button on your controller.
- To turn left or right while the parachute is deployed, press **A** or **D**, or the shoulder buttons on the game controller.
- To slow the rate of descent while the parachute is deployed, press **A+D** or both shoulder buttons simultaneously.

## 5.10. Tasking Other Entities

While you are playing a character, you can assign tasks to other entities in the scenario.

- i When you assign a task, you are assigning what VR-Forces calls an independent task. If the entity to which you are assigning the task is currently executing a task either as an independent task or as part of a plan, when you assign the new independent task, the entity abandons the old task or plan.

### 5.10.1 Disembark Entity

The Disembark Entity task causes the selected entity to disembark from the vehicle that it is on. You can only task an individual entity, not a unit.

- **To issue the Disembark Entity task:**
  1. Open the Action menu.
  2. Choose **Task Entity**.

3. Use an Action menu control method to show the submenu. The Select Entity menu opens.
4. Select the entity that you want to give a task to.
5. Use an Action menu control method to show the submenu. The Task Entity menu opens.
6. Choose **Disembark Entity**.
7. Use an Action menu control method to initiate the action.

### 5.10.2 Follow Me

The Follow Me task causes the selected entity or unit to follow your character.

 If you task an entity or unit to follow you, it will do so indefinitely. To make it to stop following, task the entity or individual entities to move to a location.

► **To issue the Follow Me task:**

1. Open the Action menu.
2. Choose **Task Entity**.
3. Use an Action menu control method to show the submenu. The Select Entity menu opens.
4. Select the entity or unit that you want to give a task to.
5. Use an Action menu control method to show the submenu. The Task Entity menu opens.
6. Choose **Follow Me**.
7. Use an Action menu control method to initiate the action. The entity or unit moves to a location behind your character.

### 5.10.3 Move to Location

The Move to Location task causes the selected entity to move to the specified location. You can only task an individual entity, not a unit.

► **To issue the Move to Location task:**

1. Open the Action menu.
2. Choose **Task Entity**.
3. Use an Action menu control method to show the submenu. The Select Entity menu opens.
4. Select the entity that you want to give a task to.
5. Use an Action menu control method to show the submenu. The Task Entity menu opens.
6. Select **Move to Location**. VR-Engage places a waypoint symbol at the point your character is looking at.
7. Use the mouse or right thumbstick on your game controller to move the waypoint to the location you want the other entity to move to.
8. Use an Action menu control method to initiate the task. The tasked entity moves to the location.

### 5.10.4 Move to My Location

The Move to My Location task causes the selected entity to move so that it is standing next to your character. You can only task an individual entity, not a unit.

► **To issue the Move to My Location task:**

1. Open the Action menu.
2. Choose **Task Entity**.
3. Use an Action menu control method to show the submenu. The Select Entity menu opens.
4. Select the entity that you want to give a task to.
5. Use an Action menu control method to show the submenu. The Task Entity menu opens.
6. Choose **Move to My Location**.
7. Use an Action menu control method to initiate the action. The selected entity moves to a position next to your character.

## 5.11. Turning on Your Flashlight

The flashlight casts a circle of light on the terrain.

► **To turn on the flashlight:**

1. Open the Action menu.
2. Choose **Flashlight**.
3. Use an Action menu control method to toggle the flashlight on or off.

 You can also toggle the flashlight on and off by pressing **F**.

## 5.12. Using the Binoculars

You can zoom in and out in five fixed steps. At the highest zoom level (binoculars), VR-Engage displays a range finder graphic as an M22 binoculars reticle with 10 mil markers.

You cannot fire a weapon when the binoculars are in use, nor can you use binoculars while your weapon is in the Aiming position. If you are controlling a character that has lasing capability, pressing the Fire button lases the target.

► **To zoom the view in and out, do any of the following:**

- Scroll the mouse wheel forward and back.
- On the Action menu, choose **Binoculars** and change the status. Binoculars go immediately to the highest zoom level.
- Press **B** (for binoculars view). Binoculars go immediately to the highest zoom level. Press **-** to zoom out or **=** to zoom in. The view zooms one step for each key press.
- Press the **X** button. Binoculars go immediately to the highest zoom level. Use the left shoulder button to zoom out or the right shoulder button to zoom in.
- Press **=**, right shoulder button, or scroll the mouse wheel forward. Binoculars go immediately to the highest zoom level.

 If you return to the Choose Role panel while using binoculars, the entity stops using the binoculars and you must use one of the methods to start using them again if you reengage the same entity.

## 5.13. Changing Visual Sensors

Human characters can simulate the effect of wearing night vision goggles (NVG).

**i** The default visual sensors use CameraFX, which just applies a filter to the scene. It does not take into account the materials of the viewed objects. For details, see the *VR-Vantage Users Guide*.

If you want a visual sensor capability that takes into account the materials of the viewed objects, you can install SensorFX. SensorFX is an extra cost option. Please contact [info@mak.com](mailto:info@mak.com) for details.

► **To turn on the night vision goggles for human characters:**

1. Open the Action menu.
2. Choose **Night Vision**.
3. Use an Action menu control method to toggle night vision on or off.


**i** You can also toggle night vision by pressing **N** or D-pad down on a game controller. You do not need to open the Action menu.

## 5.14. Lasing Targets

Soldiers that have a lasing capability can lase targets if they have line of sight to the target and it's within range of their laser designator. VR-Engage includes two characters with lasing capability: DI Lasing (US) and DI Lasing (CIS).

When you lase a target, the display shows that the laser is on. If you enable laser designators, a green circle displays on the lased location.

Figure 58. Lasing a target

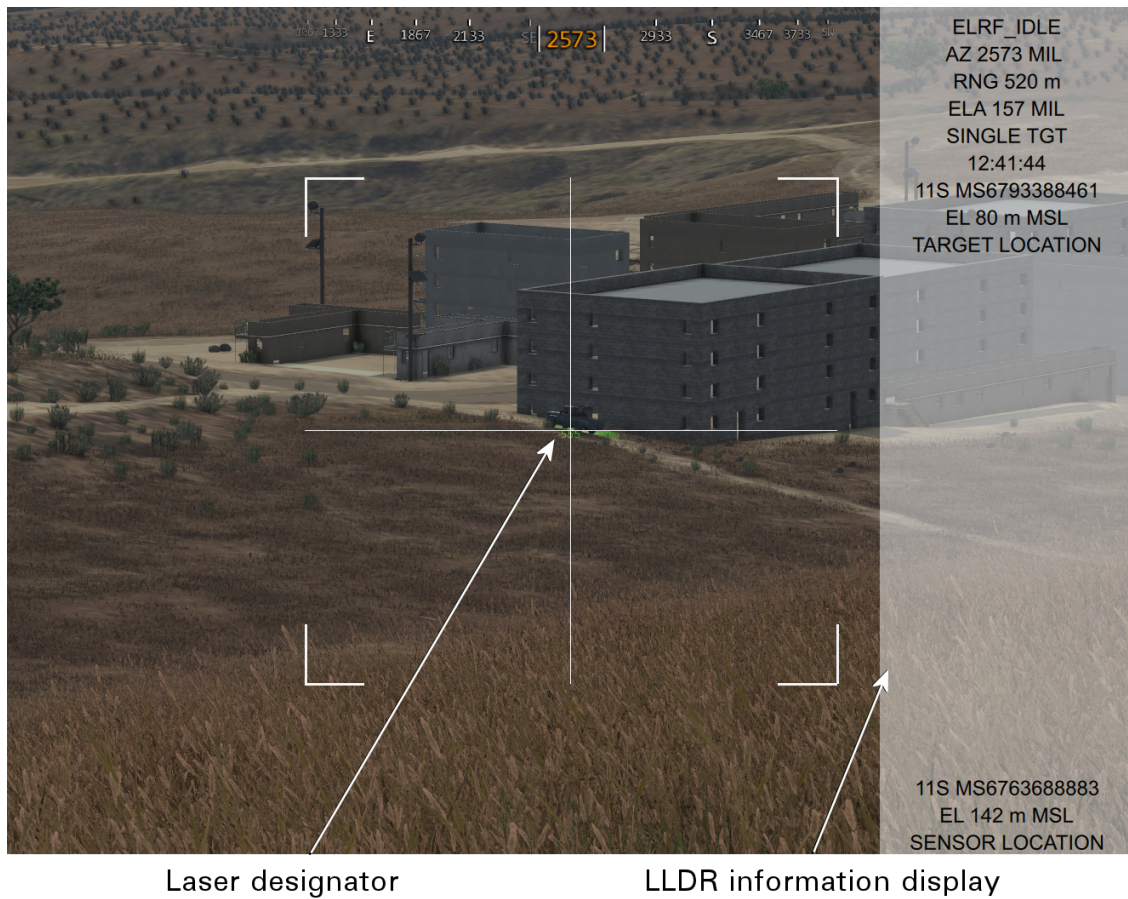

**i** You cannot select an entity to lase. You can only lase locations on the terrain.

► **To lase a target:**

1. Do one of the following to enable binoculars:
  - On the Action menu, toggle **Binoculars** to On.
  - Press the X button on a game controller.
  - Press **B**.
2. Point the cross-hairs of the binoculars at the point you want to lase.
3. Press and hold the left mouse button or the right trigger on a game controller.

### 5.14.1 Defining the Laser Code

You can define the laser code used when you lase a target. Laser codes can be up to four digits long. When you lase a target, that code is used.

► **To define the laser code:**

1. On the Action menu, choose **Forward Air Control**.
2. In the Forward Air Control menu, choose **Laser Code**. The Set Laser Code dialog box opens.
3. Enter a laser code and then press **Enter**.

### 5.14.2 Displaying a Gimbaled Sensor's View

You can display the sensor view for gimbaled sensors in the scenario. You cannot control the view, only see it.

► **To view the sensor on another entity:**

1. On the Action menu, choose **Forward Air Control**.
2. On the Forward Air Control menu, choose the entity whose sensor view you want to display.

### 5.14.3 Enabling Laser Designators

A laser designator is a green circle that shows where a laser is being pointed. It includes the laser code. Laser designators are disabled by default. You must be in Admin mode to enable laser designators.

► **To enable or disable laser designators:**

1. If you are not in Admin mode, press **Shift+F12**.
2. Choose **Settings > Laser Designators**.

## 5.15. Opening and Closing Doors and Windows

If a terrain has doors and windows that can open and close, when a human character approaches within about a meter of an opening, a menu is displayed that lets you choose to open or close the opening.



**Figure 59. Door menu**



**i** The ability to open and close doors requires a dynamic terrain server. Therefore, it only works when you are connected to a VR-Forces session.

- To open or close a door or window, when the appropriate menu displays, make a selection from the menu.





## 6. Controlling Ground Vehicles

This chapter explains how to control and crew ground vehicles.

|                                                          |     |
|----------------------------------------------------------|-----|
| 6.1. Introduction .....                                  | 152 |
| 6.1.1 Ground Vehicle Roles .....                         | 152 |
| 6.1.2 Ground Vehicle Display Options .....               | 153 |
| 6.2. Driving Ground Vehicles .....                       | 153 |
| 6.2.1 Starting the Engine .....                          | 153 |
| 6.2.2 Putting the Vehicle into Gear .....                | 154 |
| 6.2.3 Controlling the Throttle .....                     | 154 |
| 6.2.4 Steering a Vehicle .....                           | 154 |
| 6.2.5 Looking Around .....                               | 154 |
| 6.2.6 Using the Backup Camera View .....                 | 155 |
| 6.2.7 Releasing and Engaging the Parking Brake .....     | 155 |
| 6.2.8 Locking and Unlocking the Differential .....       | 155 |
| 6.2.9 Turning the Headlights On and Off .....            | 155 |
| 6.3. The Gunner Role .....                               | 156 |
| 6.3.1 Firing a Vehicle's Gun .....                       | 156 |
| 6.3.2 Choosing a Weapon .....                            | 156 |
| 6.3.3 Moving a Turret or Gun .....                       | 157 |
| 6.3.4 Stabilizing a Vehicle's Gun .....                  | 157 |
| 6.4. The Commander Roles .....                           | 157 |
| 6.4.1 Changing Positions .....                           | 158 |
| 6.4.2 Switching Views in the Commander Position .....    | 158 |
| 6.4.3 Overriding the Gunner .....                        | 158 |
| 6.4.4 Slewing the Gun to Designate a Target .....        | 158 |
| 6.4.5 Using the Laser Designator .....                   | 159 |
| 6.5. Using the Intercom .....                            | 159 |
| 6.6. Changing the Sensor for a Vehicle Crew Member ..... | 159 |
| 6.7. Pivoting a Tank .....                               | 160 |

|                                                                |     |
|----------------------------------------------------------------|-----|
| 6.8. Towing Other Ground Entities .....                        | 160 |
| 6.9. Emergency Lights and Sirens .....                         | 160 |
| 6.10. Configuring Ground Vehicles on Geocentric Terrains ..... | 161 |

## 6.1. Introduction

VR-Engage allows you to control ground vehicles that use the Vortex physics libraries, which provide high-fidelity movement behaviors.

For a list of vehicles included with VR-Engage, see "Chapter 12. Controllable Entities" on page 255. You can add more ground vehicles. For details, see "Chapter 13. Adding and Editing VR-Engage Entity Models" on page 295.

**i** The scenarios that ship with VR-Engage have been configured to allow for full-physics collisions with ground vehicles that do not have tasks (they have no beyond that Vortex physics). To improve performance in larger scenarios, this is not the default. If you want something similar for your scenarios, contact support: <https://www.mak.com/support>.

### 6.1.1 Ground Vehicle Roles

All ground vehicles support the Driver role, and some vehicles support other roles that you can select from the Choose Role Panel. You can change roles once embarked, as described in "3.4.3 Switching Roles on a Vehicle" on page 70.

Some vehicles also allow you to embark as a passenger in a particular seat when you walk up to them as a human character, but not from the Choose Role Panel. See "5.7. Embarking on a Vehicle" on page 140 for details.

To learn what roles are available for each vehicle, see "Chapter 12. Controllable Entities" on page 255.

The driver role allows you to:

- Drive the vehicle, which involves:
  - Starting the engine.
  - Engaging gears.
  - Increasing and decreasing throttle.
  - Steering.
- Manage headlights.

In addition to the driver functions, the driver/gunner role allows you to:

- Rotate the turret. (LAV and M1A2 only. You cannot see this happen in the first person view.)
- Fire weapons that are configured on the vehicle. (LAV and M1A2 only. For details, see "6.3.1 Firing a Vehicle's Gun" on page 156.)

The gunner role allows you to:

- Fire weapons that are configured on the vehicle.
- Rotate a turret and raise and lower the gun. (The M2A3 Bradley IFV and GTK Boxer allow you to perform these actions while the CGF drives the vehicle.)
- Stabilize the gun.

The commander role allows you to:

- Look around.
- Change the sensor view.
- Zoom in and out.
- Slew or take full control of the gun (only M2A3 Bradley IFV and GTK Boxer).
- Designate a target with a laser (only M2A3 Bradley IFV and GTK Boxer).

### 6.1.2 Ground Vehicle Display Options

Most ground vehicles are designed for a single screen display. Some vehicles have support for a 3D interior or VR headsets.

- 1 Screen Horizontal. This is the standard interface for most ground vehicles.
- 3D Cockpit. This display shows a more detailed view of the interior for some roles.
- VR Headset. Select this option if you are using a head-mounted display and have chosen to engage one of the vehicles that supports VR. (This is relevant only if you have an HMD connected.)

► **To choose a display option for vehicles with multiple displays:**

1. In the Choose Role Panel, select the vehicle you want to control.
2. Choose the Role.
3. In the Display(s) list, select the display option. Different displays are available only on some vehicles and only for particular roles.

## 6.2. Driving Ground Vehicles

To operate most ground vehicles, you must use a game controller or racing wheel controller. (You can control the LAV from the keyboard in the driver role.)

### 6.2.1 Starting the Engine

► **To start (or stop) the engine, do one of the following:**

- On the Action menu, toggle Engine: On/Off.
- On a game controller, press the Start button.
- On a Racing Wheel Controller, press the Engine On button.
- Press **X**.

### 6.2.2 Putting the Vehicle into Gear

Vehicles have automatic transmissions. When you set a gear, you are setting the top gear it can use. Vehicles have different sets of gears. For example, the LAV has eight forward gears and one reverse gear. Automobiles have six forward gears and one reverse gear. The M1A2 tank has two forward gears and one reverse gear.

► **To put the vehicle into gear, you can either:**

- Press the right shoulder button (up) or left shoulder button (down) buttons on your game controller.
- Press **E** (up) or **Q** (down).

### 6.2.3 Controlling the Throttle

If you are using a Racing Wheel Controller, use the gas and brake pedals.

► **To move the vehicle, do one of the following:**

- On a game controller, pull the right trigger.
- On a Racing Wheel Controller, depress the Throttle.
- Press **W**.

► **To brake the vehicle, do one of the following:**

- On a game controller, pull the left trigger.
- On a Racing Wheel Controller, depress the Brake.
- Press **S**.

 Game controller triggers are axes and therefore can respond to the amount of pressure that you apply. For example, pull the right trigger slightly to accelerate gently or fully depress it to accelerate rapidly.

### 6.2.4 Steering a Vehicle

► **To steer the vehicle, do one of the following:**

- Use the left thumbstick on a game controller
- Use the steering wheel of a Racing Wheel Controller.
- Press **A** (left) or **D** (right).

### 6.2.5 Looking Around

You can look around when you are in the driver role of some ground vehicles.

► **To look around:**

- Press and hold the right mouse button and then move the mouse.
- Move the right thumbstick on a game controller.

### 6.2.6 Using the Backup Camera View

There are times when you want to see behind your vehicle, such as when you are driving in reverse. Vehicles that are configured with a backup camera view allow you to change the perspective to see behind you.

► **To switch to (or from) the backup camera view, you can:**

- Press **B** on the keyboard.
- Cycle through the available views until the backup view displays (**V** or **Y** button on a game controller).

### 6.2.7 Releasing and Engaging the Parking Brake

► **To set the parking brake on or off:**

- On the Action menu, toggle Parking Brake: On/Off.
- On a game controller, use left thumbstick (press).
- On a Racing Wheel Controller, press the Parking Brake button.
- Press **P**.

### 6.2.8 Locking and Unlocking the Differential

A differential allows the wheels on an axle to rotate at different speeds. Locking the differential may improve traction under certain terrain conditions. Players controlling a ground vehicle configured with a differential, such as the LAV, can enable or disable it.

► **To lock or unlock the differential, do one of the following:**

- On the Action menu, toggle Differential Lock: On/Off.
- On a game controller, press the **X** button.
- On a Racing Wheel Controller, press the Differential Gear button.
- Press **C**.

### 6.2.9 Turning the Headlights On and Off

► **To turn on headlights, do one of the following:**

- On the Action menu, toggle Headlights: On/Off.
- On a game controller, press the **A** button.
- On a Racing Wheel Controller, press the Lights button.
- Press **L**.

## 6.3. The Gunner Role

The gunner can:

- Fire the gun.
- Select a munition to fire.
- Rotate and elevate the gun.
- Zoom in and out.
- Change the sensor. (For details, see "6.6. Changing the Sensor for a Vehicle Crew Member" on page 159.)

 The controls for the Driver/Gunner role are different. See "11.1.4 Ground Vehicle Controls" on page 209 and "11.5. Game Controller Mappings for the LAV and Tanks" on page 214.

### 6.3.1 Firing a Vehicle's Gun

As a gunner, you can fire the weapon. Some vehicle's weapons have different munitions and you can cycle through those to select the munition you want to fire, as described in "6.3.2 Choosing a Weapon" below.

Sabot or heat rounds fired from the M1A1 SA tank travel in an arc, not a straight line. The calculation includes the mass of the projectile, air resistance, and the drag coefficient. VR-Engage calculates for collisions in each frame, which can impact performance.

► **To fire a ground vehicle's gun, do one of the following:**

- Press the right trigger on your game controller.
- Press **F**.
- Click the left mouse button.

### 6.3.2 Choosing a Weapon

You can cycle through available munitions to fire the one you want.

- To cycle through the weapon list using a game controller, use the **B**.
- To select a weapon using the keyboard, press **R** for the next weapon or **V** for the previous weapon.
- **To cycle weapons using the Action menu (LAV only):**
  1. Open the Action menu.
  2. Use an Action menu control method to use the **Cycle Weapon** option.

### 6.3.3 Moving a Turret or Gun

The gunner and gunner/driver roles can move the turret or gun on vehicles that have these weapons.

- To move the weapon in the gunner role, use the right thumbstick on your game controller. You can also use the mouse.
- To move the weapon in the driver/gunner role, use the D-pad.
- To move the weapon in either role, press the **H**, **K**, **U**, and **J** keys.

### 6.3.4 Stabilizing a Vehicle's Gun

By default, the LAV, Stryker, GTK Boxer, and the M1A1 and M1A2 tanks allow you to stabilize the guns. This locks the azimuth and elevation to the values they had with respect to the world when the turret was last moved.

If you have VR-Forces with the VR-Engage add-ons, you can configure whether gun stabilization is enabled by default by editing the weapon system in the Simulation Object Editor. See the information on editing a system's properties in the *VR-Forces Users Guide*.

➤ **To enable or disable gun stabilization:**

1. While acting as the gunner, open the Action menu.
2. Choose **Gun Stabilization**.
3. Use an Action menu control method to toggle the setting: **Heading** stabilizes the gun and **Disabled** does not stabilize the gun.

## 6.4. The Commander Roles

There are a couple of commander roles in VR-Engage: Commander and Commander Hatch. Commanders can rotate the camera to look around, zoom in and out, change the sensor view, and trigger events. Commanders can also communicate with other crew members and other players using the intercom or radio. On some vehicles, the commander role is also configured to take over the gunner role, slew the gun to a target, and designate a target with a laser. This last is known as "slew to cue", which only works when the gunner role is being played by another user.

- To learn about taking over the gunner role, see "6.4.3 Overriding the Gunner" on the next page.
- To learn how to slew to cue, see "6.4.4 Slewing the Gun to Designate a Target" on the next page.
- To learn how to use the laser designator, see "6.4.5 Using the Laser Designator" on page 159.
- To learn more about triggering events, see "4.5. Starting VR-Forces Events" on page 117.

### 6.4.1 Changing Positions

The commander role on the M2A3 Bradley IFV can change positions between out-the-hatch and RWS. In the out-the-hatch position, the commander can use binoculars and night vision goggles. In the RWS position, they can take control of the gun.


- To change positions, press **H**.

### 6.4.2 Switching Views in the Commander Position

There are two views for the commander when in the commander role on a M2A3 Bradley IFV or GTK Boxer CRV: the commander hatch and commander sight.

- To toggle the view in the commander role, press **H**.

**Figure 60. Hatch and Sight views on M2A3 Bradley IFV**

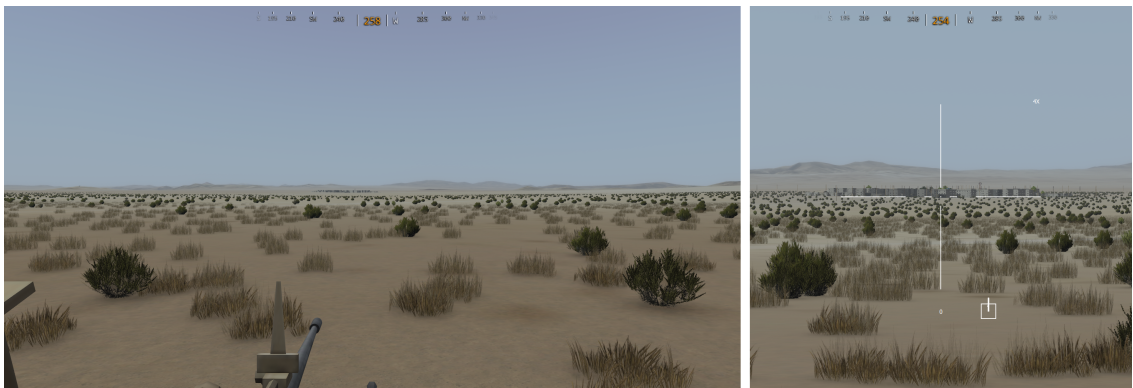

### 6.4.3 Overriding the Gunner

On ground vehicles that are configured for it, the Commander role can take over the gunner role controls to point the gunner at a target. You might need to be in the commander sight view to override the gunner.

- To enter or exit Gunner Override, press **G**.

### 6.4.4 Slewing the Gun to Designate a Target

The Commander role on some vehicles can designate a target for the user in the Gunner role (slew to cue). This requires two players on separate workstations: one acting as the commander and another acting as the gunner.

- **To slew the gunner's gun to a specific point:**
  1. Use the controls to focus your eyepoint on the target.
  2. Press **C**. You take temporary control of the gun, slewing it to point at the target.
  3. Release the key or button to return control to the gunner.



### 6.4.5 Using the Laser Designator

On the GTK Boxer CRV, the Commander role can use the laser designator to lase a target when in the RWS position. (Lasing requires line of sight.) The default when embarking on the vehicle is the out-the-hatch position. See "6.4.1 Changing Positions" on the previous page to learn about switching between these two positions.

To move the gun, you can use the right thumbstick on a game controller, mouse, or keyboard. See "6.3.3 Moving a Turret or Gun" on page 157.

► **To use the laser designator:**

1. Point the gun at what you want to target.
2. Press the **L** key or open the Action menu and then toggle Lasing to On.

► **To specify a laser code:**

1. Open the Action menu and then choose **Laser Code**.
2. Use the keyboard to enter a number and then press **Enter**.

► To stop lasing, open the Action menu and then toggle Lasing to Off.

## 6.5. Using the Intercom

Players who are embarked on a ground vehicle can communicate using the intercom. The intercom is voice activated and transmits any sound that is greater than the VOX threshold.

► **To use the intercom:**

1. Open the Action menu.
2. Choose **Radio**.
3. Cycle through the options to choose **Intercom**.
4. Start talking.

## 6.6. Changing the Sensor for a Vehicle Crew Member

The Gunner and Commander roles can change their sensor mode using the keyboard or game controller.

- To change the sensor for a gunner or commander, press **M** to cycle through the available sensors.
- To change the sensor for a gunner, use right thumbstick (press) until you see the sensor that you want. The gunner can also choose the sensor from the Action menu.
- To toggle the sensor for a commander, press the D-pad down button.

## 6.7. Pivoting a Tank

Tanks can pivot in place.

► **To pivot a tank:**

1. Start the engine.
2. Press the X button on the game controller or **C** on the keyboard. The Gear setting changes to Pivot in the HUD overlay.
3. Put the throttle forward to engage the engine.
4. Use the right thumbstick to pivot left or right.

 You can also enable or disable Pivot by toggling the setting in the Action menu.

## 6.8. Towing Other Ground Entities

The driver of some ground vehicles can tow other ground vehicles and some ground entities. When you are positioning the vehicle to tow the entity, you might find it helpful to see behind you. See "6.2.6 Using the Backup Camera View" on page 155.

 When creating a scenario in VR-Forces, you can view whether an entity is capable of towing or being towed by checking the tags in the Create Object Palette.

► **To tow a ground entity while in the driver role:**

1. Position your vehicle in front of the entity you want to tow. When you are in range to hook up and tow the entity, an icon displays () and the Action menu opens to the Towing entry.
2. Press **H** on the keyboard or use an Action menu command to select the option. The icon changes to show that you have hooked the other entity for towing ()
3. Drive the vehicle and the towed entity as desired.

## 6.9. Emergency Lights and Sirens

The police cruiser and ambulance entities have emergency lights and sirens.

► **To turn on emergency lights and sirens:**

1. Open the Action menu.
2. Choose **Emergency Lights** or a specific type of siren.
3. Toggle the option on.

## 6.10. Configuring Ground Vehicles on Geocentric Terrains

VR-Engage ground vehicles use the Vortex physics libraries for their movement systems. When a vehicle moves on a geocentric terrain, VR-Engage must convert the geocentric coordinates to a flat earth coordinate system. The conversion is based on a user-defined origin that, ideally, represents the location where the majority of simulation activity will take place. As vehicles move further away from the origin, projection errors can occur. When distances from the origin exceed several hundred kilometers, the projection error may be noticeable and vehicles may drift from their expected line of movement.

To resolve this problem, you should set the origin to a location that is close to the location where you are simulating vehicles. For example, by default, VR-Engage sets the origin to Honolulu, Hawaii, USA, the location of the terrain we use for the Test Drive and First Experience scenarios. If you want to simulate in some other location in the world, you should set the origin differently.

To set the origin, specify values for the **coordinateConverterOrigin** parameter in *./appData/scripts/vortexConfig.lua*. The values are in decimal degrees for latitude and longitude and meters for elevation. If the parameter is not specified, the default values are 0,0,0.

This parameter is only used for geocentric terrains. For projected terrains, the terrain data is used directly and no conversion is needed.





## 7. Controlling Aircraft

This chapter explains how to control aircraft.

|                                                                       |     |
|-----------------------------------------------------------------------|-----|
| 7.1. Introduction .....                                               | 164 |
| 7.1.1 Aircraft Roles .....                                            | 164 |
| 7.1.2 The Head-Up Display .....                                       | 164 |
| 7.1.3 The Instrument Panel .....                                      | 166 |
| 7.1.4 Aircraft Display Options .....                                  | 168 |
| 7.2. Taking Control of an Aircraft .....                              | 169 |
| 7.3. Using Autopilot .....                                            | 170 |
| 7.3.1 Setting the Autopilot Mode .....                                | 170 |
| 7.4. Controlling Landing Gear .....                                   | 171 |
| 7.5. Controlling Flaps .....                                          | 171 |
| 7.6. Controlling the Engine on Rotary-Wing Aircraft .....             | 171 |
| 7.7. Selecting a Bullseye .....                                       | 172 |
| 7.8. Using the Radar Warning Receiver .....                           | 173 |
| 7.9. Launching Countermeasures (Chaff and Flare) .....                | 174 |
| 7.10. Choosing a Weapon .....                                         | 174 |
| 7.11. Air-to-Ground Combat .....                                      | 175 |
| 7.11.1 Targeting an Air-to-Ground Weapon Using MGRS Coordinates ..... | 175 |
| 7.11.2 Targeting an Air-to-Ground Weapon Using a Laser Code .....     | 176 |
| 7.12. Air-to-Air Combat .....                                         | 176 |
| 7.12.1 Selecting Targets .....                                        | 177 |
| 7.12.2 Firing an Air-to-Air Weapon .....                              | 179 |
| 7.12.3 Focusing the Sensor on the Radar Target .....                  | 180 |
| 7.13. Using the Common Operating Picture .....                        | 180 |
| 7.13.1 Displaying COP Information for an Entity .....                 | 180 |
| 7.13.2 Toggling the COP Focus Area .....                              | 181 |
| 7.13.3 Selecting an Entity for the COP .....                          | 181 |
| 7.14. Requesting SAR Images from RadarFX Server .....                 | 181 |

|                                        |     |
|----------------------------------------|-----|
| 7.14.1 Requesting a SAR Image .....    | 181 |
| 7.14.2 Configuring a SAR Request ..... | 182 |

## 7.1. Introduction

VR-Engage allows you to control fixed-wing aircraft and rotary-wing aircraft. VR-Engage uses the RTDynamics RotorLib and FixedWingLib libraries to provide realistic flight dynamics and aircraft controls. VR-Engage includes mappings for various controllers; see "11.8. Flight Controllers" on page 217 for details. (You can configure VR-Engage to work with other controllers. See "11.12. Configuring Game Controllers and Keyboard Control" on page 235.) You can also use the keyboard to control an aircraft in a very simple manner; see "11.1.5 Aircraft Controls" on page 210.

When you are flying an aircraft, you have an out-the-window head-up display (HUD) and an instrument panel. VR-Engage also supports a 3D cockpit. For more information about display options, see "7.1.4 Aircraft Display Options" on page 168. In models that are configured with articulated parts, flaps and control services move.

For a list of aircraft included with VR-Engage, see "Chapter 12. Controllable Entities" on page 255. You can add more aircraft. For information, see "Chapter 13. Adding and Editing VR-Engage Entity Models" on page 295.

### 7.1.1 Aircraft Roles


All piloted aircraft support the Pilot role, while UAVs support the Sensor Operator role. Many piloted aircraft also support the Sensor Operator role. Some aircraft support other roles that you can select from the Choose Role Panel.

To learn what roles are available for each aircraft, see "Chapter 12. Controllable Entities" on page 255.

### 7.1.2 The Head-Up Display

The head-up display (HUD) provides an out-the-window view with an overlay showing important flight instrument information.

Figure 61. Fighter fixed-wing aircraft HUD

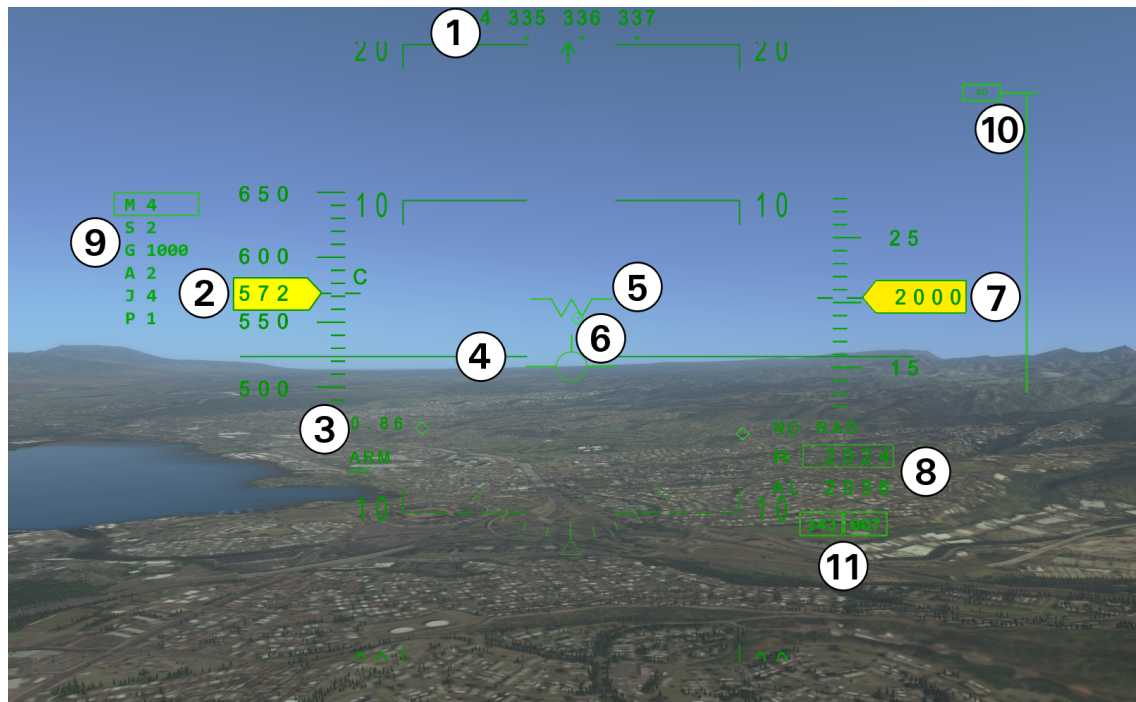

The information shown includes:

- 1 – Heading Indicator
- 2 – Airspeed Indicator
- 3 – Mach Number (fixed wing only)
- 4 – Attitude Indicator (Artificial Horizon)
- 5 – Flight Path Indicator - direction aircraft is facing
- 6 – Flight Path Indicator - direction of aircraft's movement (fixed wing only)
- 7 – Altimeter
- 8 – Altitude (R = above ground level; AL = above mean sea level)

Aircraft entities with weapons display additional information:

- 9 – Weapon System Counts
- 10 – Launch Success Zone (for selected weapon system)
- 11 – Bearing and Distance to Bullseye

- i** The weapon system counts display only the weapons configured for the entity. The list can include up to seven weapon systems.

The full acronyms or names of the weapon systems are shown in the Weapons and Stores multi-function display in the instrument panel (Figure 62 below) and the Action menu.


The simple Launch Success Zone shows only the weapon's minimum range, maximum range, and range to the currently selected target. The number indicates the weapon's maximum range in nautical miles.

### 7.1.3 The Instrument Panel

The Instruments Only display shows the instrument panel (Figure 62), which has six gauges and four multi-function displays (MFD). (The 1 Screen Horizontal display shows six gauges and two MFDs on the instrument panel.)

- i** The instrument panel is an independent window. You can minimize and maximize it. If you are using one monitor, it may be hidden behind the HUD. If that happens, press **Alt+Tab** to bring it to the front.

**Figure 62. Instrument panel**

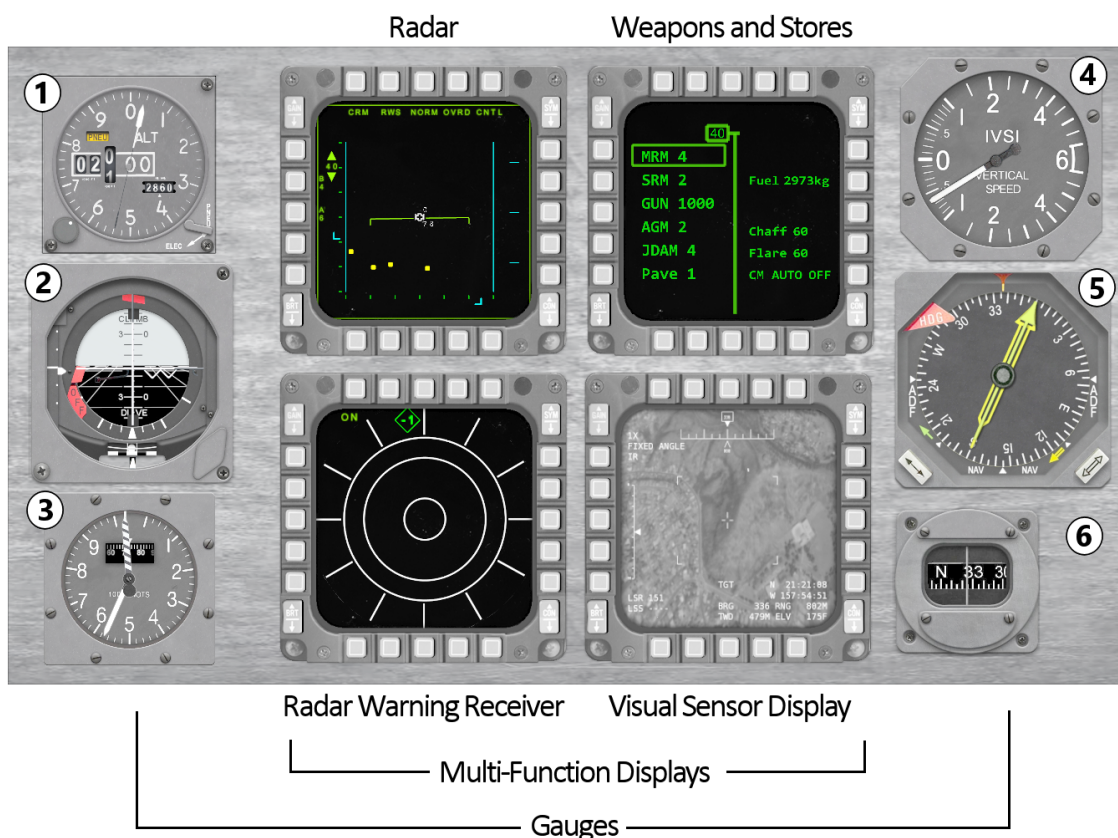



The gauges are:

- 1 – Altimeter
- 2 – Attitude Indicator (Artificial Horizon)
- 3 – Airspeed Indicator
- 4 – Vertical Speed Indicator
- 5 – Heading Indicator
- 6 – Compass


The MFDs are:

- Tactical Situation Display (radar or radar system).
- Weapons/Stores Control Panel.
- Synthetic Aperture Radar (SAR) view.
- Radar Warning Receiver. Shows entities that are detecting you on their radar. The rings show the effective threat range.
- Visual Sensor Display. Displays the view from the gimbaled sensor or a plan view display of the scenario.

### Changing the Multi-Function Display

Each MFD window can display any of the possible display types.

**Figure 63. Multi-function display**

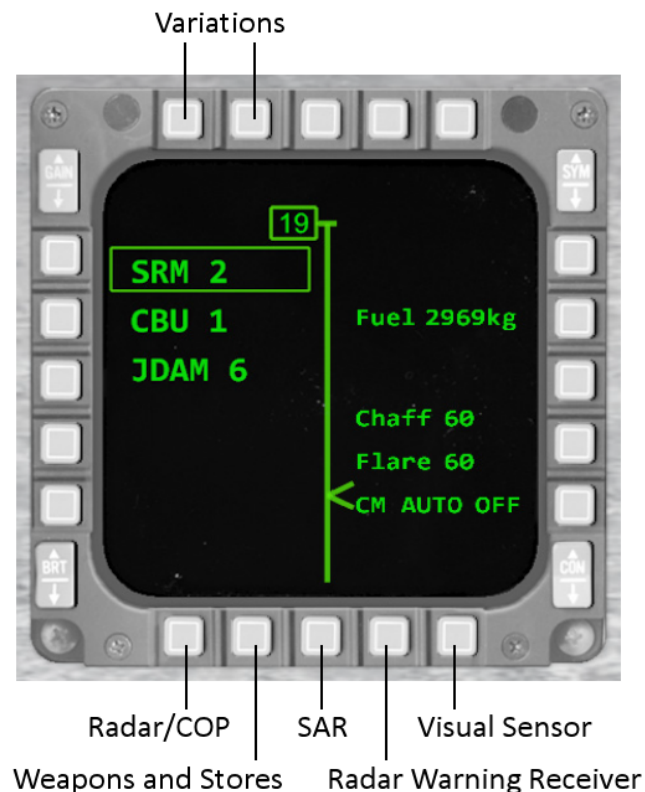

- To select a display, click one of the buttons along the bottom of the display.
- To view a variation of the display, use either of the first two buttons at the top of the display.

- • If the instrument panel does not respond when you click a button, it might not have focus. Click it a few times or expand the window to gain focus.
- You cannot change the multi-function display in a 3D cockpit.

### 7.1.4 Aircraft Display Options

VR-Engage has options for displaying the head-up display (HUD) and instruments panel:

- 1 Screen Horizontal. HUD and instrument panel are integrated in one window, optimized for a single monitor in horizontal (landscape) orientation.
- 2 Screen. The HUD and instrument panel are in separate windows. If you have two monitors you can move the instrument panel into the second monitor to see both displays at the same time. If you choose this option and are using one monitor, the HUD is full screen and the instrument panel is in a separate window (which might be hidden behind the HUD).
- 2 MFD Panel. Displays the HUD and two MFDs.
- HUD Only. Displays the HUD only, optimized for a monitor in horizontal (landscape) mode.
- Instruments Only. Only the instrument panel displays.
- 3D Cockpit. A 3D cockpit that has the HUD and instruments (Figure 64). In this display option, you cannot change the multi-function display. The 3D cockpit is not available for all aircraft. (In VR-Engage 2.1.1, it is available for the Beechcraft MC-12 King Air, Beechcraft MC-12 King Air Single Seater, and T38-C Talon jet.)
- VR Headset. Select this option if you are using a head-mounted display. (Available only if an HMD is connected.)
- MR Headset. Select this option if you are using a mixed reality head-mounted display. That is, an HMD with a camera attached so that you can see both the virtual world and real world objects such as your hands and joysticks. (Available only if an HMD is connected.)

Figure 64. 3D cockpit



► **To choose an aircraft display option:**

1. In the Choose Role Panel, select the aircraft you want to control.
2. In the Display(s) list, select the display option.

**i** If you experience problems with a display mode, make sure that vrEngage.exe is included in the BlackApps.dat file. See "A.1. Performance and Display Issues" on page 338.

## 7.2. Taking Control of an Aircraft

To take control of an aircraft, you select it in the Choose Role Panel, just as you would for a human character or a vehicle.

It is beyond the scope of this manual to teach you how to fly a fixed-wing or rotary-wing aircraft. For a brief tutorial on flying the aircraft in VR-Engage, see the section for fixed-wing aircraft in the chapter [Controlling Entities in VR-Engage](#) in *VR-Engage First Experience*.

You can use an HMD while controlling an aircraft. Hand controllers are not supported for flying aircraft. You must still control them using a game controller or flight controller.

**i** If you take control of an aircraft that is in the air, you must start flying the aircraft as soon as you click Engage. Even though it may take several seconds or longer to display the HUD and instrument panel, the aircraft is already flying. If you take control of an aircraft that is close to the ground, such as a low flying helicopter, there is a risk that it could crash before the HUD is available if you do not immediately maintain its altitude.

## 7.3. Using Autopilot

You can set an aircraft to use autopilot while still otherwise controlling it. Autopilot has the modes:

- **ALT.** Set the altitude and use the current heading and speed. (Equivalent to VR-Forces Fly Altitude task.)
- **HDG.** Set the heading and use the current altitude and speed. (Equivalent to VR-Forces Fly Heading task.)
- **SPD.** Set the speed and use the current heading and altitude.
- **ALT/HDG/SPD.** Fly at the specified altitude, heading, and speed. If no altitude, heading, speed, or any of those are specified, use the aircraft's current settings.
- **PATH.** Fly along a route that you select. (Equivalent to VR-Forces Move Along Route task.)

**i** If a helicopter is on the ground and you set it to ALT/HDG/SPD without specifying an altitude, it takes off, moves to an altitude of 100 feet and flies at its current heading. If a fixed-wing aircraft is on the ground, it does not take off. For more information about how aircraft respond to ALT/HDG/SPD, please see the Fly Heading and Altitude task in the *VR-Forces Users Guide*.

If you are using a Thrustmaster HOTAS Warthog, pressing the Autopilot button when the toggle is set to PATH button causes the plane to fly a pattern hold around a waypoint called PATH, if it exists. Otherwise it flies a pattern hold around the current location.

### 7.3.1 Setting the Autopilot Mode

► **To set the autopilot mode or turn off autopilot:**

1. On the Action menu, choose **Movement > Autopilot**. The menu changes to the Autopilot menu.
2. Choose a setting. The Autopilot menu changes based on the autopilot setting:
  - If you choose **ALT**, the **Set Hold Altitude** option is added to the menu.
  - If you choose **HDG**, the **Set Hold Heading** option is added to the menu.
  - If you choose **SPD**, the **Set Hold Speed** option is added to the menu.
  - If you choose **ALT/HDG/SPD**, **Set Hold Altitude**, **Set Hold Heading** and the **Set Hold Speed** options are added to the menu.
  - If you choose **PATH**, you can select from a route in the scenario and the **Set Hold Speed** option is added to the Autopilot menu.
3. Choose the altitude, heading, or speed option that you want to set. An input dialog box opens.
4. Type the value that you want to set.
5. Press **Enter**.

## 7.4. Controlling Landing Gear

Fixed-wing entities can raise and lower landing gear.

► **To control landing gear:**

1. Open the Action menu.
2. Choose **Movement > Landing Gear**.
3. Use an Action menu control method to select Up or Down.

 You can also toggle landing gear by pressing **G**.

## 7.5. Controlling Flaps

You can set the flaps on a fixed-wing entity up or down. In models that are configured with articulated parts, the flaps will move.

► **To control flaps:**

1. Open the Action menu.
2. Choose **Movement > Flaps**.
3. Use an Action menu control method to toggle the landing gear to Up or Down, MVR (Maneuver).

 You can also control flaps using a joystick or game controller. See "11.8. Flight Controllers" on page 217 for details.

## 7.6. Controlling the Engine on Rotary-Wing Aircraft

For rotary-wing aircraft, you can control whether the engine (power plant) is on or off when you are in the pilot role. You can only turn the engine off or shut it off when it is on the ground.

► **To toggle the engine power:**

1. Open the Action menu.
2. Choose **Movement > Power Plant**.
3. Use an Action menu control method to select either On or Off.



- When you place a rotary-wing aircraft using either VR-Forces or the VR-Engage create entity feature, the engine defaults to being on. In VR-Forces, you can shut off the engine by choosing **Set > Appearance > Appearance** and setting the Power Plant On option to Off.
- If the aircraft is in the air, regardless of its setting in VR-Forces, the Power Plant is set to On when a player engages in the pilot role.


## 7.7. Selecting a Bullseye

Bullseyes are points that are specified before a pilot flies a mission. While the pilots are on the mission, they report their position—bearing and distance—relative to that bullseye. This allows the pilots to provide an accurate report of their location that opposing forces will not recognize.

If you do not specify a bullseye, the HUD displays the bearing and distance as 000 and 000. After you select a bullseye, the HUD displays the bearing and range of your position relative to the bullseye's coordinates (Figure 61 on page 165). The radar system displays the bearing and range from the bullseye to the cursor, and the bearing and range from the bullseye to the ownship. All ranges are measured in nautical miles, and distances are calculated using the great circle distance.

The bullseyes that you can select when engaged in a pilot role are tactical graphics added to a scenario in VR-Forces.

**Figure 65. Bullseye display in radar system**

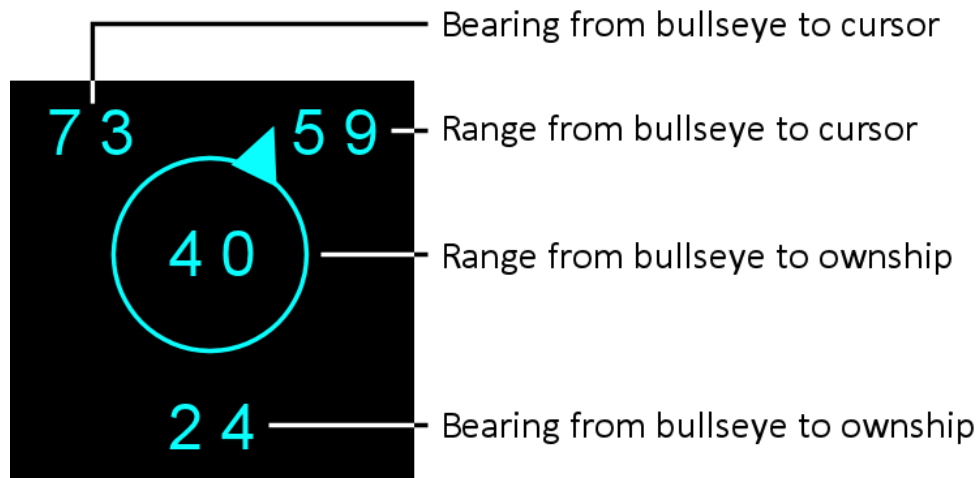

► **To set a bullseye:**

1. On the Action menu, choose **Select Bullseye**. The Bullseyes menu opens, listing the bullseye tactical graphics defined in the scenario.
2. Use an Action menu control method to select the desired bullseye.

► To specify which north the bullseye bearing should use:

1. Open the Action menu.
2. Use an Action menu control method to toggle the North Reference to True, Magnetic, or Grid.

## 7.8. Using the Radar Warning Receiver

Rotary-wing and fixed-wing entities have a radar warning receiver (RWR). It sounds a warning if it detects radar in addition to displaying the radar contacts. You can enable or disable the RWR and the sound.

**Figure 66. Radar Warning Receiver**



► To enable or disable the radar warning receiver:

1. In one of the multi-function displays (MFD) of the instrument panel, click the fourth button at the bottom to show the RWR.
2. Click the first button at the top of the MFD to turn contact detection on or off.

► To enable or disable the radar warning receiver sounds:

1. Open the Action menu.
2. Choose **Sensors > RWR Sounds**.
3. Use an Action menu control method to toggle sounds on or off.

**i** You can also toggle the radar warning receiver sounds by pressing **M** or clicking the second button at the top of the multi-function display.

## 7.9. Launching Countermeasures (Chaff and Flare)

Aircraft configured with countermeasures have the ability to automatically launch chaff and flare when they detect a threat. You can also launch chaff and flare manually.

► **To enable or disable countermeasures:**

1. Open the Action menu.
2. Choose **Engagement > Auto Launch CM**.
3. Use an Action menu control method to toggle automatic countermeasures on or off.

► **To launch countermeasures manually, press **C** for chaff and **F** for flare.**

## 7.10. Choosing a Weapon

Aircraft have specific loadouts of air-to-ground and air-to-air weapons, which display on the left side of the HUD. You can choose the weapon that you want to use. In the HUD (Figure 61 on page 165) and the Weapons and Stores display (Figure 63 on page 167), a rectangle indicates the selected weapon.

**Table 6. Aircraft weapons**

| Weapon Type            | HUD Abbreviation | Action Menu Abbreviation |
|------------------------|------------------|--------------------------|
| <b>Air-to-Air</b>      |                  |                          |
| Long-Range Missiles    | L                | LRM                      |
| Medium-Range Missiles  | M                | MRM                      |
| Short-Range Missiles   | S                | SRM                      |
| <b>Air-to-Ground</b>   |                  |                          |
| Gun                    | G                | GUN                      |
| <b>Bombs</b>           |                  |                          |
| Cluster                | C                | CBU                      |
| JDAM                   | J                | JDAM                     |
| KAB                    | K                | KAB                      |
| Paveway                | P                | Pave                     |
| Air-to-Ground Missiles | A                | AGM                      |

► **To select a weapon:**

1. Open the Action menu.
2. Choose **Engagement > Selected Weapon**.
3. Use an Action menu control method to cycle through the weapons available on your aircraft until the one you want to use is selected.



 You can also cycle through the weapon list using the Select Weapon button on your game controller or joystick, or by pressing **R** on the keyboard.

## 7.11. Air-to-Ground Combat

You can fire air-to-ground bombs or missiles. By default, they try to hit wherever the sensor view is looking. You can specify a target using MGRS coordinates, or you can lase the target and look at the location being lased. Lasing can be done by a VR-Forces entity or a VR-Engage character configured with laser designator. For lased targets, you can continuously track what the laser is targeting.

### 7.11.1 Targeting an Air-to-Ground Weapon Using MGRS Coordinates

MGRS coordinates must specify a zone, a grid, and an x, y offset. The x and y offsets must be the same number of digits. For example, a code of 04QFJ190557 would be built from:

- Zone: 04Q
- Grid: FJ
- X offset: 190
- Y offset: 557

In VR-Engage, if you change the coordinate system to MGRS (Display Settings dialog box, Display Units Settings page), the 3D entity label for an entity (windowed mode, 3D view) displays its location in MGRS coordinates. You can then use this value to specify the coordinates for dropping a bomb. To get the MGRS coordinates for a tactical graphic, you can view the state data in VR-Forces.

For more information about MGRS coordinates, see relevant pages available on the internet.

► **To fire an air-to-ground weapon using MGRS coordinates:**

1. Choose an air-to-ground weapon. See "7.10. Choosing a Weapon" on the previous page.
2. On the Action menu, choose **Sensors > Gimbaled Sensor**. The Gimbaled Sensor menu displays.
3. Choose **Target MGRS Coordinate**. The Input MGRS Coordinate dialog box opens.
4. Type the coordinates you want to target and then press **Enter**. The gimbaled sensor centers on those coordinates.
5. Select an air-to-ground weapon. See "7.10. Choosing a Weapon" on the previous page.
6. To fire the weapon, press the trigger on a joystick, the right trigger on a game controller, or **Spacebar**.

### 7.11.2 Targeting an Air-to-Ground Weapon Using a Laser Code

You need the laser code to target an air-to-ground weapon with that code. This might be from someone who has the information from the scenario, or another player that is lasing the target as part of the scenario.


► **To target a laser spot:**

1. Choose an air-to-ground weapon.
2. On the Action menu, choose **Sensors > Gimbaled Sensor**. The Gimbaled Sensor menu displays.
3. Choose **Target Laser Spot**. The Input Laser Code dialog box opens.
4. Type the laser code you are looking for and then press **Enter**. The gimbaled sensor centers on the lased target or location, and the LSS code shows that code and blinks in the Visual Sensor Display (if the display is active in your instrument panel).
5. Select an air-to-ground weapon. See "7.10. Choosing a Weapon" on page 174.
6. To fire the weapon, press the trigger on a joystick, the right trigger on a game controller, or **Spacebar**.


## 7.12. Air-to-Air Combat

To fire a weapon at another aircraft, you must have a valid target in the Radar System (Figure 67). A blue cursor along the bottom of the Radar System shows when the radar is scanning. Yellow icons indicate detected targets. Detected contacts that are out of the selected range blink (increasing the range may shift their position and cancel the blinking).

**Figure 67. Radar System**

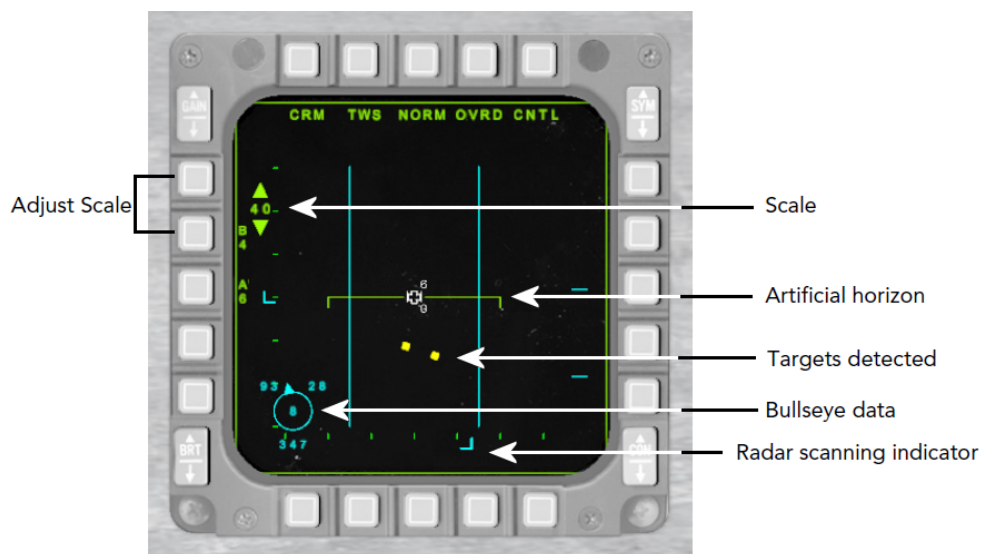

You can also see targets as green diamonds on the HUD (Figure 68).

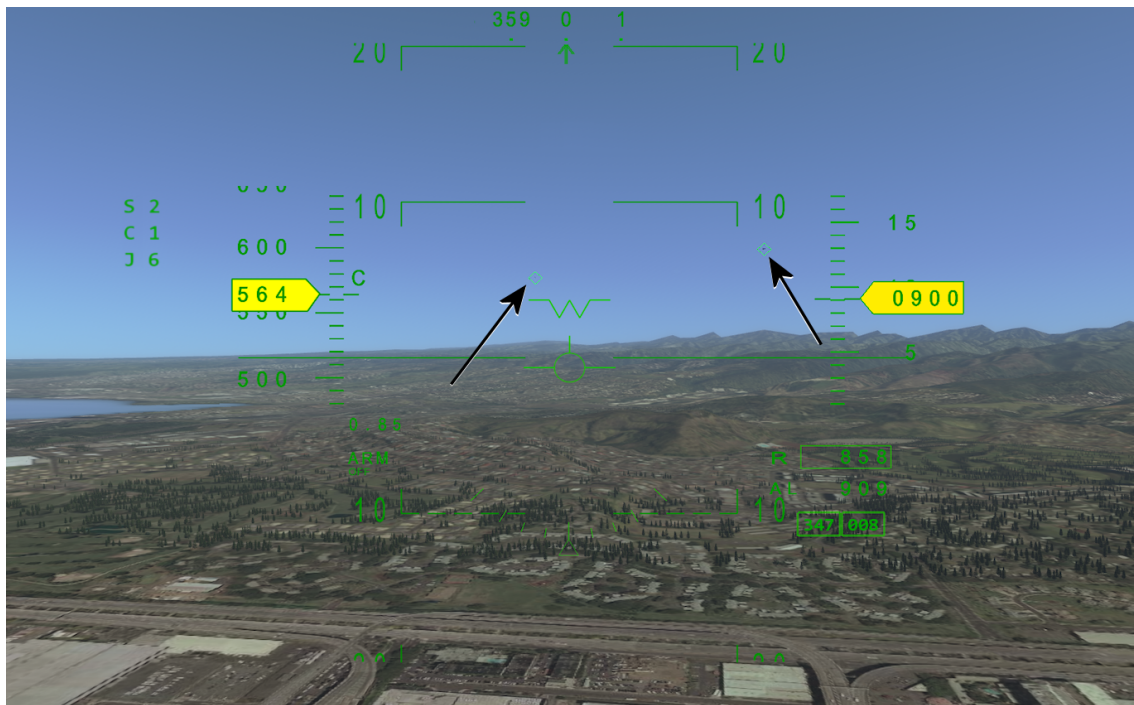**Figure 68. Targets in HUD**

### 7.12.1 Selecting Targets

Select a target using the cursor select controls on the joystick or keyboard. Once you have locked on a target (Figure 69), you can fire at it as long as it is in range. See "Chapter 11. Mouse, Keypad, and Controller Mappings" on page 205 to learn about the cursor controls.

The Radar System has two modes: Range While Scan (RWS), which is the default setting, and Track While Scan (TWS). TWS, by default, has a narrower antenna sweep and collects more information (such as the target's velocity as well as its range). Both modes allow you to select multiple targets. To learn about targeting more than one entity, see "Selecting and Firing on Multiple Targets" on page 179.

You can see that you have locked on a target when the following things happen in the Radar System:

- The first target icon you select becomes an outline and it is circled to indicate it is the current target. Each subsequent target icon changes to an outline.
- If you select the same target a second time, the radar switches to the Single Track Target (STT) sub-mode and you cannot select another target (other targets no longer appear in the display).
- If the radar is in STT mode, the antenna tracks the designated target instead of sweeping back and forth.
- The Track ID number for the target displays.
- The Track of Interest (TOI) readout line (ROL) displays for the selected target. If you move the cursor to another target, that target's information displays in the TOI ROL. If you have not selected the target, the text is black on white. Once you select

the target, the text is white on black.

The TOI ROL includes:

- The Track ID
- Target's bearing and range from bullseye
- Target altitude
- Target heading
- Target speed (Mach number)
- Target type
- Target's bearing and range to target from your aircraft

The information for the currently selected target also displays in the HUD, and the selected target blinks (Figure 70).

**Figure 69. Radar Lock in the Radar**


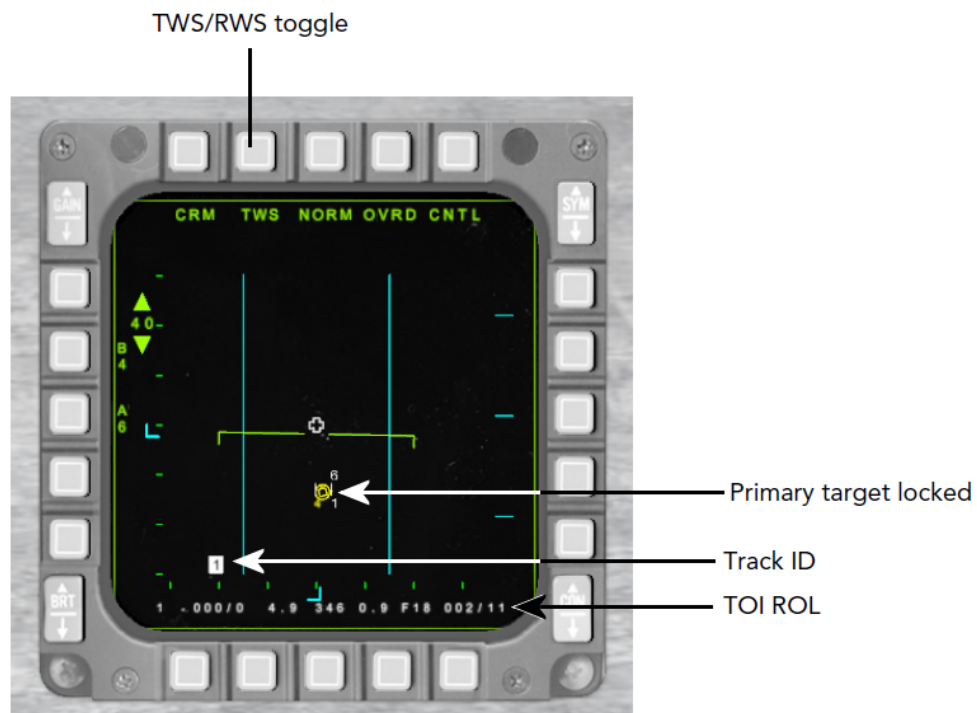


Figure 70. Radar Lock in HUD

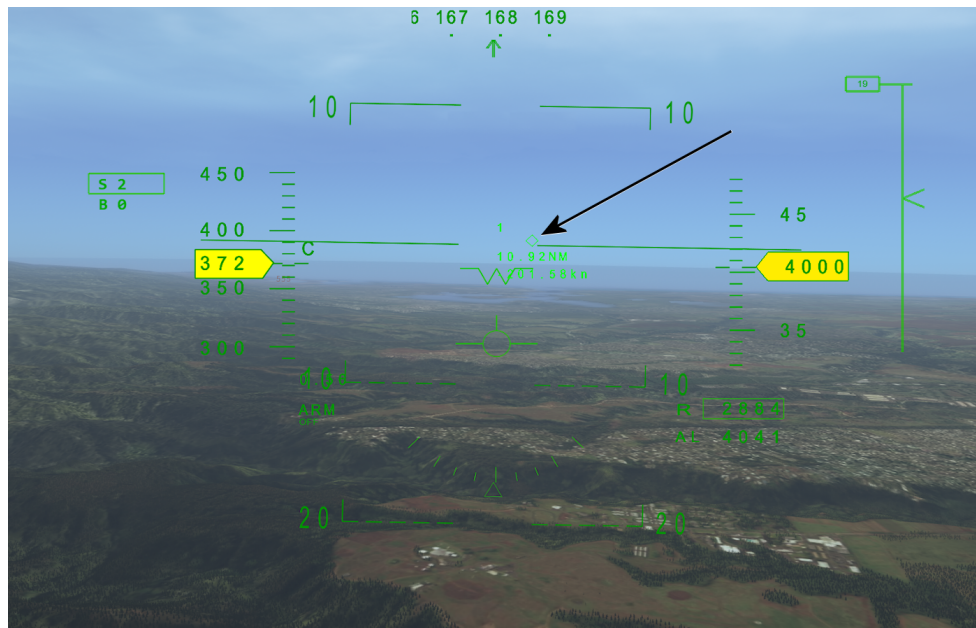

### Selecting and Firing on Multiple Targets

You can use the cursor controls in the Radar System to select multiple targets, up to six. The targets are added to an air target list in the order that you select them. This list determines the order of attack.

Each time you fire the selected air-to-air weapon, it fires at the next-to-shoot (NTS) target in the list and then cycles the list forward. The NTS target blinks in the HUD, and is circled in the radar. You can also cycle the list forward or backward using the cycling controls. For example, if you have targets 4, 5, 6, and 7, the weapon fires at the targets in order. When you fire the weapon or cycle the list forward, the order of targets becomes 5, 6, 7, and 4. If you cycle the list backward, the order is 7, 4, 5, and 6.

Targets are included in the list until they are destroyed, you unselect a target, or you clear the entire list. Additionally, changing the Radar System mode clears any selected targets and the list. You unselect a target or clear the air target list using the controls on the joystick or keyboard.

## 7.12.2 Firing an Air-to-Air Weapon

Air-to-air weapons use the radar for targeting.

### ► To fire an air-to-air weapon:

1. Choose an air-to-air weapon. See "7.10. Choosing a Weapon" on page 174.
2. Select the target. See "7.12.1 Selecting Targets" on page 177.
3. Press the trigger on a joystick, the right trigger on a game controller, or **Spacebar** to fire the weapon.

### 7.12.3 Focusing the Sensor on the Radar Target

You can set the gimballed sensor to follow the current radar target.


► **To focus the sensor on the radar target:**

1. First, target an aircraft. See "7.12.1 Selecting Targets" on page 177.
2. On the Action menu, choose **Gimballed Sensor > Target Radar Target**. The Visual Sensor focuses on and follows the currently selected target.

## 7.13. Using the Common Operating Picture

The Tactical Data Link (TDL) Common Operating Picture (COP) is an alternate display to the radar system, displaying surveillance and TDL tracks. Only entities within range of your radar are displayed. In the Radar System, you can use the cursor to select which entity's engagement information to display.

**Figure 71. TDL Common Operating Picture**

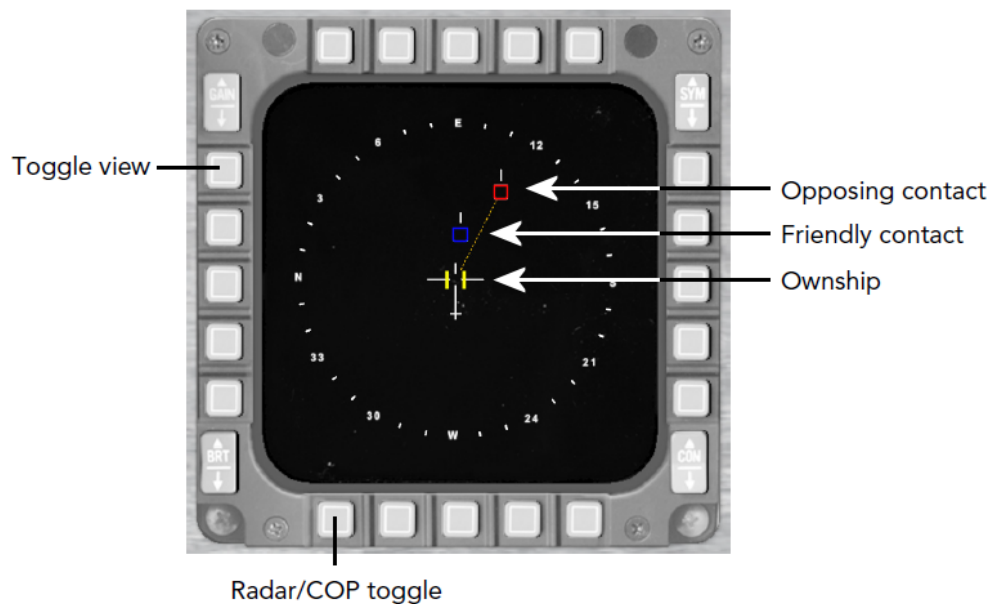

- To view the TDL COP, in one of the multi-function displays (MFD) of the instrument panel, click the first button at the bottom to toggle between the Radar System and the COP.

### 7.13.1 Displaying COP Information for an Entity

You can see the information about an entity detected by your radar system


- To display the information for an entity in the COP, use the controls on the joystick or keyboard to move the cursor over that entity. See "Chapter 11. Mouse, Keypad, and Controller Mappings" on page 205 to learn about the cursor controls.



### 7.13.2 Toggling the COP Focus Area

By default, the COP centers on the ownship entity. You can shift the focus to a point in front of the entity.

**Figure 72. COP Focus Areas - Center and Forward**

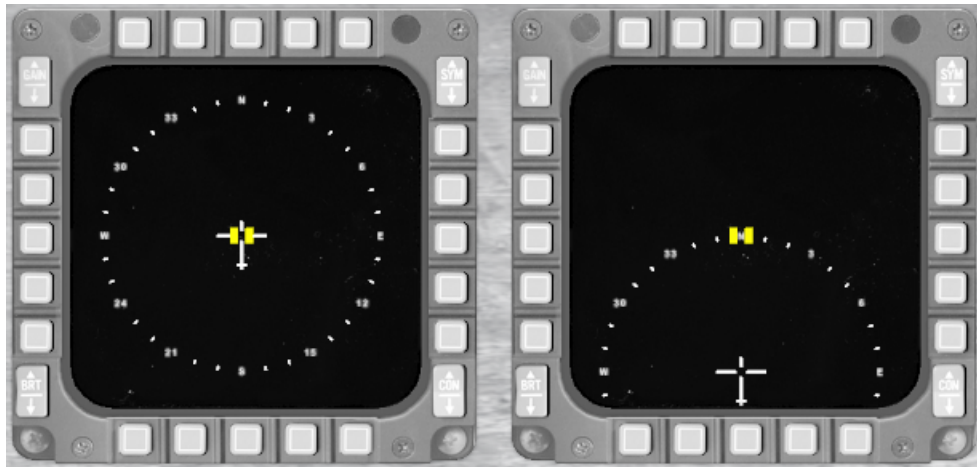

- To toggle the focus between centering on the ownship entity or a point in front of the entity, click the top button on the left side of the MFD.

### 7.13.3 Selecting an Entity for the COP

You can use the COP to display engagement lines between the aircraft you are flying and entities that you select with the radar.

- To select an entity, use the Radar System. See "7.12.1 Selecting Targets" on page 177.

## 7.14. Requesting SAR Images from RadarFX Server

VR-Engage can request synthetic aperture radar (SAR) images from a RadarFX Server. To use this feature, you must install a licensed version of RadarFX Server. For details about using RadarFX Server, please see the *RadarFX Users Guide* or help.

When you request an image, the server returns the image and it is displayed in the multi-function display window of an aircraft's instrument panel.

### 7.14.1 Requesting a SAR Image


When you request a SAR image, VR-Engage sends the request using the settings configured in the SAR Request Settings dialog box.

**i** RadarFX Server must be running when you request a SAR image.

➤ **To request a SAR image, do one of the following:**

- On the Action menu, choose **Sensors > Request SAR Image**.
- On the multi-function display, while the SAR image is selected, click the Request SAR Image button (Figure 73).

**Figure 73. SAR buttons on MFD**

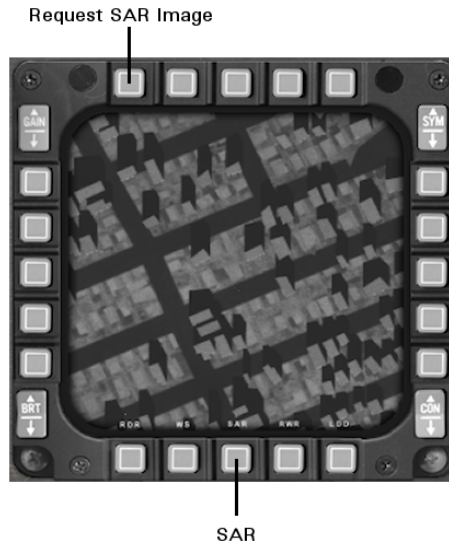

- Press the appropriate button on your joystick.
- Press **S**.

### 7.14.2 Configuring a SAR Request

When you request a SAR image, you must specify the amount of power the SAR system should use. You can also configure the properties of the image that is returned.

When you request a SAR image as a pilot, the location of the sensor and area of interest are set for you. The image comes from the entity you are flying and focuses on the center of the gimbal view.

 To adjust the SAR Settings, you must set VR-Engage to Admin mode. See "3.1.3 Admin, User, and Lockdown Modes" on page 61.

## Configuring Image Properties

You can specify the properties of the images that the server returns. You can also specify that the images be saved on the server. You can specify these image properties:

- **Image Size.** The size of the image in pixels.
- **Image Rotation.** The image can be rotated so that North is up or the sensor's view (track) is up.
- **Image Format.** Options are PNG, JPG, BMP, Raw, and NITF (National Imagery



Transmission Format, version 2.1).

- Image Data Type. Byte, short, or float.

► **To specify image properties:**

1. Choose **Settings > SAR Settings**. The SAR Request Settings dialog box opens.
2. Select the Settings tab.
3. In the Image group box, change properties as desired.
4. To save the image on the server, in the Save Options group box, select Save On Server. Specify the directory in which to save images.

### Specifying the Power

The power value is the amount of power, in watts, that the SAR system should use to generate the image. Higher power levels increase the image gain. Lower levels result in a darker image.


► **To specify the power**

1. Choose **Settings > SAR Settings**. The SAR Request Settings dialog box opens.
2. Select the Settings tab.
3. In the System Parameters group box, enter a value in the Power box.

### Specifying the Coverage Area

The cross range and down range values specify the size, in meters, of the area of interest centered on the target location, as illustrated in Figure 74.

**Figure 74. Area of interest**

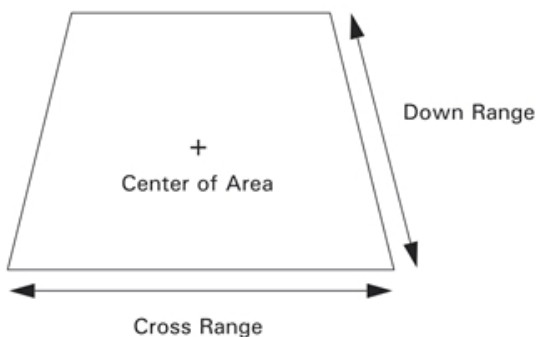

- To specify the coverage area, in the Coverage Area group box, specify the down range in the Downrange box and the cross range in the Crossrange box.

### Configuring the SAR Connection

To connect to a RadarFX Server, you must specify an IP address and port that matches the port used by the server. The default connection settings on the Connection tab of the SAR Request Settings dialog box match the default settings used by RadarFX Server. If you do not change the settings on the server, you do not have to make any changes in VR-Engage.





## 8. Controlling Drones

This chapter explains how to deploy and control the civilian drone in VR-Engage.

|                                                           |     |
|-----------------------------------------------------------|-----|
| 8.1. Introduction .....                                   | 186 |
| 8.1.1 Drone Camera Display .....                          | 186 |
| 8.1.2 Video and Images .....                              | 187 |
| 8.1.3 Drone Battery Life .....                            | 187 |
| 8.2. Operating the Drone .....                            | 187 |
| 8.2.1 Deploying and Flying the Drone .....                | 188 |
| 8.2.2 Stopping and Resuming Use of the Drone .....        | 188 |
| 8.2.3 Switching Control Between Character and Drone ..... | 188 |
| 8.2.4 Landing the Drone .....                             | 189 |
| 8.2.5 Returning the Drone to its Starting Position .....  | 189 |
| 8.2.6 Recovering the Drone .....                          | 189 |

## 8.1. Introduction

Drone operation is a feature of specific human entities in VR-Engage. It allows you to deploy and fly a quadcopter while playing the role of a human in the scenario.

The three entities that can deploy the quadcopter drone are:

- Civilian Female With Drone.
- Civilian Male With Drone.
- Police Officer With Drone.

After you deploy the drone, it appears and the perspective switches from first person to third person (Figure 75). It also displays the drone's camera view (Figure 76 on the facing page).

By default, your game controller controls the drone and you can use the **W**, **A**, **S**, and **D** keys to move the human entity. Also, as the drone moves, the human character operating it pivots to keep it in the center of the main screen.

**Figure 75. Civilian male with drone and drone camera view**



### 8.1.1 Drone Camera Display

The drone camera view shows what the drone can see and also indicates the status of the drone (Figure 76).

Figure 76. Drone camera view and status indicators



The drone operator can pan the camera up or down, and also zoom in or out.

► **To operate the drone's camera:**

1. Add or select a character with a drone.
2. Engage the character.
3. To pan the camera up and down, use the game controller's D-pad (up/down).
4. To zoom in or out, use the game controller's right shoulder button or left shoulder button.

► To change the camera view in the interface, press **F6** to cycle the views.

### 8.1.2 Video and Images

You can use the drone to stream video and capture images. See "Chapter 10. Video Stream and Image Capture" on page 201.

### 8.1.3 Drone Battery Life

The drone has a limited battery life. The current charge status displays in the drone's camera view (Figure 76 above). If the battery charge falls below about 5% while it is in the air, the drone descends to the ground.

## 8.2. Operating the Drone

To deploy and operate a quadcopter drone, you must engage as one of the three entities with the drone (Civilian Female With Drone, Civilian Male With Drone, or Police Officer With Drone). The MAK One Demo scenario includes a Civilian Male With Drone entity in the neutral (green) force.

**i** You can create one of the drone operator entities to use if you do not want to use the MAK Suite Demo scenario. To learn how to create entities, see "3.2.2 Creating a New Entity" on page 64.

### 8.2.1 Deploying and Flying the Drone

When you deploy the drone, the default is to control its movements using a game controller and the character's movements with the keyboard.

► **To deploy the drone:**

1. Add or select a character with a drone.
2. Engage the character.
3. Open the Action menu and choose **Deployable Objects > Deploy Spark**.
4. Use the game controller to move the drone (see "11.4. Game Controller Mappings for Drones" on page 213). Use the **W**, **A**, **S**, and **D** keys to move the character.

### 8.2.2 Stopping and Resuming Use of the Drone

While the drone is deployed, you can stop or resume use of the drone.

► **To stop or restart using the drone:**

1. Open the Action menu and choose **Drone** to open the Drone submenu.
2. Choose the appropriate option:
  - **Stop Using Drone.** Closes the drone's camera view and leaves the drone in its current location. You can control the human character with the game controller.
  - **Use Drone.** Resumes using the drone. The camera view reopens.

### 8.2.3 Switching Control Between Character and Drone

You can change whether the game controller controls the human character or the drone.

► **To change what the game controller controls:**

1. Open the Action menu and choose **Drone**.
2. Use an Action menu control to toggle the **Gamepad Control**:
  - **Human:** The game controller controls the human character.
  - **Drone:** The game controller controls the drone.

You can also choose whether the human character's focus is on the drone.

► **To change the character's focus:**

1. Open the Action menu and choose **Drone**.
2. Use an Action menu control to toggle the **View Focus**:
  - **Human:** The human character no longer keeps the drone in the center of the screen.
  - **Drone:** The human character keeps the drone in his or her sights.

### 8.2.4 Landing the Drone

You can tell the drone to land itself at its current location.

- To land the drone, open the Action menu and choose **Drone > Land**. It descends to the ground.

### 8.2.5 Returning the Drone to its Starting Position

You can send a command to the drone to have it return from where it is currently located to the starting point where it was first deployed.

- To return the drone to its starting location, open the Action menu and choose **Drone > Return to Home**.

The drone camera view closes and the drone flies itself back to its starting position.

### 8.2.6 Recovering the Drone

When you are finished using the drone, you can command it to return and stow itself.

- To recover the drone, open the Action menu and choose **Drone > Recover**.

The drone camera view closes and the drone flies itself to your location from where it was. Afterward, its battery is immediately recharged to full.

 If the drone is low on battery power, it cannot fly itself to you. You can move to the drone's location on the ground and then recover it.







## 9. Sensor Operator Role


This chapter explains the sensor operator role in VR-Engage.

|                                                           |     |
|-----------------------------------------------------------|-----|
| 9.1. The Sensor Operator Role .....                       | 192 |
| 9.1.1 Focusing the Sensor .....                           | 193 |
| 9.1.2 Changing the Sensor Mode .....                      | 194 |
| 9.1.3 Resetting the Sensor .....                          | 194 |
| 9.1.4 Video and Pictures .....                            | 194 |
| 9.1.5 Defining a Laser Code .....                         | 194 |
| 9.1.6 Lasing Targets .....                                | 195 |
| 9.1.7 Firing Weapons .....                                | 195 |
| 9.2. Creating a Remote Camera Entity .....                | 195 |
| 9.3. Placing Sensors on Remote Entities .....             | 196 |
| 9.3.1 Configuring the Location of the Remote Camera ..... | 196 |
| 9.4. Configuring the Sensor Operator Overlay .....        | 198 |

## 9.1. The Sensor Operator Role

VR-Engage players can control sensors and remote cameras using the sensor operator role. The sensor operator can slew the sensor, zoom in and out, and can focus it on specific locations and entities.

**Figure 77. Sensor operator view**

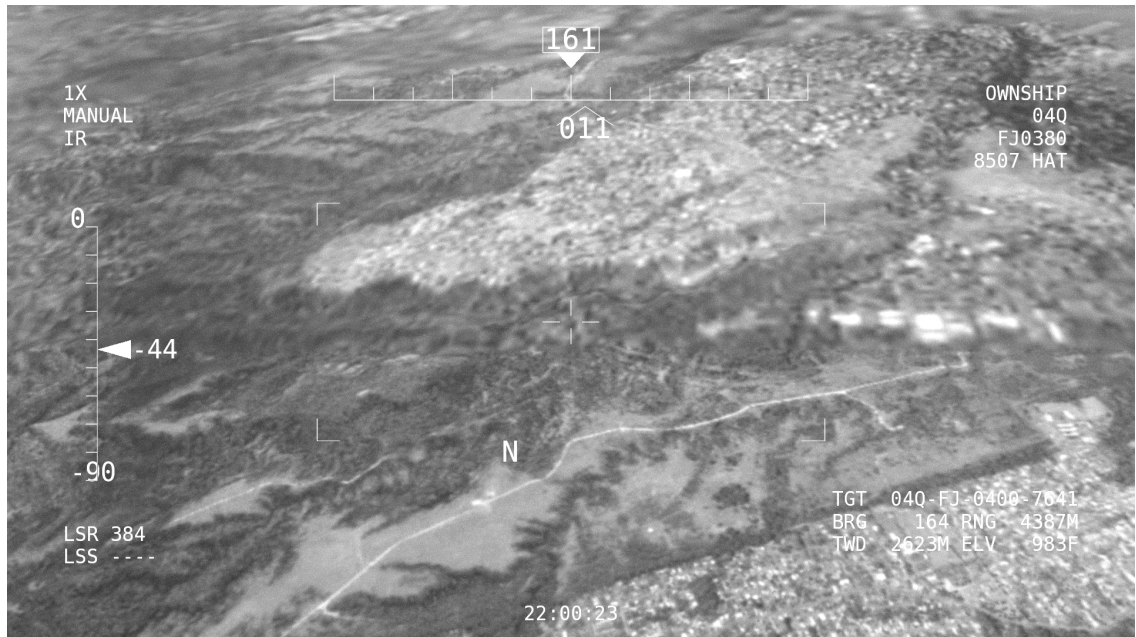

You can add remote cameras to a scenario and set their heading and pitch. VR-Engage is also configured to automatically add cameras to remotely simulated (that is, non-VR-Forces) F-18 and UAV entities.



- You can expand the remote cameras to other entities by modifying the `componentAttachmentTable.mtl` in the SMS.
- Gimbaled sensors get their range from the laser controller and the sysdef file to ensure that the range is accurate.

If a sensor is mounted on an entity, the sensor operator does not control the entity. Therefore, you need another player to operate the entity, it must have a VR-Forces plan or task, or it must be mounted on a remote entity.

► **To operate a camera:**

1. In the Choose Role Panel, select a camera or an entity whose sensor you want to control.
2. In the Role list, choose Sensor Operator.
3. Click Engage. The window changes to 3D mode and a sensor overlay displays.

4. To zoom in and out, use the game controller's right thumbstick (forward/back), press **Page Up** or **Page Down**, scroll the mouse wheel, or use your joystick.
5. To slew the sensor, use the game controller's left thumbstick, press the arrow keys, move the mouse, or use your joystick.

### 9.1.1 Focusing the Sensor

You can focus the sensor on:

- The center of the screen.
- On a location specified by an MGRS coordinate or laser designation code.

When you specify an MGRS coordinate or laser designation code, the sensor focuses on that spot. However, if a laser spot moves, the sensor does not follow it.

- On a waypoint. If a scenario has waypoints, you can focus on them.
- On a street. If a terrain has shapefiles that have street names, you can focus on a street. The sensor tracks the closest vertex. It must be within five kilometers of the X,Y coordinates of the sensor.

► **To set an MGRS target or laser code:**

1. Engage an aircraft as the sensor operator or engage a remote camera.
2. On the Action menu, choose **Gimbaled Sensor**. The Gimbaled Sensor menu opens.
3. Choose **Target MGRS Coordinate** or **Target Laser Spot**. A data entry dialog box opens.
4. Type the code.
5. Press **Enter**.

► **To track a waypoint:**

1. Engage an aircraft as the sensor operator or engage a remote camera.
2. On the Action menu, choose **Gimbaled Sensor**.
3. On the Gimbaled Sensor menu, choose **Track Waypoint**. A list of waypoints opens.
4. Use an Action menu control method to select the waypoint you want to track.

► **To track a street:**

1. Engage an aircraft as the sensor operator or engage a remote camera.
2. On the Action menu, choose **Gimbaled Sensor**.
3. On the Gimbaled Sensor menu, choose **Enter Street Name**. A text entry dialog box opens.
4. Type the name of the street you want to track.
5. Press **Enter**.

- To focus the sensor on the location currently at the center of the screen, press **L** or the **A** button on your game controller.

### 9.1.2 Changing the Sensor Mode

A sensor operator can view the scenario in visual mode, NVG mode, or IR mode.

You can set the available modes in

`./data/simulationModelSets/VREngage/roles/sensorOperator.lua` by editing the **sensorModes** array. When you change the sensor mode, it cycles through the available modes in the order specified in the array.

► **To change the sensor mode:**

1. Engage an aircraft as the sensor operator or engage a remote camera.
2. On the Action menu, choose Gimbaled Sensor.
3. On the Gimbaled Sensor menu, choose **Mode**.
4. Cycle through the modes to choose the one you want.

 You can also change the sensor mode by pressing **M** or the X button on a game controller.

### 9.1.3 Resetting the Sensor

When you reset the sensor, it returns to a fixed angle at the neutral azimuth and elevation.

► **To reset the sensor:**

1. On the Action menu, choose **Gimbaled Sensor**.
2. On the Gimbaled Sensor menu, choose **Reset Sensor**.

 You can also reset the sensor by pressing **R** or the Y button on a game controller.

### 9.1.4 Video and Pictures

You can use the sensor operator to stream video and capture images. See "Chapter 10. Video Stream and Image Capture" on page 201 for details.

### 9.1.5 Defining a Laser Code

You can define the laser code used when you lase a target. Laser codes can be up to four digits long. See "9.1.6 Lasing Targets" on the facing page to learn how to lase a target.

► **To define the laser code:**

1. On the Action menu, choose **Set Laser Code**. Input Laser Code dialog box opens.
2. Enter a laser code and then press **Enter**. The LSR code displays in the sensor view.

Your laser designator uses that code.

### 9.1.6 Lasing Targets

Sensor operators can lase targets if they have line of sight to the target. When you lase a target, the display shows that the laser is on. If you enable laser designators, a green circle and laser code displays on the lased location. See "5.14.3 Enabling Laser Designators" on page 149.

► **To lase a target or turn off lasing:**

1. Focus the sensor on a target or location. See "9.1.1 Focusing the Sensor" on page 193.
2. On the Action menu, choose **Lasing**.
3. Use an Action menu control method to toggle Lasing on or off.

### 9.1.7 Firing Weapons

When you engaged as a sensor operator, you can use the weapons available on the aircraft. The typical case is to fire at your own laser designator. You can also target a laser designator that another entity is currently lasing if you have line of sight on the designator spot.

► **To target, select, and fire a weapon:**

1. To fire at your own laser designator:
  - a. Define your laser code (see "9.1.5 Defining a Laser Code" on the previous page).
  - b. Focus the sensor and lase the target (see "9.1.6 Lasing Targets" above).

To fire at another entity's laser designator, choose **Gimbaled Sensor > Target Laser Spot** and then enter that laser code. The LSS code displays in the sensor view.

2. In the Action menu, choose **Selected Weapon** and then use an Action menu control method to cycle through weapons until the one you want is displayed (Table 6 on page 174).
3. In the Action menu, choose **Fire Selected Weapon**.

 You can also press **W** to cycle the weapons, and **F** or the right trigger to fire the weapon.

## 9.2. Creating a Remote Camera Entity

When you host a session or run an unhosted session, you can add a remote camera (or other cultural feature), and attach it to (embark on) an entity.

► **To create the remote camera:**

1. In the Choose Role Panel, select the Create a New Entity option. The window lists the entity types that you can create.
2. Optionally, use the Categories list to filter for Cultural Feature.

3. Optionally, switch from the 3D view to the Plan View display mode (2D) by selecting an option at the bottom of the panel.
4. Select the Remote Camera entity.
5. Optionally, in the Marking box, you can type a name for the character. The maximum length is 11 characters.
6. Optionally, specify a heading. For remote cameras, the heading is relative to the object it is attached to.
7. Optionally, specify the initial pitch.
8. Click on the terrain or entity where you want to place the camera. (You can navigate the Plan View or 3D view using your mouse and keyboard. For details about navigating the terrain, see the chapter [Moving the Observer](#) in the *VR-Vantage Users Guide*. If you click on an entity, this attaches the camera to the entity.
9. If you simply want to observe the simulation from the perspective of the selected character but not actually control it, select the As Spectator check box.
10. If you want to use VR-Engage in full-screen mode, select the Full Screen check box. If you want to use VR-Engage in windowed mode, clear the Full Screen check box.
11. Click Engage. You can now control your character and participate in the scenario (assuming you did not choose to be a spectator).

### 9.3. Placing Sensors on Remote Entities

VR-Engage uses the VR-Forces remote component attachment feature to automatically place gimballed sensors on remotely simulated entities. A remotely simulated entity is an entity that is part of an exercise, but is simulated by an application other than VR-Forces. The sensor is attached to the remote entity and moves with it. You can use the sensor operator role to operate the sensor. You cannot operate the remote entity.

The entities to which VR-Engage automatically attaches sensors are configured in `./data/simulationModelSets/VR-Engage/extra/componentAttachmentTable.mtl`.

The location where the sensor is embarked on the remote entity is configurable in the VR-Forces Simulation Object Editor.

If your scenario uses multiple simulation engines, then by default, the remote sensor is simulated on the first one.

#### 9.3.1 Configuring the Location of the Remote Camera


VR-Engage places a sensor on a remote entity at a location relative to the center of the entity. You can specify an offset from the default location.

► **To specify the offset for placing a sensor on a remote entity:**

1. In a version of VR-Forces that has the VR-Engage add-ons installed, open the Simulation Object Editor.
2. Open *VR-Engage.sms*.

3. In the list of objects, select the VR-Forces entity that you want to configure to use a remote camera.
4. On the right, select the Systems tab.

**Figure 78. Gimbaled Visual Sensor system**

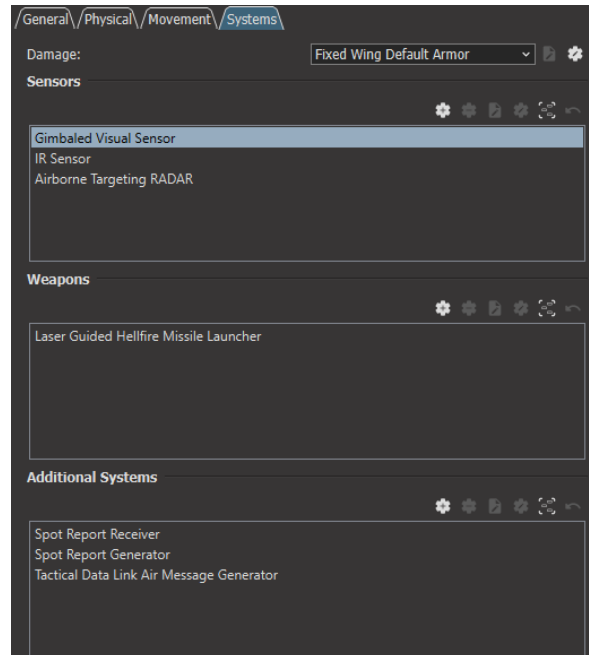

5. Select the Gimbaled Visual Sensor system.
6. Click the Properties button (🔧). The Gimbaled Visual Sensor Properties dialog box opens.

**Figure 79. Gimbale Visual Sensor Properties**

7. Edit the Sensor Location parameters.
8. Click OK.
9. Save the SMS.
10. Copy the updated SMS to your VR-Engage installation's `./data/simulationModelSets` directory (or you can simply copy the `./data/simulationModelSets/VR-Engage/vrfSim/Remote Sensor.entity` file).

## 9.4. Configuring the Sensor Operator Overlay

The information displayed on the sensor operator overlay is controlled by keywords in the following lines in `./data/simulationModelSets/VR-Engage/roles/sensorOperator.lua`:

```
...
components = {
...
  ["vrvSensorOverlayUpdater"] = {
    --List of possible values for "sections":
    -- "Crosshair"           - Displays 4 corners of a box.
```



```

-- "PlatformInfo"      - Displays information about
                        ownship entity.
-- "VrePlatformInfo"   - Replaces "PlatformInfo". Adds Date and
                        Time displays.
-- "TargetInfo"        - Displays ownship coordinates.
-- "VreTargetInfo"     - Replaces "TargetInfo". Replaces
                        coordinate display with center of
                        sensor's view.
-- "VreMgrsTargetInfo" - Replaces "VreTargetInfo". Displays
                        coordinates in MGRS.
-- "DisplayInfo"       - Displays sensor view information,
                        including mode, tracking mode
                        and zoom level.
-- "VreDisplayInfo"    - Replaces "DisplayInfo". Strips off
                        sensor mode "(CAMERA FX)" or
                        "(SENSOR FX)" suffixes.
-- DisplayLaser"       - Displays Tracking laser code and
                        aircraft laser code.
-- "Pitch"             - Displays ladder showing sensor elevation
                        relative to platform.
-- "Compass"           - Displays ladder showing sensor azimuth
                        relative to platform, and "N" indicator
                        displaying platform heading.
-- "Reticle"           - Displays cross in the middle of
                        the screen.
-- "DateTime"          - Displays date and time.
-- "Time"              - Displays only time.
-- "Rec"               - Displays static text showing "REC".
componentType = "DtVrvSensorOverlayUpdater";
priority = 10;
--Defaults to VRV sections, with VRE updates for some sections.
sections = {"Crosshair", "VrePlatformInfo", "VreTargetInfo",
            "VreDisplayInfo", "LaserInfo", "Pitch", "Reticle", "Compass"};
};
};
includes={
    "devices/radio.pilot.lua";
};

```

The overlay to use is chosen based on the object type enumeration. You can add or remove overlay components by adding or removing keywords. The keywords are as follows, referenced to Figure 80 and Figure 81:

- Crosshair (1).
- VreTargetInfo (2). Show location using latitude/longitude coordinates.
- VreMgrsTargetInfo (2). Show location using MGRS coordinates.
- PlatformInfo (3).
- VreDisplayInfo (4).

- Pitch (5).
- Reticle (6).
- Compass (7).
- Time (8).
- LaserInfo (9). You define the Laser Code (LSR) for lasing a target by choosing **Set Laser Code** from the Action menu. You specify the Laser Spot (LSS) for the weapon by choosing **Gimbaled Sensor > Target Laser Spot** from the Action menu.
- Rec (10). Record. This is only text. VR-Engage does not record anything.
- DateTime (11).

Figure 80. Sensor operator overlay for aircraft

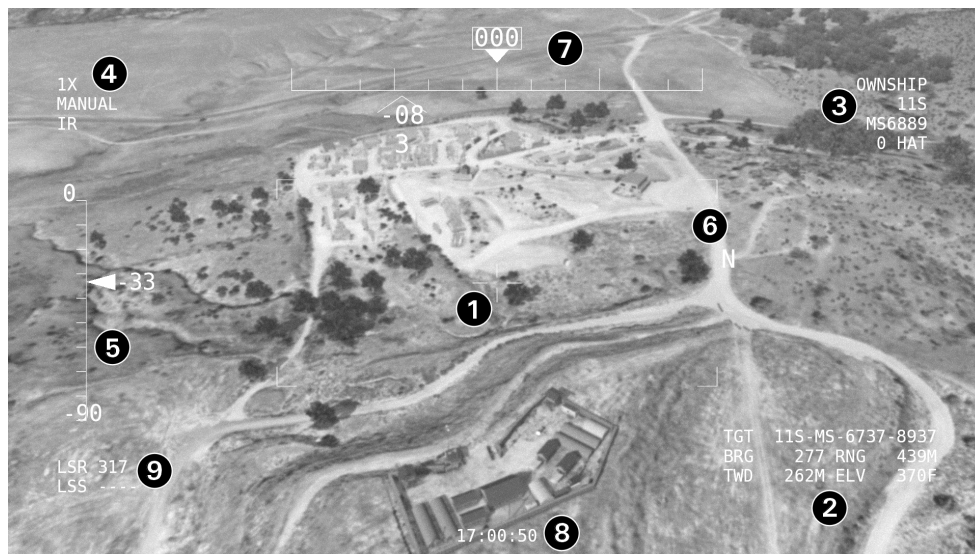


Figure 81. Sensor operator overlay for security camera



You can also write a plug-in to create new overlay elements.



## 10. Video Stream and Image Capture

This chapter explains how to use the Video Stream and Capture Image features for the Sensor Operator and Drone.

|                                                        |     |
|--------------------------------------------------------|-----|
| 10.1. Introduction .....                               | 202 |
| 10.2. Video Streams .....                              | 202 |
| 10.2.1 Streaming Video as a Sensor Operator .....      | 202 |
| 10.2.2 Streaming Video from a Drone .....              | 202 |
| 10.2.3 Specifying the Video Stream File Settings ..... | 203 |
| 10.2.4 Viewing a Video File .....                      | 203 |
| 10.2.5 Receiving a Video Stream .....                  | 203 |
| 10.3. Capturing Images .....                           | 204 |

## 10.1. Introduction

You can use the sensor operator or the drone operator roles to stream video and take pictures from their virtual sensors or cameras.

 For more about those features, see "Chapter 8. Controlling Drones" on page 185 and "Chapter 9. Sensor Operator Role" on page 191.

## 10.2. Video Streams

Sensor operators and drones can stream video. The default is to "stream" (save) to a file, but you can also stream over a network. By default, video captures are saved to files in `./userData/videoCaptures`. See "10.2.3 Specifying the Video Stream File Settings" on the facing page for information on how to configure VR-Engage to stream video files to files in a different folder or to a network.

To play the video file or receive the video stream, you must install a media player that can process the video stream, such as VLC media player.

### 10.2.1 Streaming Video as a Sensor Operator

The sensor operator streams the camera's video feed.

► **To stream video as a sensor operator:**

1. Add or select an entity that has a sensor.
2. Engage as the Sensor Operator.
3. Open the Action menu and choose **Gimbaled Sensor**.
4. Use an Action menu control to toggle **Video Stream** to Started.

A user can then view the file or receive the video stream. See "10.2.4 Viewing a Video File" on the facing page or "10.2.5 Receiving a Video Stream" on the facing page.

### 10.2.2 Streaming Video from a Drone

The drone can stream the full VR-Engage window or only the drone's camera view.

► **To stream video from a drone:**

1. Add or select an entity with a drone.
2. Engage the character.
3. Open the Action menu and choose **Deployable Objects > Deploy Spark**.
4. From the Drone submenu, choose **Streaming Video** and use an Action menu control to open the submenu. The Streaming Video submenu opens.
5. Use an Action menu control to toggle **Video Stream** to Started.

6. Choose **Video Source** and use an Action menu control to open the submenu. The Video Source menu opens.
7. Select whether the source of the video stream should be the Main Window or the Drone View.

A user can then view the file or receive the video stream. See "10.2.4 Viewing a Video File" below or "10.2.5 Receiving a Video Stream" below.

### 10.2.3 Specifying the Video Stream File Settings

VR-Engage comes with a list of pre-existing configurations for streaming video. You can access the list of available configurations either by choosing **Settings > Video Streams** in Admin mode or by looking in `./appData/videoStreams`. The default stream configuration is called *H264 HW-MPGTS-FILE*, which instructs VR-Engage to stream H264-encoded video to a file in `./userData/videoCaptures`.

You can specify which configuration VR-Engage should use by editing the **DtStreamingVideoUpdater** component in `./data/simulationModelSets/VR-Engage/roles/sensorOperator.lua` or `./data/simulationModelSets/VR-Engage/roles/devices/deployableObjects.lua` and specifying a video stream configuration.

 If you want to modify any of the pre-existing video stream configurations or create a new one, please see the chapter [Using Streaming Video](#) in the *VR-Vantage Users Guide*.

### 10.2.4 Viewing a Video File

When you save a video stream to a file, you can open it in a media player such as VLC media player. By default, you can find your captured streaming video files in `./userData/videoCaptures`. Files streamed from a sensor operator begin with "sensorOperator" and files streamed from a drone begin with "drone".

### 10.2.5 Receiving a Video Stream

If you have configured VR-Engage to stream video over a network, you must have a viewing application installed on the machine where you want to receive and view the video.

► **To receive the video stream:**

1. Launch the viewing application.
2. Configure the application with the same network parameters, such as the UDP port, as those specified in the video streaming configuration that you specified VR-Engage should use.

As long as the video stream is turned on for the sensor or drone, the video stream should display in the viewing application.

## 10.3. Capturing Images

The sensor operator and drone have cameras that can take screen shots of the camera view and save them to your computer. When you save a screen shot, it is saved in *./userData/screenshots* as a *PNG* file.

► **To take pictures with the sensor operator:**

1. Add or select an entity that has a sensor.
2. Engage as the Sensor Operator.
3. Open the Action menu and choose **Gimbaled Sensor > Capture Image**.

► **To take pictures with the drone:**

1. Add or select a character with a drone.
2. Engage the character.
3. Open the Action menu and choose **Deployable Objects > Deploy Spark**.
4. Fly the drone to the location where you want to take a picture.
5. Open the Action menu and choose **Drone > Capture Image**.

 You can also capture images using the B button on the controller.



# 11. Mouse, Keypad, and Controller Mappings

This chapter describes mouse and keyboard mappings and controller mappings for VR-Engage. For details about configuration additional controllers, see "11.12. Configuring Game Controllers and Keyboard Control" on page 235.

|                                                                               |     |
|-------------------------------------------------------------------------------|-----|
| 11.1. Mouse and Keyboard Mappings .....                                       | 206 |
| 11.1.1 Application Management .....                                           | 206 |
| 11.1.2 Action Menu Controls .....                                             | 206 |
| 11.1.3 Human Controls .....                                                   | 207 |
| 11.1.4 Ground Vehicle Controls .....                                          | 209 |
| 11.1.5 Aircraft Controls .....                                                | 210 |
| 11.1.6 Sensor Operator Controls .....                                         | 211 |
| 11.2. Game Controller Mappings for Using the Action Menu .....                | 212 |
| 11.3. Game Controller Mappings for Human Control .....                        | 212 |
| 11.4. Game Controller Mappings for Drones .....                               | 213 |
| 11.5. Game Controller Mappings for the LAV and Tanks .....                    | 214 |
| 11.6. Game Controller Mappings for Cars and Trucks .....                      | 215 |
| 11.7. Racing Wheel Controllers .....                                          | 215 |
| 11.8. Flight Controllers .....                                                | 217 |
| 11.8.1 HOTAS Warthog Mappings for Fixed-Wing Entities .....                   | 218 |
| 11.8.2 HOTAS Warthog Mappings for Rotary-Wing Entities .....                  | 221 |
| 11.8.3 T.Flight Hotas X Mappings for Fixed-Wing Entities .....                | 223 |
| 11.8.4 T.Flight Hotas X Mappings for Rotary-Wing Entities .....               | 226 |
| 11.8.5 Game Controller Flight Control Mappings for Fixed-Wing Entities .....  | 229 |
| 11.8.6 Game Controller Flight Control Mappings for Rotary-Wing Entities ..... | 230 |
| 11.8.7 Game Controller Mappings for the Sensor Operator .....                 | 230 |
| 11.9. Head-Mounted Display Controllers .....                                  | 231 |
| 11.10. Game Controller Button Numbering .....                                 | 232 |
| 11.11. Tips for Logitech Gamepad .....                                        | 235 |
| 11.12. Configuring Game Controllers and Keyboard Control .....                | 235 |
| 11.12.1 Windows Game Controllers .....                                        | 236 |

|                                           |     |
|-------------------------------------------|-----|
| 11.12.2 The Game Controller Utility ..... | 236 |
| 11.12.3 File Structure .....              | 237 |
| 11.12.4 Mappings .....                    | 238 |
| 11.12.5 Input Types .....                 | 239 |
| 11.12.6 Adding a New Input Device .....   | 241 |
| 11.12.7 Player Controls State .....       | 244 |
| 11.12.8 Component Mapping Groups .....    | 245 |
| 11.12.9 List of Actions .....             | 246 |

## 11.1. Mouse and Keyboard Mappings

Using the mouse and keyboard, you can control human characters, ground vehicles, and navigate the Action menu. You can also perform some aircraft behaviors.

### 11.1.1 Application Management

Table 7 lists mouse and keyboard controls for all roles in VR-Engage.

**Table 7. Keyboard controls in all roles**

| Function                                      | Key        |
|-----------------------------------------------|------------|
| Open display of gamepad and keyboard controls | F1         |
| Open HTML help                                | Shift+F1   |
| Toggle Action menu                            | ~ (tilde)  |
| Toggle full screen                            | Ctrl+Enter |
| Disable/enable mouse control                  | Ctrl       |
| Exit to Application Menu / close Action menu  | Esc        |
| Toggle between Admin and User modes           | Shift+F12  |
| Reset to starting position (Admin mode only)  | F5         |
| Reset in current position (Admin mode only)   | Ctrl+F5    |

### 11.1.2 Action Menu Controls

Table 8 lists keyboard controls for the Action menu.

 You can use the corresponding number to select items in the Action menu, but that this number changes when you scroll through the list. For example, 1 does not always toggle the weapon state.



**Table 8. Action menu mouse and keyboard mappings**

| <b>Mouse Mappings</b>    |                                                                                        |
|--------------------------|----------------------------------------------------------------------------------------|
| Select menu item         | Number matching menu item<br>Enter key<br>Mouse click (when mouse control is disabled) |
| <b>Keyboard Mappings</b> |                                                                                        |
| Toggle Action menu       | ~ (tilde)                                                                              |
| Next menu item           | Up arrow                                                                               |
| Previous menu item       | Down arrow                                                                             |
| Select menu item         | Right arrow or Enter                                                                   |
| Return to previous menu  | Left arrow                                                                             |

### 11.1.3 Human Controls

Table 9 lists mouse and keyboard controls for human players.

**Table 9. Human player mouse and keyboard controls**

| <b>Function</b>           | <b>Key / mouse movement</b> |
|---------------------------|-----------------------------|
| <b>Mouse Mappings</b>     |                             |
| Turn / move weapon        | mouse move                  |
| Aim                       | right mouse button          |
| Fire                      | left mouse button           |
| Detect target (launchers) | left Alt                    |
| Zoom in (binoculars)      | mouse wheel forward         |
| Zoom out (binoculars)     | mouse wheel backward        |
| <b>Keyboard Mappings</b>  |                             |
| <b>Movement</b>           |                             |
| Run forward               | W                           |
| Sprint forward            | left Shift+W                |
| Walk forward              | left Alt+W                  |
| Run backward              | S                           |
| Sprint backward           | left Shift+S                |
| Walk backward             | left Alt+S                  |
| Turn left                 | H                           |
| Turn right                | K                           |
| Posture up                | Q                           |
| Posture down              | E                           |

Table 9. Human player mouse and keyboard controls (continued)

| Function                                    | Key / mouse movement                             |
|---------------------------------------------|--------------------------------------------------|
| Stand                                       | C                                                |
| Lay prone                                   | Z                                                |
| Toggle view mode (first- / third-person)    | V                                                |
| <b>Parachuting</b>                          |                                                  |
| Deploy parachute                            | Spacebar                                         |
| Steer left or right                         | A or D                                           |
| Slow rate of descent                        | A+D                                              |
| <b>Engagement</b>                           |                                                  |
| Aim                                         | , (comma)                                        |
| Strafe left                                 | A                                                |
| Strafe right                                | D                                                |
| Pitch weapon/look up                        | U                                                |
| Pitch weapon/look down                      | J                                                |
| Toggle weapon state (Stowed, Ready, Aiming) | ' (apostrophe)                                   |
| Cycle weapons                               | Spacebar                                         |
| Select weapon                               | 1, 2, 3, and so on (not on number pad)           |
| Reload weapon                               | R                                                |
| Seek mode (Javelin only)                    | left Alt                                         |
| Toggle Top or Direct Attack (Javelin only)  | M                                                |
| Wide field-of-view (WFOV, Javelin only)     | scroll backward                                  |
| Narrow field-of-view (NFOV, Javelin only)   | scroll forward                                   |
| <b>View and Accessories</b>                 |                                                  |
| Look (weapons are disabled while looking)   | . (period) + either mouse or H, K, U, and J keys |
| Toggle night vision goggles                 | N                                                |
| Toggle binoculars                           | B                                                |
| Zoom in                                     | =                                                |
| Zoom out                                    | - (dash, not on number pad)                      |
| Talk on the radio                           | T                                                |
| Toggle flashlight                           | F                                                |
| Toggle compass                              | G                                                |
| Toggle minimap                              | M                                                |
| Zoom in on minimap                          | + (plus sign on number pad)                      |

**Table 9. Human player mouse and keyboard controls (continued)**

| Function                               | Key / mouse movement         |
|----------------------------------------|------------------------------|
| Zoom out of minimap                    | - (minus sign on number pad) |
| Reset minimap zoom                     | 0 (number pad)               |
| Toggle HUD (weapon, health, and so on) | /                            |

### 11.1.4 Ground Vehicle Controls

Table 10 lists mouse and keyboard controls for ground vehicles.

**Table 10. Keyboard mappings for ground vehicles**

| Function                                           | Key / mouse movement          |
|----------------------------------------------------|-------------------------------|
| <b>Movement and view (driver role)</b>             |                               |
| Start/stop engine                                  | X                             |
| Throttle                                           | W                             |
| Brake                                              | S                             |
| Steer left                                         | A                             |
| Steer right                                        | D                             |
| Shift gear up                                      | E                             |
| Shift gear down                                    | Q                             |
| Parking brake                                      | P                             |
| Headlights                                         | L                             |
| Differential lock (LAV)<br>Pivot (tanks)           | C                             |
| Cycle saved views                                  | V                             |
| Specify saved view                                 | 1, 2, 3, 4, 5, 6 (as defined) |
| Cycle roles                                        | [ and ]                       |
| <b>Engagement (gunner and driver/gunner roles)</b> |                               |
| Move turret (gunner)                               | mouse move                    |
| Fire weapon (gunner)                               | left mouse button             |
| Cycle sensor                                       | M                             |
| Turret left                                        | H                             |
| Turret right                                       | K                             |
| Turret up                                          | U                             |
| Turret down                                        | J                             |
| Next weapon                                        | R                             |
| Previous weapon                                    | V                             |

**Table 10. Keyboard mappings for ground vehicles (continued)**

| Function                                         | Key / mouse movement                     |
|--------------------------------------------------|------------------------------------------|
| Fire weapon                                      | F                                        |
| <b>Commander role</b>                            |                                          |
| Look                                             | mouse move                               |
| Toggle laser designator                          | L                                        |
| Slew to cue                                      | C                                        |
| Gunner override                                  | G                                        |
| Cycle sensor                                     | M                                        |
| Reset sensor                                     | R                                        |
| Change position                                  | H (M2A3 Bradley IFV and GTK Boxers only) |
| <b>Zoom Mappings (commander and gunner only)</b> |                                          |
| Zoom in                                          | mouse wheel forward                      |
| Zoom out                                         | mouse wheel backward                     |

### 11.1.5 Aircraft Controls

Table 11 lists the keyboard controls for aircraft. See "11.8. Flight Controllers" on page 217 for more complete controls of aircraft.

**Table 11.**  
**Keyboard mappings for fixed-wing aircraft**

| Function                      | Key         |
|-------------------------------|-------------|
| Toggle radar warning receiver | M           |
| Suppress warnings             | Enter       |
| Observer mode                 | V           |
| Toggle landing gear           | G           |
| <b>Flight Controls</b>        |             |
| Pitch up                      | down arrow  |
| Pitch down                    | up arrow    |
| Roll right                    | right arrow |
| Roll left                     | left arrow  |
| Yaw right                     | D           |
| Yaw left                      | A           |
| Throttle (fixed wing)         | W           |
| Air brake (fixed wing)        | S           |
| Collective up (rotary wing)   | W           |

**Table 11.**  
Keyboard mappings for fixed-wing aircraft (continued)

| Function                          | Key      |
|-----------------------------------|----------|
| Collective down (rotary wing)     | S        |
| <b>Engagement</b>                 |          |
| Cycle weapons                     | R        |
| Fire selected weapon              | Spacebar |
| Move radar cursor up              | I        |
| Move radar cursor down            | K        |
| Move radar cursor left            | J        |
| Move radar cursor right           | L        |
| Select target closest to cursor   | Z        |
| Unselect target closest to cursor | X        |
| Cycle target list backward        | Y        |
| Cycle target list forward         | H        |
| Clear air target list             | U        |
| Replenish fuel and ammunition     | O        |
| <b>Countermeasures</b>            |          |
| Launch chaff                      | C        |
| Launch flares                     | F        |

### 11.1.6 Sensor Operator Controls

Table 12 lists mouse and keyboard controls for sensor operator players.

**Table 12. Keyboard mappings for sensor operator**

| Function              | Key / mouse movement                  |
|-----------------------|---------------------------------------|
| Slew sensor or camera | arrow keys<br>mouse move              |
| Zoom out              | Page Down key<br>mouse wheel backward |
| Zoom in               | Page Up key<br>mouse wheel forward    |
| Cycle sensor          | M                                     |
| Track location        | L                                     |
| Track object          | O                                     |
| Reset sensor          | R                                     |

## 11.2. Game Controller Mappings for Using the Action Menu

Figure 82 below illustrates the game controller numbering and naming conventions.

Table 13 lists the controls for using the Action menu.

**Table 13. Game controller mappings - Action menu**

| Function           | Game Controller Key / Button | Button / Axis              |
|--------------------|------------------------------|----------------------------|
| Toggle Action menu | Back button                  | Button 4                   |
| Move in menu       | D-pad                        | Buttons 11, 12, 13, and 14 |
| Select             | A button                     | Button 0                   |

## 11.3. Game Controller Mappings for Human Control

Figure 82 illustrates the game controller numbering and naming conventions.

**Figure 82. Generic game controller button conventions**

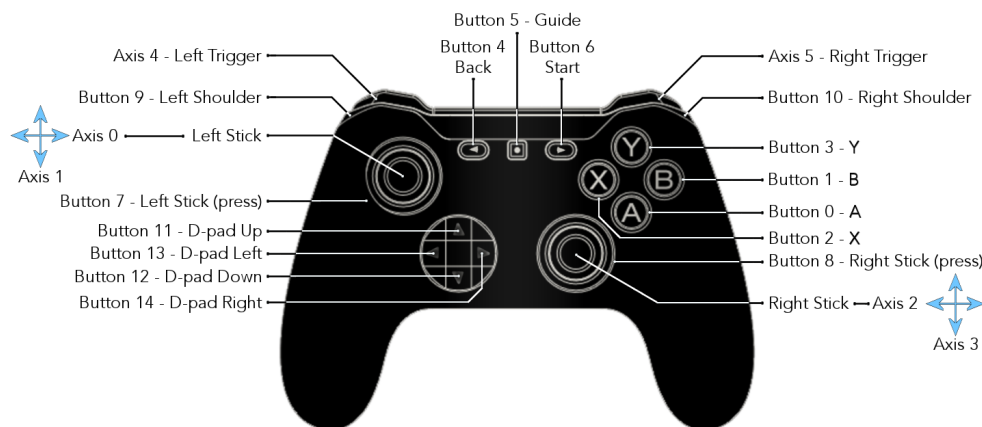


Table 14 lists the game controller buttons for human characters.

**Table 14. Game controller mappings - human**

| Function                 | Game Controller Key / Button | Button / Axis     |
|--------------------------|------------------------------|-------------------|
| <b>Movement and view</b> |                              |                   |
| Move                     | left thumbstick              | Axis 0 and Axis 1 |
| Sprint                   | left thumbstick (press)      | Button 7          |
| Turn / move weapon       | right thumbstick             | Axis 2 and Axis 3 |
| Free look                | right thumbstick (press)     | Button 8          |
| Posture select           | B button                     | Button 1          |
| Toggle binoculars        | X button                     | Button 2          |

Table 14. Game controller mappings - human (continued)

| Function                               | Game Controller Key / Button                  | Button / Axis         |
|----------------------------------------|-----------------------------------------------|-----------------------|
| Zoom binoculars out or in              | right shoulder button<br>left shoulder button | Button 9 or Button 10 |
| Talk on radio                          | A button                                      | Button 0              |
| Toggle night vision goggles            | D-pad down                                    | Button 12             |
| <b>Human Combat</b>                    |                                               |                       |
| Aim                                    | left trigger                                  | Axis 4                |
| Fire/lase target                       | right trigger                                 | Axis 5                |
| Cycle weapons                          | Y button                                      | Button 3              |
| <b>Parachuting (paratroopers only)</b> |                                               |                       |
| Deploy parachute                       | A button                                      | Button 0              |
| Steer left or right                    | left shoulder button<br>right shoulder button | Button 9 or Button 10 |
| Slow rate of descent                   | both shoulder buttons simultaneously          | Buttons 9 and 10      |

## 11.4. Game Controller Mappings for Drones

These controls are for the drone that can be deployed by human characters: Civilian Female With Drone, Civilian Male With Drone, and Police Officer With Drone. Figure 82 on the previous page illustrates the game controller numbering and naming conventions.

Table 15 lists the controls for the drone.

Table 15. Game controller mappings - drone

| Function                     | Game Controller Key / Button   | Button / Axis     |
|------------------------------|--------------------------------|-------------------|
| <b>Drone Flight Controls</b> |                                |                   |
| Altitude                     | left thumbstick (forward/back) | Axis 1            |
| Direction Facing             | left thumbstick (left/right)   | Axis 0            |
| Movement                     | right thumbstick               | Axis 2 and Axis 3 |
| <b>Drone Camera Controls</b> |                                |                   |
| Zoom out                     | left shoulder button           | Button 9          |
| Zoom in                      | right shoulder button          | Button 10         |
| Capture Image                | B button                       | Button 1          |
| Pan up or down               | D-pad (up/down)                | Buttons 11 and 12 |

## 11.5. Game Controller Mappings for the LAV and Tanks

Figure 82 on page 212 illustrates the game controller numbering and naming conventions.

Table 16 lists the driver's controls for the LAV and tanks.

**Table 16. Driver game controller mappings - LAV and tanks**

| Function                                    | Game Controller Key / Button | Button / Axis              |
|---------------------------------------------|------------------------------|----------------------------|
| <b>Vehicle Control</b>                      |                              |                            |
| Start/stop engine                           | Start button                 | Button 6                   |
| Throttle                                    | right trigger                | Axis 5                     |
| Shift gear up                               | right shoulder button        | Button 10                  |
| Shift gear down                             | left shoulder button         | Button 9                   |
| Brake                                       | left trigger                 | Axis 4                     |
| Steering                                    | left thumbstick              | Axis 0                     |
| Differential lock (LAV)<br>Pivot (tanks)    | X button                     | Button 2                   |
| Headlights                                  | A button                     | Button 0                   |
| Parking brake                               | left thumbstick (press)      | Button 7                   |
| Cycle saved views                           | Y button                     | Button 3                   |
| Driver look around<br>(LAV only)            | right thumbstick             | Axis 2 and Axis 3          |
| <b>Engagement (gunner/driver role only)</b> |                              |                            |
| Turret                                      | D-pad                        | Buttons 11, 12, 13, and 14 |
| Cycle weapon                                | B                            | Button 1                   |
| Fire weapon                                 | A                            | Button 0                   |

Table 17 lists the commander's controls for the LAV and tanks. (Not all tanks are configured with commander roles.)

**Table 17. Commander game controller mappings - LAV and tanks**

| Function              | Game Controller Key / Button | Button / Axis     |
|-----------------------|------------------------------|-------------------|
| Rotate/elevate camera | right thumbstick             | Axis 2 and Axis 3 |
| Change sensor         | D-pad down                   | Button 14         |
| Zoom out              | left shoulder button         | Button 9          |
| Zoom in               | right shoulder button        | Button 10         |

Table 18 lists the gunner's controls for the LAV and tanks.



**Table 18. Gunner game controller mappings - LAV and tanks**

| Function           | Game Controller Key / Button | Button / Axis     |
|--------------------|------------------------------|-------------------|
| Rotate/elevate gun | right thumbstick             | Axis 2 and Axis 3 |
| Change sensor      | right thumbstick (press)     | Button 8          |
| Zoom out           | left shoulder button         | Button 9          |
| Zoom in            | right shoulder button        | Button 10         |
| Next weapon        | left trigger                 | Axis 4            |
| Previous weapon    | D-pad up                     | Button 11         |
| Fire weapon        | right trigger                | Axis 5            |

## 11.6. Game Controller Mappings for Cars and Trucks

This topic describes game controller mapping for cars and trucks. These vehicles have a driver role, but for the most part do not have weapons. Figure 82 on page 212 illustrates the game controller numbering and naming conventions.

Table 19 lists the driver's controls for cars and trucks.

**Table 19. Driver game controller mappings - cars and trucks**

| Function               | Game Controller Key / Button | Button / Axis     |
|------------------------|------------------------------|-------------------|
| <b>Vehicle Control</b> |                              |                   |
| Start/stop engine      | Start button                 | Button 6          |
| Throttle               | right trigger                | Axis 5            |
| Shift gear up          | right shoulder button        | Button 10         |
| Shift gear down        | left shoulder button         | Button 9          |
| Parking Brake          | left thumbstick (press)      | Button 7          |
| Steering               | left thumbstick              | Axis 0            |
| Headlights             | A button                     | Button 0          |
| Drive look around      | right thumbstick             | Axis 2 and Axis 3 |

## 11.7. Racing Wheel Controllers

VR-Engage supports the Logitech G27 and G29 racing wheel controllers.

**i** If your racing wheel is not working as expected, make sure you are using the latest drivers.

Figure 83 illustrates the mappings of the G27 racing wheel.

Figure 83. G27 racing wheel controls



Table 20 lists the G27 racing wheel controls.

Table 20. G27 Racing Wheel control mappings

| Function          | Key/Button            |
|-------------------|-----------------------|
| Next View         | Button 4 Down Toggle  |
| Previous View     | Button 3 Down Toggle  |
| Cycle Sensor      | Button 16 Down Toggle |
| Brake             | Axis 3                |
| Differential Lock | Button 7 Down Toggle  |
| Engine Enable     | Button 8 Down Toggle  |
| Gear Down         | Button 6 down Toggle  |
| Gear Up           | Button 5 Down Toggle  |
| Headlights        | Button 20 Down Toggle |
| Parking Brake     | Button 22 Down Toggle |
| Reset             | Button 23 Down Toggle |
| Steering          | Axis 1                |
| Throttle          | Axis 2                |

Figure 84 illustrates the mappings of the G29 racing wheel.

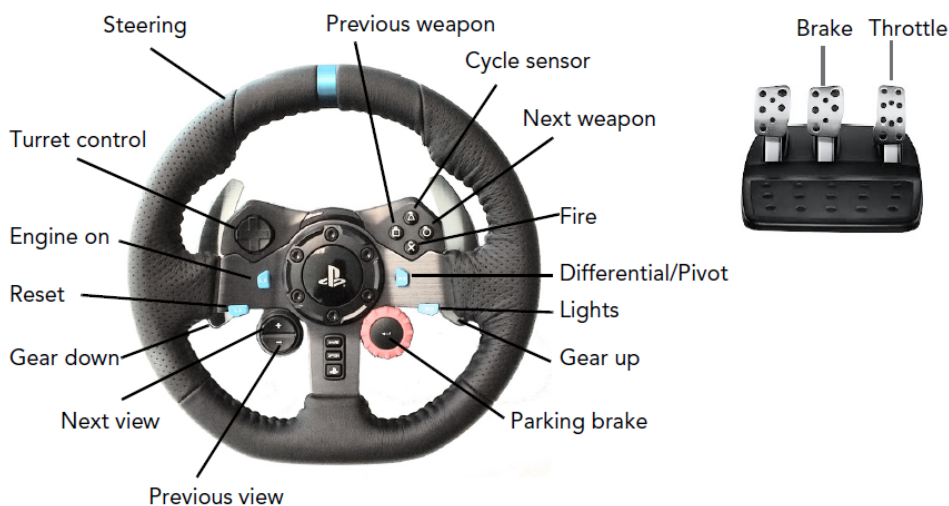
**Figure 84. G29 racing wheel controls**

Table 21 lists the G29 racing wheel controls.

**Table 21. G29 racing wheel control mappings**

| Function          | Key/Button            |
|-------------------|-----------------------|
| Next View         | Button 20 Down Toggle |
| Previous View     | Button 21 Down Toggle |
| Cycle Sensor      | Button 4 Down Toggle  |
| Brake             | Axis 3                |
| Differential Lock | Button 7 Down Toggle  |
| Engine Enable     | Button 8 Down Toggle  |
| Gear Down         | Button 6 down Toggle  |
| Gear Up           | Button 5 Down Toggle  |
| Headlights        | Button 11 Down Toggle |
| Parking Brake     | Button 24 Down Toggle |
| Reset             | Button 12 Down Toggle |
| Steering          | Axis 1                |
| Throttle          | Axis 2                |
| Differential Lock | Button 7 Down Toggle  |

## 11.8. Flight Controllers

VR-Engage includes mappings for the Thrustmaster HOTAS Warthog flight (Joystick-HOTAS Warthog) controller, the T.Flight Hotas X flight controller, the Gamepad F310 and F710 (Logitech Dual Action), and Xbox controllers.

### 11.8.1 HOTAS Warthog Mappings for Fixed-Wing Entities

Figure 85 and Figure 86 show the mappings for the Thrustmaster Warthog flight controller for fixed-wing entities.

**Figure 85. Thrustmaster HOTAS Warthog joystick mappings - fixed-wing**



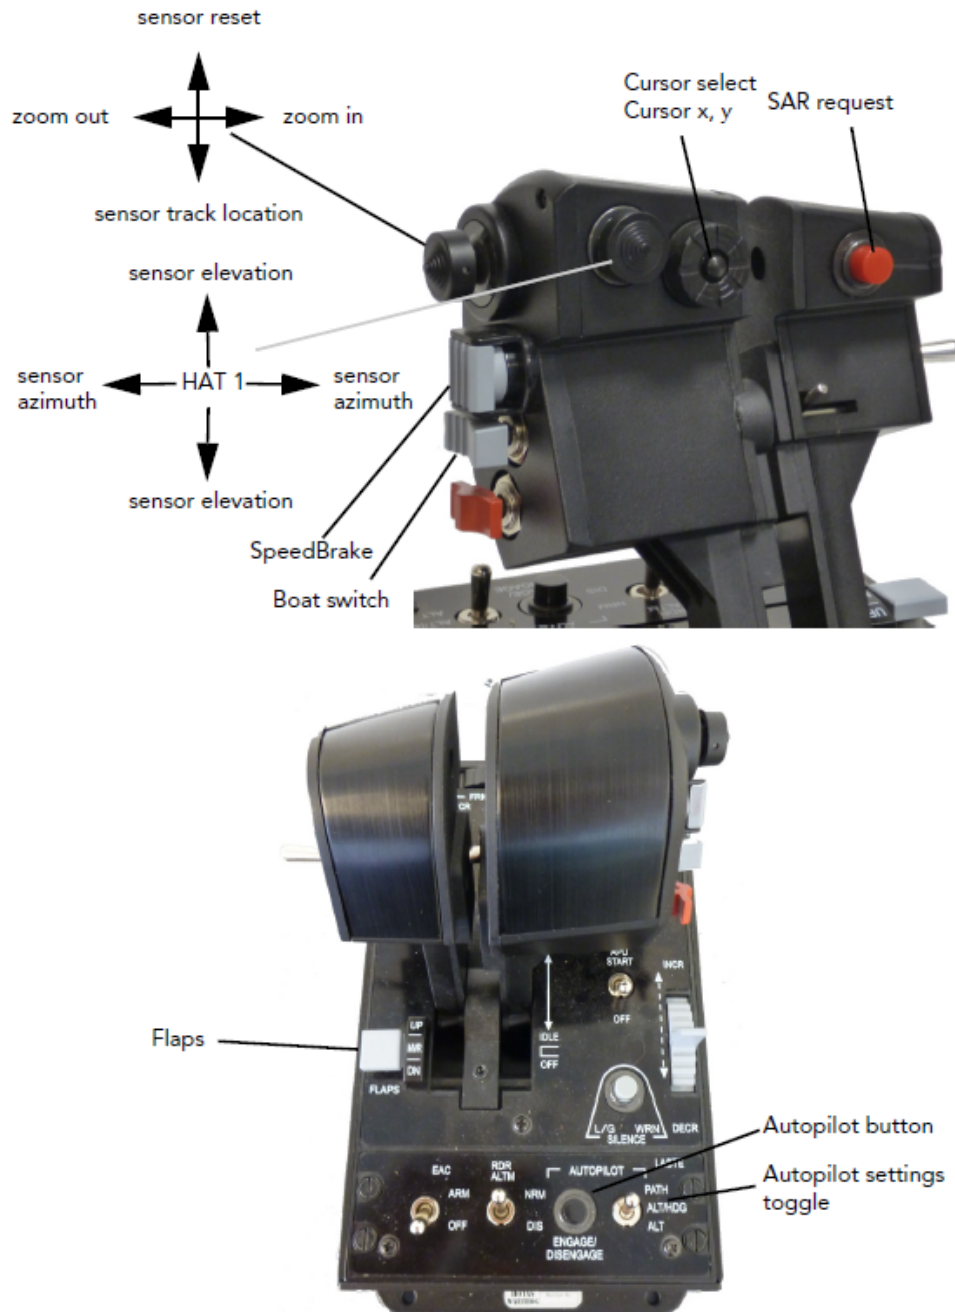
**Figure 86. Thrustmaster HOTAS Warthog throttle mappings - fixed-wing**

Table 22 lists the flight controls for the Thrustmaster HOTAS Warthog controller for fixed-wing entities.

**Table 22. Thrustmaster HOTAS Warthog mappings - fixed-wing**

| Function                                | Key/Button                                                                                                                                                            |
|-----------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Extended Flight Controls</b>         |                                                                                                                                                                       |
| AutopilotMode1                          | Throttle Button 27 Down Toggle                                                                                                                                        |
| AutopilotMode2                          | Throttle Button 28 Down Toggle                                                                                                                                        |
| AutopilotToggle                         | Throttle Button 26 Down Toggle                                                                                                                                        |
| Flap 1                                  | Throttle Button 22 Down Toggle. Toggle states match joystick up, maneuver, down.                                                                                      |
| Flap 2                                  | Throttle Button 23 Down Toggle. Toggle states match joystick up, maneuver, down.                                                                                      |
| NoseWheelSteering                       | Button 3 Down Toggle                                                                                                                                                  |
| ToggleLandingGear                       | G Toggle                                                                                                                                                              |
| <b>Engagement</b>                       |                                                                                                                                                                       |
| cycle weapon                            | Throttle Button 5 Down Toggle                                                                                                                                         |
| fire selected weapon                    | Throttle Button 1 Down Toggle                                                                                                                                         |
| replenish fuel and ordnance             | Throttle Button 4 Down Toggle                                                                                                                                         |
| <b>FixedWingLib CGF Flight Controls</b> |                                                                                                                                                                       |
| air brake                               | Boat Switch (Button 10) Down. This causes excess drag and the plane's speed drops quickly.                                                                            |
| pitch                                   | Joystick forward and back (Axis 2)                                                                                                                                    |
| roll                                    | Joystick left and right (Axis 1)                                                                                                                                      |
| throttle                                | Throttle lever (Axis 3)                                                                                                                                               |
| wheel brake                             | SpeedBrake (Button 7) Down, button 8 Down. If you pull back and release, it re-centers. If you push forward, it locks in place. Both directions activate full brakes. |
| <b>Gimbaled Sensor</b>                  |                                                                                                                                                                       |
| sensor-azimuth                          | Throttle HAT 1 Right (Up), HAT 1 Left (Down)                                                                                                                          |
| sensor-cycle                            | Joystick Button 7 Down Toggle                                                                                                                                         |
| sensor-elevation                        | Throttle HAT 1 Up (Up), HAT 1 Down (Down)                                                                                                                             |
| sensor-reset                            | Throttle Button 3 Down                                                                                                                                                |
| sensor-track-location                   | Throttle Button 5 Down                                                                                                                                                |
| sensor-zoom                             | Throttle Button 4 (Down), Button 6 (Up)                                                                                                                               |
| <b>Observer Control</b>                 |                                                                                                                                                                       |
| ObserverAttachMode                      | V (on the keyboard)                                                                                                                                                   |
| <b>Radar Scope</b>                      |                                                                                                                                                                       |
| cursor-select                           | Button 1 (also clears the selection from the air target list)                                                                                                         |

**Table 22. Thrustmaster HOTAS Warthog mappings - fixed-wing (continued)**

| Function              | Key/Button          |
|-----------------------|---------------------|
| cursor-x              | Axis 1              |
| cursor-y              | Axis 2              |
| Clear air target list | U (on the keyboard) |
| <b>SAR</b>            |                     |
| request               | Throttle Button 15  |

### 11.8.2 HOTAS Warthog Mappings for Rotary-Wing Entities

Figure 87 and Figure 88 show the mappings for the Thrustmaster Warthog flight controller for rotary-wing entities.

**Figure 87. Thrustmaster HOTAS Warthog joystick mappings - rotary-wing**

Figure 88. Thrustmaster HOTAS Warthog throttle mappings - rotary-wing

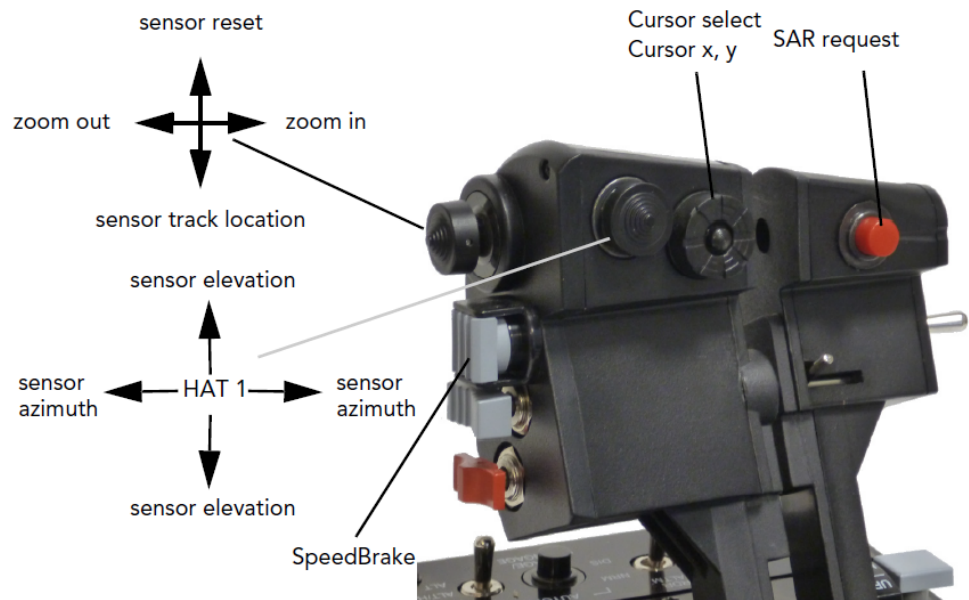


Table 23 lists the flight controls for the Thrustmaster HOTAS Warthog controller for rotary-wing entities.

Table 23. Thrustmaster HOTAS Warthog mappings - rotary-wing

| Function                    | Key/Button                                   |
|-----------------------------|----------------------------------------------|
| <b>Engagement</b>           |                                              |
| fire selected weapon        | Button 1 Down Toggle                         |
| cycle weapon                | Button 5 Down Toggle                         |
| replenish fuel and ordnance | Button 4 Down Toggle                         |
| <b>Gimbaled Sensor</b>      |                                              |
| sensor-azimuth              | Throttle HAT 1 Right (Up), HAT 1 Left (Down) |
| sensor-cycle                | Joystick Button 7 Down Toggle                |
| sensor-elevation            | Throttle HAT 1 Up (Up), HAT 1 Down (Down)    |
| sensor-reset                | Throttle Button 3 Down                       |



**Table 23. Thrustmaster HOTAS Warthog mappings - rotary-wing (continued)**

| Function                                 | Key/Button                                                                                                                                                           |
|------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| sensor-track-location                    | Throttle Button 5 Down                                                                                                                                               |
| sensor-zoom                              | Throttle Button 4 (Down), Button 6 (Up)                                                                                                                              |
| <b>Radar Scope</b>                       |                                                                                                                                                                      |
| cursor-select                            | Button 1 (also removes selection from the air target list)                                                                                                           |
| cursor-x                                 | Axis 1                                                                                                                                                               |
| cursor-y                                 | Axis 2                                                                                                                                                               |
| Clear air target list                    | U (on keyboard)                                                                                                                                                      |
| <b>RotorLib CGF Rotary Wing Controls</b> |                                                                                                                                                                      |
| collective                               | Axis 3, <UP>, <DOWN>                                                                                                                                                 |
| pedal                                    | HAT 1 Up, HAT 1 Left                                                                                                                                                 |
| pitch                                    | Axis 2, W                                                                                                                                                            |
| roll                                     | Axis 1, D (Up), A (Down)                                                                                                                                             |
| wheel brake                              | SpeedBrake (Button 7) Down, button 8 Down. If you pull back and release, it recenters. If you push forward, it locks in place. Both directions activate full brakes. |
| <b>SAR</b>                               |                                                                                                                                                                      |
| request                                  | Button 15                                                                                                                                                            |

### 11.8.3 T.Flight Hotas X Mappings for Fixed-Wing Entities

Figure 89 shows the joystick controls for the T.Flight Hotas X flight controller for fixed-wing entities.

VR-Engage also supports the T.Flight Hotas 4 controller. The button layout is similar to the T.Flight Hotas X.

**Figure 89. T.Flight Hotas X joystick - fixed wing**



Figure 90 shows the throttle controls for the T.Flight Hotas X flight controller for fixed-wing entities.

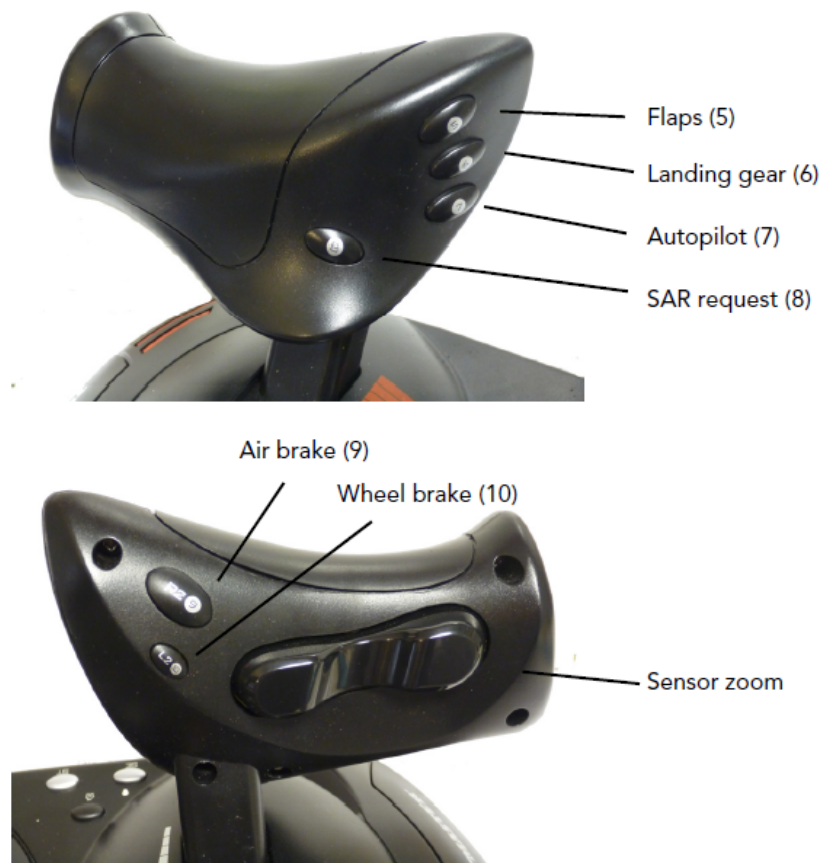
**Figure 90. T.Flight Hotas X throttle - fixed-wing**

Table 24 lists the flight controls for the T.Flight Hotas X controller for fixed-wing entities.

**Table 24. T.Flight Hotas X mappings - fixed-wing**

| Function                                | Key/Button                             |
|-----------------------------------------|----------------------------------------|
| <b>Engagement</b>                       |                                        |
| cycle weapon                            | Button 5 Down Toggle                   |
| fire selected weapon                    | Button 1 Down Toggle                   |
| cursor select target                    | Button 3 Down Toggle                   |
| <b>FixedWingLib CGF Flight Controls</b> |                                        |
| pedal                                   | Joystick twist left and right (Axis 4) |
| pitch                                   | Joystick forward and back (Axis 2)     |
| roll                                    | Joystick left and right (Axis 1)       |
| throttle                                | Throttle forward and back (Axis 3)     |
| autopilot                               | Button 7                               |
| air brake                               | Button 9 Down                          |
| landing gear                            | Button 6                               |

Table 24. T.Flight Hotas X mappings - fixed-wing (continued)

| Function                        | Key/Button           |
|---------------------------------|----------------------|
| flaps                           | Button 5             |
| wheel brake                     | Button 10 Down       |
| <b>Menu</b>                     |                      |
| Action menu                     | Button 4 Down        |
| down                            | HAT 1 Down, <DOWN>   |
| left                            | HAT 1 Left, <LEFT>   |
| right                           | HAT 1 Right, <RIGHT> |
| up                              | HAT 1 Up, <UP>       |
| <b>Observer Control</b>         |                      |
| Attach mode                     | V (on keyboard)      |
| <b>Radar Scope</b>              |                      |
| down                            | HAT 1 Down, <DOWN>   |
| left                            | HAT 1 Left, <LEFT>   |
| right                           | HAT 1 Right, <RIGHT> |
| up                              | HAT 1 Up, <UP>       |
| select target closest to cursor | Z (on keyboard)      |
| clear current radar selection   | X (on keyboard)      |
| <b>Release Bomb</b>             |                      |
| release                         | Button 1 Down        |
| SAR                             |                      |
| request                         | S, Button 8 Down     |

#### 11.8.4 T.Flight Hotas X Mappings for Rotary-Wing Entities

Figure 91 shows the joystick controls for the T.Flight Hotas X flight controller for rotary-wing entities.

VR-Engage also supports the T.Flight Hotas 4 controller. The button layout is similar to the T.Flight Hotas X.

**Figure 91. T.Flight Hotas X joystick - rotary-wing**

Figure 92 shows the throttle controls for the T.Flight Hotas X flight controller for rotary-wing entities.

Figure 92. T.Flight Hotas X throttle - rotary-wing



Table 25 lists the flight controls for the T.Flight Hotas X controller for rotary-wing entities.

Table 25. T.Flight Hotas X mappings - rotary-wing

| Function             | Key/Button           |
|----------------------|----------------------|
| <b>Engagement</b>    |                      |
| cycle weapon         | Button 5 Down Toggle |
| fire selected weapon | Button 1 Down Toggle |
| cursor select target | Button 3 Down Toggle |
| <b>Menu</b>          |                      |
| Action menu          | Button 4 Down        |
| down                 | HAT 1 Down, <DOWN>   |
| left                 | HAT 1 Left, <LEFT>   |
| right                | HAT 1 Right, <RIGHT> |
| up                   | HAT 1 Up, <UP>       |
| <b>Radar Scope</b>   |                      |
| down                 | HAT 1 Down, <DOWN>   |

**Table 25. T.Flight Hotas X mappings - rotary-wing (continued)**

| Function                                 | Key/Button                             |
|------------------------------------------|----------------------------------------|
| left                                     | HAT 1 Left, <LEFT>                     |
| right                                    | HAT 1 Right, <RIGHT>                   |
| up                                       | HAT 1 Up, <UP>                         |
| select target closest to cursor          | Z (on keyboard)                        |
| clear current radar selection            | X (on keyboard)                        |
| <b>RotorLib CGF Rotary Wing Controls</b> |                                        |
| collective                               | Throttle forward and back (Axis 3)     |
| pedal                                    | Joystick twist left and right (Axis 4) |
| pitch                                    | Joystick forward and back (Axis 2)     |
| roll                                     | Joystick left and right (Axis 1)       |
| wheel brake                              | Button 10 Down                         |
| <b>SAR</b>                               |                                        |
| request                                  | S, Button 8                            |

### 11.8.5 Game Controller Flight Control Mappings for Fixed-Wing Entities

Figure 82 on page 212 illustrates the game controller numbering and naming conventions. Table 26 lists the flight controls for fixed-wing entities.

**Table 26. Game controller flight control mappings - fixed-wing**

| Function               | Game Controller Key /<br>Button    | Button / Axis                 |
|------------------------|------------------------------------|-------------------------------|
| <b>Engagement</b>      |                                    |                               |
| Cycle weapons          | left trigger                       | Axis 4                        |
| Fire weapon            | right trigger                      | Axis 5                        |
| Radar cursor<br>select | left shoulder button               | Button 9                      |
| Radar cursor           | D-pad                              | Buttons 11, 12, 13,<br>and 14 |
| <b>Flight Controls</b> |                                    |                               |
| Pedal                  | left thumbstick (left/right)       | Axis 0                        |
| Throttle               | left thumbstick<br>(forward/back)  | Axis 1                        |
| Pitch                  | right thumbstick<br>(forward/back) | Axis 3                        |

**Table 26. Game controller flight control mappings - fixed-wing (continued)**

| Function     | Game Controller Key / Button  | Button / Axis |
|--------------|-------------------------------|---------------|
| Roll         | right thumbstick (left/right) | Axis 2        |
| Air brakes   | A button                      | Button 0      |
| Wheel brakes | X button                      | Button 2      |
| Flaps        | Y button                      | Button 3      |
| Auto pilot   | right shoulder button         | Button 10     |

### 11.8.6 Game Controller Flight Control Mappings for Rotary-Wing Entities

Figure 82 on page 212 illustrates the game controller numbering and naming conventions.

Table 27 lists the flight controls for rotary-wing entities

**Table 27. Game controller flight control mappings - rotary-wing**

| Function                    | Game Controller Key / Button    | Button / Axis |
|-----------------------------|---------------------------------|---------------|
| <b>Rotary Wing Controls</b> |                                 |               |
| Collective                  | left thumbstick (forward/back)  | Axis 1        |
| Pedal                       | left thumbstick (left/right)    | Axis 0        |
| Pitch                       | right thumbstick (forward/back) | Axis 3        |
| Roll                        | right thumbstick (left/right)   | Axis 2        |
| <b>Engagement</b>           |                                 |               |
| Cycle weapons               | left trigger                    | Axis 4        |
| Fire weapon                 | right trigger                   | Axis 5        |

### 11.8.7 Game Controller Mappings for the Sensor Operator

Figure 82 on page 212 illustrates the game controller numbering and naming conventions.

Table 28 lists the controls for the sensor operator

**Table 28. Game controller mappings - sensor operator**

| Function           | Game Controller Key / Button | Button / Axis     |
|--------------------|------------------------------|-------------------|
| Sensor orientation | left thumbstick              | Axis 0 and Axis 1 |
| Sensor mode        | X button                     | Button 2          |
| Track location     | A button                     | Button 0          |



**Table 28. Game controller mappings - sensor operator (continued)**

| Function                                             | Game Controller Key / Button       | Button / Axis |
|------------------------------------------------------|------------------------------------|---------------|
| Track the entity closest to the center of the screen | B button                           | Button 1      |
| Reset sensor                                         | Y button                           | Button 3      |
| Zoom                                                 | right thumbstick<br>(forward/back) | Axis 3        |

## 11.9. Head-Mounted Display Controllers

The Oculus Rift and HTC Vive head-mounted displays support hand controllers. This section shows the mappings for these controllers, which can be used for soldier roles. If you do not have hand controllers, you can use a keyboard, Xbox controller, or Logitech Gamepad. (HMD hand controllers are not mapped in joystick settings.)

Figure 93 illustrates the controls on the Oculus Rift touch controller.


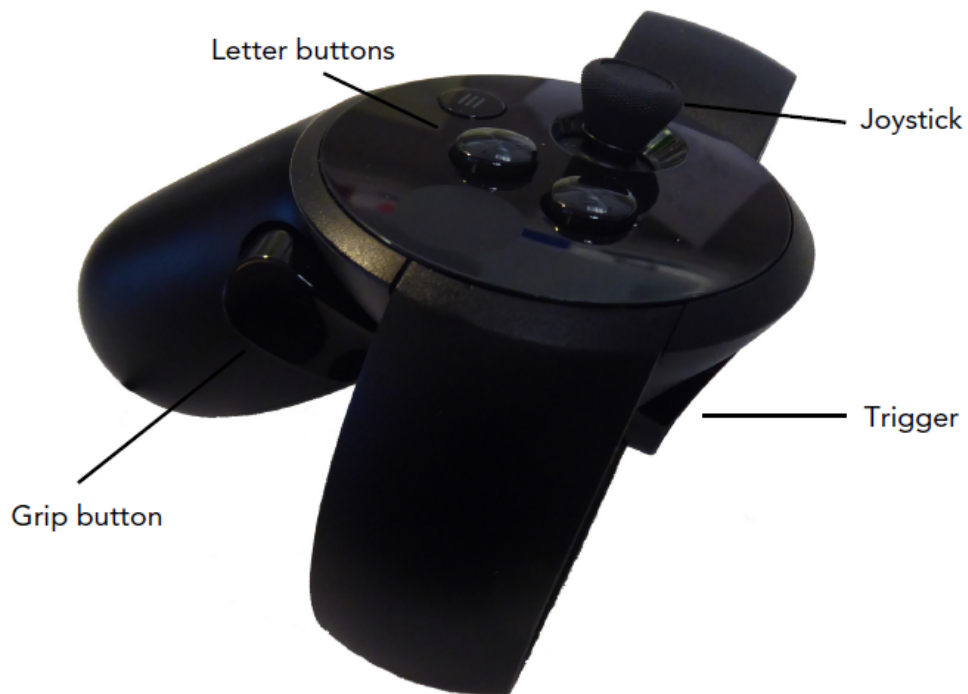
**Figure 93. Oculus Rift touch controller**

Figure 94 illustrates the controls on the Oculus Rift touch controller.

**Figure 94. HTC Vive controller**

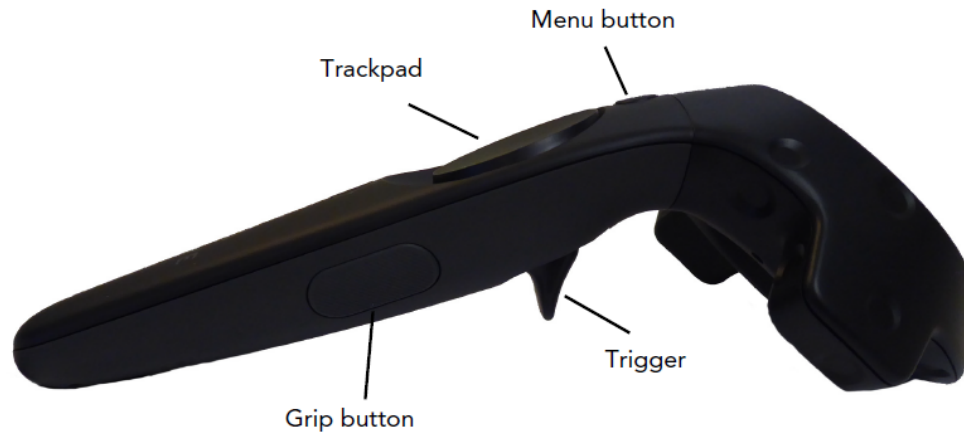

The controls work as follows:

- Fire. Press the trigger on the dominant hand to fire the weapon.
- Aim. Press the grip button to raise the weapon to the aim-down-sights position.
- Move. Movement is controlled by the right hand joystick (Oculus Rift) or trackpad (HTC Vive):
  - Walk forward. Push/touch forward. Movement is based on the orientation of the entity, not the direction it is looking or aiming.
  - Walk backwards. Pull/touch backward.
  - Walk sideways. Push/touch left and right
  - Sprint. Push down while pressing forward.
- Turn. Press/touch the left hand joystick or trackpad to the left or right.
- Change posture. Press the trigger on the non-dominant hand for Posture Up. Press the grip button on the non-dominant hand for Posture Down.
- Action menu. To open, press Y on the non-dominant hand Oculus touch controller. Press the menu button on the non-dominant hand HTC Vive controller. While the menu is open, the joystick or trackpad acts as a D-pad.

## 11.10. Game Controller Button Numbering

Each trigger and joystick direction is considered to be an axis and can be mapped to a joystick control. Everything else is a button and can be mapped to a button control. Game controllers are mapped in *.lua* files. (For details, see "11.12. Configuring Game Controllers and Keyboard Control" on page 235.)

The mappings are identified by button and axis numbers. Figure 95 and Figure 96 identify the button and axis numbering scheme for the Xbox and Gamepad controllers.

**Figure 95. Xbox controller button and axis numbering**

Figure 96. Logitech Gamepad button and axis numbering

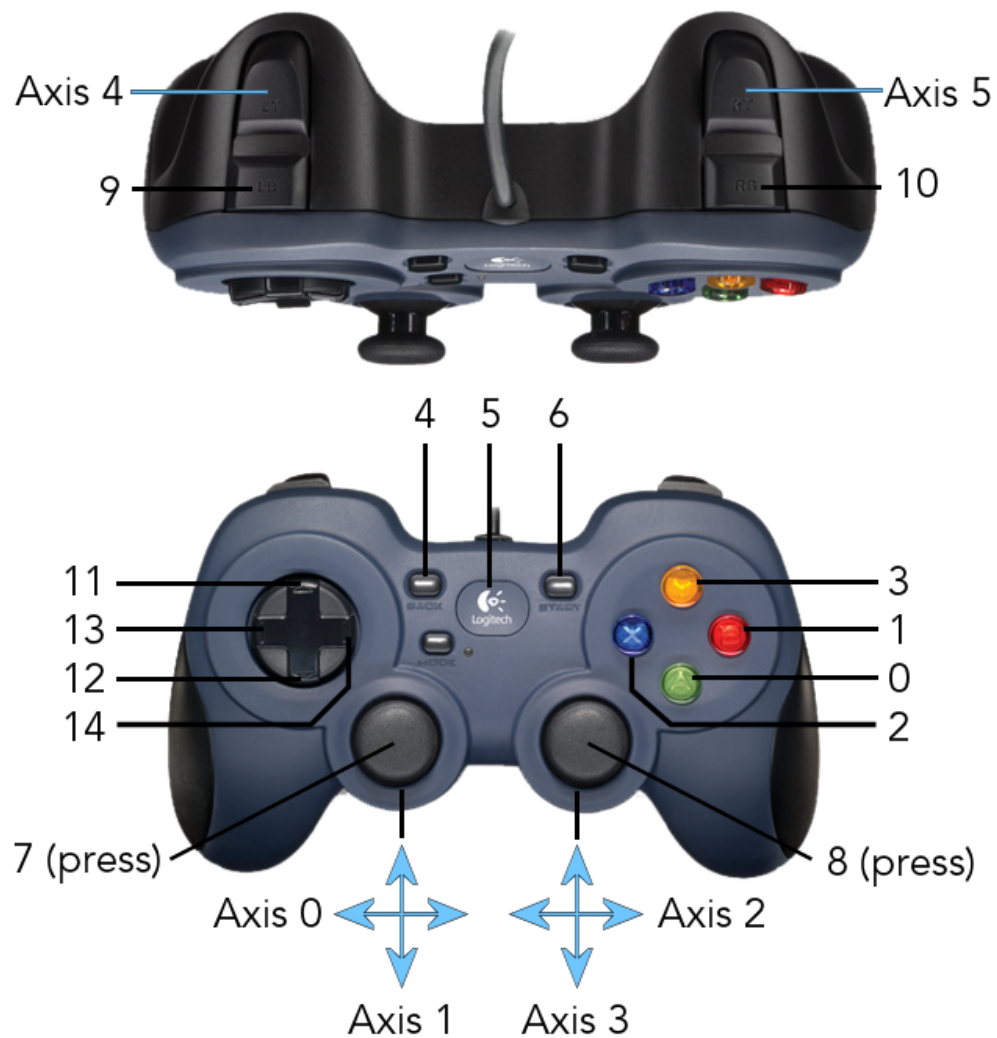


Table 29. Controller numbering

| Number        | Description                 |
|---------------|-----------------------------|
| <b>Button</b> |                             |
| 0             | Xbox A or corresponding     |
| 1             | Xbox B or corresponding     |
| 2             | Xbox X or corresponding     |
| 3             | Xbox Y or corresponding     |
| 4             | Xbox Back or corresponding  |
| 5             | Xbox Guide or corresponding |
| 6             | Xbox Start or corresponding |
| 7             | Left stick press            |

Table 29. Controller numbering (continued)

| Number      | Description                                                                                                                                    |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| 8           | Right stick press                                                                                                                              |
| 9           | Left shoulder button                                                                                                                           |
| 10          | Right shoulder button                                                                                                                          |
| 11          | D-pad up                                                                                                                                       |
| 12          | D-pad down                                                                                                                                     |
| 13          | D-pad left                                                                                                                                     |
| 14          | D-pad right                                                                                                                                    |
| 15          | Miscellaneous (Xbox Series X share button, PlayStation 5 microphone button, Nintendo Switch Pro capture button, Amazon Luna microphone button) |
| 16          | Xbox Elite paddle P1                                                                                                                           |
| 17          | Xbox Elite paddle P1                                                                                                                           |
| 18          | Xbox Elite paddle P1                                                                                                                           |
| 19          | Xbox Elite paddle P1                                                                                                                           |
| 20          | PlayStation 4 / PlayStation 5 touchpad button                                                                                                  |
| <b>Axis</b> |                                                                                                                                                |
| 0           | Left stick x axis                                                                                                                              |
| 1           | Left stick Y axis                                                                                                                              |
| 2           | Right stick x axis                                                                                                                             |
| 3           | Right stick y axis                                                                                                                             |
| 4           | Left trigger                                                                                                                                   |
| 5           | Right trigger                                                                                                                                  |

### 11.11. Tips for Logitech Gamepad

The Mode button switches the functions of the D-pad and the left thumbstick. Since it is easy to inadvertently press it, if the D-pad and thumbstick are not working as expected, check the Mode button. It should be off (no green light).

There is a switch on the back of the Gamepad that you can set to either D (DirectInput) or X (XInput). Either input should work to control VR-Engage entities as described in the previous sections. If you experience issues with X, set the controller to D.

### 11.12. Configuring Game Controllers and Keyboard Control


You can control entity movement and weapon fire using a game controller (such as a gamepad or joystick), a keyboard and mouse, or a combination of all of these. You can attach multiple joysticks and can use a mix of joystick and keyboard control at the same time. You configure joystick and keyboard mappings in *.lua* files.

### 11.12.1 Windows Game Controllers

VR-Engage requires that devices be a USB Windows Game Controller (as opposed to a USB human interface device) You can verify that a USB device is a game controller with the Game Controllers dialog. If the device is a game controller, you will see an entry for the device in that dialog when the device is connected (Figure 97).

- To open the Game Controllers dialog, in the Windows 10 search bar, enter Set Up USB Game Controllers and then select the entry.

**Figure 97. Game Controllers dialog box**

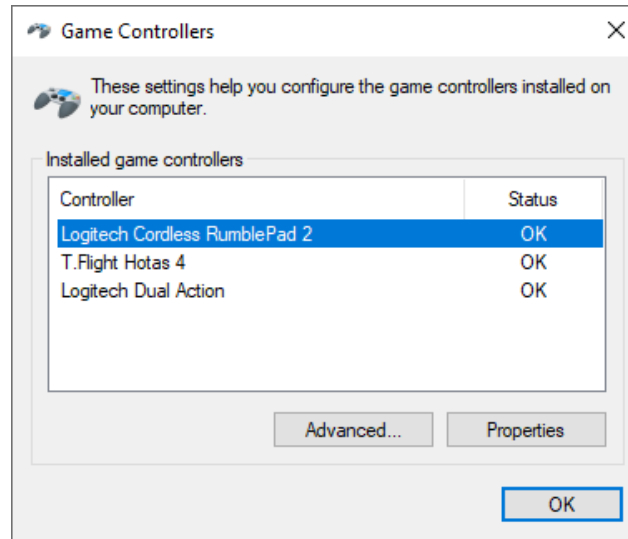

### 11.12.2 The Game Controller Utility

In the `./bin64` directory, there is an executable called `gameControllerTool.exe`. When you run it from the command prompt, it discovers any joysticks connected to the machine and displays the SDL information about them. You can then use the information to configure new devices in a `.lua` input file.

This example shows the basic SDL output for an Xbox controller:

```
Found 1 joystick(s)
```

```
Joystick Name:      'Controller (Xbox One For windows)'  
Joystick Number:    0  
Number of Axes:      6  
Number of Buttons:  16  
Number of Hats:      1  
Number of Balls:     0
```

Table 30 lists the command-line options for the utility.

Table 30. gameControllerTool command-line options

| Option                               | Description                                                                                                                                                                                                                                  |
|--------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| (-?   -h   --help)                   | Displays usage information.                                                                                                                                                                                                                  |
| (--debug   -v   --verbose)           | Run with increased verbosity to display detailed information for the connected devices.                                                                                                                                                      |
| (-l   --listDevices)                 | Lists all of the input devices connected to the machine. This is the default behavior when no command-line options are specified.                                                                                                            |
| (-n   --deviceNumber <i>number</i> ) | Returns the information for the specified device. You can get a list of the device numbers by using the --listDevices option (or running the utility with no command-line options). In the example above, the number is 0 (Joystick Number). |

### 11.12.3 File Structure

#### Role Input Configuration Files

By default, all input configuration files are stored in `./data/simulationModelSets/VR-Engage/input`. You can change the location for these by specifying an alternate path in `./appData/scripts/playerStation.lua`:

```
-- The path to the input directory for configuring VRE entities input
inputSettingsPath = "${DATA_DIR}/simulationModelSets/VR-Engage/input/";
```

The configuration files at the top level typically represent the component input files, pointed to from the "inputConfigFile" field of the control logic components of the role configuration files. Some files closely align to roles, such as *driverInput.lua* and *gunnerInput.lua*. The *commonInput.lua* file maps functionality common to multiple roles, for example, navigating the Action menu, saved views, and mouse control.

Every component configuration file contains a single "configFiles" field with a list of input-device specific *.lua* configuration files.

This example is from *humanInput.lua*:

```
configFiles = {
    "human/gamepad.lua";
    "human/keyboard.lua";
    "human/mouse.lua";
}
```

#### Device Configuration Files

A device configuration file contains a single "inputDevices" field with a set of device configurations. The device configuration files are:

- **DeviceName.** Values are mouse, keyboard, joystick, or gamepad.
- **DeviceType.** This applies to joysticks and game controllers. Set this to configure mappings for a very specific device instead of all devices of that type, and should contain the device name, for example, "Logitech Extreme 3D".

If there are both generic and specific mappings for a kind of input, the specific mapping is used. Generic device types are "gamepad" and "joystick". To create a custom mapping for a specific type of device, you must create an entry for it and set the **DeviceType** to the name of the device as it appears in the Game Controllers dialog box (Figure 97 on page 236).

- **MappingGroups.** A set of mappings for the device's input (keyboard or controller) to some particular action in the software. The action could be an entity behavior, such as moving or shooting. It could also be an administrative action, such as releasing mouse control or opening and closing the Action menu.
  - **Group.** The mapping group name represents the context in which the mapped actions are used. For example, all actions in the "action-menu" group are only available when the user opens the Action menu.
  - **Mappings.** List of input-action mappings for the group.

#### 11.12.4 Mappings

Common fields:

- **Type.** Describes the type of input event. Each device type supports different types of inputs:
  - **Keyboard.** key
  - **Mouse.** motion, button, double-click, scroll
  - **Gamepad.** axis, button (see "11.10. Game Controller Button Numbering" on page 232)
  - **Joystick.** axis, button, hat

Each input type requires additional fields describing the specific input. For details on the input types, see "11.12.5 Input Types" on the facing page.

- **Action.** The output or outcome of the input being triggered. See "11.12.9 List of Actions" on page 246.

These optional option fields manipulate the action frequency or the values:

- **repeatRate** (positive number). Intended to use with discrete inputs (buttons or keyboard keys). It emulates the input being repeatedly pressed and released according to the given rate in milliseconds for as long as it is being held.
- **smoothing** (Boolean). Used to simulate joystick movement with the mouse, for example, to make turret movement more realistic.
- **valueTransforms.** A list of functions for manipulating the output value. Each value transform has a type field, with parameter fields according to the type.

When  $x$  denotes the raw input value:



| Type      | Relevant input type | Parameter fields                         | Output                                                                                                       |
|-----------|---------------------|------------------------------------------|--------------------------------------------------------------------------------------------------------------|
| dead-zone | axis                | value (near 0)                           | $0 \text{ if }  x  \leq \text{value}, \text{ else } x$                                                       |
| gain      | axis                | value (between 0 and 1)                  | $\text{value} \times x^3 + (1 - \text{value}) \times x$                                                      |
| invert    | all                 | N/A                                      | $-x$                                                                                                         |
| scale     | axis                | value                                    | $\text{value} \times x$                                                                                      |
| remap     | axis                | inputMin, inputMax, outputMin, outputMax | $\text{outputMin} + \frac{x - \text{inputMin}}{ \text{inputMax} - \text{inputMin} } \times \text{outputMax}$ |

You can use multiple transforms at one time, even of the same type. The transforms are processed according to their order in the configuration file. For example, with value transforms of gain and scale in this order, the output is:

$$\text{scale} \times (\text{gain} \times x)^3 + (1 - \text{gain}) \times x$$

If the order is reversed, the output is:

$$\text{gain} \times (\text{scale} \times x)^3 + (1 - \text{gain}) \times \text{scale} \times x$$

For example:

```
{type="motion"; axis="y"; action="turret-elevation";
  valueTransforms = {
    {type="scale"; value=0.8};
  };
  smoothing=true;
};
```

### 11.12.5 Input Types

#### Button

Represents a pressable button on the mouse, gamepad, or joystick. For example:

```
{type="button"; id=0; action="fire";}
```

It requires the ID of the button on the device:

- Mouse: 0 for the left button and 1 for the right button. No other mouse buttons are supported.
- Gamepad: See "11.10. Game Controller Button Numbering" on page 232. If your gamepad has additional buttons, they cannot be mapped.
- Joystick. Button IDs are device specific.

### Axis

Represents stick and trigger axis movements on the gamepad or joystick. For example:

```
{type="axis"; id=0; action="steering";}
```

It requires the ID of the axis on the device:

- Gamepad: See "11.10. Game Controller Button Numbering" on page 232. Only the axis shown in the figures and listed in the table are supported.
- Joystick: Axis IDs are device specific.

Moving a stick to the left or down is taken as negative movement of the axis, while right or up is positive movement. Triggers allow only positive movement.

### Motion

Represents mouse movements, mostly used for mouse-look. Mouse motion is only processed when the user has mouse control enabled.

For example:

```
{type="motion"; axis="x"; action="turret-azimuth";}
```

Requires an axis field with a value of x or y.

### Mouse Control

Mouse control is disabled by default. You can only enable mouse control when the `mouseControlSupport` configuration field of the control logic component in the role configuration file is "true". The control logic components are `DtDriverControlLogic`, `DtHumanControlLogic`, `DtGunnerControlLogic`, and so on.

When engaging with mouse control support, it can be toggled with the `toggle-mouse-control` action (**Alt+Enter** or **Ctrl+left click**) or enabled with `enable-mouse control` (double clicking).

Mouse control is automatically disabled when the VR-Engage window loses focus and is re-enabled when focus is restored, assuming it was enabled before losing focus.

### Scroll

Represents mouse wheel scrolling. VR-Engage only supports the vertical axis of the first mouse wheel. If a mouse has multiple wheels or allows side-scrolling, those functionalities cannot be mapped.

For example:

```
{type="scroll"; action="sensor-zoom";}
```

### Double-click

Requires the mouse button ID: 0 for the left button and 1 for the right button.

 If "button" and "double-click" mappings share the same ID, double-clicking momentarily executes the "button" mapped action as well.

## Key

Represents a key press on the keyboard. Requires a key field.

For example:

```
{type="key"; key="<F12>"; modifiers={"<SHIFT>"}; action="toggle-application-mode"}
```

The key values that you can use are:

- Character keys. The character with letters in uppercase, for example, 1 or A.
- Keypad number. <KP0> through <KP9>.
- Functional keys. The keyname surrounded by angle brackets:
  - Arrow keys. <UP>, <DOWN>, <LEFT>, <RIGHT>
  - Function keys. <F1> through <F12>
  - Non-numeric number pad keys. <SUBTRACT>, <MULTIPLY>, <DIVIDE>, <DECIMAL>
  - Modifier keys. <LEFT SHIFT>, <RIGHT SHIFT>, <LEFT ALT>, <RIGHT ALT>, <LEFT CTRL>, <RIGHT CTRL>
  - Others. <BACKSPACE>, <TAB>, <CLEAR>, <PAUSE>, <ESC>, <SPACE>, <PAGE UP>, <PAGE DOWN>, <END>, <HOME>, <PRINT SCREEN>, <INSERT>, <DELETE>

Additional keys are not supported.

Modifiers is an optional field that allows you to map a conjunctive key and a modifier press to an action. The supported modifiers values are <SHIFT>, <ALT>, and <CTRL>. There is no distinction between left and right modifier presses. A mapping can have more than one modifier, for example:

```
key="A"; modifiers={"<CTRL>, <SHIFT>"}
```

maps **Ctrl+Shift+A**.

## Hat

Represents use of a joystick. The ID field is optional and defaults to 0. The position value is required and represents the direction to which the hat switch is moved: up, right-up, right, right-down, down, left-down, left, left-up (when returned to the natural position).

For example:

```
{type="hat"; id=0; position="down"; action="next-item"}
```

### 11.12.6 Adding a New Input Device

The workflow to create a plug-in for a new device is:

1. Create a class derived from `DtInputDevice`.
2. To load the input device, register it at `initPlayerStationModule` via `app->inputDeviceFactory()->addCreator`.

3. To send input data to the input manager, create a `DtInputData` object and process it with `myManager->processInput`.

**i** There is no dependency between the device and input type. You can use any input type for the new device.

## Gamepads

A gamepad is a device similar to an Xbox game controller. It includes a D-pad, two analog sticks, four buttons on the right-hand side, shoulder buttons, and triggers.

Most gamepads have built-in mappings. For example, the 0 axis represents the left stick's X axis and A represents the bottom button of the four buttons on the right on all Xbox controllers, PlayStation controllers, and Logitech F310 Gamepads.

Most gamepad devices should be automatically recognized as such and have built-in input mappings, therefore they should work with VR-Engage without requiring any additional configuration.

The gamepad mappings for most devices are defined in `./data/simulationModelSets/VR-Engage/inputgamecontrollerdb.txt`. If a device is recognized as a joystick instead of a gamepad, you must add an entry for the device to the mapping file. The file is community-maintained at [https://github.com/gabomdq/SDL\\_GameControllerDB](https://github.com/gabomdq/SDL_GameControllerDB), which is frequently updated with new devices.

**i** When you enable verbose printing to the console, there should be console output (print statements) for all connected gamepads and joysticks. The joystick printout includes its GUID, which you need to add it to the mapping file.

### Creating a Unique Gamepad Mapping

You can map a specific gamepad differently than others. For example, you could have the axis and buttons activate different actions on the Logitech F310.

#### ► To create a unique gamepad mapping:

1. Open the `gamepad.lua` file for the relevant component, for example, `./data/simulationModelSets/VR-Engage/input/human/gamepad.lua`.
2. Clone the existing generic gamepad input device entry.
3. Add a `DeviceName="<name>"` field, where `<name>` is the name of your device. You can find the device name from the verbose console output (print statements) when you add the controller, or by searching for the GUID in `./data/simulationModelSets/VR-Engage/inputgamecontrollerdb.txt`.
4. Modify the mappings.

The resulting file should look similar to:

```
inputDevices = {
  {
    DeviceType="gamepad";
    MappingGroups={
      ...
    };
  };
  {
    DeviceType="gamepad";
    DeviceName="Logitech F310";
    MappingGroups={
      ...
    };
  }
}
```

Alternatively, you can put the new inputDevice object in a different *.lua* file and link to it from the component *.lua* file.

 Specific gamepad mappings completely override generic mappings. Ensure that you provide mappings for all actions you intend to support on a specific device.

## Joysticks

Unlike gamepads, the IDs for joystick inputs can refer to different things across different devices. Each joystick device can have a different entry.

### ► To add a joystick mapping:

1. Open the *joystick.lua* file for the relevant component. If one does not exist, or you would like to use a different file, create or open the file and make sure that it is linked from the component lua file, for example, *./data/simulationModelSets/VR-Engage/input/driverGunnerInput.lua*.
2. Create an *inputDevices* object where *DeviceType*="joystick" and *DeviceName* is the driver device name, for example, "Logitech G HUB G29 Driving Force Racing Wheel USB". You can find the appropriate name in the **Windows Control Panel > Hardware and Sound > Devices and Printers**.
3. Add the relevant *MappingGroups* and mappings.

The resulting file should look similar to:

```
inputDevices ={
{
  DeviceType="joystick";
  DeviceName="Logitech G HUB G29 Driving Force Racing Wheel USB"
  MappingGroups={
    {
      Group="driving";
      Mappings={
        ...
      };
    };
    {
      Group="engagement";
      Mappings={
        ...
      };
    };
  };
};
}
```

### 11.12.7 Player Controls State

Player controls are enabled when:

- No modal is open.
- The scenario is playing.
- The entity is engaged.

When player controls are disabled, only loaded mapping layers that are always enabled remain active. Currently this applies to `app` and `entity-control` groups.

#### Mapping Conflicts

If the same input is mapped to different actions within the same group, the last mapping defined in the file is used.

Mapping groups are loaded in layers, with each layer (the last one loaded in most cases) having priority over the ones on the bottom. If the same input is mapped to different actions between different groups, the one on the top layer counts, assuming the action is applicable (that is, it has an action handler when the input is made). For example, when opening the Action menu while engaged as a human, pressing "down" selects the next menu option instead of causing the human character to look down. This should be regarded when setting the priority of `ControlLogic` and `SimLogic` components in the role configuration files.

You can map multiple inputs to the same action.

Player controls are enabled when no modal is open, the scenario is playing, and the entity is engaged. (See `DtEngagedState::updatePlayerControlsState`).

When player controls are disabled, only loaded mapping layers that are always enabled remain active. Currently, this applies to the `app` and `entity-control` groups.

When players controls are disabled, mouse control is also turned off.

### Raw Input Handling

The action input menu and SAR image request require raw input. When active (logic-wise—a raw input handler is set), they have priority over all existing mappings.

The implication is that, for example, if the user pressed A on the gamepad, the input menu processes the input and any mapping of A to an action is ignored.

### Current Limitations

- Simultaneous activation of multiple inputs cannot be mapped to a single action, except when using keyboard modifiers.
- There is no distinction between left and right modifiers.
- Keyboard modifiers cannot be used with non-keyboard inputs. This means that you cannot map **Alt**+left click to a single action.
- If multiple joysticks or game controllers of the same type are connected, they must share the same mapping. You cannot have "X" activating "fire weapon" on the first connected Xbox controller and "reload" on the other.
- Non-standard keyboard keys, additional mouse buttons over the standard three, additional mouse wheels, and vertical scroll cannot be mapped.
- Controller touchpads and sensors are not supported.
- When the window is out of focus (even minimized/hidden), gamepad and joystick inputs continue to work. This does not apply to the mouse and keyboard.
- When mouse control is enabled and the Action menu is open, a user can select Action menu options with the mouse by moving the mouse fast enough. It is a bit difficult, depending on the window size, but can potentially happen by accident.

## 11.12.8 Component Mapping Groups

Table 31. Component mapping groups

| Component name              | Default config files           | Group name     | Loaded when            |
|-----------------------------|--------------------------------|----------------|------------------------|
| App/DtPlayerStationApp      | appInput.lua<br>(hardcoded)    | App            | Always                 |
| Common/DtMenu               | commonInput.lua<br>(hardcoded) | action-menu    | Action/debug menu open |
| Common/DtEntityControlLogic |                                | entity-control | Engaged                |
| Common/DtSavedViewUpdater   |                                | view           | Engaged                |

**Table 31. Component mapping groups (continued)**

| Component name                  | Default config files                     | Group name               | Loaded when                                   |
|---------------------------------|------------------------------------------|--------------------------|-----------------------------------------------|
| DtHumanInputLogic               | humanInput.lua                           | general                  | Engaged                                       |
|                                 |                                          | combat                   | Engaged                                       |
|                                 |                                          | binoculars               | Binoculars are used                           |
|                                 |                                          | parachuting              | Parachuting                                   |
|                                 |                                          | drone                    | Using deployed drone                          |
| DtCommanderControlLogic         | commanderInput.lua<br>lldrInput.lua      | general                  | Engaged                                       |
| DtDriverControlLogic            | driverInput.lua<br>driverGunnerInput.lua | driving                  | Engaged                                       |
| DtGunnerControlLogic            | gunnerInput.lua<br>driverGunnerInput.lua | engagement               | Engaged                                       |
|                                 |                                          | commander-rws            | Using commander override (Commander RWS role) |
| DtLaserTargetDesignatorSimLogic | lldrInput.lua                            | laser-target-designator  | Using LLDR                                    |
| DtPilotSimLogic                 | pilotInput.lua                           | fixed-wing               | Engaged fixed-wing                            |
|                                 |                                          | rotary-wing              | Engaged rotary-wing                           |
|                                 |                                          | extended-flight-controls | Engaged                                       |
|                                 |                                          | instruments              | Engaged                                       |
| DtSensorOperatorInputLogic      | sensorOperatorInput.lua                  | general                  | Engaged                                       |
| DtSpectatorSimLogic             | spectatorInput.lua                       | general                  | Engaged                                       |

### 11.12.9 List of Actions

Binary actions only take values of 0 and 1. Depending on the action, it can be triggered when on a press (1) or release (0). The former is most common. Binary continuous are actions that trigger a behavior that continues while the input is held and stops when it is released.

Axis actions are actions that can receive a value between -1 and 1. Axis- is -1 to 0, and Axis+ is 0 to 1.



Two-sided axis inputs, such as the joystick or gamepad axis and mouse motion, are less suited to binary actions because one side would be disabled and most would require strong movement to register as a binary output.

Key and button inputs can be mapped to different areas of axis actions using value transforms. For example, you could map a button to "yaw" (human) with an "invert" value transform and a scale of "0.5" to slowly turn left.

Table 32. Actions

| Group              | Action                  | Type                 | Notes                    |
|--------------------|-------------------------|----------------------|--------------------------|
| <b>action-menu</b> |                         |                      |                          |
|                    | close-menu              | Binary               |                          |
|                    | next-item               | Binary               |                          |
|                    | page-down               | Binary               |                          |
|                    | page-up                 | Binary               |                          |
|                    | previous-item           | Binary               |                          |
|                    | return                  | Binary               |                          |
|                    | select                  | Binary               |                          |
| <b>app</b>         |                         |                      |                          |
|                    | escape                  | Binary               |                          |
|                    | help                    | Binary               |                          |
|                    | resetView               | Binary               | Non-standard action name |
|                    | toggle-application-mode | Binary               |                          |
|                    | toggle-full-screen      | Binary               |                          |
|                    | user-guide              | Binary               |                          |
| <b>binoculars</b>  |                         |                      |                          |
|                    | zoom                    | Axis                 |                          |
|                    | zoom-in                 | Axis+                |                          |
|                    | zoom-out                | Axis-                |                          |
| <b>combat</b>      |                         |                      |                          |
|                    | aim                     | Binary<br>continuous |                          |
|                    | cycle-weapon-state      | Binary               |                          |
|                    | fire                    | Binary<br>continuous |                          |
|                    | next-weapon             | Binary               |                          |
|                    | reload                  | Binary               |                          |
|                    | select-weapon-1         | Binary               |                          |

Table 32. Actions (continued)

| Group                | Action                 | Type              | Notes                                                   |
|----------------------|------------------------|-------------------|---------------------------------------------------------|
|                      | select-weapon-2        | Binary            |                                                         |
|                      | select-weapon-3        | Binary            |                                                         |
|                      | select-weapon-4        | Binary            |                                                         |
|                      | select-weapon-5        | Binary            |                                                         |
|                      | select-weapon-6        | Binary            |                                                         |
|                      | select-weapon-7        | Binary            |                                                         |
|                      | select-weapon-8        | Binary            |                                                         |
|                      | select-weapon-9        | Binary            |                                                         |
|                      | select-weapon-10       | Binary            |                                                         |
|                      | toggle-weapon-down     | Binary            |                                                         |
|                      | toggle-weapon-stowed   | Binary            |                                                         |
|                      | weapon-cycle           | Binary            |                                                         |
| parachute            | parachute-left-toggle  | Binary            |                                                         |
|                      | parachute-right-toggle | Binary            |                                                         |
| <b>commander-rws</b> |                        |                   |                                                         |
|                      | commander-override     | Binary            |                                                         |
|                      | slew-to-cue            | Binary            |                                                         |
| <b>driving</b>       |                        |                   |                                                         |
|                      | brake                  | Binary continuous |                                                         |
|                      | differential-lock      | Binary            | Only enabled when <code>hasDifferentialLock=true</code> |
|                      | engine-enable          | Binary            |                                                         |
|                      | gear-down              | Binary            |                                                         |
|                      | gear-up                | Binary            |                                                         |
|                      | headlights             | Binary            |                                                         |
|                      | parking-brake          | Binary            |                                                         |
|                      | pivot                  | Binary            | Only enabled when <code>canPivot=true</code>            |
|                      | steering               | Axis              |                                                         |
|                      | steer-left             | Axis-             |                                                         |

Table 32. Actions (continued)

| Group             | Action                      | Type                 | Notes |
|-------------------|-----------------------------|----------------------|-------|
|                   | steer-right                 | Axis+                |       |
|                   | throttle                    | Axis+                |       |
| <b>drone</b>      |                             |                      |       |
|                   | camera-elevation            | Binary<br>continuous |       |
|                   | capture-image               | Binary               |       |
|                   | drone-collective            | Axis                 |       |
|                   | drone-pedal                 | Axis                 |       |
|                   | drone-pitch                 | Axis                 |       |
|                   | drone-roll                  | Axis                 |       |
|                   | drone-wheel-brake           | Binary               |       |
|                   | toggle-focus-on-drone       | Binary               |       |
|                   | toggle-pid-menu             | Binary               |       |
|                   | toggle-remote-view-viewport | Binary               |       |
| <b>engagement</b> |                             |                      |       |
|                   | commander-override          | Binary               |       |
|                   | fire                        | Binary<br>continuous |       |
|                   | next-sensor                 | Binary               |       |
|                   | next-weapon                 | Binary               |       |
|                   | previous-weapon             | Binary               |       |
|                   | slew-to-cue                 | Binary               |       |
|                   | turret-elevation            | Axis                 |       |
|                   | turret-azimuth              | Axis                 |       |
|                   | turret-down                 | Axis-                |       |
|                   | turret-left                 | Axis-                |       |
|                   | turret-right                | Axis+                |       |
|                   | turret-up                   | Axis+                |       |
|                   | zoom                        | Axis                 |       |
|                   | zoom-in                     | Axis+                |       |
|                   | zoom-out                    | Axis-                |       |

Table 32. Actions (continued)

| Group                    | Action                  | Type                 | Notes                                                                      |
|--------------------------|-------------------------|----------------------|----------------------------------------------------------------------------|
| entity-control           |                         |                      |                                                                            |
|                          | toggle-action-menu      | Binary               |                                                                            |
|                          | toggle-debug-menu       | Binary               |                                                                            |
|                          | reset-vr-head-position  | Binary               |                                                                            |
|                          | reset                   | Binary               |                                                                            |
|                          | reset-in-place          | Binary               |                                                                            |
|                          | push-to-talk            | Binary<br>continuous |                                                                            |
|                          | toggle-mouse-control    | Binary               | Only when "mouseControlSupport" is true and the player is not a spectator. |
|                          | enable-mouse-control    | Binary               |                                                                            |
| extended-flight-controls |                         |                      |                                                                            |
|                          | autopilot-mode-1        | Binary               |                                                                            |
|                          | autopilot-mode-2        | Binary               |                                                                            |
|                          | autopilot-toggle        | Binary               |                                                                            |
|                          | cycle-weapon            | Binary               |                                                                            |
|                          | flap1                   | Binary               |                                                                            |
|                          | flap2                   | Binary               |                                                                            |
|                          | flap-toggle             | Binary               |                                                                            |
|                          | launch-chaff            | Binary               |                                                                            |
|                          | launch-flares           | Binary               |                                                                            |
|                          | nose-wheel-steering     | Binary<br>continuous |                                                                            |
|                          | replenish-fuel-and-ammo | Binary               |                                                                            |
|                          | suppress-warnings       | Binary               |                                                                            |
|                          | toggle-ar-camera-menu   | Binary               |                                                                            |
|                          | toggle-countermeasures  | Binary               |                                                                            |
|                          | toggle-landing-gear     | Binary               |                                                                            |

Table 32. Actions (continued)

| Group                      | Action                      | Type                 | Notes                 |
|----------------------------|-----------------------------|----------------------|-----------------------|
|                            | toggle-observer-attach-mode | Binary               |                       |
|                            | trigger                     | Binary<br>continuous |                       |
| <b>fixed-wing</b>          |                             |                      |                       |
|                            | air-brake                   | Axis                 | RT Dynamics only      |
|                            | flap-state                  | Axis                 | RT Dynamics only      |
|                            | landing-gear                | Axis                 | RT Dynamics only      |
|                            | pedal                       | Axis                 |                       |
|                            | pitch                       | Axis                 |                       |
|                            | roll                        | Axis                 |                       |
|                            | throttle                    | Axis                 |                       |
|                            | wheel-brake                 | Axis                 | RT Dynamics only      |
| <b>general (commander)</b> |                             |                      |                       |
|                            | sensor-azimuth              | Axis                 |                       |
|                            | sensor-elevation            | Axis                 |                       |
|                            | sensor-zoom-in              | Axis+                |                       |
|                            | sensor-zoom-in              | Axis                 |                       |
|                            | sensor-zoom-out             | Axis-                |                       |
| <b>general (human)</b>     |                             |                      |                       |
|                            | first-person-mode           | Binary               |                       |
|                            | free-look                   | Binary<br>continuous |                       |
|                            | minimap-cycle               | Binary               |                       |
|                            | minimap-reset-zoom          | Binary               |                       |
|                            | minimap-zoom-in             | Axis+                |                       |
|                            | minimap-zoom-out            | Axis-                |                       |
|                            | mouse-pitch                 | Axis                 | Mouse only            |
|                            | mouse-yaw                   | Axis                 | Mouse only            |
|                            | move                        | Axis                 |                       |
|                            | move-backward               | Axis-                |                       |
|                            | move-forward                | Axis+                |                       |
|                            | parachute-deploy            | Binary               | Loads parachute group |

Table 32. Actions (continued)

| Group                            | Action                | Type                 | Notes |
|----------------------------------|-----------------------|----------------------|-------|
|                                  | pitch                 | Axis                 |       |
|                                  | pitch-down            | Axis-                |       |
|                                  | pitch-up              | Axis+                |       |
|                                  | posture-down          | Binary               |       |
|                                  | posture-prone         | Binary               |       |
|                                  | posture-select        | Binary               |       |
|                                  | posture-stand         | Binary               |       |
|                                  | posture-up            | Binary               |       |
|                                  | sprint                | Binary<br>continuous |       |
|                                  | strafe                | Axis                 |       |
|                                  | strafe-left           | Axis-                |       |
|                                  | strafe-right          | Axis+                |       |
|                                  | third-person-mode     | Binary               |       |
|                                  | toggle-ar-camera-menu | Binary               |       |
|                                  | toggle-binoculars     | Binary               |       |
|                                  | toggle-compass        | Binary               |       |
|                                  | toggle-compass-units  | Binary               |       |
|                                  | toggle-flashlight     | Binary               |       |
|                                  | toggle-nvg            | Binary               |       |
|                                  | toggle-view-mode      | Binary               |       |
|                                  | walk                  | Binary<br>continuous |       |
|                                  | yaw                   | Axis                 |       |
|                                  | yaw-left              | Axis-                |       |
|                                  | yaw-right             | Axis+                |       |
| <b>general (sensor operator)</b> |                       |                      |       |
|                                  | capture-image         | Binary               |       |
|                                  | cycle-sensor          | Binary               |       |
|                                  | cycle-weapon          | Binary               |       |
|                                  | fire-weapon           | Binary<br>continuous |       |
|                                  | sensor-azimuth        | Axis                 |       |

Table 32. Actions (continued)

| Group              | Action                 | Type   | Notes |
|--------------------|------------------------|--------|-------|
|                    | sensor-elevation       | Axis   |       |
|                    | sensor-reset           | Binary |       |
|                    | sensor-track-location  | Binary |       |
|                    | sensor-track-object    | Binary |       |
|                    | sensor-zoom            | Axis   |       |
| <b>instruments</b> |                        |        |       |
|                    | clear-targets          | Binary |       |
|                    | cop-cursor-x           | Axis   |       |
|                    | cop-cursor-y           | Axis   |       |
|                    | cycle-targets-backward | Binary |       |
|                    | cycle-targets-forward  | Binary |       |
|                    | dms-down               | Binary |       |
|                    | dms-left               | Binary |       |
|                    | dms-right              | Binary |       |
|                    | dms-up                 | Binary |       |
|                    | radar-cursor-deselect  | Binary |       |
|                    | radar-cursor-down      | Axis-  |       |
|                    | radar-cursor-left      | Axis-  |       |
|                    | radar-cursor-right     | Axis+  |       |
|                    | radar-cursor-select    | Binary |       |
|                    | radar-cursor-up        | Axis+  |       |
|                    | radar-cursor-x         | Axis   |       |
|                    | radar-cursor-y         | Axis   |       |
|                    | sar-request            | Binary |       |
|                    | sensor-azimuth         | Axis   |       |
|                    | sensor-cycle           | Binary |       |
|                    | sensor-elevation       | Axis   |       |
|                    | sensor-reset           | Binary |       |
|                    | sensor-track-location  | Binary |       |

Table 32. Actions (continued)

| Group                          | Action                 | Type              | Notes                |
|--------------------------------|------------------------|-------------------|----------------------|
|                                | sensor-track-object    | Binary            |                      |
|                                | sensor-zoom            | Axis              |                      |
|                                | toggle-rwr-sounds      | Binary            |                      |
| <b>laser-target-designator</b> |                        |                   |                      |
|                                | press-and-hold-to-lase | Binary continuous |                      |
|                                | toggle-laser           | Binary            |                      |
| <b>rotary-wing</b>             |                        |                   |                      |
|                                | collective             | Axis              |                      |
|                                | pedal                  | Axis              | RT Dynamics only     |
|                                | pitch                  | Axis              |                      |
|                                | roll                   | Axis              |                      |
|                                | wheel-brake            | Axis              | RT Dynamics only     |
|                                | yaw                    | Axis              | non-RT Dynamics only |
| <b>spectator</b>               |                        |                   |                      |
|                                | azimuth                | Axis              |                      |
|                                | elevation              | Axis              |                      |
|                                | reset-view             | Binary            |                      |
|                                | zoom                   | Axis              |                      |
|                                | zoom-in                | Axis+             |                      |
|                                | zoom-out               | Axis-             |                      |
| <b>view</b>                    |                        |                   |                      |
|                                | next-view              | Binary            |                      |
|                                | previous-view          | Binary            |                      |
|                                | view-1                 | Binary            |                      |
|                                | view-2                 | Binary            |                      |
|                                | view-3                 | Binary            |                      |
|                                | view-4                 | Binary            |                      |
|                                | view-5                 | Binary            |                      |
|                                | view-6                 | Binary            |                      |
|                                | view-7                 | Binary            |                      |
|                                | view-8                 | Binary            |                      |
|                                | view-9                 | Binary            |                      |
|                                | view-10                | Binary            |                      |





## 12. Controllable Entities

This chapter lists the VR-Forces entity types that are controllable from VR-Engage out of the box. The VR-Engage SMS includes these entities in VR-Forces that you can control from VR-Engage if you are running a VR-Forces scenario built with the VR-Engage SMS. Each entity lists the roles that are available for that entity.

You can configure other entities to be controllable, as described in "Chapter 13. Adding and Editing VR-Engage Entity Models" on page 295.

|                                  |     |
|----------------------------------|-----|
| 12.1. Human Characters .....     | 256 |
| 12.2. Ground Vehicles .....      | 276 |
| 12.3. Fixed-Wing Aircraft .....  | 286 |
| 12.4. Rotary-Wing Aircraft ..... | 290 |
| 12.5. Other Entities .....       | 292 |

## 12.1. Human Characters

- Afghan Police Officer: Human Player



- Afghan Soldier: Human Player



- African Insurgent: Human Player



- Agent M9: Human Player



- Australian Soldier EF88: Human Player



- Australian Soldier XM107: Human Player



- Brazilian Soldier: Human Player



- Chilean M16: Human Player



- Chilean M16-M203: Human Player



- Chilean M4: Human Player



- Civilian Female With Drone: Human Player



- Civilian Male With Drone: Human Player



- Colombian Police Officer: Human Player



- Colombian Soldier: Human Player





- DI AK-47: Human Player



- DI Lasing (CIS): Human Player



- DI Lasing (US): Human Player



- Farmer M9: Human Player



- Insurgent: Human Player



- Insurgent M9: Human Player





- Iranian Soldier: Human Player



- Iraqi Police Officer: Human Player



- Iraqi Soldier: Human Player



- ISIS Fighter: Human Player



- Israeli Soldier: Human Player



- Israeli Soldier M4: Human Player



- Kurdish Fighter: Human Player



- Libyan Police Officer: Human Player



- Libyan Soldier: Human Player



- Mideast Combatant: Human Player



- Pakistani Police Officer: Human Player



- Pakistani Soldier: Human Player



- Paratrooper: Human Player



- Paratrooper M9: Human Player



- Police Officer With Drone: Human Player






- Policeman M9: Human Player



- Russian Rebels: Human Player



- Security Guard M9: Human Player

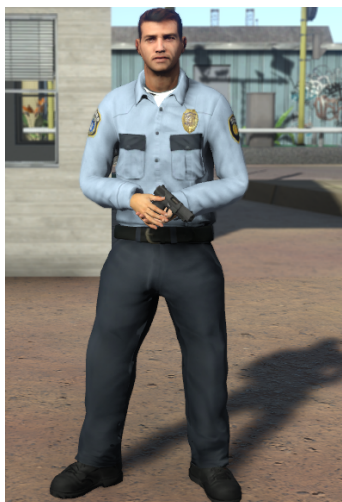

- Singaporean Soldier: Human Player



- Somali Police Officer: Human Player



- Somali Soldier: Human Player



- Sudanese Police Officer: Human Player



- Sudanese Soldier: Human Player



- Suspect: Human Player





- Suspect M9: Human Player



- Syrian Police Officer: Human Player



- Syrian Soldier: Human Player



- Taliban: Human Player



- Ugandan Police Officer: Human Player



- Ugandan Soldier: Human Player



- US Army Javelin: Human Player



- US Army Javelin (Tripod): Human Player



- US Army M16: Human Player



- US Army M16-M203: Human Player



- US Army M4: Human Player



- US Army M9: Human Player



- US Border Patrol M9: Human Player



- USMC M16: Human Player



- USMC M16-M203: Human Player





- USMC M4: Human Player



## 12.2. Ground Vehicles

- Ambulance: Driver



- Amphibious Combat Vehicle (ACV): Driver, Gunner



- ASLAV-25: Driver, Gunner, Commander Hatch



- Bushmaster PMV: Driver



- Fiat 124: Driver



- FV 510 Warrior: Driver, Gunner, Commander Hatch





- FV4034 Challenger 2 MBT: Driver, Gunner, Commander Hatch, Machine Gun



- GTK Boxer APC: Driver, Gunner, Driver/Gunner



- GTK Boxer CRV: Driver, Gunner, Driver/Gunner, Commander



- HMMWV Utility Vehicle: Driver





- LAV III APC: Driver, Gunner, Driver/Gunner, Commander



- M1083 MTV Canvas Cargo Truck: Driver



- M1083 MTV Canvas Cargo Truck w/ trailer: Driver



- M1120A4 HEMTT LHS: Driver



- M1126 Stryker ICV with M2: Driver, Gunner



- M113 APC: Driver



- M1151 ECAC with M240: Driver, Gunner



- M1151 ECAC with M240B: Driver, Gunner





- M1151 Expanded Capacity Armament Carrier (ECAC): Driver



- M1151 HMMWV ECAC with M2: Driver, Gunner



- M1151 HMMWV ECAC with MK 19: Driver, Gunner



- M1278 L-ATV-GP (JLTV): Driver, Gunner



- M1A1 AIM (AUS): Driver, Gunner, Driver/Gunner, Commander, Commander Hatch, Machine Gun



- M1A1 AIM (AUS) Mineplow: Driver, Gunner, Driver/Gunner, Commander Hatch



- M1A1 SA: Driver, Gunner, Driver/Gunner, Commander, Commander Hatch, Machine Gun





- M1A2 Abrams MBT: Driver, Gunner, Driver/Gunner, Commander Hatch, Machine Gun



- M1A2 SEP Abrams: Driver, Gunner, Driver/Gunner, Commander Hatch, Machine Gun



- M270 MLRS: Driver



- M2A3 Bradley IFV: Driver, Gunner, Commander



- M915 Tractor Truck: Driver



- M977 HEMTT Cargo Truck: Driver



- M983 HEMTT Patriot Tractor: Driver



- MRAP M-ATV: Driver, Gunner





- Police Cruiser: Driver



- Sport Hatchback Coupe: Driver



- Sport Standard Size Sedan: Driver



- Standard MidSize Sedan: Driver



- Technical Truck: Driver, Gunner



- Ural 4320: Driver



## 12.3. Fixed-Wing Aircraft

- Beechcraft MC-12: Pilot, Sensor Operator





- Eurofighter Typhoon: Pilot, Sensor Operator



- F/A-18 Hornet: Pilot, Sensor Operator



- F-16A Fighting Falcon: Pilot, Sensor Operator



- F-35A Lightning II: Pilot, Sensor Operator



- F-35B Lightning II: Pilot, Sensor Operator



- F-35C Lightning II: Pilot, Sensor Operator




- MiG-29 Fulcrum: Pilot, Sensor Operator




- MQ-9 Reaper UAV: Sensor Operator



- RQ-11 Raven UAV: Sensor Operator

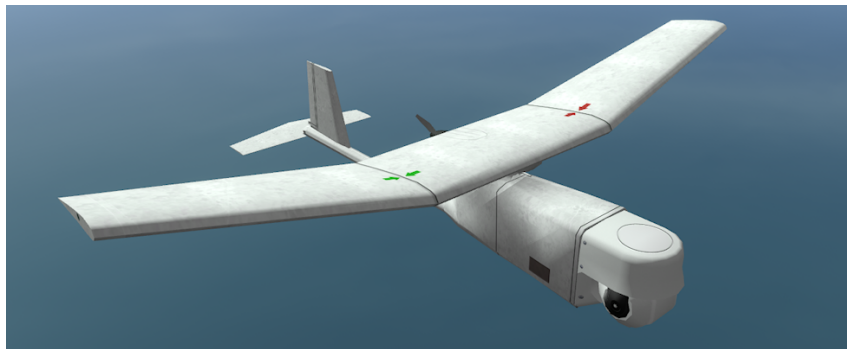


- RQ-4 Global Hawk UAV: Sensor Operator

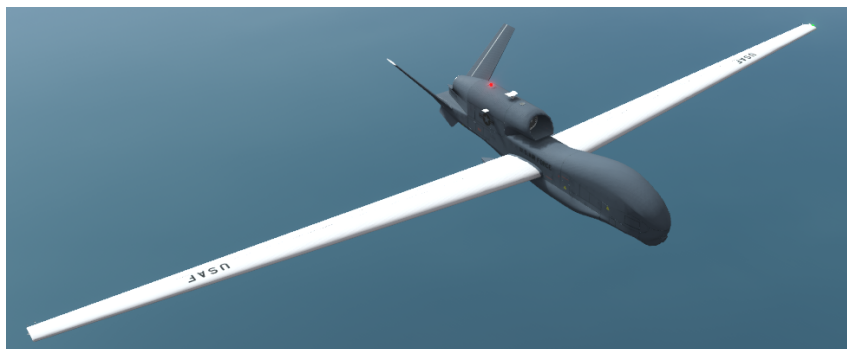

- RQ-7 Shadow UAV: Sensor Operator



- ScanEagle UAV: Sensor Operator

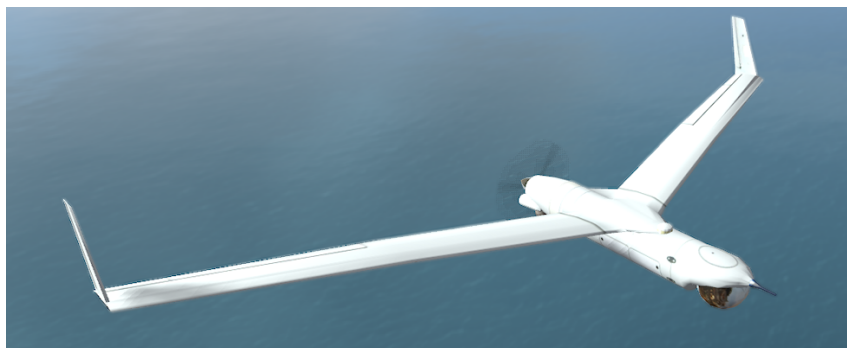

- T-38C Talon: Pilot, Sensor Operator



## 12.4. Rotary-Wing Aircraft

- AH-64D Apache Longbow: Pilot, Sensor Operator



- AH-64E Apache Guardian with FCR: Pilot, Sensor Operator



- CH-149 Cormorant: Pilot, Sensor Operator



- CH-47 Chinook: Pilot, Sling Load Operator



- MH-60 Black Hawk: Pilot, Sensor Operator



- MQ-8B Fire Scout: Sensor Operator





- UH-60M Blackhawk: Pilot




## 12.5. Other Entities


- AN/PED-1 LLDR: Operator Lasing



- Remote Camera: Sensor Operator

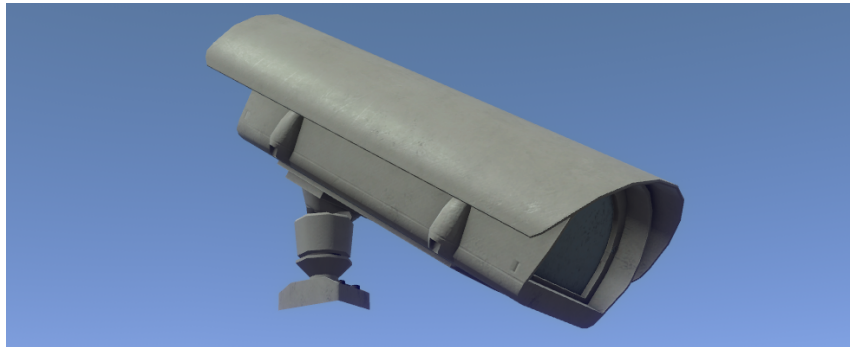

- Security Camera: Sensor Operator

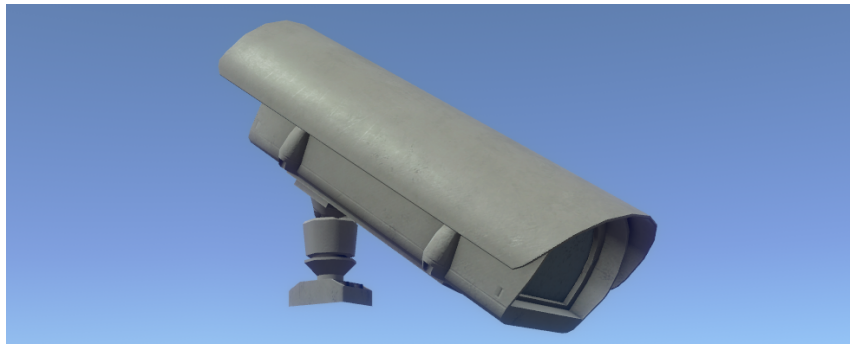



## III. Configuration and Scenario Creation

MAK ONE applications allow you to add and customize models and overlays for VR-Engage as required. You can also create VR-Forces scenarios for players to engage with and add VR-Forces scripts to player menus.







## 13. Adding and Editing VR-Engage Entity Models

This chapter explains how to edit the VR-Engage simulation model set to add or edit models that you can control from VR-Engage. You can also read "Chapter 14. Model Customization Tutorial" on page 307 for an example.

|                                                           |     |
|-----------------------------------------------------------|-----|
| 13.1. The VR-Engage Simulation Model Set .....            | 296 |
| 13.2. Ground Vehicles and Vortex .....                    | 296 |
| 13.3. Extend the VR-Engage SMS .....                      | 298 |
| 13.3.1 Creating a New Simulation Model Set .....          | 298 |
| 13.3.2 Creating a New VR-Engage-Controllable Entity ..... | 299 |
| 13.3.3 Editing a VR-Engage-Controllable Entity .....      | 300 |
| 13.3.4 Deploying the SMS to VR-Engage .....               | 300 |
| 13.4. VR-Engage Extensions to .entity Files .....         | 301 |
| 13.4.1 Structure of Role Data in .entity Files .....      | 301 |
| 13.4.2 The vrEngageRoles and role Entries .....           | 301 |
| 13.4.3 The parameterOverride Entry .....                  | 303 |
| 13.4.4 Role-Slot Association .....                        | 304 |
| 13.4.5 Roles Included with VR-Engage .....                | 304 |

## 13.1. The VR-Engage Simulation Model Set

The entity models that VR-Engage simulates are defined in a set of files called a simulation model set (SMS). VR-Engage includes an SMS called *VR-Engage.sms*. The example scenarios included with VR-Engage all use this SMS. If you create an unhosted session, the list of entities available to you is drawn from *VR-Engage.sms*. If you install the VR-Forces Add-on package, *VR-Engage.sms* is installed into VR-Forces.

*VR-Engage.sms* includes all of the simulation objects in the default VR-Forces SMS, *EntityLevel.sms*. A subset of human, ground, and air entities are modified so that they can be controlled by a VR-Engage player. When you create a scenario in VR-Forces for use with VR-Engage, you can use any of the simulation objects in the SMS. The extended *VR-Engage.sms* entities function in the scenario as they normally would (that is, as they do in *EntityLevel.sms*) when they are controlled by VR-Forces. However they can also be controlled at any time by a VR-Engage user.

VR-Engage ships with a set of entities that you can control, listed in "Chapter 12. Controllable Entities" on page 255. You can edit the entity models in *VR-Engage.sms* and add new ones. You add and edit models using the VR-Forces Simulation Object Editor, an application included with VR-Forces. You can then use your SMS in scenarios that you create with VR-Forces, as described in "Chapter 15. Creating VR-Engage Scenarios in VR-Forces" on page 317. If you do not have VR-Forces, contact your MAK Technologies salesperson for information about obtaining VR-Forces.

**i** This chapter assumes that you understand the concepts of SMSs and how to use the Simulation Object Editor. For details, please see the relevant chapters in Section XII, "Creating and Editing Simulation Models," in the *VR-Forces Users Guide*.

## 13.2. Ground Vehicles and Vortex

VR-Engage uses the Vortex product from CM Labs to implement high-fidelity vehicle dynamics for ground vehicles when they are controlled by players. When a VR-Engage player station takes control of (engages with) a vehicle in a VR-Forces scenario, the simulation model on the simulation engine automatically switches from the standard VR-Forces CGF movement system to one that relies on Vortex. Different entity types can be configured to use different Vortex dynamics models, which are called "mechanisms".

VR-Engage includes a limited number of unique Vortex mechanisms to represent the basic types of vehicles (civilian car, truck, tank, IFV, and so on). Various specific vehicle types in the default SMS (*VR-Engage.sms*) are configured to use whichever of those generic mechanisms is the closest match. This is often sufficient for applications that use VR-Engage as a role player station. If you are using VR-Engage as the basis for a true driving trainer, this typically requires a vehicle-specific mechanism that accurately represents your vehicle's correct geometry and mechanical properties.

Editing or authoring custom Vortex mechanisms for use with VR-Engage requires the Vortex Studio editor, which is a separate product that is available directly from CM Labs. Please contact MAK ([sales@mak.com](mailto:sales@mak.com) or your account representative) if you have questions about obtaining Vortex Studio.

There are several steps required to author a custom Vortex mechanism and configure a VR-Engage entity type to use it:

1. Use the Vortex editor to author the Vortex mechanism. If you want to start with one of the generic Vortex mechanisms that are shipped with VR-Engage, they can be found in `./data/Vortex/mechanisms`. The Vortex Studio documentation describes the process for editing or authoring mechanisms, but the process includes the ability to import your 3D visual model so that you can configure your Vortex mechanism to perfectly match its collision geometry.
2. Configure a VR-Engage movement "system" to use your custom Vortex mechanism. VR-Engage's human readable "system" files are in `./data/simulationModelSets/VR-Engage/vrfSim/systems`. A system's reference to a specific Vortex mechanism looks like this:

```
(vortex-mechanism-filename "$(DATA_DIR)\\Vortex\\mechanisms\\
    technicalTruck\\Dynamic\\Design\\Truck.vxmmechanism")
```

Change the reference to point to your desired mechanism. Besides configuring a system to use the correct Vortex mechanism, you can also edit the *sysdef* file to map named parts of the Vortex mechanism to DIS/HLA articulated part and parameter numbers, and to map VR-Engage inputs to Vortex inputs.

3. Use the Simulation Object Editor, included with VR-Forces, to ensure that your entity type is configured to use the movement system that you edited.
4. Finally, in order for your custom mechanisms to run in VR-Engage without requiring a Vortex runtime license, use the Vortex signing tool to sign your content. Run `./bin64/vortex/tools/VortexSigningTool.exe`, then drag and drop the files you want to sign into the tool. You must sign the mechanisms again each time you edit them.

Because the standard VR-Forces CGF movement system for a ground vehicle is replaced by a higher-fidelity Vortex-based movement system when an entity is player-controlled, certain parameters that you can see and edit in the SOE do not apply when the entity is player-controlled. For example, when the CGF movement system is active, the dimensions of the entity's bounding box dictate when an entity collides with a wall or other obstacle. But when an entity is player-controlled in VR-Engage, the simple bounding box parameters are ignored when computing ownship collisions. Instead, the Vortex-based model computes collisions based on higher-fidelity geometry information that is configured in the Vortex mechanism – including wheel sizes and locations, as well as runtime knowledge about the positions of any articulated parts, shock absorber compressions, gear ratios, automatic transmission parameters, and so on. However, the bounding box dimensions are still used for purposes other than ownship collisions, for example, they are still used by VR-Forces to compute whether the VR-Engage-controlled entity blocks line of sight between VR-Forces CGF entities, or whether a VR-Forces entity's path is blocked by the VR-Engage controlled entity. Therefore, it is important to accurately configure the CGF bounding box information in the SOE even for entities types that are usually player-controlled.

Contact MAK support to learn more about authoring and configuring vehicle-specific Vortex mechanisms for use in VR-Engage: <https://www.mak.com/support>.

**i** When you place a VR-Engage controllable ground vehicle in a VR-Forces scenario, the default is that Vortex is not enabled until the entity is tasked or engaged by a player. You can change this if necessary; see "15.2.1 Vortex While Untasked" on page 320.

## 13.3. Extend the VR-Engage SMS

You may want to edit simulation models or add new ones when you need to:

- Create an entity similar to an existing one (for example, a new type of car or aircraft).
- Change the performance characteristics of an existing entity.
- Replace the 3D model associated with an entity.
- Replace or modify the first person model.

The first three modifications can typically be done using the Simulation Object Editor. Replacing or changing the first person model requires different tools and a different skill set. Contact MAK Technologies at <https://www.mak.com/support> for more information about changing the first person model.

The best practice is to leave the original VR-Engage SMS unmodified and create an extended one. It makes maintaining your changes easier in future version and makes it less likely that you will inadvertently modify an existing entity or behavior.

The overall approach to extending *VR-Engage.sms* is:

1. Create a new SMS that includes *VR-Engage.sms*.
2. Make the desired changes to the SMS.
3. Copy the new SMS to your VR-Engage installation.
4. Configure VR-Engage to use the new SMS by default when starting an unhosted session or creating a new scenario in a hosted session.

**i** This chapter covers some of the basics of working in the SMS, and also a tutorial. For more details, such as how to change the 3D model, refer to the *VR-Forces Users Guide*.

### 13.3.1 Creating a New Simulation Model Set

If you want to modify or extend the VR-Engage simulation model set, we recommend that you create a new simulation model set that includes *VR-Engage.sms*. This makes the differences between your customizations and the installed SMS clear. It also makes it easier to revert to the installed SMS if your new SMS has problems.

For information about other ways to create an SMS, please see the *VR-Forces Users Guide*.

► **To create a new simulation model set:**

1. Open the Simulation Object Editor.

2. Choose **File > New Simulation Model Set**. The New Simulation Model Set dialog box opens.
3. Select New Simulation Model Set.
4. Click Next. The Simulation Model Set Type page displays.
5. Select Extend Existing Simulation Model Set.
6. Click Next. The Extend Existing Simulation Model Set page displays.
7. Select *VR-Engage.sms*.
8. Click Next. The New Model Set Name page displays.
9. In the File Name box, enter a name for the new model set.
10. Click Finish. The Simulation Object Editor loads systems information from the included model sets and displays the new SMS. This can take a few minutes.

Since all of the simulation objects are included from other SMSs, none of them are currently editable. They are listed in the Objects List using gray text.
11. Choose **File > Save Simulation Model Set**.

### 13.3.2 Creating a New VR-Engage-Controllable Entity

The recommended way to create a new entity that can be controlled by a VR-Engage player is to base it on an existing entity of the type you want to create. To control an entity in VR-Engage, it must be one of the entities that was included from *VR-Engage.sms*. Entities that are included from *EntityLevel.sms* cannot be controlled from VR-Engage.

When creating a new entity based on an existing one, you can either Inherit or Copy. If you choose Copy, there is no connection to the original entity. Any changes to the original will not affect your new entity. If you choose Inherit, there is a parent-child relationship between your entity and the original. Use Inherit if your model is similar to the parent because it is easier when you upgrade the SMS for the next software version if there are changes to the parent model. Use Copy only when you intend to change everything about the new entity: model, systems, embarkation, and so on.

► **To create a new entity that can be controlled by a VR-Engage player:**

1. In the Simulation Object Editor, load your new SMS.
2. In the Tags list, select VR-Engage. The Objects List is filtered to show only models that are included from *VR-Engage.sms*.
3. Select an entity similar to the one you want to create. (A yellow bar is added to the window. It displays the SMS where the selected entity is originally included.)
4. Choose **Model > New Model from Existing (Inherit)** (or **(Copy)**). The Create New Model dialog box opens.
5. Enter a name for the new model.
6. Optionally, edit the Entity Type.
7. Click OK.

8. Edit the new entity.
9. Save the SMS.

### 13.3.3 Editing a VR-Engage-Controllable Entity

You can only edit models that are part of the loaded SMS. You cannot edit models that are included from another SMS. Therefore, if you want to edit one of the models included from *VR-Engage.sms*, you must promote it to your SMS. (You can always edit any of the models you created using the procedure in "13.3.2 Creating a New VR-Engage-Controllable Entity" on the previous page.)

1. In the Simulation Object Editor, load your SMS.
2. In the Tags list, select VR-Engage. The Objects List is filtered to show only models that are included from *VR-Engage.sms*.
3. Select the entity you want to edit. If the entity is not part of the main SMS, a yellow bar is added to the window. It displays the SMS where the selected entity is currently included.
4. If the entity is not part of the main SMS, choose **Model > Promote to Main Simulation Model Set** or click the Promote button in the yellow bar. The model is promoted. It is now shown in dark text at the top of the Objects List.
5. Edit the model as desired.
6. Save the SMS.

### 13.3.4 Deploying the SMS to VR-Engage

After you create the new SMS, you must copy it to VR-Engage. This allows you to run scenarios that were created in VR-Forces using the new SMS. You can also specify that the new SMS be used by default when you create an unhosted session or create a new scenario in a hosted session in VR-Engage.

1. Copy the SMS file and associated data folder to your VR-Engage installation, preserving the path. The path to your SMS will look similar to:  
`./data/simulationModelSets/<your SMS name>.sms`  
`./data/simulationModelSets/<your SMS name>`
2. Configure VR-Engage to use the new SMS by default:
  - a. In a text editor, open `./appData/scripts/playerStation.lua`.
  - b. Set the variable **defaultSimulationModelSets** to point to your new SMS, for example:

```
-- Default simulation model set(s) to use when launching
the simulation engine.
-- Specify list of SMSs separated by commas.
defaultSimulationModelSets = {
    "$(DATA_DIR)/simulationModelSets/myVR-Engage.sms"
};
```

## 13.4. VR-Engage Extensions to *.entity* Files

### 13.4.1 Structure of Role Data in *.entity* Files

Roles are defined in Lua role definition files and VR-Engage includes a number of role configuration files, which are listed in Table 35 on page 306. Those roles are then referenced in *.entity* files in the `vrEngageRoles` entry, which is placed near the end of the *.entity* file before the `</simObject>` close tag.

```
<simObjects>
  <simObject>
    ...
    <vrEngageRoles>
      <role> ... </role>
      <role> ... </role>
    </vrEngageRoles>
  </simObject>
</simObjects>
```

### 13.4.2 The `vrEngageRoles` and `role` Entries

The `<vrEngageRoles>` entry in *.entity* files contains a list of one or more `<role>` entry for the entity. The `<role>` entry has two required parameters: `paramName` and `defaultDisplayLayout`. There are other, optional parameters.

```
<role paramName="Driver" slotName="Driver" unlisted="false"
defaultDisplayLayout="1 Screen Horizontal">@(DATA_
DIR)\simulationModelSets\VR-Engage\roles\<role file>.lua
  <parameterOverride> ... </parameterOverride>
  ...
  <parameterOverride> ... </parameterOverride>
</role>
```

Table 33. role parameters

| Type      | Name                 | Default                | Required | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|-----------|----------------------|------------------------|----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Attribute | defaultDisplayLayout | 1 Screen<br>Horizontal | Yes      | The default visual layout for this entity when in that role. A role can include one or more display layouts, depending on the hardware and visual appearance desired. You can refer to an existing role file for the list of available layouts. The role definition file must include at least one display layout set for the default. All roles included in VR-Engage have a "1 Screen Horizontal" layout, at the minimum. Each role file includes the <code>displayLayouts</code> section at the top. That section defines the components and parameters needed to control the viewpoint and any HUD overlays. |
| Attribute | paramName            |                        | Yes      | Name of the role as it will display in the Choose Role panel's Role list.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Element   | parameterOverride    |                        | No       | You can specify zero or more <code>parameterOverride</code> child elements. A <code>parameterOverride</code> contains Lua code snippets to override specific table elements in the role configuration file.                                                                                                                                                                                                                                                                                                                                                                                                      |



Table 33. role parameters (continued)

| Type            | Name     | Default | Required | Description                                                                                                                                                                                                                                                                                                                                                                            |
|-----------------|----------|---------|----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Element<br>Text |          |         | Yes      | Path to the Lua script that defines the role configuration.                                                                                                                                                                                                                                                                                                                            |
| Attribute       | slotName |         | No       | Name of the Embarkation Slot associated with this role. This role is automatically engaged when the player's entity is embarked in this slot. If this attribute is not provided, this role will not be accessible via embarkation and can only be engaged from the Choose Role panel. For more information about roles and slots, see "13.4.4 Role-Slot Association" on the next page. |
| Attribute       | unlisted | false   | No       | Boolean indicating whether the role should be available for selection in the Choose Role panel.                                                                                                                                                                                                                                                                                        |

### 13.4.3 The parameterOverride Entry

You can override any parameters from the role configuration file using overrides in the *.entity* file. This allows you to use a single role configuration file in multiple entities with entity-specific customizations made in the appropriate *.entity* files. The parameters you can override are the entries in the role's Lua `components` table. The syntax for the overrides is: `<parameterOverride paramName="key in components table.lua table entry">value</parameterOverride>`. For example:

```
<parameterOverride paramName="savedViewUpdater.initialView">"4 -
Driver View"</parameterOverride>
```

Table 34. parameterOverride parameters

| Type            | Name      | Default | Required | Description                                                                                                                                                                                                                                       |
|-----------------|-----------|---------|----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Attribute       | paramName |         | Yes      | Name of a Lua component table item to override in the role file. The format of this string is <componentName>.<Lua table entry>. In the above example, the initialView table member of the savedViewUpdater component is the item being replaced. |
| Element<br>Text |           |         | Yes      | A Lua code snippet to replace the corresponding entry in the role configuration file.                                                                                                                                                             |

 For an example of editing these values to configure your own customized entity, see "Chapter 14. Model Customization Tutorial" on page 307.

#### 13.4.4 Role-Slot Association

Roles are associated with slots by the `slotName` parameter of the VR-Engage `<role>` entry. The role is then associated with the embarkation slot with a matching `slotName` parameter. A role can only be associated with one slot, and a slot should only be associated with one role. It is not required that every role be associated with an embarkation slot, nor is it required that every slot have an associated role.

If a slot has an associated role, that vehicle role is automatically engaged whenever a player's entity is embarked into that slot, or when a player engages with an entity already embarked in the slot. If a player entity is embarked in a slot that does not have an associated role, the player remains engaged in the embarked human entity.

If a role does not define a valid slot association, there is no way to engage in that vehicle role via embarkation. To play this role, a player must engage directly with the vehicle from the Choose Role panel, or by command from the VR-Engage Manager Panel in VR-Forces.

To learn more about roles and slots, see "Appendix B. Embarkation Slot Configuration in VR-Engage" on page 341.

#### 13.4.5 Roles Included with VR-Engage

Table 35 lists the out-of-box roles configured on entities in *VR-Engage.sms*. Some role files are derived from other, more generalized roles. Many entities in the VR-Engage SMS are configured with more than one role.

**Table 35. Available roles**

| <b>Role Configuration File</b> | <b>Description</b>                                                                                  |
|--------------------------------|-----------------------------------------------------------------------------------------------------|
| airSensorOperator.lua          | Aircraft-mounted gimbaled sensor                                                                    |
| cameraSensorOperator.lua       | Gimbaled sensor such as a security camera                                                           |
| commander.lua                  | Ground vehicle commander with out-the-hatch viewpoint                                               |
| commanderViews.lua             | Commander view through ring of periscopes.                                                          |
| diLasingHuman.lua              | Human configured with a hand-held laser designator                                                  |
| driver.lua                     | Ground vehicle driving                                                                              |
| boxerDriver.lua                | GTK Boxer vehicle                                                                                   |
| lavDriver.lua                  | LAV vehicle                                                                                         |
| tankDriverWith3D.lua           | Ground vehicle driving plus display configuration for use with 3D models with high detail interiors |
| driverGunner.lua               | Combination ground vehicle driving and turreted gun                                                 |
| emergencyVehicleDriver.lua     | Ground vehicle driving with lights and sirens                                                       |
| fixedWingPilot.lua             | Fixed wing aircraft pilot                                                                           |
| t38Pilot.lua                   | T-38 aircraft                                                                                       |
| gunner.lua                     | Turreted gun                                                                                        |
| boxerGunner.lua                | GTK Boxer                                                                                           |
| hmmwvGunner.lua                | HMMWV/ECAC                                                                                          |
| lavGunner.lua                  | LAV                                                                                                 |
| strykerGunner.lua              | Stryker                                                                                             |
| tankGunner.lua                 | Tanks with turreted main guns                                                                       |
| tankMachineGunner.lua          | Tanks with secondary machine guns                                                                   |
| human.lua                      | Human with weapon, supports desktop and VR                                                          |
| humanWithoutVr.lua             | Similar to human.lua, but without a VR display configuration.                                       |
| militaryHuman.lua              | Adds the ability to execute a set of military hand gestures to the other features of human.lua      |
| lldr.lua                       | Lightweight laser rangefinder designator device operator                                            |

**Table 35. Available roles (continued)**

| <b>Role Configuration File</b> | <b>Description</b>                                                                        |
|--------------------------------|-------------------------------------------------------------------------------------------|
| notionalPassenger.lua          | Passenger on a vehicle                                                                    |
| remoteWeaponSystem.lua         | Remotely operated weapon system (CROWS), typically controlled by a commander in a vehicle |
| rotaryWingPilot.lua            | Rotary-wing pilot                                                                         |



## 14. Model Customization Tutorial

There are a number of tasks involved in the process of creating or customizing a entity for your use. This tutorial shows you how to take an existing VR-Forces model and customize it.

|                                                       |     |
|-------------------------------------------------------|-----|
| 14.1. Overview of Customizing a Model .....           | 308 |
| 14.2. Extending VR-Engage.sms .....                   | 308 |
| 14.3. Editing the Entity in the SOE .....             | 309 |
| 14.3.1 Promote the Entity to your SMS .....           | 309 |
| 14.3.2 Review the Entity's Systems .....              | 310 |
| 14.4. Editing the Tank's .entity File .....           | 310 |
| 14.4.1 Specify a VR-Engage-Capable Platform .....     | 311 |
| 14.4.2 Add the VR-Engage Tag .....                    | 311 |
| 14.4.3 Add the Driving Role Component .....           | 311 |
| 14.5. Test Driving Your Tank .....                    | 312 |
| 14.5.1 Copy the SMS Files .....                       | 312 |
| 14.5.2 Specify Your SMS as the Default .....          | 312 |
| 14.5.3 Drive Your Tank .....                          | 313 |
| 14.6. Creating the Views for Your Tank .....          | 313 |
| 14.6.1 Create a New Driver Views File .....           | 313 |
| 14.6.2 Override Tank Driver View with Your View ..... | 314 |

## 14.1. Overview of Customizing a Model

This tutorial demonstrates how to add VR-Engage driver and gunner roles to a VR-Forces CGF entity. Specifically, we will edit the existing Leopard 2 Tank to be player controllable in each of these roles. The Leopard tank is a CGF entity located in the VR-Engage SMS, which is an extension of VR-Forces's EntityLevel SMS. Out of the box, it does not have any VR-Engage role player capabilities.

To complete the tutorial, you must have VR-Engage and a compatible version of VR-Forces with the VR-Engage add-ons. See "Installing the VR-Forces Plug-in" on page 43.

In this tutorial, you will:

1. Create a custom SMS that extends the VR-Engage SMS.
2. Promote an entity to your custom SMS.
3. Make the entity drivable by players.
4. Add custom views for the driver role.

These tasks are beyond the scope of the tutorial:

- Configuring a new Vortex model tailored to this vehicle. Instead, we take advantage of the existing Vortex mechanism file defined for tanks because it is a close enough approximation for the Leopard tank. For more about configuring Vortex models, see "13.2. Ground Vehicles and Vortex" on page 296.
- Mapping the wheel and sprocket articulated parts on the 3D model to the simulation model. The Leopard tank we use in this tutorial has already been configured by an artist to include the necessary articulated parts.
- Configuring popup menus that allow human characters to walk up to the vehicle and choose a role.

## 14.2. Extending *VR-Engage.sms*

First, create a new SMS that extends *VR-Engage.sms*. The new SMS will include all of the existing VR-Engage-controllable entities and then we'll add an entry for our Leopard 2 Tank. We start by extending the SMS in our VR-Forces installation.

► **To create an extension of the existing SMS:**

1. Open the Simulation Object Editor, which is part of your VR-Forces installation. In Windows, open the Start menu and then choose **MAK Technologies > VR-Forces 5.1.1 Simulation Object Editor**.
2. Choose **File > New Simulation Model Set**. The New Simulation Model Set dialog box opens.
3. Select New Simulation Model Set.
4. Click Next. The Simulation Model Set Type page displays.
5. Select Extend Existing Simulation Model Set.
6. Click Next. The Extend Existing Simulation Model Set page displays.

7. Select *VR-Engage.sms*.
8. Click Next. The New Model Set Name page displays.
9. In the File Name box, enter TankTutorial.
10. Click Finish. The Simulation Object Editor loads systems information from the included model sets and displays the new SMS. This can take a few minutes.

Since all of the simulation objects are included from other SMSs, none of them are currently editable. They are listed in the Objects List using gray text.

## 14.3. Editing the Entity in the SOE

There are some edits that you must make in the Simulation Object Editor (SOE).

- We'll change the movement system to the VR-Engage Tracked Vehicle system. That system has the same capabilities of the Tracks system, which MAK applications use when the vehicle is under CGF control. It also has the higher-fidelity Vortex-based movement model when the tank is under player control.
- In the SOE, you see other parameters that are available for configuration in the Movement tab such as mass, max-speed, max-slope, and so on. These only apply to the lower-fidelity VR-Forces CGF movement model. The comparable model parameters for the higher-fidelity Vortex model are in the Vortex mechanism file, separate from the SOE settings.
- In the General tab for the Leopard 2 Tank, you can see that the Platform is set to Ground Vehicle. This is the platform file set for most ground vehicles and contains the components and parameters common to ground vehicle platforms. Like the Movement system we need to change it to a version that extends the entity with additional VR-Engage capabilities. You cannot edit that using the SOE, however, so we will edit it in a text editor later in this tutorial.


### 14.3.1 Promote the Entity to your SMS

To make an existing VR-Forces entity part of your custom VR-Engage SMS, you promote it.

► **To promote the tank entity:**

1. In the Objects list, select Leopard 2 Tank. Optionally, you can use the filters to narrow the list.
2. In the yellow bar near the top of the window, click Promote (Figure 98). The entity is now available to edit in your SMS.

**Figure 98. Promote Simulation Object**

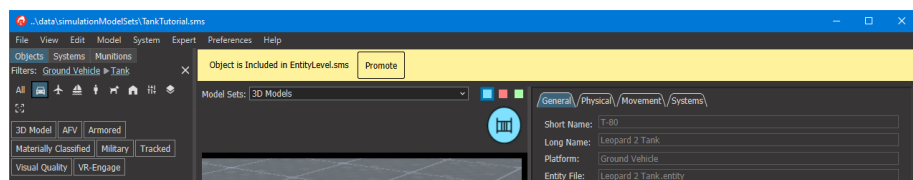


### 14.3.2 Review the Entity's Systems

To make the Leopard 2 Tank entity drivable as a player-controlled entity, replace the CGF-only movement system with the corresponding VR-Engage movement system. It provides all of the CGF capabilities for autonomous movement, allowing it to be controlled by the CGF in a scenario, and also adds the ability for players to assume control and drive the vehicle themselves.

► **To configure the movement system:**

1. Select the Movement tab.
2. From the Movement Dynamics list, choose VR-Engage Tracked Vehicle.
3. Click Edit Properties . The VR-Engage Tracked Vehicle Properties dialog box opens.
4. Note the value for the Driving Joystick Group Name, which is Driving Input. We use that later in the tutorial when we configure the driving role.
5. Choose **File > Save Simulation Model Set**.
6. Close the SOE. If you are prompted to do so, click OK to save your changes.

**Figure 99. Leopard 2 Tank in SOE**

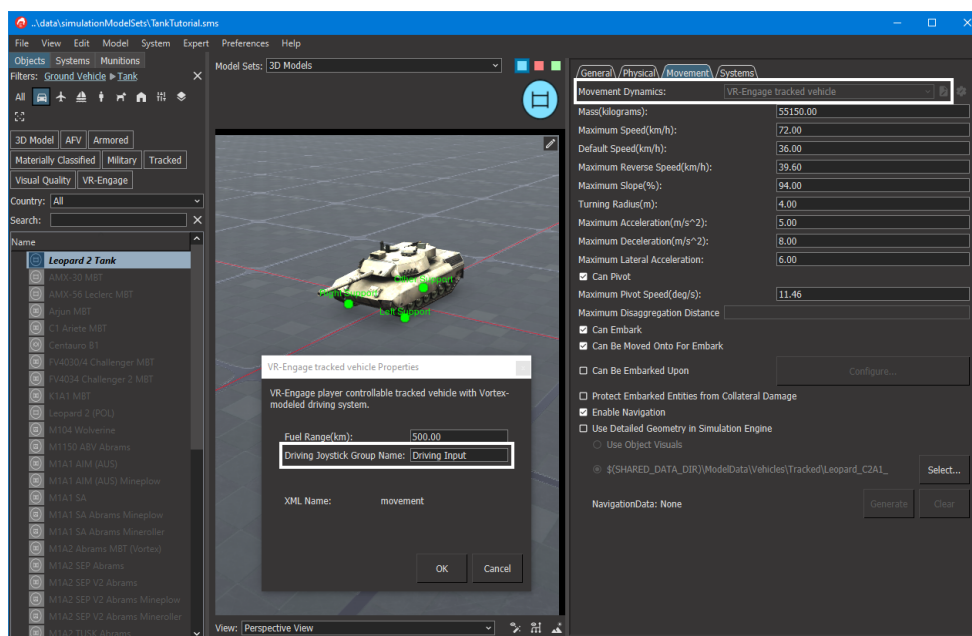

## 14.4. Editing the Tank's .entity File

We need to edit the *Leopard 2 Tank.entity* file to configure our tank as an entity that can be controlled and driven by VR-Engage players. We can edit the entity in a text editor and then open it again in the SOE without losing the changes we made.

You can look at another .entity file such as *./data/simulationModelSets/VR-Engage/vrfSim/vreM1A2\_Abrams\_MBT.entity* to see its configuration.



### 14.4.1 Specify a VR-Engage-Capable Platform

All VR-Engage entities must be configured with a VR-Engage-specific platform file. Platform files contain components and parameters common to all entities of a given category: human, ground vehicle, air vehicle, and so on.

The VR-Engage versions of these platform files extend the corresponding entity-level SMS versions with various overrides related to embarkation, weapon firing, state repository extensions, and more.

For our tank, we'll replace `Ground_Vehicle.ope` with `Vortex_Tracked_Vehicle.ope`. We do this by editing the tank's `.entity` file.

► **To open the entity file and edit the platform:**

1. In your VR-Forces installation, navigate to `./data/simulationModelSets/TankTutorial/vrfSim` and then open the *Leopard 2 Tank.entity* file in a text editor.
2. Near the top of the file, edit the `simObject` entry to change the platform. When you are finished, the line should read:
 

```
<simObject objectType="1:1:1:78:1:2:0:0"
matchType="1:1:1:78:1:2:0:0" platform="@platforms-dir)/vortex_
Tracked_Vehicle.ope">
```
3. Save the file.

### 14.4.2 Add the VR-Engage Tag

The `gui-categories` parameter determines the filters available in the Simulation Objects Palette that allow users to filter the list of entities when they are making their selection. Adding the VR-Engage tag to this parameter helps VR-Forces users choose VR-Engage-controllable entities when they create a scenario.

► **To add the VR-Engage tag:**

1. In the *Leopard 2 Tank.entity* file, locate the `gui-categories` parameter. It's near the bottom of the file.
2. Add "VR-Engage" to the list. It should now look something like:
 

```
<string paramName="gui-categories">"3D Model" "Armored" "Ground
vehicle" "Materially Classified" "Military" "Tank" "Tracked"
"Visual Quality" "VR-Engage"</string>
```
3. Save the file.

### 14.4.3 Add the Driving Role Component

Finally, we add the tank driver role to the `.entity` file. This connects our tank to the driving system (the `Vortex_Tracked_Vehicle.ope` platform) that we specified earlier. The role itself is defined in a role definition file, in this case *tankDriver.lua*. The `<role>` entry in `.entity` files has two parameters, as described in "13.4.2 The `vrEngageRoles` and `role Entries`" on page 301.

► **To add the driving role:**

1. Locate the `<vrEngageRoles/>` entry, near the bottom of the *Leopard 2 Tank.entity* file and immediately before the closing tag of `</simObject>`.
2. Replace the `<vrEngageRoles/>` entry with:

```
<vrEngageRoles>
  <role paramName="Driver" defaultDisplayLayout="1 Screen
Horizontal">@(DATA_
DIR)\simulationModelSets\VR-Engage\roles\tankDriver.lua</role>
</vrEngageRoles>
```

3. Save the file.

## 14.5. Test Driving Your Tank

To test drive your tank to make sure that it is VR-Engage-controllable, first we need to copy the SMS files from the VR-Forces directory to the VR-Engage directory. We also need to update the *playerStation.lua* file to use the TankTutorial SMS. After we complete those tasks, we can use an unhosted session of VR-Engage to create our entity and drive it.

### 14.5.1 Copy the SMS Files

► **To copy the SMS files:**

1. Navigate to your VR-Forces installation and the *./data/simulationModelSets* directory.
2. Select the *TankTutorial.sms* file and the *TankTutorial* directory.
3. Copy these files.
4. Navigate to your VR-Engage installation and the *./data/simulationModelSets* directory.
5. Paste the files.

### 14.5.2 Specify Your SMS as the Default

While VR-Engage supports multiple SMSs, we do not need to use more than the one you created earlier. It includes everything from the default *VR-Engage.sms* file, plus your Leopard 2 Tank.

► **To specify that VR-Engage should use your SMS:**

1. Navigate to *./appData/scripts* and then open the *playerStation.lua* file in a text editor.
2. Near the top of the file, edit the `defaultSimulationModelSets` parameter to use your custom SMS. It should now look like:

```
-- Default simulation model set(s) to use when launching the
simulation engine.
-- Specify list of SMSs separated by commas.
defaultSimulationModelSets = {
  "$(DATA_DIR)/simulationModelSets/TankTutorial.sms"
```

```
};
```

3. Save the file.

 The \$(DATA\_DIR) variable points to the `./data` directory in your VR-Engage installation.

### 14.5.3 Drive Your Tank

We will start an unhosted scenario in VR-Engage that will use your SMS. (You cannot use any scenarios included with VR-Engage to place and drive your tank because they all use the *VR-Engage.sms*.)

► **To start an unhosted session and then drive your tank:**

1. On the Start menu, choose **MAK Technologies > VR-Engage 2.1.1**. The VR-Engage window opens.
2. In the Choose Connection screen, select the connection that you want to use and then click Connect. DIS (7) Localhost is sufficient for a simple test.
3. In the Choose Session screen, click Start Unhosted Session.
4. In the Choose Terrain list, select Ground\_DB II.mtf.
5. Click Load Terrain. VR-Engage starts the back-end and loads the terrain.
6. In the Choose Role panel, select Create a New Entity.
7. Select your Leopard 2 Tank and then click on the terrain to place it.
8. Click Engage.
9. Click the Play button () to start the scenario.
10. Drive the tank. See "6.2. Driving Ground Vehicles" on page 153 to learn more about operating tanks.
11. You can change the viewpoint as described in "4.4. Changing the View Mode" on page 117.

These viewpoints were defined for another vehicle. We'll customize the viewpoints in the next sections of this tutorial.

## 14.6. Creating the Views for Your Tank

If you changed your viewpoint in the previous task, you may have noticed that one of the views is close to the driver's perspective but was partially obscured by the vehicle. That viewpoint was configured for a different vehicle, the M1A2 Abrams. The geometry of the Leopard 2 Tank's 3D model is slightly different and we want to create a new driver view for our tank, which we do by creating an observer views file.

### 14.6.1 Create a New Driver Views File

This procedure assumes that you have completed the tasks in "14.5. Test Driving Your Tank" on the previous page and currently have the Leopard 2 Tank in an unhosted session.

► **To create the observer views file:**

1. If you are in the driver role of Leopard 2 Tank, press **Esc** and then click Choose Role.
2. Press **Shift+F12** to switch to Admin mode.
3. Choose **View > Attachments Panel**.
4. Choose **View > Observer Views Panel**.
5. Optionally, undock these two panels and move them somewhere that you can see them clearly.
6. Press the Spacebar to position the observer directly behind the entity. Your tank's marking text now displays in the Attached Objects list in the Attachments Panel.
7. In the Observer Views panel, click Clear Observer Views (✕). You want to start with a blank slate of viewpoints.
8. Click Yes in the confirmation message.
9. In the Attachment Panel, change the attachment mode from Follow to Mimic.
10. Using the standard keyboard controls for the observer, position the viewpoint where you want it to be.
11. In the Observer Views panel, click Add Observer View (+). It is added to the list with a default name.
12. Optionally, you can edit the name. Double-click to edit the name and then press **Tab** when you are finished, or click on the VR-Engage title bar. For this tutorial, we refer to this viewpoint as "Driver View".
13. In the Observer Views Panel, click Export All Views to a File (📁).
14. In the confirmation message, click Save As. The Save Observer File As dialog box opens.
15. Enter in the File Name leopardSavedViews.
16. Click Save. The file is saved in `./appData/settings/vrEngage`.

### 14.6.2 Override Tank Driver View with Your View

For this tutorial, we will not create a new role or edit the existing `tankDriver.lua` file. Instead, we'll edit the entity file, referencing our saved views file and setting our view as the initial view.

We'll use overrides in the `.entity` file to override the saved views. To learn more about overrides, see "13.4.3 The parameterOverride Entry" on page 303.

For example, if you look at the `./data/simulationModelSets/VR-Engage/roles/tankDriver.lua` file, you can see the saved views and initial views settings that we are going to override. They are in the `DtSavedViewUpdater` component (lines 24 and 25).

```

21 | ["savedViewUpdater"] = {
22 |     componentType = "DtSavedViewUpdater";
23 |     priority = 10;
24 |     savedViews="m1DriverViews.osrx";
25 |     initialView="1 - Driver";

```

```

26 |     allowChangingViews = true;
27 |     viewChannelKeywordMap={
28 |     };
29 |     clippingPlaneSettings = {
30 |         ["default"] = {
31 |             { mode = "default"; nearClipDistance = 0.25; clipPolicy =
0; dynamicNearClipAttachedObjectPolicy = 0; }
32 |         };
33 |     };
34 | };

```

► **To add your viewpoint to the *.entity* file and override the role settings:**

1. In your VR-Engage installation, open the `./data/simulationModelSets/TankTutorial/vrfSim/Leopard 2 Tank.entity` file in a text editor.
2. Edit the driver role entry to add parameter overrides to use your views file and driver view:

```

<vrEngageRoles>
  <role paramName="Driver" defaultDisplayLayout="1 Screen
Horizontal">@(DATA_DIR)\simulationModelSets\VR-
Engage\roles\tankDriver.lua
    <parameterOverride
paramName="savedViewUpdater.savedViews">"leopardSavedViews.osrx"</
parameterOverride>
    <parameterOverride
paramName="savedViewUpdater.initialView">"Driver
View"</parameterOverride>
  </role>
</vrEngageRoles>

```

3. Save the file.

To test and see your changes, you must close and restart VR-Engage to allow it to pick up your parameter overrides.





## 15. Creating VR-Engage Scenarios in VR-Forces

This chapter describes how you can create your own scenarios that include VR-Engage controllable entities. While VR-Engage can load or join a session of any entity-level VR-Forces scenario, players can only choose an entity that is configured as a VR-Engage controllable entity.

VR-Engage does not allow you to create and save scenarios. You must use VR-Forces with the VR-Engage add-ons to create scenarios that include VR-Engage controllable entities.

|                                                        |     |
|--------------------------------------------------------|-----|
| 15.1. Installing the VR-Forces/VR-Engage Add-ons ..... | 318 |
| 15.2. Creating a VR-Engage Scenario in VR-Forces ..... | 318 |
| 15.2.1 Vortex While Untasked .....                     | 320 |
| 15.3. Running Your Scenario .....                      | 320 |
| 15.3.1 Hosting a Scenario in VR-Forces .....           | 320 |
| 15.3.2 Hosting a Scenario in VR-Engage .....           | 321 |

## 15.1. Installing the VR-Forces/VR-Engage Add-ons

Before you can create your own VR-Engage scenarios, you must install the *VR-ForcesVR-EngageAdd-ons.exe* plug-in on a version of VR-Forces that is compatible with your copy of VR-Engage. In addition to other features, the installer extended VR-Forces with the *VR-Engage.SMS*, which includes entities that a VR-Engage user can control. These entities also have all of the built-in capabilities of the corresponding entity from the VR-Forces *EntityLevel.SMS*.

For more information, see "Installing the VR-Forces Plug-in" on page 43.

## 15.2. Creating a VR-Engage Scenario in VR-Forces

You can use VR-Forces to create scenarios. If you want to include entities that can be controlled by VR-Engage players, you must use the *VR-Engage.sms* (or an SMS that is an extension of the VR-Engage SMS) and include entities that have been configured as controllable entities. "Chapter 12. Controllable Entities" on page 255 lists the entities that are included with VR-Engage. "Chapter 13. Adding and Editing VR-Engage Entity Models" on page 295 explains how to configure other models to be controlled by VR-Engage players. When you select the VR-Engage tag in the Simulation Objects Palette (Figure 101), you see a list of VR-Engage controllable entities.

Your scenario can include other entities that are not VR-Engage controllable and players can interact with them. The VR-Engage SMS is an extension of VR-Forces's Entity Level SMS, including all of the simulation objects, which allows you to add them to scenarios for VR-Engage. (Non-controllable entities are not listed in the VR-Engage Choose Role panel.)

You can assign tasks and plans to all entities in the scenario. If a player engages as a controllable entity, its plan or task is suspended while the player is engaged. That entity then resumes its assigned behaviors when the player disengages. You can also use plan triggers to give entities responses to players' actions.

Before creating the scenario, ensure that you are using a version of VR-Forces that is compatible with the version of VR-Engage that you want to use and also has the add-ons plug-in for that version of VR-Engage. To check for compatibility, see the *VR-Engage Release Notes* or the [Build Compatibility](https://www.mak.com/build-compatibility) page on the MAK website at <https://www.mak.com/build-compatibility>.


### ► To create a scenario that is compatible with VR-Engage:

1. Open VR-Forces.
2. In the Scenario Startup dialog box, specify VR-Engage as your Simulation Model Set (Figure 100), or select an SMS that you created.
3. Select a terrain database.



**Figure 100. New scenario in VR-Forces Scenario Startup**

4. Click OK.
5. By default, VR-Forces displays the Create Object Palette. You can add any simulation objects or tactical graphics included in the palettes, not only VR-Engage controllable entities.
6. To filter the list of simulation objects to those that can be controlled by VR-Engage players, use the VR-Engage tag (Figure 101). You can also enter VR-Engage in the Search box.

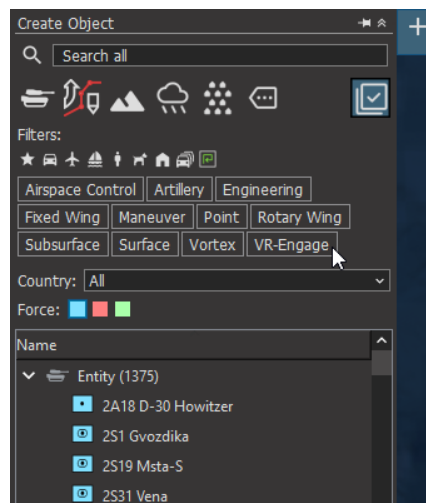**Figure 101. VR-Engage filter in Simulation Objects palette**

7. Add entities, tasks, plans, and so on, as described in the *Scenarios* section of the *VR-Forces Users Guide* or help.
8. Save your scenario.

### 15.2.1 Vortex While Untasked

By default, ground vehicles in VR-Forces scenarios for VR-Engage do not have Vortex enabled, which means they do not have high-fidelity vehicle dynamics. This improves scenario performance, however, you might need untasked vehicles to have that physics in your scenario. If you want a ground vehicle to use the Vortex physics model even when it is not occupied by a player or otherwise tasked in the scenario, you can enable it using the Vortex While Untasked set data request.

► **To enable or disable Vortex on a ground vehicle:**

1. In VR-Forces, select the ground vehicle entity.
2. Choose **Set > Action > Vortex while untasked**. The Vortex While Untasked parameters display.
3. Select or clear the Enable check box and then click OK.

## 15.3. Running Your Scenario

When hosting a scenario, you can host it in either VR-Forces or VR-Engage. Use the application that best suits your needs.

VR-Engage performs better when it is hosting only the ownership in a scenario. If you have multiple users connecting different instances of VR-Engage to a scenario hosted in VR-Engage, or even if you have one user running a large scenario, performance and frame rate can deteriorate. Some entities, such as Vortex-based ground vehicles, require a minimum frame rate (approximately 20 FPS) to remain stable. You should use VR-Engage to host only simple scenarios or for basic testing.

VR-Forces is the preferred choice when hosting a session where there will be multiple players or there are a number of entities in the scenario. Depending on the complexity of your scenario, you may want to host the simulation on one or more dedicated simulation engines. You can host these engines on one or more machines as needed to distribute the workload. (Typically, multiple simulation engines are not necessary. See the chapter on *Optimizing Performance* in the *VR-Forces Users Guide*.)

Regardless of where the scenario is hosted, VR-Engage instances can join the scenario and the players can choose a role for a controllable entity; see "3.2.1 Choosing an Existing Role" on page 63. If the scenario is hosted by VR-Forces, you can also assign roles to players as described in "3.2.4 Assigning Roles from VR-Forces" on page 66.

### 15.3.1 Hosting a Scenario in VR-Forces

When you host a scenario using one or more instances of VR-Forces, you would load the scenario and then have the VR-Engage stations connect to it. This works only when the connection information is the same in all instances of VR-Forces and VR-Engage.

For more information, see "3.3. Connecting to VR-Forces" on page 68.

 While VR-Engage can join any entity-level scenario, players can only participate in scenarios that include VR-Engage controllable entities.

### 15.3.2 Hosting a Scenario in VR-Engage

If you want to host your scenario in VR-Engage, such as a simple scenario for one player or for testing purposes, you simply need to copy your scenario to the *./userData/scenarios* directory. When you launch VR-Engage and choose to Host VR-Forces Session, your scenario is included in the list of available scenarios.

For more information, see "3.1.1 Hosting a VR-Forces Session" on page 58.





## 16. Customizing Overlays

This chapter provides examples of how you can customize the overlay for an entity.

|                                                                    |     |
|--------------------------------------------------------------------|-----|
| 16.1. Overview of Custom Overlays .....                            | 324 |
| 16.1.1 Types of Overlays .....                                     | 324 |
| 16.1.2 Examples of Each Type of Overlay .....                      | 324 |
| 16.2. Adding a QML Overlay .....                                   | 325 |
| 16.2.1 Testing Your QML Overlay .....                              | 326 |
| 16.3. Adding a Custom Sensor Overlay .....                         | 327 |
| 16.4. Adding a GL Studio Overlay .....                             | 327 |
| 16.4.1 Creating a GL Studio RSO .....                              | 328 |
| 16.4.2 Creating VR-Vantage GL Studio Updaters .....                | 328 |
| 16.4.3 Configuring the VR-Vantage GL Studio Model Definition ..... | 328 |
| 16.4.4 Modifying Role Configuration Scripts .....                  | 329 |

## 16.1. Overview of Custom Overlays

There are several ways to customize the overlays for an entity's role. Depending on the complexity of the overlay, you may need to modify a configuration script, write code, or use GL Studio.

This chapter provides typical examples of customizing overlays using data that are stored as player station state attributes. It does not cover overlays that involve extensive development, or overlays that require additional data that is not currently available out of the box. If you need a complex overlay that requires C++ development, such as those used in 3D cockpits or those used with VR, AR, or MR displays, please visit <https://www.mak.com/support> and request assistance.

### 16.1.1 Types of Overlays

The types of overlays covered in this chapter are:

- QML overlays, which use QtQuick to create an overlay that is then referenced in the role configuration scripts. You can create complex and dynamic 2D overlays with relative ease and no additional tools. It does require some familiarity with JavaScript, the Qt Modeling Language (QML), and Lua script. Please see <https://doc.qt.io/qt-5/qmlreference.html> and <https://www.lua.org/docs.html>.
- Sensor overlays, which use the built-in capabilities of VR-Vantage and are further customized by allowing you to declare which elements you want to make visible. This also requires you to edit the Lua configuration files.
- GL Studio overlays, which are dynamic overlays that require some C++ development. This requires using the GL Studio editor from DiSTI to create an RSO. To use your own RSO, you must have a GL Studio runtime license from DiSTI. Please visit <https://www.mak.com/support> for assistance with licenses.

### 16.1.2 Examples of Each Type of Overlay

QML and GL Studio overlays can be dynamic and include:

- Text on the screen to reflect the state attribute of the entity.
- Rich graphics.
- User interaction (GL Studio only).

Sensor overlays allow you to have a dynamic UAV-style overlay that display:

- Target information.
- Location data.
- Reticle or cross-hairs.
- Heading, pitch, or roll information.
- Compass elements.

Detailed examples are covered in the following topics.

## 16.2. Adding a QML Overlay

You can add an overlay using the `DtQtQuickOverlay` component in the role definition. This component defines the QML (Qt Modeling Language) file to load and the connections between player station state attributes that are fed into QML for display in the overlay and their corresponding QML data structure names.

Player station state attributes are specified in the `DtQtQuickOverlay` component in the role file. You can find the player station attributes that are currently available to display in existing role files. The available attributes vary by role. Below is an example of the basic driver role using the `DtQtQuickOverlay`, found in the `./data/simulationModelSets/VR-Engage/roles/driver.lua` definition file:

```

components = {
  ["hudMapper"] = {
    componentType = "DtGltStudioHudMapperLogic";
    priority = 10;
    modelDefinitions = {"off"};
  };
  ["quickOverlay"] = {
    componentType = "DtQtQuickOverlay";
    priority = 10;
    qmlFilename = "HUDS/groundVehicle/dashboard.qml";
    qmlDataItemObjectName = "valueSource";
    qmlDataItemBindings = {
      { stateAttribute = "speed" };
      { stateAttribute = "rpm" };
      { stateAttribute = "set-gear"; qmlProperty = "gear" };
      { stateAttribute = "resource:movement|fuel"; qmlProperty =
"fuel" };
    };
  };
  ...
}

```

Figure 102. Car driver overlay



First, we have a `hudMapper` component to disable any GL Studio HUD that is currently mapped to the vehicle, `DtGLStudioHudMapperLogic` with the line `modelDefinitions = {"off"};`.

Second, we have `quickOverlay` component, `DtQtQuickOverlay`, to specify the QML overlay. The parameters are:

- `qmlFilename`. The path to the QML overlay file.
- `qmlDataItemObjectName`. Defines the QML item where the properties are set. This requires a corresponding `Item` in QML identified by a matching `objectName`. You can see an example of the car's `Item` in `./data/UI/HUDS/groundVehicle/dashboard.qml`.
- `qmlDataBindingItems`. Maps the state attributes, set in C++, to the QML item properties. The `stateAttribute` provides the value to use and the `qmlProperty` is the value to set. In the example above, the "set-gear" `stateAttribute` maps to the "gear" `qmlProperty` in the QML `valueSource Item`.

 You can find the QML documentation at <https://doc.qt.io/qt-5/qmlreference.html>.

### 16.2.1 Testing Your QML Overlay

You can quickly test your QML file using the small QML test application, `qmlTestApp.exe`, which is included with VR-Engage. This app quickly loads and visualizes your QML file. To use it, navigate to `./bin64/qmlTestApp.exe` and run it with the relative path to your QML file. For example:

```
qmlTestApp.exe -d ../data/UI/HUDS/groundVehicle -f gunsight.qml
```

You can press F5 at any time to reload the file. This allows you to iteratively check whether your edits give you the look that you want.



## 16.3. Adding a Custom Sensor Overlay

If you need an overlay that is similar to the VR-Vantage sensor overlay (Figure 103), you can configure it by adding a `DtVrvSensorOverlayUpdater` component to a sensor operator's role definition Lua script and indicating which sections of the built-in overlay should be seen in your version.

**Figure 103. Sensor overlay**



For details on customizing the overlay for sensor operator roles, see "9.4. Configuring the Sensor Operator Overlay" on page 198.

**i** Sensor overlays pull data from the current observer. If you need sensor overlay sections in addition to those in the built-in overlay, you must use the VR-Vantage API to build a plug-in and add the section.

## 16.4. Adding a GL Studio Overlay

VR-Engage supports overlays created with DiSTI's GL Studio. VR-Engage uses VR-Vantage's GL Studio integration to configure and update any loaded RSOs. You must have a GL Studio license to develop a GL Studio RSO.

To add a new GL Studio overlay, you need to complete a series of procedures:

1. Create the new RSO using DiSTI's GL Studio editor.
2. Create VR-Vantage GL Studio updaters as needed.
3. Create a new VR-Vantage GL Studio model definition.
4. Modify the role configuration scripts to use the new model definition.

Please refer to DiSTI's documentation on GL Studio for details on creating an RSO.

Figure 104. GL Studio overlay



### 16.4.1 Creating a GL Studio RSO

To create a new GL Studio RSO, use DiSTI's GL Studio application. You can create the overlay and its properties. The properties provide a way to update values seen on the overlay or drive the dynamic components in the overlay.

The output from GL Studio is source code that is compiled into a DLL file. Save the DLL file in `./data/huds64`.

### 16.4.2 Creating VR-Vantage GL Studio Updaters

To update the RSO with data, you must configure the RSO's model definition with the list of VR-Vantage GL Studio updaters to provide data to the RSO.

For a list of available updaters, please see the section on cockpits in the [Wakes, Cockpits, 2D Icons, and Other Models](#) chapter in the *Adding Content to MAK ONE Applications Reference Manual*.

### 16.4.3 Configuring the VR-Vantage GL Studio Model Definition

VR-Engage includes the Model Definition Editor in the Visual Model Editors dialog, which allows you to configure model definitions for GL Studio RSOs.

For more information, please see the [Model Definitions](#) chapter in the *Adding Content to MAK ONE Applications Reference Manual*.

### 16.4.4 Modifying Role Configuration Scripts

VR-Engage entity roles are defined with Lua scripts in *./data/simulationModelSets/VR-Engage/roles*. To use your new GL Studio model definition when a role is activated, you need to add a `DtGLStudioHudMapperLogic` component to the role definition. In this example, we are using our `vreHUDPlusMFDS` model:

```
{ componentType = "DtGLStudioHudMapperLogic";  
  priority = 10;  
  modelDefinitions = {"vreHUDPlusMFDS"};  
}
```

This component overrides the entity type mapping of VR-Vantage with the declared mapping.





## 17. Activating Scripts in VR-Forces

Characters in VR-Engage can activate scripts in the VR-Forces simulation engine.

|                                                 |     |
|-------------------------------------------------|-----|
| 17.1. Activating Lua Scripts in VR-Forces ..... | 332 |
| 17.2. Adding a Script to the Action Menu .....  | 332 |
| 17.3. Activating a Script .....                 | 333 |

## 17.1. Activating Lua Scripts in VR-Forces

VR-Forces lets users add tasks and set data requests by writing Lua scripts. Lua is a scripting language that does not require compilers and software development tools like those required by the VR-Forces C++ toolkit. Also, you do not need a VR-Forces developers license to add Lua scripts.

VR-Engage characters can trigger scripts or activate them in the VR-Forces simulation engine. Once a script is triggered, there is no further involvement of the character you are playing. The script must have previously been written in VR-Forces. Then it must be added to the Action menu to be accessible to characters.

For information about how to write a script, please see the *VR-Forces Users Guide*. This chapter explains how to add a script to the Action menu and how to execute it.

## 17.2. Adding a Script to the Action Menu

The Action menu is configured in the file `./data/simulationModelSets/VR-Engage/roles/baseRole.lua`.

The Action menu and the Scripts submenu are configured in the following lines of the file (comments have been removed):

```
updaters={
  DtActionMenuUpdater={
    menus={
      ["Action"] = {
        parent="";
        size={x = 400, y = 300};
        position={ x= 100, y = 300};
        elements={
          {label = "Flashlight:", action = "toggleFlashlight",
decorator="$STATE", stateAttribute="flashlight", stateList={"OFF",
"ON"} };
          {label = "Night vision:", action = "toggleNvg",
decorator="$STATE", stateAttribute="Nvg", stateList={"OFF", "ON"} };
          {label = "Radio", action = "cycleRadio", decorator="$STATE",
stateAttribute="currentRadio"};
          {label = "Task entity", action = "selectMenu", param =
"Select Entity"};
          {label = "Execute Script", action = "selectMenu", param =
"Scripts"};
          ...
        };
      };
      ...
      ["Scripts"] = {
        parent="Action";
        elements={
```

```

        {label = "Script 1", action="scriptedTask", param="Fire_For_
Effect_on_Location", cursor="selectLocationCursor"};
    };
...

```

 The `label = "Execute Script"` line might be commented out. You need to uncomment it for the Execute Script menu command to be enabled.

The Scripts menu option is added as an element of the Action menu. It has an element for each script to be listed on the submenu. In this case, there is one script with these parameters:

- `label`. The text shown on the menu.
- `action`. Must be `scriptedTask`.
- `param`. The name of the Lua script.
- `cursor`. A location selected by the player. This is the only input to the script.

The only input that a VR-Engage character can provide to a script is a cursor position.

## 17.3. Activating a Script

You can tell VR-Forces to activate a script.

### ► To activate a script:

1. Open the Action menu.
2. Select Execute Script.
3. Press the **Right arrow** key or the right button on the D-pad to show the submenu. The Scripts menu opens.
4. Select the script that you want to activate.
5. Press the **Right arrow** key or right button on the D-pad.







## IV. Appendices

The appendices contain troubleshooting and supplemental information.





## A. Troubleshooting

This appendix describes solutions to common issues. If your problem is not covered here, check the [MAK ONE Product Support Knowledge Base](https://www.mak.com/knowledge):  
<https://www.mak.com/knowledge>.

If you require assistance, visit MAK's [Support Portal](#) and provide any information about your issue. See "Reporting an Issue Using the .callstack.log and .dmp Files" on page 45.

|                                               |     |
|-----------------------------------------------|-----|
| A.1. Performance and Display Issues .....     | 338 |
| A.2. The Fault Tolerant Heap .....            | 338 |
| A.3. Graphics Card Binary Compatibility ..... | 338 |
| A.4. Issues with VRAM .....                   | 338 |
| A.5. Remote Camera Placement .....            | 339 |
| A.6. Other Limitations .....                  | 339 |

## A.1. Performance and Display Issues

There are a few issues that require you to add the application name to the *BlackApps.dat* file.

- Nahimic can severely impact performance and frame rates because it interacts with certain hardware capabilities, vantage leverages, in an extremely detrimental way.
- Under certain circumstances, opening VR-Engage on a second display prevents the program from starting.
- In addition, launching from the main display and then moving the mouse cursor to the other monitor causes the program to freeze and not respond.
- Nahimic can sometimes cause VR-Engage to crash.
- You might also experience crashes when trying to engage rotary- or fixed-wing aircraft.

If you experience any of these issues, edit the Nahimic *BlackApps.dat* file and add the application name (for example, *vrengage.exe*) to the list. You can search *C:\ProgramData* for *BlackApps.dat* to locate it. This file might be found in *C:\ProgramData\A-Volute\A-Volute.Nahimic\Modules\Scheduled\Configurator*, *C:\ProgramData\A-Volute\A-Volute.28054DF1F58B4\Modules\ScheduledModules\Configurator*, or something similar.

## A.2. The Fault Tolerant Heap

The Fault Tolerant Heap (FTH) is a subsystem on Windows that can affect software developers and testers. If a software application crashes many times—for example, in the process of programming and debugging that application—Windows adds it to the FTH. This is significantly slower than the normal heap and can have a negative impact on the performance of the application as a result.

For more information and to learn possible solutions, see <https://docs.microsoft.com/en-us/windows/win32/win7appqual/fault-tolerant-heap>.

## A.3. Graphics Card Binary Compatibility

If your graphics card driver is updated or rolled back, you can see an error: *glsl program linking error: Program binary could not be loaded. Binary is not compatible with current driver/hardware combination. Driver build date Mmm DD YYYY. Please check build information of source that generated the binary.* To resolve this, completely delete the *./appData/cache* directory. The cached shader binaries are invalid with the updated or rolled back graphics card driver.

## A.4. Issues with VRAM

You can experience issues with hangs or crashes that are caused by high VRAM. If that is the case, use the `--limitEntityTextures` or `--limitTerrainTextures` command-line options to use only mipmap levels at or below the resolution for entities or terrain. Use two integers for the width and height. For example:

```
vrEngage.exe --limitEntityTextures "1024 1024" --limitTerrainTextures "1024 1024"
```

If you continue to experience crashes, use `--limitGpuMemoryPercentage` in addition to these command-line options. Typical values are between 85 and 100, for example: `--limitGpuMemoryPercentage 85`. VR-Engage does not make new textures or buffers as a percentage of the available video RAM beyond the specified percentage. This applies only to VR-Engage-side textures: terrain insets, entities, indirected osgEarth layers (feature\_geom and buildings). It does not apply to SilverLining, Triton, or osgEarth tiles. The latter are controlled by the *.earth* file options.

## A.5. Remote Camera Placement

It is sometimes difficult to precisely position a remote camera on an entity. The camera may jump to a nearby spot, rather than attaching to the desired location on the entity. If this starts happening, the workaround is to place a different entity (human or other entity) in an arbitrary location on the terrain. Then return to the process of creating a new remote camera on the desired entity.

## A.6. Other Limitations

There are some other limitations when using VR-Engage:

- If you task the fire\_team unit to perform a Move to Location task, the unit spreads out into a widely spaced formation. Doing this in a constricted area such as the warehouse area in Hawaii leads to unexpected results, as the entities struggle to get into formation.
- SensorFX works with virtual reality devices but has a significant impact on performance.





## B. Embarkation Slot Configuration in VR-Engage

VR-Engage supports the entity-level embarkation slot configuration behavior. This appendix describes how embarkation slots are configured for player roles.

|                                                                          |     |
|--------------------------------------------------------------------------|-----|
| B.1. Overview of Embarkation Slots .....                                 | 342 |
| B.2. Door Point-type Slots for Scripted Doors on Walkable Vehicles ..... | 342 |
| B.2.1 Ingress vs. Egress Door Points .....                               | 342 |
| B.2.2 Example Door Point Slot Configuration .....                        | 342 |
| B.2.3 Door Point Parameters .....                                        | 343 |
| B.3. Embark Point-type Slots .....                                       | 344 |
| B.3.1 Example Embark Point Slot Configuration .....                      | 344 |
| B.3.2 Embark Point Parameters .....                                      | 345 |

## B.1. Overview of Embarkation Slots

VR-Engage is designed to be compatible with EntityLevel SMS Embarkation Slot configuration and CGF embarkation behavior. See the chapter on Configuring Embarkation in the *VR-Forces Users Guide* for instructions on configuring Embarkation Slots. In some cases, no additional Embarkation Slot configuration may be required.

When a VR-Engage player approaches an unoccupied slot position, VR-Engage presents the player with a menu showing the slot name or the name of the role associated with that slot, if there is one. If the player selects an option from the menu, they are embarked in the chosen slot and automatically engaged in the associated role. If the slot has been configured with a 0,0,0 relative position, then the slot is presented in the menu as long as the player is in proximity to the vehicle.

If this behavior is sufficient, no further slot configuration is required. However, VR-Engage vehicles can be configured with two additional special slot types, "DoorPoint" and "EmbarkPoint", for greater embarkation control.

## B.2. Door Point-type Slots for Scripted Doors on Walkable Vehicles

For higher fidelity vehicles with articulated doors and walkable interior geometry, you might want to configure a special Door Point slot to act as a menu action point, giving players the ability to open or close a vehicle door. See the chapter [MAK Specification Notes](#) in the *Adding Content to MAK ONE Applications Reference Manual* for instructions on setting up vehicles with walkable interior geometry and functional doors. A script to toggle the door is also required.

A Door Point is defined by an Embarkation Slot with the special type "DoorPoint" and an Ingress Technique, Egress Technique, or both, which corresponds to the name of the script that toggles a given door. The Door Point slot should be positioned where the player is expected to open the door from, typically at the location of the door itself. When the player approaches this point, a menu option is presented to control the door. When the player selects this option, the associated script is called to open or close the door.

### B.2.1 Ingress vs. Egress Door Points

You can define a Door Point for use from inside or outside of the vehicle. If the script name appears in the Ingress Technique field, the Door Point is presented on the menu when the player is outside the vehicle. If you use the Egress Technique field, the Door Point is presented when the user is embarked on the vehicle. Defining the script name in both Ingress and Egress fields in the same Door Point slot makes that Door Point usable for both cases.

### B.2.2 Example Door Point Slot Configuration

In the example, the entries in lines 2, 3, and 7 are inherited from the standard slot configuration, but are ignored on a VR-Engage DoorPoint type slot.

Note that this example uses both `ingressTechnique` and `egressTechnique`. This makes this Door Point functional for players both inside and outside of the vehicle.



```

1  <embarkationSlot embarkableObject="-1:3:1:-1:-1:-1:-1:-1"
   capacity="0"
2    jumpToLocation="True" turnToHeading="True" orientOnIngress="False"
   invisibleWhenEmbarked="False" embarkedAppearance=" 0xA0000"
   embarkedAnimation="stand_ready">
3    <embarkedOrientation yaw="0" pitch="0" roll="0"/>
4    <embarkedPosition x="-4.2" y="0" z="0"/>
5    <string paramName="slotName">Rear Door</string>
6    <string paramName="slotType">DoorPoint</string>
7    <string paramName="stationName">16</string>
8    <string paramName="ingressTechnique">Toggle_Cargo_Ramp</string>
9    <string paramName="egressTechnique">Toggle_Cargo_Ramp</string>
10 </embarkationSlot>

```

### B.2.3 Door Point Parameters

**Table 36. Parameters for Door Points**

| Type            | Name             | Required | Description                                                                                                                                                                                                                                                   |
|-----------------|------------------|----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Attribute       | capacity         | Yes      | This field should always be set to 0. This prevents this special slot from being presented as a regular embarkation slot in the VR-Forces GUI embarkation dialog.                                                                                             |
| Attribute       | embarkableObject | Yes      | This field functions exactly as it does for any VR-Forces slot. The Door Point is only available for entities which match the type filter.                                                                                                                    |
| Element         | embarkedPosition | Yes      | This field defines the position of the Door Point on the vehicle, which controls where the player will be presented with the menu option.                                                                                                                     |
| Element<br>Text | egressTechnique  | No       | Defines the name of the script used to control the door. When egressTechnique field is not blank, this Door Point will be presented to players approaching the door from inside the vehicle. Ingress and egressTechnique may be used together, or separately. |
| Element<br>Text | ingressTechnique | No       | Defines the name of the script used to control the door. When ingressTechnique field is not blank, this Door Point will be presented to players approaching the door from outside of the vehicle.                                                             |

**Table 36. Parameters for Door Points (continued)**

| Type            | Name     | Required | Description                                                                                                                                |
|-----------------|----------|----------|--------------------------------------------------------------------------------------------------------------------------------------------|
| Element<br>Text | slotName | Yes      | The slotName field on a Door Point slot defines the text which will appear on the menu when the player approaches the Door Point position. |
| Element<br>Text | slotType | Yes      | This field must be "DoorPoint". This is what defines this slot as a special VR-Engage Door Point slot.                                     |

## B.3. Embark Point-type Slots

The second special slot type that VR-Engage supports is the Embark Point slot. Embark Points are used to give greater control over the position on a vehicle where the menu option to embark in a given slot is presented to the player. For embarkation slots with no associated Embark Point, the position of the embarkation slot itself is used. In many cases, this may be sufficient. A car door, for example, is near enough to the seat associated with it that a special Embark Point is probably not necessary.

On the other hand, the driver's seat in a main battle tank may not be near enough to the perimeter of the vehicle to be accessible in this manner. In that case, you can create an Embark Point and place it outside of the tank at the position where a player might expect to climb onto the tank to gain access to the driver's hatch. Embark Points are associated with slots by slotName, and multiple Embark Points can be associated with the same slot. This may be used, for example, to give a driver access from points on either side of a vehicle.

A position of 0,0,0 works for Embark Points just as it does for all embarkation slots, providing the menu option to embark in the associated slot whenever the player is in proximity to the vehicle.

### B.3.1 Example Embark Point Slot Configuration

In the example, the entries in lines 2, 3, 5, 7, and 9 are inherited from the standard slot configuration, but are ignored on a VR-Engage EmbarkPoint type slot.

Unlike a Door Point, the slotName of the Embark Point is not used. Instead, the menu for this point shows the name of the associated embarkation slot, or the name of the role associated with that slot.

```

1  <embarkationSlot embarkableObject="-1:3:1:-1:-1:-1:-1:-1"
   capacity="0"
2    jumpToLocation="True" turnToHeading="True"
   orientOnIngress="False" invisiblewhenEmbarked="False"
   embarkedAppearance=" 0xA0000" embarkedAnimation="stand_ready">
3    <embarkedOrientation yaw="0" pitch="0" roll="0"/>
4    <embarkedPosition x="0" y="0" z="0"/>
5    <string paramName="slotName">Gunner</string>
6    <string paramName="slotType">EmbarkPoint</string>
```

```

7 |     <string paramName="stationName">16</string>
8 |     <string paramName="ingressTechnique">Embark:Gunner</string>
9 |     <string paramName="egressTechnique"/>
10| </embarkationSlot>

```

### B.3.2 Embark Point Parameters

**Table 37. Embark Point parameters**

| Type            | Name             | Required | Description                                                                                                                                                                                                                                                                                                                                                                                             |
|-----------------|------------------|----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Attribute       | capacity         | Yes      | This field should always be set to 0. This prevents this special slot from being presented as a regular embarkation slot in the VR-Forces GUI embarkation dialog.                                                                                                                                                                                                                                       |
| Attribute       | embarkableObject | Yes      | <p>This field functions exactly as it does for any VR-Forces slot. That is, the Embark Point is only available for entities which match the type filter.</p> <p>In most cases, this field should be set to match the associated embarkation slot. If the player entity type does not match the filter on both the Embark Point and the associated embarkation slot, the Embark Point will not work.</p> |
| Element         | embarkedPosition | Yes      | This field defines the position of the Embark Point on the vehicle, which controls where the player will be presented with the menu option to embark. A value of 0,0,0 means that the menu option will be available anywhere in proximity to the vehicle.                                                                                                                                               |
| Element<br>Text | ingressTechnique | Yes      | The ingressTechnique string associates the Embark Point with an embarkation slot. This string should be in the form of "Embark: <i>slotName</i> ", where <i>slotName</i> matches the slotName parameter of a regular embarkation slot.                                                                                                                                                                  |
| Element<br>Text | slotType         | Yes      | This field must be "EmbarkPoint". This is what defines this slot as a special VR-Engage Embark Point slot.                                                                                                                                                                                                                                                                                              |





# Index

## #

3D cockpit, 168

## A

AAR, 37

absolute timestamps, 75-76

accuracy, reticle or sight, 130

action

- list, 246

Action menu, 108

- game controller mapping, 212

- mouse and keyboard mappings, 206

- opening, 108

- selecting options, 108

add-on, VR-Engage for VR-Forces, 43

address

- target, 75

advisory, ignoring, 97

Afghan Police Officer, 256

Afghan Soldier, 256

African Insurgent, 257

after-action review, 37

Agent M9, 257

AH-64D Apache Longbow, 290

AH-64E Apache Guardian with FCR, 290

aiming

- grenade, 132

- rifle and handgun, 130

- turret, 157

- weapon, 130

Air mode, running, 86

aircraft, 164

- controlling, 169

- countermeasures, 174

- game controller mapping, 229-230

- gunner, 164

- HMD, 169

- keyboard mappings, 210

- roles, 164

air-to-air

- combat, 176

- target

  - firing at, 179

  - radar, 177

  - sensor view, 180

air-to-ground

- combat, 175

- target

  - laser, 176

  - MGRS coordinate, 175

altitude

- setting for autopilot, 170

Ambulance, 276

Amphibious Combat Vehicle (ACV), 276

AN/PED-1 LLDR, 292

- lasing, 139

anti-aliasing, 86

application

- data, specifying location of, 86-87

- ID

  - DIS, 75

  - HLA, 74

- number, 97-98

- priority, 91

application ID, 98

- range, 98

- Application Number parameter, 74-75
- application, restrictions, 87
- AR, See augmented reality
- ASLAV-25, 277
- assigning task, 143
- asynchronous
  - I/O
    - enable, 99
  - IO
    - DIS, 76
- Asynchronous IO parameter, 76
- attach parameter, 83
- audio, 117
  - global settings, 118
  - MAK radio settings, 115
- augmented reality, 77, 81
  - configuring, 79
  - system requirements, 77
- Australian Soldier EF88, 257
- Australian Soldier XM107, 258
- auto connect period, 87
- auto reconnect period, 87
- autopilot mode, 170
  - setting, 170

## B

- back-end
  - multiple, 84, 89
- battery, civilian drone, 187
- bearing
  - measurement unit, 173
- Beechcraft MC-12 King Air, 286
- binoculars, 146
- bit depth, 88
- brake
  - ground vehicle, slowing, 154
  - parking, 155
- Brazilian Soldier, 258
- buffer
  - depth, 88
  - size, netsocket, 76
- buffer size, 99
  - netsocket, 76
- bullseye
  - north reference, 173
  - selecting, 172
- Bushmaster PMV, 277

## C

- cache
  - specifying directory, 86
- callstack.log file, 44
- camera
  - backup, ground vehicle, 155
  - drone view, 186
  - remote, 192, 195
  - Vive, testing, 81
- capturing images, 204
- car, See also ground vehicle
- car, game controller mapping, 215
- carry person, 141
- CH-47 Chinook, 291
- CH-149 Cormorant, 291
- chaff, 174
- changing
  - human and drone Gamepad control, 188
  - posture, 125
  - role, 69
  - sensor mode, 194
- Chilean M4, 259
- Chilean M16, 258
- Chilean M16-M203, 259
- Choose Role Panel, 69
- choosing
  - role, 62
  - weapon
    - aircraft, 174
    - gunner, ground vehicle, 156
    - soldier, 130
- Civilian Female With Drone, 259
- Civilian Male With Drone, 260
- cloud
  - synchronization, 95
- CLU, 136
- cockpit, 3D, 168
- Colombian Police Officer, 260
- Colombian Soldier, 260
- combat
  - air-to-air, 176
  - air-to-ground, 175
  - ground vehicle, 156
  - soldier, 129
- command launch unit, 136
- command line
  - loading scene, 96
  - loading terrain, 96
  - options, 86
- commander
  - ground vehicle, 157

---

position, 158  
 view, 158  
 command-line option  
   --, 86  
   -a, 97-98  
   -A, 98  
   --airMode, 86  
   --antiAliasing, 86  
   --appCacheDir, 86  
   --appDataDir, 86  
   --appIdRange, 98  
   --appMode, 87  
   --appNumber, 97-98  
   --autoConnect, 87  
   --autoReconnectPeriod, 87  
   -B, 87  
   --bindObservers, 87  
   -c, 87  
   -C, 87  
   --dataDir, 87  
   --defaultObjectTimeout, 98  
   --depthBuffer, 88  
   --destAddrString, 98  
   --deviceAddress, 98  
   --disableDynamicTerrain, 88  
   --disableErrorDialog, 88  
   --disableEscapeKey, 88  
   --disableIndirectEntities, 88  
   --disableIndirectExternalRenderer, 88  
   --disableKDTrees, 91  
   --disableModelSets, 88  
   --disableReverseZBuffer, 88  
   --disableTerrainObserverViews, 89  
   --discoveredModelPreloadFileName, 89  
   --displayEnginePort, 89  
   --disPort, 99  
   --dispSetting, 89  
   --disVersion, 98  
   -e, 89  
   -E, 89  
   --enableDofConstraints, 89  
   --enableMultipleBackends, 84, 89  
   --enablePersistentShadowTechnique, 89  
   --enableSensorFX, 90  
   --enableTracyProfiling, 90  
   --enableVSync, 90  
   --entDispSetting, 90  
   --entityDefsDir, 90  
   --entityGridCellSize, 90  
   --entTypeMap, 89  
   --envSetting, 90  
   --execname, 98  
   --exerciseld, 99  
   --extraArgs, 89  
   -F, 90  
   -f, 97  
   --factoryRootDir, 90  
   --federateName, 98  
   --federateType, 98  
   --fedFileName, 97  
   --fileTransporterReceivePort (DIS), 97-98  
   --fomMapperInitData, 97  
   --fomMapperLib, 97  
   --fomModules, 97  
   --forceTextShaping, 90  
   --fullScreen, 90  
   --groundMode, 90  
   --guiWindowRectangle, 91  
   -h, 91  
   -H, 97-98  
   --help, 91  
   --highestPriority, 91  
   --hostAddressString, 97-98  
   -i, 97  
   --ignore\_rest, 86  
   --ignoreAdvisories, 97  
   --ignoreZoomForSpeedtreeLod, 97  
   --initSettingsFile, 83, 91  
   -K, 91  
   -L, 91  
   -l, 91  
   --limitEarthSplattingTextures, 91  
   --limitEarthTerrainTextures, 91  
   --limitEarthVegetationTextures, 91  
   --limitEntityTextures, 92  
   --limitEntityTexturesExclusions, 92  
   --limitGpuMemoryPercentage, 92  
   --limitTerrainTextures, 92  
   --loadObserverViews, 91  
   --locale, 90  
   --localSettingsDesignator, 97  
   --logFileName, 91  
   -m, 95  
   --mcastTtl, 98  
   --mergeEntityTypeMap, 93  
   --mergeHierarchyEntityDef, 93  
   --mergeHierarchyTacticalGraphicsDef, 93  
   --mergeHierarchyUnitDef, 93  
   --mergeLeafEntityDef, 93  
   --mergeLeafTacticalGraphicsDef, 93  
   --mergeLeafUnitDef, 93  
   --mergeModelDefs, 93  
   --mergeTacticalGraphicsTypeMap, 94  
   --mergeUnitTypeMap, 94  
   --modelPreloadFileName, 94  
   --multicastAddresses, 99

- n, 94
- N, 97
- noAppDataEntityDefs, 94
- noAppDataEntityTypeMap, 94
- noAppDataModelDefs, 94
- noAppDataTacticalGraphicsDefs, 94
- noAppDataTacticalGraphicsTypeMap, 94
- noAppDataUnitDefs, 94
- noAppDataUnitTypeMap, 95
- noGui, 95
- notifyLevel, 94
- O, 95
- overwriteMappingsOnMerge, 94-95
- p, 98
- P, 99
- player station, 99
- plugin, 95
- recvBufferSize, 99
- reportedHostAddressString, 99
- reportedHostAddressString (DIS), 98
- rprFomRevision, 98
- rprFomVersion, 98
- s, 95
- S, 95, 97
- sendBufferSize, 99
- sensorMode, 95
- sessionId, 97
- sharedDataDir, 95
- sharedDataRoot, 95
- sharedDataStem, 95
- showConsole, 87
- siteId, 95
- slave, 95
- stationName, 95
- subnetMask, 99
- suppressHatIntersectOnAttach, 95
- tacticalGraphicsDefsDir, 96
- tcpSendTimeout, 96
- unitDefsDir, 96
- unplug, 96
- useAbsoluteTimeStamps, 96
- useAsyncIO, 99
- useGeographicDdm, 98
- useIpv6, 99
- userDataDir, 96
- v, 96
- version, 96
- windowedMode, 96
- withDisplayEngine, 97
- x, 98-99
- z, 88
- Z, 97
- command-line option, ignore rest, 86
- common operating picture, See COP
- compass
  - display units, 127
  - enabling, 127
  - using, 126
- component mapping, 245
- configuration
  - display, 89
  - entity display, 90
  - environment, 90
  - MAK radio, 112
  - MAK RTI file, 52
  - plug-in
    - adding, 102
    - deleting, 103
  - world cell size, 90
- configuring
  - image properties, 182
  - joystick, 235
  - keyboard entity control, 235
  - SAR request, 182
- connection
  - DIS, device address, 75
  - RadarFX Server, 183
  - SAR, 183
  - to network, automatic, 87
- console mode, 95
- controller
  - flight, 217
  - head-mounted display, 231
  - input types, 239
  - Logitech gamepad, 234-235
  - mapping, 238
  - new, 241
  - supported, 53
  - T.Flight Hotas 4, 223, 226
  - utility, 236
  - Xbox, 233
- controlling
  - aircraft, 169
  - drone, civilian, 187
  - ground vehicle, 152
- coordinateConverterOrigin parameter, 161
- COP, 180
  - focus area, 181
  - information, 180
  - selection, 181
- copilot role, 164
- countermeasures, aircraft, 174
- coverage area, SAR, 183
- crash, application, 45, 338
- creating
  - entity, 64



- simulation model set, 298
- VR-Engage scenario, 318
- crouching, 125
- cryptography, radio, 109
- custom overlays, 324
- customization, 100
- cycle weapon
  - aircraft, 175
  - gunner, 156
  - soldier, 130

## D

- damage
  - human, 128
  - indicator, 128
  - sustaining, 128
  - weapon accuracy, 130
- data
  - directory, 48, 86
    - specifying location of, 87
  - install, 42
    - options, 47
  - shared
    - directory, 95
    - root, 95
  - shared stem, 95
  - user directory, 96
- debugging
  - callstack.log file, 44
  - dmp file, 44
  - file location, 45
- decibel, configuration, 119
- definition
  - entity, directory, 90
- deploying
  - drone, civilian, 188
  - weapon, 133
- depth
  - bits, 88
- designate target
  - commander, 158-159
  - sensor operator, 195
  - soldier, 147
- destination address, 98
  - DIS, 76
- Destination Address parameter, 76
- detonation
  - event, sound effect, 117, 120
- device address, 75, 98
- DI AK-47, 261
- DI Lasing (CIS), 261
- DI Lasing (US), 261

- differential, locking and unlocking, 155
- directional pad, See D-pad
- directory
  - data, 48
  - installed, 48
  - Windows default install, 43
- DIS
  - application ID, 75
  - asynchronous IO, 76
  - connection
    - settings, 75
  - destination address, 76
  - exercise ID, 75, 99
  - multicast TTL, 76
  - port, 75, 99
  - receive buffer size, 76
  - send buffer size, 76
  - timeout interval, 76
  - version, 98
- DIS Version parameter, 75
- disabling
  - mouse control, 124
- Disembark Entity task, 143
- disembarking
  - aircraft, 142
  - vehicle, 141
- display
  - aircraft, 168
  - ground vehicle, 153
  - loading configuration, 89
- display engine
  - connecting to
    - command line, 97
  - port, 89
  - timeout, 96
- DLL, 100
  - plug-in
    - adding, 101
    - removing, 102
  - specifying for plug-in, 101
- dmp file
  - debugging, 44
  - location, 45
- documentation
  - help, 17
  - installation, Windows, 43
- documentation, location of, 49
- door
  - building, opening and closing, 149
  - Stryker, opening and closing, 140
- D-pad
  - Action menu controls, 108
  - aircraft controls, 229-230

- drone controls, 213
- ground vehicle controls, 214-215
- human controls, 212
- sensor operator controls, 230
- drag person, 141
- driver
  - ground vehicle, 153
  - looking around, 154
  - role, 157
- drone operator, role, 186
- drone, civilian
  - battery, 187
  - camera view, 186
  - capturing images, 204
  - changing Gamepad control, 188
  - deploying, 188
  - game controller mapping, 213
  - landing, 189
  - operators, 186
  - recovering, 189
  - restarting use, 188
  - returning home, 189
  - starting, 188
  - stopping use, 188
  - streaming video, 202
  - taking pictures, 204
  - using, 187
- dump file, See dmp file
- dynamic linked library, 100
- dynamic terrain, 88
  - effect on players, 116

## E

- earth file
  - limit splatting textures, 91
  - limit terrain textures, 91
  - limit vegetation textures, 91
- embarkation, 342
  - point-type slots, 344
  - point-type slots, door, 342
  - role-specific, 304
- embarking
  - Stryker, 140
  - vehicle, 69, 140
- emergency light, 160
- Enable Timeout Processing parameter, 76
- enableMultipleBackends parameter, 84
- enabling
  - autopilot mode, 170
  - HLA advisories, 75
  - laser designator, 149
  - mouse control, 124

- sound effects, 118
- ending a scenario, 71
- engaging LAV gear, 154
- entity
  - adding to scenario, 64
  - controllable
    - adding, 299
    - Afghan Police Officer, 256
    - Afghan Soldier, 256
    - African Insurgent, 257
    - Agent M9, 257
    - AH-64D Apache Longbow, 290
    - AH-64E Apache Guardian with FCR, 290
    - Ambulance, 276
    - Amphibious Combat Vehicle (ACV), 276
    - AN/PED-1 LLDR, 139, 292
    - ASLAV-25, 277
    - Australian Soldier EF88, 257
    - Australian Soldier XM107, 258
    - Beechcraft MC-12 King Air, 286
    - Brazilian Soldier, 258
    - Bushmaster PMV, 277
    - CH-47 Chinook, 291
    - CH-149 Cormorant, 291
    - Chilean M4, 259
    - Chilean M16, 258
    - Chilean M16-M203, 259
    - Civilian Female With Drone, 259
    - Civilian Male With Drone, 260
    - Colombian Police Officer, 260
    - Colombian Soldier, 260
    - DI AK-47, 261
    - DI Lasing (CIS), 261
    - DI Lasing (US), 261
  - editing, 300
  - Eurofighter Typhoon, 287
  - F/A-18 Hornet, 287
  - F-16A Fighting Falcon, 287
  - F-35A Lightning II, 287
  - F-35B Lightning II, 288
  - F-35C Lightning II, 288
  - Farmer M9, 262
  - Fiat 124, 277
  - FV 510 Warrior, 277
  - FV4034 Challenger 2 MBT, 278
  - GTK Boxer APC, 278
  - HMMWV Utility Vehicle, 278
  - Insurgent, 262
  - Insurgent M9, 262
  - Iranian Soldier, 263
  - Iraqi Police Officer, 263
  - Iraqi Soldier, 263
  - ISIS Fighter, 264

- Israeli Soldier, 264
- Israeli Soldier M4, 264
- Kurdish Fighter, 265
- LAV III APC, 279
- Libyan Police Officer, 265
- Libyan Soldier, 265
- M1A1 AIM (AUS), 282
- M1A1 AIM (AUS) Mineplow, 282
- M1A1 SA, 282
- M1A2 Abrams MBT, 283
- M1A2 SEP Abrams, 283
- M2A3 Bradley IFV, 283
- M113 APC, 280
- M270 MLRS, 283
- M915 Tractor Truck, 284
- M977 HEMTT Cargo Truck, 284
- M983 HEMTT Patriot Tractor, 284
- M1083 MTV Canvas Cargo Truck, 279
- M1083 MTV Canvas Cargo Truck w/trailer, 279
- M1120A4 HEMTT LHS, 279
- M1126 Stryker ICV with M2, 280
- M1151 ECAC with M2, 281
- M1151 ECAC with M240, 280
- M1151 ECAC with M240B, 280
- M1151 ECAC with MK 19, 281
- M1151 Expanded Capacity Armament Carrier (ECAC), 281
- M1278 L-ATV-GP (JLTV), 281
- MH-60 Black Hawk, 291
- Mideast Combatant, 266
- MiG-29 Fulcrum, 288
- MQ-8B Fire Scout, 291
- MQ-9 Reaper UAV, 288
- MRAP M-ATV, 284
- Pakistani Police Officer, 266
- Pakistani Soldier, 266
- Paratrooper, 267
- Paratrooper M9, 267
- Police Cruiser, 285
- Police Officer With Drone, 267
- Policeman M9, 268
- Remote Camera, 292
- RQ-4 Global Hawk UAV, 289
- RQ-7 Shadow UAV, 289
- RQ-11 Raven UAV, 289
- Russian Rebels, 268
- ScanEagle UAV, 289
- Security Camera, 292
- Security Guard M9, 268
- Singaporean Soldier, 269
- Somali Police Officer, 269
- Somali Soldier, 269
- Sport Hatchback Coupe, 285
- Sport Standard Size Sedan, 285
- Standard MidSize Sedan, 285
- Sudanese Police Officer, 270
- Sudanese Soldier, 270
- Suspect, 270
- Suspect M9, 271
- Syrian Police Officer, 271
- Syrian Soldier, 271
- T-38C Talon, 290
- Taliban, 272
- Technical Truck, 286
- Ugandan Police Officer, 272
- Ugandan Soldier, 272
- UH-60M Blackhawk, 292
- Ural 4320, 286
- US Army Javelin, 273
- US Army Javelin (Tripod), 273
- US Army M4, 274
- US Army M9, 274
- US Army M16, 273
- US Army M16-M203, 274
- US Border Patrol M9, 275
- USMC M4, 276
- USMC M16, 275
- USMC M16-M203, 275
- creating remote camera, 195
- culling, 90
- custom, 308-310, 312
- definition directory, 90
- display settings, 90
- element definition
  - prevent loading, 94
- exclude textures, 92
- existing, 63
- extending, 301
- indirect rendering
  - disable, 88
- leaf file
  - merge, 93
- limit textures, 92
- mapping sound effects to, 120
- new, 299
- remote, placing sensor on, 196
- sound effects, 117
- task, assigning, 143
- tracking with sensor, 193
- type mapping file, 89
  - merge, 93
  - prevent loading, 94
- VR-Forces, 68
- entity parameter, 83
- environment
  - loading configuration, 90

- environment variable
  - MAK\_INSTALL\_DIR, 43
  - MAKLMGRD\_LICENSE\_FILE, 50
  - RTI\_CONFIG, 52
- error message, disable, 88
- Esc key, disable, 88
- escaping a role, 71
- Eurofighter Typhoon, 287
- event, scenario, 117
- exampleStartupConfig.lua, 83
- executable
  - installation location
    - Windows, 43
  - installation locations, 48
- executing a script, 333
- exercise
  - site ID, 95
- exercise ID
  - DIS, 75, 99
- Exercise ID parameter, 75
- extensions, 100
- external renderer
  - indirect, disable, 88
- eyepoint, See observer

## F

- F/A-18 Hornet, 287
- F-16A Fighting Falcon, 287
- F-35A Lightning II, 287
- F-35B Lightning II, 288
- F-35C Lightning II, 288
- factory settings
  - directory, default, 90
- Farmer M9, 262
- fatigue, 128
  - experiencing, 129
  - stamina indicator, 129
  - weapon accuracy, 130
- fault tolerant heap, disabling, 338
- FDD file, 52
- FED file, 52
  - name, 97
- FED File Name parameter, 74
- federate
  - name, 98
  - network interoperability, 37
  - type, 98
- Federate Name parameter, 74
- Federate Type parameter, 74
- federation execution
  - name
    - specifying, 74

- Federation Name parameter, 74
- Fiat 124, 277
- file
  - FDD, 52
  - FED, 52
    - name, 97
  - installed, 48
  - RID, 52
  - structure, 237
  - transporter (DIS), 97-98
  - video, 203
- fire
  - event
    - mapping sound effects to, 120
    - sound effects, 117
- firing a weapon
  - accuracy, 130
  - ground vehicle, 156
  - sensor operator, 195
  - soldier, 131
  - using HMD, 131
- first person view mode, 117
- flaps, raising and lowering, 171
- flare, 174
- flashlight, 146
- FLEXIm, 49
- flight controller, 217
- Follow Me task, 144
- FOM, 51
  - module, 97
- FOM Mapper
  - initialization data, 74, 97
  - library, 74, 97
- FOM Mapper Initialize String parameter, 74
- FOM Mapper Library parameter, 74
- FOM Version parameter, 74
- frame rate, 53
  - setting, 90
- frequency
  - hopping, 109
  - radio, 109
- FTH, 338
- full screen, 95
  - mode, 90
- full-screen mode, 77
- FV 510 Warrior, 277
- FV4034 Challenger 2 MBT, 278

## G

- G27 racing wheel mappings, 215
- G29 racing wheel mappings, 215

- game controller
    - Action menu, 212
    - cars and trucks, 215
    - drone, 213
    - fixed-wing flight control, 229
    - generic numbering, 232
    - human, 212
    - rotary-wing flight control, 230
    - sensor operator, 230
    - vehicle, 214
  - Gamepad, *See also* game controller
    - generic numbering, 232
  - gear, engaging on ground vehicle, 154
  - geocentric terrain
    - configuring Vortex origin, 161
  - geographic DDM
    - enable, 98
  - gesturing, 125
  - GL Studio
    - custom overlays, 327
    - model definition, 328
    - RSO, 328
    - updater, 328
  - GPU performance, 92
  - graphic
    - depth, 88
  - green screen, 81
  - grenade
    - choosing, 130
    - throwing, 132
  - Ground mode, running, 90
  - ground vehicle
    - backup camera, 155
    - braking, 154
    - controlling, 152
    - display options, 153
    - driving, 153
    - gear, shifting, 154
    - gunner, 156
    - mouse and keyboard mappings, 209
    - rear view, 155
    - roles, 152
    - roles on, 69
    - starting, 153
    - steering, 154
    - throttle, 154
    - towing, 160
    - Vortex, 296
      - while untasked, 320
    - weapon
      - firing, 156
      - selecting, 156
      - stabilizing, 157
  - GTK Boxer APC, 278
  - GUI
    - localizing, 54
    - player, 35
    - starting without, 95
    - window size, 91
  - guiTerrain parameter, 83
  - gunner
    - aircraft, 164
    - commander override, 158
    - ground vehicle, 156
    - role, 156-157
- H
- hand controller
    - firing, 131
    - handedness, 131
    - mappings, 231
  - handgun
    - aiming, 130
    - choosing, 130
  - heading
    - display unit
      - human role, 127
      - pilot role, 173
    - setting for autopilot, 170
  - headlights
    - turning on and off, 155
  - head-mounted display, *See* HMD
  - head-up display, 164
    - display options, 168
  - health
    - human, 128
    - level indicator, 128
    - sustaining damage, 128
    - weapon accuracy, 130
  - heap, fault tolerant, 338
  - helicopter, *See also* rotary-wing entity
    - power plant, 171
  - help
    - HTML5, 17
  - help, command-line options, 91
  - help, HTML5, 49
  - hiding
    - weapon, 133
  - hierarchy
    - file
      - merge, 93
  - HLA
    - advisory message
      - enabling and disabling, 75

**HMD**

- aircraft, 169
- controller, 231
- enabling and disabling, 78
- entity control, 66
- eye tracking, 78
- firing weapon, 131
- optimizing performance, 83
- player controls, 121
- setup, 81

HMMWV Utility Vehicle, 278

host address, 97-98

hosting a VR-Forces session, 58

hostname

- license server, 49

HOTAS Warthog, 217

HTC Vive, 77, 131, 231

HUD, 164, 168

- custom, 324

- See also overlay, 324

human, 124

- carrying, 141
- combat, 129
- dragging, 141
- embarkation, 140
- game controller mapping, 212
- gestures, 125
- health and stamina, 128
- lasing, 147
- looking around, 125
- mouse and keyboard mappings, 207
- movement, 125
- navigation, 126
- placing in vehicle, 141
- resetting, 121
- tasking other entities, 143

**ID**

- application, 98
- session, 97
- site, 95

Ignore Advisories parameter, 75

image

- capture, 204
- SAR, properties, 182

implicit DDM configuration, 75

Implicit Geographic DDM parameter, 75

indicator

- flight instruments, 164
- health, 128
- posture, 125

- radar, 176

- stamina, 129

indirect rendering

- external, disable, 88

infrared sensor, 147

initialization data, FOM Mapper, 74

initialization settings, 83, 91

Initialize String parameter, 74

injury

- carry or drag wounded person, 141
- place person in vehicle, 141
- sustaining damage, 128

installation, 42

data

- options, 47
- default directory, Windows, 43
- documentation, Windows, 43
- RTI, 52
- Windows, 42

installing

- VR-Forces plug-in, 43

instrument panel, 166

- display options, 168

Insurgent, 262

Insurgent M9, 262

intercom, 109

- using, 159

intersection, KD trees, 91

interval, timeout, 98

IP address, 98-99

- for outgoing data, 75

IPv6, 99

IR mode, 147

- sensor, 194

Iranian Soldier, 263

Iraqi Police Officer, 263

Iraqi Soldier, 263

ISIS Fighter, 264

Israeli Soldier, 264

Israeli Soldier M4, 264



jamming

- MAK radio frequency, 116

Javelin

- configuring, 134
- equipping, 134
- shoulder-mounted, 136
- tripod, 137

joining a VR-Forces session, 68

joystick

- configuration, 235

## K

- KD tree, 91
- keyboard
  - controlling Action menu, 108
  - entity control, configuration, 235
  - mapping, 238
    - Action menu, 206
    - aircraft, 210
  - mappings, 206-207, 209
- Kurdish Fighter, 265

## L

- ladder, climbing, 126
- landing
  - drone, civilian, 189
  - gear, aircraft, 171
- language, specifying, 90
- laser code
  - defining
    - sensor operator, 194
    - soldier, 149
  - tracking with sensor, 193
- laser designator
  - AN/PED-1 LLDR, 139
  - defining laser code
    - sensor operator, 194
    - soldier, 149
  - enabling, 149, 159
- lasing
  - AN/PED-1 LLDR, 139
  - defining laser code
    - sensor operator, 194
    - soldier, 149
  - displaying a gimbaled sensor view, 149
  - targets, 146
    - commander, 159
    - sensor operator, 195
    - soldier, 147
- launcher
  - configuring, 134
  - equipping, 134
  - Javelin, shoulder-mounted, 136
  - Javelin, tripod, 137
  - RPG, 138
- LAV III APC, 279
- library
  - dynamic, 100
  - FOM Mapper, 74, 97
- Libyan Police Officer, 265

- Libyan Soldier, 265
- license, 37
  - RTDynamics, 38
  - vortex, 38
  - VR-Forces, 38
- license manager, 49
- license server
  - hostname, 49
- light
  - emergency, 160
  - ground vehicle, 155
- Listen for View Controls parameter, 75-76
- LLDR, AN/PED-1, See AN/PED-1 LLDR
- load balancing, 84
- loading
  - display engine configuration, 89
  - entity display settings, 90
  - environment configuration, 90
  - object type mapping, 89
  - plug-ins, 95, 100
  - preventing, 96
  - scene from command line, 96
  - terrain
    - from command line, 96
    - unhosted session, 60
- Local Settings Designator parameter, 74
- locale, specifying, 90
- localization
  - specifying, 90
  - VR-Engage GUI, 54
- location
  - bullseye, selecting, 172
- locking a differential, 155
- log file
  - callstack, 44
  - notification level, 94
  - specifying, 91
- LSR, 194
- LSS, 195
- Lua
  - script, 304
- lying prone, 125

## M

- M1A1 AIM (AUS), 282
- M1A1 AIM (AUS) Mineplow, 282
- M1A1 SA, 282
- M1A2 Abrams MBT, 283
- M1A2 SEP Abrams, 283
- M2A3 Bradley IFV, 283
- M113 APC, 280
- M270 MLRS, 283

- M915 Tractor Truck, 284
- M977 HEMTT Cargo Truck, 284
- M983 HEMTT Patriot Tractor, 284
- M1083 MTV Canvas Cargo Truck, 279
- M1083 MTV Canvas Cargo Truck w/trailer, 279
- M1120A4 HEMTT LHS, 279
- M1126 Stryker ICV with M2, 280
- M1151 ECAC with M2, 281
- M1151 ECAC with M240, 280
- M1151 ECAC with M240B, 280
- M1151 ECAC with MK 19, 281
- M1151 Expanded Capacity Armament Carrier (ECAC), 281
- M1278 L-ATV-GP (JLTV), 281
- MAK data
  - install
  - options, 47
- MAK Data Logger, 37
- MAK ONE integration, 36-37
- MAK radio
  - configuring, 112
  - intercom, 112
  - jamming, 116
  - VOX, 112
  - VR-Forces, 110
- MAK RTI configuration, 52
- MAK\_INSTALL\_DIR environment variable, 43
- MAKLMGRD\_LICENSE\_FILE environment variable, 50
- makRadio, 110
- managing plug-ins, 99
- manual, location of, 49
- mapping
  - keyboard, 206-207, 209
  - mouse, 206-207, 209, 211
  - overwrite on merge, 94-95
  - sound effects, 120
- mappings
  - G27 racing wheel, 215
  - G29 racing wheel, 215
  - game controller
    - Action menu, 212
    - drone, 213
    - fixed wing, 229
    - human, 212
    - rotary wing, 230
    - sensor operator, 230
    - vehicle, 214
- material classification, 30
- MaxBackends parameter, 85
- memory, 53
  - GPU usage, 92
- menu
  - Action, 108
  - script, 332
  - application, 71
- message
  - notification level, 94
  - outgoing, 75
- MFD, 167
- MGRS code, sensor, 193
- MH-60 Black Hawk, 291
- Mideast Combatant, 266
- MiG-29 Fulcrum, 288
- minimap
  - realize model set, 95
- minimap, using, 127
- minion parameter, 83-84
- missile
  - aircraft, 174
  - Javelin, shoulder-mounted, 136
  - Javelin, tripod, 137
- mixed reality, 77, 81
  - configuring, 79
  - system requirements, 77
- mixed reality headset, Windows, 77
- mode
  - autopilot, 170
  - setting, 170
  - full screen, 77
  - sensor, changing, 194
  - view, 117
  - VR-Engage, 61
  - windowed, 77
- mode parameter, 83
- model
  - custom, 308-310, 312
  - definition
    - prevent loading, 94
  - preloading
    - file, 94
    - list, 89
- model definition
  - merging, 93
- model set, disable, 88
- modulation
  - detail, 109
  - major, 109
  - system, 109
- monitor
  - display options for aircraft, 168
- motioning, 125
- mouse
  - control, enabling and disabling, 124
  - controlling Action menu, 108



- mappings, 206-207, 209, 211
    - Action menu, 206
- Move to Location task, 145
- Move to My Location task, 145
- movement
  - dynamic terrain, 116
- moving
  - on ladders, 126
  - on terrain, 125
  - turret, 157
  - weapon accuracy, 130
- MQ-8B Fire Scout, 291
- MQ-9 Reaper UAV, 288
- MR, See mixed reality
- MRAP M-ATV, 284
- multicast
  - address
    - specifying, 99
- multicast TTL
  - DIS, 76
  - setting, 98
- Multicast TTL parameter, 76
- multi-function display, 166-167
- multiple
  - back-end, 84, 89
  - simulation engines, 84

## N

- navigation
  - compass, 126
  - minimap, 127
- netsocket, 76
- network
  - connecting to
    - automatically, 87
  - interoperability, 37
- network card, 75
- night vision goggles, 147
- noise
  - level, 118
  - sound effects, 117
- notification level
  - setting, 94
- number key, controlling Action menu, 108
- NVG, 147
  - sensor mode, 194

## O

- object
  - count, 53

- timeout interval, 98
- object type mapping
  - loading, 89
- observer, 313
  - binding to view, 87
  - publishing, 75-76
  - view
    - disable, 89
    - file, loading, 91
- observer views, 121
- ocean
  - synchronization, 95
- Oculus Rift, 77, 131, 231
- opening
  - Action menu, 108
  - doors and windows, 149
  - Stryker door, 140
- operator
  - drone, 186
  - sensor, 192
- optimizing
  - performance, 53
  - virtual reality, 83
- option
  - command-line, 86
- outgoing PDU, 75
- overlay
  - custom, 324
  - GL Studio, 327
  - scripted, 325
  - sensor, 327
  - examples, 324
  - sensor operator, 198
  - types, 324
- Override Global View Control Setting parameter, 75-76

## P

- Pakistani Police Officer, 266
- Pakistani Soldier, 266
- panel
  - choose role, 62
  - instrument, 166
- parachuting, 142
- parameter
  - Application Number, 74-75
  - Asynchronous IO, 76
  - attach, 83
  - coordinateConverterOrigin, 161
  - Destination Address, 76
  - DIS Version, 75

- Enable Timeout Processing, 76
  - enableMultipleBackends, 84
  - entity, 83
  - Exercise ID, 75
  - FED File Name, 74
  - Federate Name, 74
  - Federate Type, 74
  - Federation Name, 74
  - FOM Mapper Initialize String, 74
  - FOM Mapper Library, 74
  - FOM Version, 74
  - guiTerrain, 83
  - Ignore Advisories, 75
  - Implicit Geographic DDM, 75
  - Initialize String, 74
  - Listen for View Controls, 75-76
  - Local Settings Designator, 74
  - MaxBackends, 85
  - minion, 83-84
  - mode, 83
  - Multicast TTL, 76
  - Override Global View Control Setting, 75-76
  - Port, 75
  - Publish Observers, 75-76
  - Receive Buffer Size, 76
  - scenario, 83
  - Send Buffer Size, 76
  - Show Self Published Objects, 76
  - Site ID, 75
  - Site Number, 74-75
  - terrain, 83
  - Timeout Interval, 76
  - Paratrooper, 267
  - Paratrooper M9, 267
  - paratrooper, parachuting, 142
  - parking brake, releasing and engaging, 155
  - path
    - default Windows install, 43
    - MAK RTI, 52
  - paused, 71
  - pausing a scenario, 71
  - PDB files
    - Linux, 44
    - Windows, 44
  - performance
    - anti-aliasing, 86
    - fault tolerant heap, 338
    - graphics, depth, 88
    - headset, 79
    - load balancing, 84
    - optimizing, 53, 338
    - setting application priority, 91
    - stencil bits, 96
    - virtual reality, 79
  - persistent shadow technique, 89
  - perspective, commander, 158
  - pivoting tank, 160
  - player station
    - command-line options, 99
  - playerStation.lua, 84
  - plug-in
    - adding, 100
    - configuration
      - adding, 102
      - deleting, 103
  - DLL
    - adding, 101
    - removing, 102
    - specifying, 101
  - initializer, 89
  - loading, 95, 100
  - managing, 99
  - prevent loading, 96
  - VR-Engage for VR-Forces, 43
  - XML file, 100
    - deleting, 103
  - Police Cruiser, 285
  - Police Officer With Drone, 267
  - Policeman M9, 268
  - port
    - DIS, 75
  - Port parameter, 75
  - position, commander, 158
  - posture
    - changing, 125
    - indicator, 125
    - weapon accuracy, 130
  - power plant, controlling, 171
  - power, SAR, 183
  - priority
    - application, 91
  - product installation, 42
    - Windows, 42
  - prone posture, 125
  - property
    - SAR image, 182
  - pseudo noise, 109
  - Publish Observers parameter, 75-76
  - publishing
    - observer, 75-76
- 
- Qt Linguist, 54
  - quadcopter, See drone, civilian

## R

### radar

- Range While Scan, 177
- select multiple targets, 179
- Single Track Target, 177
- synthetic aperture, 181
- system, 176
- target, air-to-air, 177
- Track While Scan, 177
- warning receiver, 173

### RadarFX Server, 181

### radio

- application, 110
- enabling on startup, 116
- settings, 109
- using, 109
- VR-Forces, 110

### Range While Scan, radar, 177

### RDE, 30, 35

### rearview camera, 155

### receive buffer size, 76, 99

- DIS, 76

### Receive Buffer Size parameter, 76

### reloading, 133

### Remote Camera, 292

### remote camera, sensor operator, 192

### remote display engine

- connecting, 36
- multiple instances, 86
- support, 35

### remote entity, placing sensor on, 196

### remote sensor, configuring offset, 196

### requesting a SAR image, 181

### resetting

- entity, 121
- sensor, 194

### restarting civilian drone usage, 188

### restoring

- entities, 121

### restrict application access, 87

### reticle, accuracy indicator, 130

### returning civilian drone to home, 189

### reverse Z buffer

- disable, 88

### revision, RPR FOM, 98

### RID file, 52

### rid.mtl file, 52

### rifle

- aiming, 130
- choosing, 130

### rocket launcher, See RPG

### rocket-propelled grenade launcher, See RPG

### role

- adding entity, 64
- aircraft, 164
- assigning in VR-Forces, 66
- changing, 69
  - by embarking, 69
  - by menu, 70
- choosing, 62
  - existing, 63
- commander, 157
  - gunner override, 158
  - laser designator, 159
  - slew to cue, 158
- configuration, 237
- copilot, 164
- driver, 157
- escaping, 71
- ground vehicle, 69, 152
- gunner, 156-157
- Lua file, 304
- overview, 31
- sensor operator, 192
- sling load operator, 164

### rotary-wing entity

- engine power, 171
- power plant, 171

### RPG

- configuring, 134
- equipping, 134
- using, 138

### RPR FOM

- revision, 98
- specifying version, 74
- version, 98

### RQ-4 Global Hawk UAV, 289

### RQ-7 Shadow UAV, 289

### RQ-11 Raven UAV, 289

### RTDynamics, 38

### RTI, 51

### RTI\_CONFIG environment variable, 52

### Russian Rebels, 268

### RWS, radar, 177

## S

### SAR image, 181

- request configuration, 182
- requesting, 181
- server connection, 183

### ScanEagle UAV, 289

### scenario

- creating, 318

- ending, 71
- hosting
  - in VR-Engage, 320
  - in VR-Forces, 320
- pausing, 71
- state, 71
- scenario event, 117
- scenario parameter, 83
- scene
  - loading from command line, 96
- screen
  - multiple, aircraft, 168
  - number, specifying, 92
- script
  - activating, 332-333
  - adding to menu, 332
  - role configuration, 329
  - startup, 83
- scripted overlays, 325
- Security Camera, 292
- Security Guard M9, 268
- selecting
  - bullseye, 172
  - targets, 179
- send buffer size, 76, 99
  - DIS, 76
- Send Buffer Size parameter, 76
- sensor
  - capturing images, 204
  - centering on screen, 193
  - display
    - changing, 194
    - gimballed sensor view, 149
  - focusing, 180, 193
  - infrared, 147
  - IR mode, 194
  - mode
    - crew member, 159
    - sensor operator, 194
  - night vision, 147
  - NVG mode, 194
  - operator, 192
    - firing weapons, 195
    - lasing, 195
  - placing on remote entity, 196
  - range, 192
  - remote, configuring offset, 196
  - resetting, 194
  - streaming video, 202
  - street, tracking, 193
  - taking pictures, 204
  - tracking, 193
    - laser code, 193
    - MGRS, 193
  - tracking, reset, 78
  - visual mode, 194
- sensor operator, 192
  - game controller mapping, 230
  - mouse mappings, 211
- sensor overlay, 327
- SensorFX, 30
  - enable, 90
- session
  - hosting VR-Forces, 58
  - ID, 97
  - scenario
    - creating, 318
    - hosting, 320
  - starting, 73
  - unhosted, 60
  - VR-Forces, joining, 68
- set data request
  - Vortex while untasked, 320
- settings
  - environment configuration, 90
  - initialization, 83, 91
  - local, RTI, 97
- shadow
  - persistent, enable, 89
- shared data
  - directory, 95
  - root, 95
  - stem, 95
- Show Self Published Objects parameter, 76
- sight
  - weapon, 130
- sight, weapon, 130
- signaling, 125
- simulation engine
  - multiple, 84, 89
- simulation model set
  - extending, 298, 308
  - in use, 60
  - new, 298, 300
  - SOE, 309
  - upgrading, 48
- simulation network
  - connecting to, 73
- simulation object, 53
- Simulation Object Editor, 296
- Singaporean Soldier, 269
- Single Track Target, radar, 177
- siren, emergency, 160
- site ID, 95
- Site ID parameter, 75
- Site Number parameter, 74-75

- slew to cue, 158
- sling load operator role, 164
- SO file, 100
- socket
  - send and receive buffer size, 76
- soldier, *See* human
- Somali Police Officer, 269
- Somali Soldier, 269
- sound effects, 117
  - decibel, 119
  - enabling, 118
  - mapping to entities, 120
- sound, radar warning receiver, 173
- Spark quadcopter. *See* drone, 187
- specifying
  - federation execution name, 74
  - language, 90
  - log file, 91
  - notification level, 94
  - RPR FOM version, 74
- SAR
  - coverage area, 183
  - power, 183
- SpeedTree
  - LOD, zoom, 97
  - synchronization, 95
- Sport Hatchback Coupe, 285
- Sport Standard Size Sedan, 285
- stabilizing a turret, 157
- stamina, 128
  - indicator, 129
  - losing, 129
- Standard MidSize Sedan, 285
- standing, 125
- starting
  - drone usage, 188
  - session, 73
  - VR-Engage, 58
- startup
  - script, 83
- state
  - scenario, 71
- station name, 95
- SteamVR, 77
  - setup, 81
  - testing camera, 81
- stencil bits, 96
- stopping
  - drone use, 188
- stowing a weapon, 133
- streaming video
  - drone, civilian, 202
  - receiving, 203
  - sensor, 202
- street, tracking with sensor, 193
- Stryker, embarking on, 140
- STT, radar, 177
- subnet mask, 99
- Sudanese Police Officer, 270
- Sudanese Soldier, 270
- Suspect, 270
- Suspect M9, 271
- switching
  - commander position, 158
  - human and drone Gamepad control, 188
  - sensor mode, 194
- synthetic aperture radar, 181
- Syrian Police Officer, 271
- Syrian Soldier, 271

## T

- T.Flight Hotas 4 controller, 223, 226
- T.Flight Hotas X, 217
  - fixed-wing mappings, 223
  - rotary-wing mappings, 226
- T-38C Talon, 290
- tactical graphic
  - element definition
    - prevent loading, 94
  - hier file
    - directory, 96
    - merge, 93
  - leaf file
    - directory, 96
    - merge, 93
  - type map
    - merge, 94
    - prevent loading, 94
- taking pictures, 204
- Taliban, 272
- tank, *See also* ground vehicle
  - commander, 157
  - pivoting, 160
- target
  - air-to-air, radar, 177
  - air-to-ground
    - laser, 176
    - MGRS coordinate, 175
  - following with sensor view, 180
  - lasing, 146
    - sensor operator, 195
    - soldier, 147
    - select multiple, 179
- target address, 75

- task
  - assigning to entity, 143
  - Disembark Entity, 143
  - Follow Me, 144
  - Move to Location, 145
  - Move to My Location, 145
- Technical Truck, 286
- terrain, 36
  - dynamic, 88, 116
  - limit textures, 92
  - loading
    - from command line, 96
    - unhosted scenario, 60
  - moving on, 125
- terrain parameter, 83
- text
  - left-to-right, 90
- texture
  - earth file
    - limit splatting, 91
    - limit terrain, 91
    - limit vegetation, 91
  - entity
    - limit exclusions, 92
    - limit mipmap, 92
- third-person view mode, 117
- throttle
  - ground vehicle, 154
- throwing a grenade, 132
- Thrustmaster Warthog
  - fixed-wing mappings, 218
  - rotary-wing mappings, 221
- Thunderbolt, 77
- time stamp, See timestamp
- timeout
  - interval, 98
  - interval, DIS, 76
- Timeout Interval parameter, 76
- timestamp
  - absolute, 75-76
  - enable, 96
- torch, See flashlight
- touch controller
  - firing, 131
  - handedness, 131
  - mappings, 231
- tow a vehicle, 160
- Track While Scan, radar, 177
- tracking
  - entity, 193
  - waypoint, 193
- tracking sensor, resetting, 78

- Tracy Client
  - enable, 90
- translation, VR-Engage GUI text, 54
- triggering
  - event, VR-Forces, 117
  - script, 333
- troubleshooting, 338-339
- truck, See also ground vehicle
  - game controller mapping, 215
- turret
  - aiming, 157
  - moving, 157
  - stabilization, 157
- TWS, radar, 177

## U

- Ugandan Police Officer, 272
- Ugandan Soldier, 272
- UH-60M Blackhawk, 292
- unhosted session, 60
- unit
  - element definition
    - prevent loading, 94
  - hier file
    - directory, 96
    - merge, 93
  - leaf file
    - directory, 96
    - merge, 93
  - type map
    - merge, 94
  - type mapping file
    - prevent loading, 95
- unlocking a differential, 155
- Ural 4320, 286
- US Army Javelin, 273
- US Army Javelin (Tripod), 273
- US Army M4, 274
- US Army M9, 274
- US Army M16, 273
- US Army M16-M203, 274
- US Border Patrol M9, 275
- user
  - data, specifying directory, 96
- USMC M4, 276
- USMC M16, 275
- USMC M16-M203, 275

## V

- Valve Index, 77

- variable, environment, 50
- Varjo, 77
- vehicle
  - changing role, 70
  - disembarking from, 141
  - embarking on, 69, 140
  - game controller mapping, 214
  - intercom, 159
  - resetting, 121
- version
  - displaying, 96
  - RPR FOM, 98
- video
  - RAM crash, 338
  - receiving stream, 203
- video card, processor speed, 53
- video stream, 202
  - drone, civilian, 202
  - file, 203
  - file settings, 203
  - sensor, 202
- view
  - commander, 158
  - mode, 117
  - observer, 121
  - observer, load file, 91
- viewpoint, *See* observer
- virtual reality, 77, 81
  - configuring, 79
  - enabling and disabling, 78
  - optimizing, 83
  - performance, 79
  - system requirements, 77
  - tracking sensor, resetting, 78
- visual sensor
  - mode, 194
  - vehicle crew, 159
- Vive, 131
  - setup, 81
  - testing camera, 81
- Vortex
  - configuring
    - for geocentric terrain, 161
    - ground vehicles, 296
    - game controller mapping, 215
- Vortex While Untasked set data request, 320
- vortexTerrainConfig.lua, 161
- VR, *See* virtual reality
- VRAM issues, 338
- VR-Engage, 30
  - add-on for VR-Forces, 43
  - extending, 37
  - plug-in for VR-Forces, 318
  - starting, 58
  - user modes, 61
- VR-Engage Air, 86
- VR-Engage Ground, 90
- VR-Engage Sensor Operator, 95
- VR-Forces
  - add-ons installer, 318
  - create VR-Engage scenario, 318
  - entity, 68
  - integration, 36
  - radio, 110
  - scenario, 317, 320-321
  - session, hosting, 58
  - VR-Engage add-on, installing, 43
  - VR-Engage manager panel, 66
  - VR-Engage plug-in, 318
  - VR-Engage plug-in, installing, 43
- VR-Forces plug-in, 43, 318
- VSync, 90

## W

- waypoint
  - tracking with sensor, 193
- weapon
  - accuracy, 130
  - aiming, 130
  - aircraft
    - choosing, 174
    - firing, 175-176, 179
  - deploying or stowing, 133
  - firing
    - ground vehicle, 156
    - sensor operator, 195
    - soldier, 131
    - with HMD, 131
  - gunner role, selecting, 156
  - reloading, 133
  - sight, 130
  - soldier role, 129-130
- window
  - opening and closing, 149
  - specifying, 90
- windowed mode, 77, 96
- Windows
  - default install directory, 43
  - product installation, 42

## X

- Xbox controller, *See also* game controller
  - generic numbering, 232

### XML

- file, plug-in, 100

- deleting, 103

- RTI configuration file, 52

XR, See also augmented reality

XTAL, 77

- setup, 81

## Z

Z-fighting, 88

### zoom

- binoculars, 146

- SpeedTree LOD, 97







VRN-2.1.1-1-241001