



VR-Vantage Stealth

First Experience

Copyright © 2011 VT MÄK
All rights Reserved. Printed in the United States.

Under copyright laws, no part of this document may be copied or reproduced in any form without prior written consent of VT MÄK.

VR-Exchange™ and VR-Vantage™ are trademarks of VT MÄK.
MÄK Technologies®, VR-Forces®, RTIspy®, B-HAVE®, and VR-Link® are registered trademarks of VT MÄK.

DI-Guy™ is a trademark of Boston Dynamics.

GL Studio® is a registered trademark of The DiSTI® Corporation.

Portions of this software utilize SpeedTree® RT technology (©2008 Interactive Data Visualization, Inc.). SpeedTree® is a registered trademark of Interactive Data Visualization, Inc. All rights reserved.

SilverLining™ is a trademark of Sundog Software.

All other trademarks are owned by their respective companies.

VT MÄK
68 Moulton St.
Cambridge, MA 02138 USA

Voice: 617-876-8085
Fax: 617-876-9208

info@mak.com
www.mak.com

Revision VRV-1.3-4-110513



VR-Vantage Stealth First Experience

Thank you for deciding to try out VR-Vantage Stealth. VR-Vantage Stealth is MÄK's 3D information station for the virtual battlefield. It is a 3D visualization application that provides the information you need, when you need it.

This first experience with VR-Vantage Stealth will be a quick guided tour of some its most important features. To get the full experience you will need:

- ♦ VR-Vantage Stealth
- ♦ MAK Data Logger.

Before you begin, install and license the software. Please see Section A, "[Install VR-Vantage and Supporting Applications and Data](#)" for instructions.

When you are ready, this guide will help you:

- ♦ [Explore the Terrain](#)
- ♦ [View a Simulation](#)
- ♦ [Attach the Observer to Entities](#)
- ♦ [Explore Streaming Terrain](#)
- ♦ [Manipulate Objects in the Scene](#)
- ♦ [Continue to Explore VR-Vantage Stealth.](#)

 
VR-Vantage Stealth is part of MÄK's VR-Vantage product line. VR-Vantage Stealth is built using the VR-Vantage Toolkit. Using the toolkit, developers can extend the capabilities of our applications and can create entirely new applications. For more information, please read *VR-Vantage Developers Guide*, which is in the *.doc* directory.

1. Start VR-Vantage Stealth


- On the Start menu, choose **Programs → MÄK Technologies → VR-Vantage 1.2 → VR-Vantage Stealth**. VR-Vantage Stealth starts up. (The first time you run VR-Vantage Stealth, you will have to specify the license server.)

1.1. Specify the License Server

The first time you run a MÄK application on a computer, the License Setup dialog box opens. It prompts you to enter the hostname of the license server and optionally, a port number.

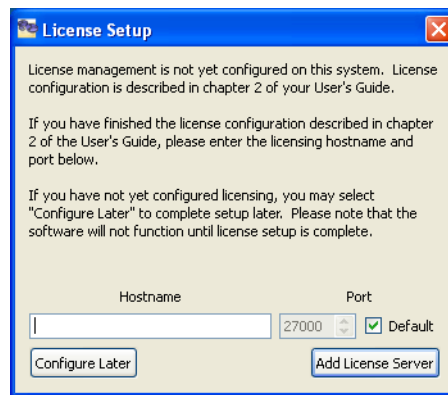

 1. Type the hostname in the Hostname box. This is the name you gave your salesperson when you requested the license file. (For details, please see (Section B.1, “Identify the Host ID and License Server Name”).)
2. Click Add License Server. VR-Vantage Stealth starts. The Choose a Terrain window opens on top of the main window. It lets you immediately connect to a terrain server, load a local terrain, or decide not to load a terrain.

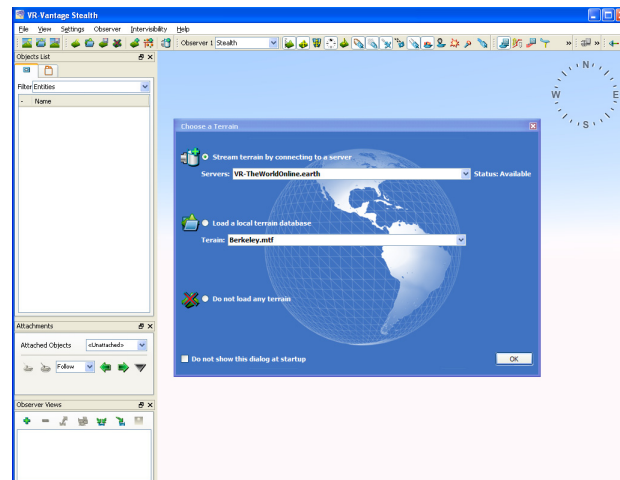




When you start VR-Vantage Stealth, if you receive the following message, it means that you did not install the data package:

```
Data package not found in specified data directory:  
'c:\MAK\vrvantagel.3\data'.  
Please make sure the data package is installed.
```

VR-Vantage Stealth has an application installer and a data installer. You must install both of them.

 3. Select Load a Local Terrain Database.
4. In the list, select *VR-Village_NoSpeedTrees.mtf*.
5. Click OK. The VR-Village terrain loads. If the view does not look like the following illustration, press the **Spacebar**.

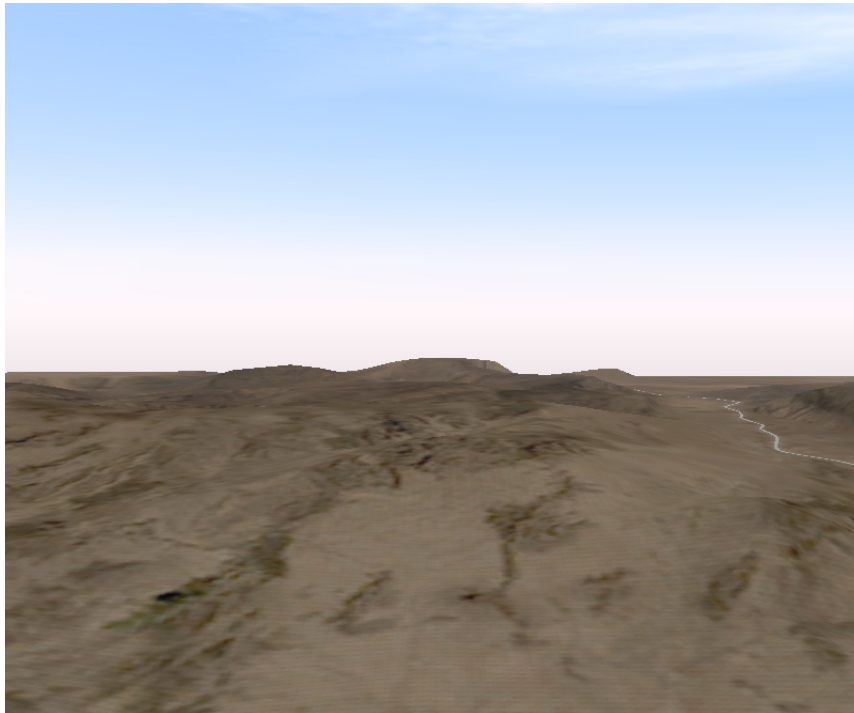

2. Explore the Terrain

The observer is your viewpoint into the terrain. You can navigate through the terrain using the keyboard and mouse. This section introduces the basic keyboard and mouse actions. For a complete list, please see online help or the Quick Reference Card in *VR-Vantage Users Guide*.

1. Hold down the **e** key. This drops the observer down into the village.



2. Hold down the **s** key to back through the village towards the entrance road. If the observer stops moving, it may be blocked by a building or terrain. Press **q** to raise the observer a bit.
3. Experiment with keyboard and mouse control of the observer as described in the next few sections.

2.1. Use the Game-like Keyboard Navigation

 
Press **w** and **s** to move forward and backward.
Press **e** and **q** to move up and down. Press **a** and **d** to move left and right.

Press multiple keys to combine movement modes. Notice that you cannot go through walls or through the ground — unless you want to. Press and hold **x** while moving the observer and you can go through walls and terrain.



Press the **Spacebar** to move the observer to the default starting point.

The keypad lets you control position and orientation.

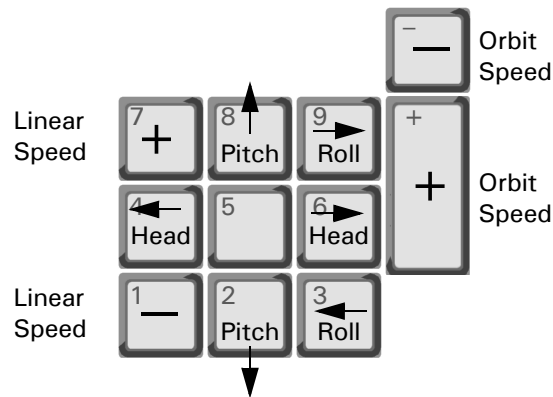

2.2. Use the Mouse to Move the Observer

Drag the Terrain

Dragging the terrain moves the observer forward, backward, left, and right.

1. Click a point on the terrain and hold down the left mouse button.
2. Drag the mouse left, right, forward, and backward.

Drag the View

Dragging the view moves the observer up, down, left, and right.

- Hold down the middle mouse button (or wheel) and drag the mouse.

Change the Observer's Orientation

- Hold down the right mouse button and drag the mouse.

Teleport the Observer

- **Shift**+click someplace on the terrain to jump to the location.

2.3. Change the Environment

VR-Vantage lets you manipulate the environment. This just affects how the scene looks. It does not affect the simulation you are viewing.

Make it Rain and Snow

1. Choose **Settings** → **Scene**. The Scene Settings dialog box opens.
2. Select the Environment Settings page.
3. Select the Precipitation Enabled check box. It starts to rain.
4. On the Precipitation Type drop-down list, select Snow.



5. In the Precipitation Intensity box, change the intensity to .50.
6. Clear the Precipitation Enabled check box.

Add a Cloud Layer

1. Choose **Settings** → **Scene**.
2. Select the Environment Settings page.
3. Click the Add icon (+) to the right of the list of cloud layers. The Add Cloud Layer dialog box opens.
4. In the Cloud Type drop-down list, select Cumulus Congestus.
5. Click OK. See how the cloud layers change in the scene.

Change the Time of Day

1. Choose **Settings** → **Scene**.
2. Select the Date and Time page.
3. In the Time group box set the value using the spinner controls. See how the lighting changes as you change the time.

2.4. Save the Scene

1. Choose **File** → **Save Scene**. The Save Scene dialog box opens.
2. Type a name for the scene. Include the extension .msf.
3. Click Save.

3. View a Simulation

To view a simulation, you must load an appropriate terrain and connect to the simulation network. In this guide we assume that you have the MÄK Data Logger and the recorded simulations that it includes. However, if you want to view your own simulation data, feel free to use it instead of the suggested files.

3.1. Connect to a Simulation Network

1. Choose **Settings** → **Connection**. The Simulation Connections dialog box opens.
2. Select the DIS Connections page.
3. Click Connect.

3.2. Load the Terrain

If you have not already loaded the VR-Village terrain, as explained in “[Start VR-Vantage Stealth](#),” on page 2, load it now.

1. Choose **File** → **Open Terrain**. The Open Terrain dialog box opens.
2. Select *VR-Village_NoSpeedTrees.mtf*.
3. Click Open. In a few seconds, the terrain is displayed.

3.3. Start the Logger and Play a Simulation

 
1. On the Start Menu, choose **Programs** → **MÄK Technologies** → **Logger X.X** → **Logger DIS**. The Logger starts.
2. Choose **File** → **Open**. The Open File dialog box opens.
3. Select *VR-Village-CarBombDemo-v3-DIS.lgr*. (If you are using Logger 4.3 or earlier, load *VR-Village-CarBombDemoDIS.lgr*.)
4. Click Open.
5. Choose **Play** → **Toggle Loop at End**. This will cause the recording to continuously loop back to the beginning when it reaches the end.
6. Choose **Play** → **Play/Pause**, or click the Play button.

3.4. View the Simulation

VR-Vantage Stealth will take a few seconds to load model files. Then it will start to display the action in this simulation. The Logger file sends view control messages to VR-Vantage Stealth to control the observer. Watch the simulation for a while. When you are ready to explore the simulation on your own, disable view controls.

Disable View Controls

1. Choose **View** → **Observer Control Panel**. The Observer Control Panel gets added to the set of panels on the left side of the window.
2. On the Observer Control Panel, clear Accept View Controls. Now, VR-Vantage Stealth will not respond to newly received view controls.
3. On the Attachments Panel, click the Attach/Detach icon. The observer stops following the entity to which it was attached.

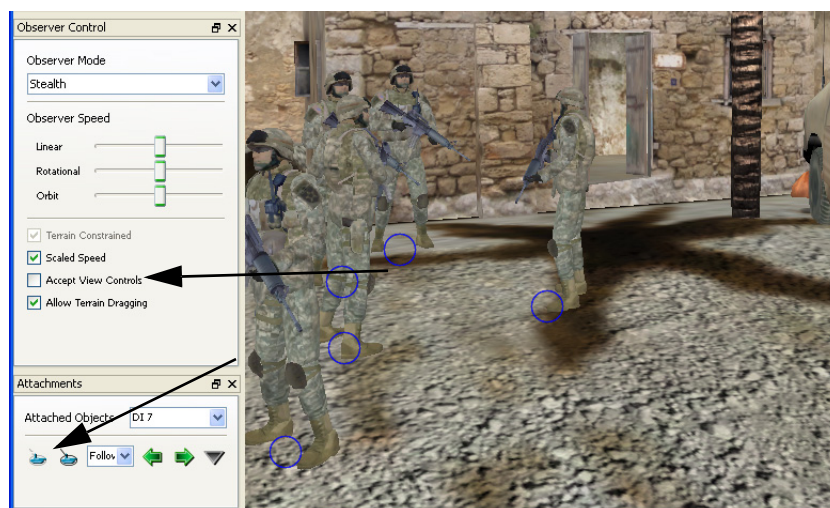

Use the navigation controls you learned earlier to navigate through the village and watch the simulation from the viewpoints that interest you.

View Entity Information

Entity labels mark an entity's location and provide detailed information about it.

 
1. Look at an entity. If it does not have a small circle on it (an entity label), choose **Settings** → **Entity Labels**. Entity labels are displayed for each entity.
2. Move the mouse cursor over an entity label. A panel displays entity details, as shown in the illustration.




3. Zoom out from the terrain so that you can no longer easily see individual entities. You can still tell where they are by looking at the entity labels.

View Track Histories

1. Press the **s** key to zoom out a bit from the village.
2. Choose **Observer** → **Track Histories**.
3. As entities move notice that they leave a track showing their path.

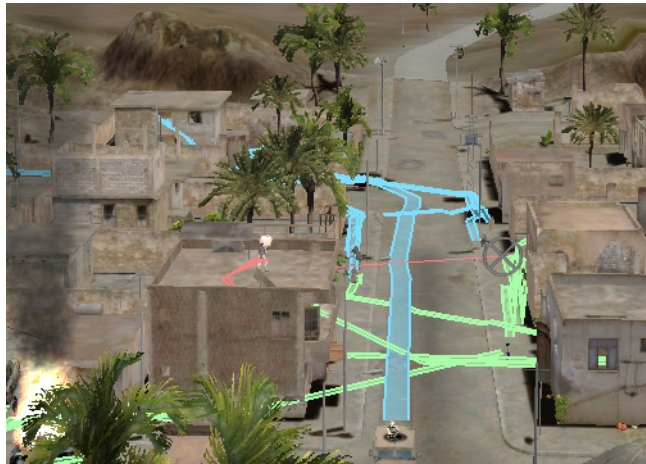

 4. Choose **Settings** → **Wireframe Rendering**. The VR-Village terrain has underground passages. If entities are currently moving through the passages, you can see their track history.

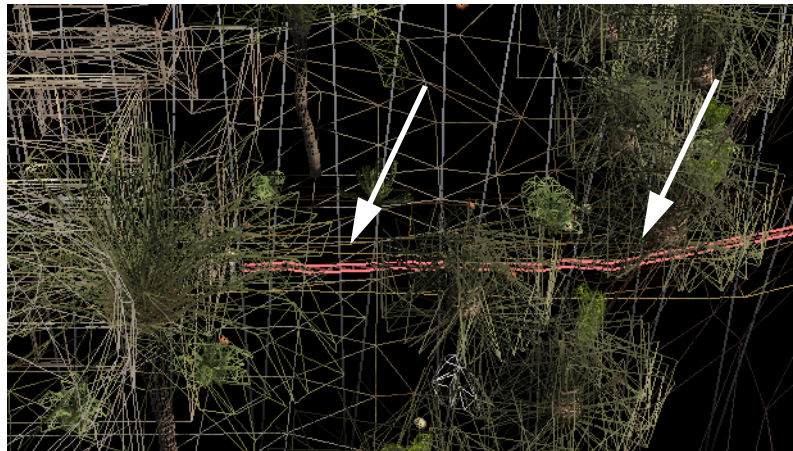

5. Turn off Track Histories and Wireframe Rendering.

When you are done exploring VR-Vantage with this simulation, stop the Logger.

4. Attach the Observer to Entities

So far, you have moved the observer through the scene to observe entities and you have seen the view change as the result of view control messages. Those view control messages were moving the observer to static locations or attaching the observer to entities so that it moved with them. You can also attach the observer to entities manually.

1. In the Objects List Panel, right-click UtilRW 2. A popup menu is displayed.
2. Choose **Attach Follow**. The observer is now attached to the helicopter and is located to its rear. As the helicopter moves, the observer will move with it. You can change the position and orientation of the observer with the keyboard and mouse controls you learned earlier, but it will maintain its relationship with the helicopter and move through the scene as the helicopter moves.
3. Press . (period). The attachment moves to the next entity in the Objects List Panel.
4. Continuing attaching to additional entities.
5. Press **z** to detach the observer.

4.1. Attach to an Entity that has a Cockpit Display

VR-Vantage is based on OpenSceneGraph (OSG), so developers can integrate third-party modules that are built on OSG. GL Studio, from DiSTI, is an application for building cockpit displays (also called heads-up displays, or HUDs). VR-Vantage includes a set of these displays for different vehicle types.

1. In the Objects List Panel, right-click UtilRW 2. A popup menu is displayed.
2. Choose **Attach Mimic**. The observer attaches to the helicopter and its cockpit is displayed.



3. To see other cockpit displays, attach to SmWhel 1 and CivVeh 1 in Mimic mode.
4. Press **z** to detach the observer.

5. Explore Streaming Terrain

In addition to displaying terrain data stored on your computer or a local disk, VR-Vantage Stealth can display streaming data from a terrain service.

5.1. Connect to a Terrain Server

1. Choose **File** → **New Terrain**. The loaded terrain is cleared.
2. Choose **Settings** → **Terrain**. The Terrain Settings dialog box opens.
3. Select the Terrain Contents page (Figure 1).

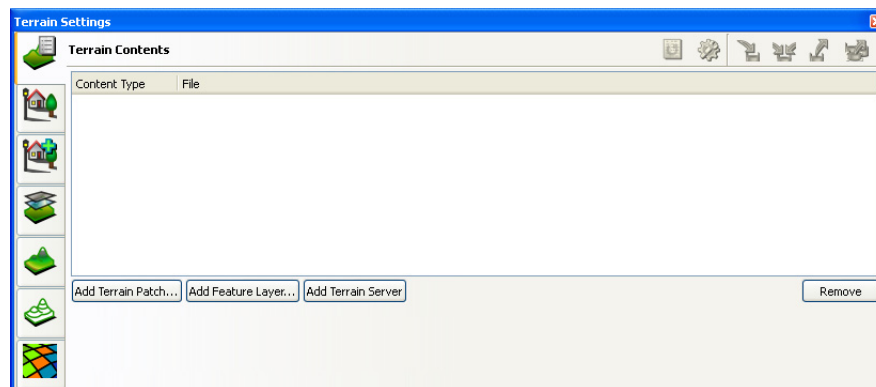 


Figure 1. Terrain Contents

4. Click Add Terrain Server. The Add Terrain Server dialog box opens (Figure 1). The dialog box contains information about the selected terrain server. It is not editable.
5. Select VR-TheWorldOnline.earth¹ from the Servers drop-down list.
6. Click Connect. The whole earth is displayed.



1. VR-TheWorld is a terrain server hosted by VT MÄK. If you access a different server, please note its terms of service. Many commercial sites like Google, Yahoo, and ESRI have specific restrictions on commercial use. It is your responsibility to abide by these terms.

Navigate the Earth

Use the keyboard and mouse to navigate the display. Zoom in and out. As you zoom in, more detailed terrain is displayed.

5.2. View a Combat Scenario

The scenario for this part of the evaluation was made with high fidelity air combat models plugged into VR-Forces, MÄK's computer generated forces product.

 
Run the Demonstration File

1. If the Logger is not still running from a previous exercise, start it.
2. Load *IISEC_VPMM_Demo_Final-DIS.lgr*. (It might also be called *IISEC_VPMM_Demo_Final.lgr*.)
3. Play the file.
4. If VR-Vantage is not connected to the DIS network, connect it as described in [“Connect to a Simulation Network,”](#) on page 7. (This recording is a DIS recording.)

View the Scenario


In this scenario, a friendly fighter (GenFLT 1) is escorting a cargo plane (C-130 1). Two opposing force fighters (FtrFW 1 and FTRFW 2) threaten the convoy. The fighters engage and GenFLT 1 shoots down the opposing fighters. Several minutes later, GenFLT 1 launches flairs in response to an attack from a surface-to-air missile battery (SAM 1). In this figure, we have zoomed in from the entire earth, as in the previous figure, to an area above California, USA. Entity labels identify the entities.

(If you do not see the entity labels, enable them as described in [“View Entity Information,”](#) on page 9.)

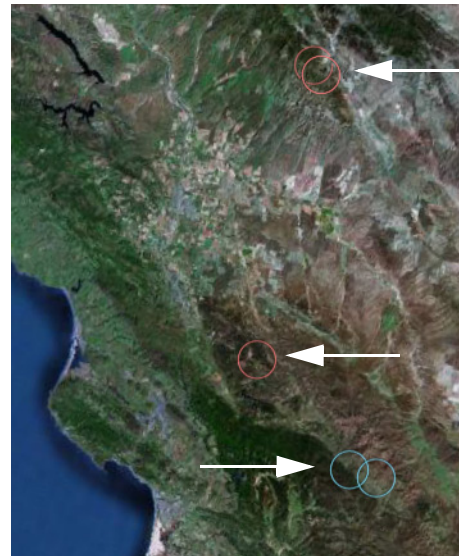

Attach the Observer to an Entity

 1. Select an entity in the Objects List Panel, for example, FtrFW1.
2. On the Attachment Panel, click the Attach icon. If the observer does not jump to the entity, press the **Spacebar**.

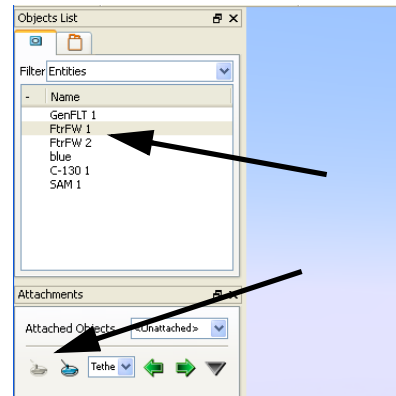

Change the View Mode

- With the observer still attached to a fighter, select the different attach modes on the Attachment Panel.

For a cockpit view, select Mimic mode. To maintain a specific offset from the entity, use Follow or Tether mode. To watch the entity from a fixed location, use Track mode.

As you view the scenario, use the entity label feature to identify the entities. Enable track histories to chart their movement.

 
5.3. Change the Data Stream

You can change the data stream you are using without disconnecting from the simulation.

1. Choose **Settings** → **Terrain**. The Terrain Settings dialog box opens.
2. Select the Terrain Contents page.
3. In the window, select VR-TheWorldOnline.earth.
4. Click Remove.
5. Click Add Terrain Server.
6. Select OpenStreetMap Example Online.earth.
7. Click Connect.

The earth will now be covered in map data as it streams in, as shown in the figure.

When you are finished exploring streaming terrain, stop the Logger.

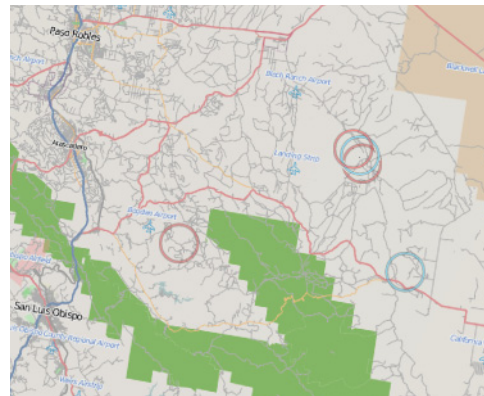


6. Manipulate Objects in the Scene

VR-Vantage lets you add value to terrains, even if you did not originally create them. In this exercise you will replace low fidelity models with high fidelity models. The *VR-Village_NoSpeedTrees.mtf* terrain uses low-fidelity models for trees and other vegetation. We will replace some of these models with SpeedTree models.


1. Press **z** to make sure the observer is not attached to any entities.
2. Press the **Spacebar** to return to the default view of the terrain.
3. Press **e** until the observer stops at the ground. You will be looking at a portion of VR-Village similar to the following illustration.



 4. Choose **Settings** → **Terrain**. The Terrain Settings dialog box opens. (You might need to pull it to the side to see the terrain.)
5. Select the Props page.

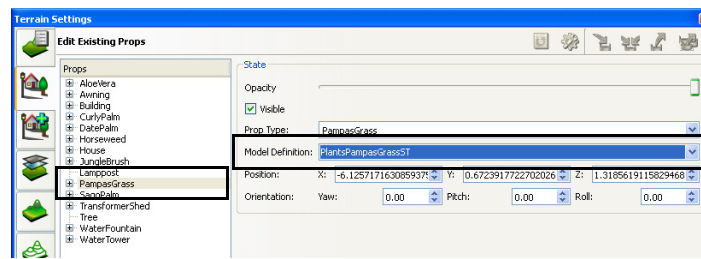

 6. In the Props list, select PampasGrass. Bounding boxes are displayed around the grass objects. You might want to zoom out and up a little to see more of them.
7. In the Model Definition field of the State group box, select PlantsPampasGrassST. This replaces the rigid low fidelity model with a SpeedTree model that sways in the breeze. See how much better the grass looks.

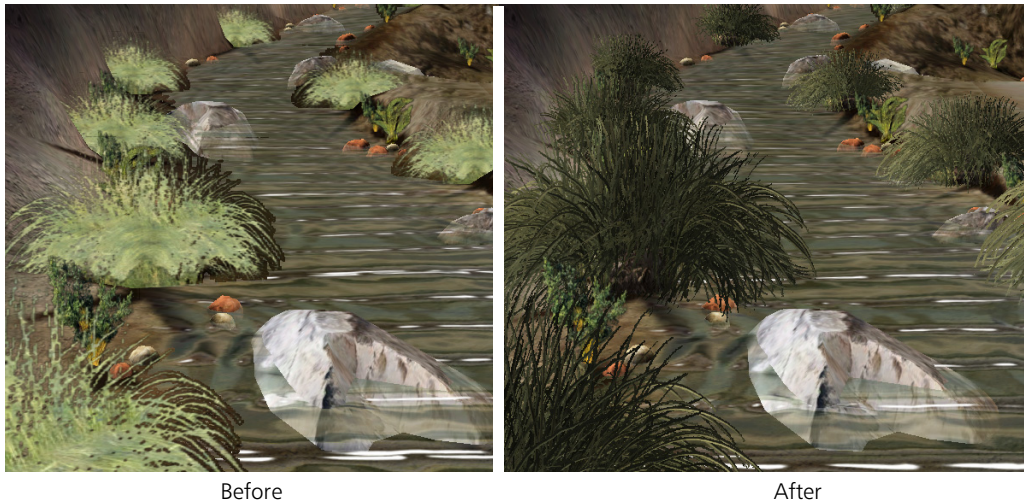

6.1. See Through Walls

You can control the transparency of walls so that you can see inside buildings.

1. In the VR-Village terrain, click a building to select it.
2. Right-click. A pop-up menu is displayed.
3. Choose **Make Transparent**. The walls become approximately 80% transparent.
4. Choose **Settings** → **Terrain**. The Terrain Settings dialog box opens.
5. Select the Props page.
6. Note the setting for the Opacity slider.
7. Move the slider to increase or decrease the transparency of the building.

7. View a Terrain Agility Tutorial

VR-Vantage Stealth lets you load terrains created in terrain creation applications, such as OpenFlight files. However, you can also create terrains from elevation, feature, and imagery data. To see how:

1. Choose **Programs** → **MÄK Technologies** → **VR-Vantage 1.2** → **Documentation** → **VR-Vantage Video Tutorials**. A page opens in your web browser.
2. Click the first link in the list and follow the chain of videos.

8. Continue to Explore VR-Vantage Stealth

Continue to explore VR-Vantage Stealth. Look at the various settings options on the Settings menu. For more information, please read *VR-Vantage Users Guide* or online help. They provide detailed descriptions of all VR-Vantage Stealth features.

- To open *VR-Vantage Users Guide*, choose **Programs** → **MÄK Technologies** → **VR-Vantage 1.2** → **Documentation** → **VR-Vantage Users Guide**
- To open online help, choose **Help** → **Help**.

Please contact sales@mak.com for additional assistance or to provide feedback.



Installation and Licensing

Your MÄK salesperson has given you a link to the VR-Vantage installer as well as links to other MÄK applications and data to support your first user experience. Download the files. Before you install the applications, note the following possible issues:


- ♦ You must have administrator privileges to install VR-Vantage on Windows Vista.
- ♦ When you install VR-Vantage on Vista, there may be a delay of up to several minutes from the time you try to run the setup program to the time that an installation dialog box is displayed. If you experience this problem, turning off User Access Control can reduce or eliminate this delay.
- ♦ These instructions assume you are familiar with installing Windows applications that use a wizard-style installer. They also assume that you have an unzipping application and know how to use it.

A. Install VR-Vantage and Supporting Applications and Data

Installing VR-Vantage is a two-step process.

To install VR-Vantage:

 1. Run the application installer. On the VR-Vantage Installation Code page, click Skip Toolkit Installation.

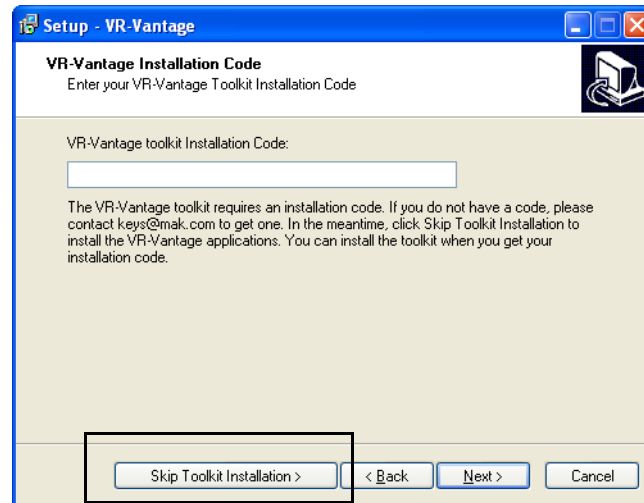

2. Run the data installer. When the installation wizard asks if it is OK to install in the existing VR-Vantage directory, click Yes.

If you do not already have the MÄK Data Logger installed, install it as follows:

- Run the MÄK Data Logger installer. Accept all of the default settings.

If you installed MÄK Data Logger 5.0, you do not have to extract the *IISEC_VPMM_Demo_Final.lgr* recording. It is included in the Logger installer. If you have a previous version of the Logger, extract *IISEC_VPMM_Demo_Final.lgr* as follows:

- Extract *IISEC_VPMM_Demo_Final.lgr* from *IISEC_VPMM_Demo_Final.zip* to *C:/MAK/Loggerx.x/logger_tapes*.

B. Setting Up the License Manager

To use a MÄK product, you must install the License Manager and get a license for your product. Before you can use a MÄK product, you must obtain a valid license file and specify the license server.

- To install the License Manager, run the installer.

The general procedure for configuring license management is as follows:

1. Identify the name and ID of the license server and request a license file.
2. Put the license file in the *MAK/LicenseManager* directory on the license server.
3. Run the license server.

4. Specify the license server location.

B.1. Identify the Host ID and License Server Name

For simplicity, use the computer on which you installed VR-Vantage as the license server. To find out the host ID and license server name:

1. On the Start menu, choose **Programs** → **MAK Technologies** → **LicenseManager** → **lmtools**. The LMTOOLS application opens (Figure 1).

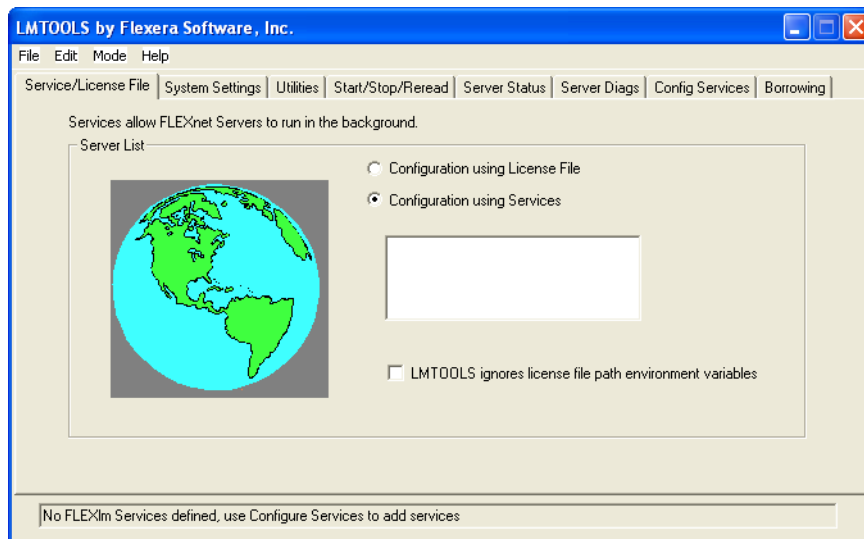 


Figure 1. lmtools

2. Select the System Settings tab. The host ID is the string in the Ethernet Address text box. The license server name is the name in the Computer/Hostname text box.
3. Send the host ID and hostname to your MAK salesperson. MAK will e-mail you a license file.

B.2. Put the License File in the *LicenseManager* Directory

When you receive your license file, put it in the *LicenseManager* directory on the license server. The file should have the extension *.lic*. If it does not, please contact keys@mak.com to clarify why it did not follow this convention.

B.3. Run the License Server

- To start the license server daemon, on the server machine only, execute `runLm` from the *LicenseManager* directory.

Shutting Down the License Server

- To force all applications to check in their licenses and shut down the license server daemon, run `lmdown`.

B.4. Specify the License Server

The first time you run a MÄK application on a computer, the License Setup dialog box opens (Figure 2). It prompts you to enter the hostname of the license server and optionally, a port number.

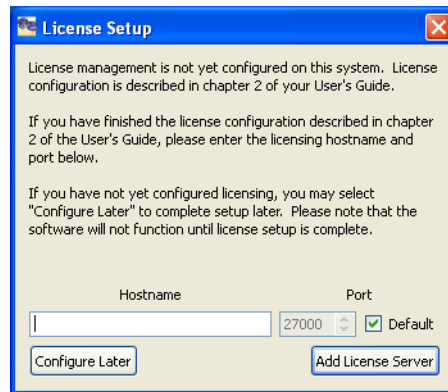 


Figure 2. License Setup dialog box

1. Type the hostname in the Hostname box.
2. Click Add License Server. The application will start.